



# T300 PLUS

## GNSS Receiver

### User Guide



## Corporate office

ComNav Technology Ltd.  
Building 2, No.618 Chengliu Middle Road, 201801 Shanghai, China  
Tel: +86 21 64056796  
Fax: +86 21 54309582  
Website: <http://www.comnavtech.com>  
E-mail: [support@comnavtech.com](mailto:support@comnavtech.com)

## Trademark notice

© 2019 ComNav Technology Ltd. All rights reserved.  
SinoGNSS is the official trademark of ComNav Technology Ltd., registered in People's Republic of China, EU, USA and Canada.

## FCC Notice

SinoGNSS® T300 PLUS GNSS receivers comply with the limits for a Class B digital device, pursuant to the Part 15 of the FCC rules when it is used in the Portable Mode.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) It must accept any interference received, including interference that may cause undesired operation.

## Copyright Notice

This is the V3.0 (November, 2021) revision of the T300 PLUS GNSS Receiver User Guide. It cannot be copied or translated into any language without the written permission of ComNav Technology.

## Technical Assistance

If you have any question and can't find the answer in this manual, please contact your local dealer from which you purchased the T300 PLUS receiver. Alternatively, request technical support from ComNav Technology Website: [www.comnavtech.com](http://www.comnavtech.com) or technical support email: [support@comnavtech.com](mailto:support@comnavtech.com). Your feedback about this Guide will help us to improve it with future revisions.

## Safety Information

Before using the receiver, please make sure that you have read and understood this User Guide, as well as the safety requirements.

- Connect your devices strictly based on this User Guide
- Install the GNSS receiver in a location that minimizes vibration and moisture
- Avoid falling to ground, or colliding with other items

- Do not rotate 7-pin Lemo port
- Do not cover the radio, keep a sound ventilation environment
- To reduce radiation, please keep above 2 meters away from the radio station
- Take lightning protection measures when installing antennas
- Change the cable if damaged

### Related Regulations

The receiver contains integral Bluetooth® wireless technology and UHF. Regulations regarding the use of the datalink vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. But in some countries the administrative permissions are required. For license information, please consult your local dealer.

### Use and Care

The receiver can withstand the rough treatment that typically occurs in the field. However, the receiver is high-precision electronic equipment and should be treated with reasonable care.

### Warning and Caution

An absence of specific alerts does not mean that there are no safety risks involved. A Warning or Caution information is intended to minimize the risk of personal injury and/or damage to the equipment.

**WARNING-** A Warning alerts you to a potential risk of serious injury to your person and/or damage to the equipment, because of improper operations or wrong settings of the equipment.

**CAUTION-** A Caution alerts you to a possible risk of damage to the equipment and/or data loss.

### Warranty Notice

ComNav Technology does not warranty devices damage because of force majeure (lighting, high voltage or collision).

ComNav Technology does not warranty the disassembled devices.

# Contents

1 Introduction.....	1
1.1 About the receiver .....	1
1.2 Receiver features .....	1
1.3 T300 PLUS Receiver parts list.....	1
1.3.1 Basic Supply kit .....	2
1.3.2 Optional Datalink kit .....	3
1.3.3 Transport Cases.....	4
2 Setting up the receiver .....	6
2.1 Environmental requirements.....	6
2.2 Front panel.....	6
2.3 Lower housing.....	6
2.4 Power supply.....	7
2.4.1 Internal batteries.....	7
2.4.2 External Power Supply .....	8
2.4.3 Charge Battery via T300 PLUS Receiver .....	8
2.5 Pole-mounted setup .....	9
3 General Operation.....	9
3.1 Button functions .....	9
3.2 LED behavior .....	9
3.3 Receiver Web GUI interface.....	11
3.3.1 Checking the receiver status.....	12
3.3.2 Configuration .....	14
3.3.3 Receiver Management.....	19
4 Static survey .....	21
4.1 Receiver Configuration .....	21
4.2 Static Data Collection .....	22
4.3 Static Data Download .....	22
4.4 RINEX Convert .....	23
5 Real-Time Kinematic Survey (RTK) .....	25
5.1 Installation of Survey Master .....	25
5.2 Wizard function in Survey Master .....	25
5.3 Start a New Project.....	27
5.4 Bluetooth connection .....	29
5.5 Internal Radio Mode.....	31
5.5.1 Base Station by Survey Master .....	31
5.5.2 Start Rover Station by Survey Master.....	33
5.6 External radio mode .....	34
5.7 PDA CORS Mode.....	35
5.8 Internal GPRS Mode .....	36
5.8.1 Point to Point/Points mode (P to PS mode).....	37
5.8.2 Internal 4G Ntrip client mode.....	38
6 Basic Survey Functions .....	39
6.1 Topo survey.....	39
6.1.1 Survey settings .....	41
6.1.2 Tilt survey.....	41
6.2 Auto survey/Area survey .....	43

6.3 Stake points/lines.....	44
6.4 PPK .....	47
6.5 Site calibration/Grid Shift .....	48
6.5.1 Site calibration .....	48
6.5.2 Grid Shift .....	50
6.6 COGO.....	50
7 Data Export/Import .....	51
7.1 Import .....	51
7.2 Export.....	53
7.3 Import Basemap.....	54
8 Export Result .....	55
8.1 NMEA 0183 output .....	55
8.2 Register T300 PLUS via Survey Master .....	56
9 Firmware Upgrade.....	57
9.1 Upgrade firmware via serial cable .....	57
9.2 Upgrade firmware via WIFI .....	59
Appendix A: 7-Pin Lemo definition .....	61
Appendix B: Physical Parameter of Modules inside of T300 PLUS .....	62

## 1 Introduction

The SinoGNSS® T300 PLUS GNSS Receiver User Guide is aimed to help you get familiar with the T300 PLUS receiver and start your project effectively. We highly recommend you to read this manual before surveying, even you have used other Global Positioning System (GPS) receivers before.

### 1.1 About the receiver

With SinoGNSS® Quantum™ algorithm, T300 PLUS GNSS receiver can be applied in RTK mode with all GNSS constellations. T300 PLUS receiver has ultra-small size and strong anti-interference ability to make it possible to work even in harsh environments. It is the ideal RTK/GNSS product for surveyors.

### 1.2 Receiver features

The SinoGNSS® T300 PLUS GNSS Receiver key features:






- Ultra small and super light
  - Size (W × H): 15.8cm × 7.5cm
  - Weight: 0.95kg (including 2 batteries)
- 1198 channels of simultaneously tracked satellite signals
- Increased measurement traceability with SinoGNSS® Quantum™ algorithm technology
- Hot swap battery design
- Cable-free Bluetooth wireless technology
- 5 indicator LEDs for battery, diff, satellite, WIFI/GPRS and 2 function buttons for power and static
- IP67 waterproof
- Full base/rover interoperability
- Integrated receiving & transmitting radio with 12.5KHz frequency interval
- Integrated IMU sensor
- Integrated WiFi module
- Long distance range radio module
- Integrated 4G module, support Ntrip and Point to Point/Points protocols
- Support long baseline E-RTK™ (Beidou B3 signal is included in RTK calculate engine)






### 1.3 T300 PLUS Receiver parts list

This section provides overall T300 PLUS receiver parts list, including basic supplies and customized kits based on your requirements.



### 1.3.1 Basic Supply kit

SinoGNSS® T300 PLUS GNSS Receiver Basic Supply kit contains two receivers and related accessories.

Item	Picture
2* Kits T300 PLUS Receivers	
1*GNSS Connector	
2*7-pin Lemo to RS232 Cable	
2* 7-pin Lemo to USB Cable	
External Power Cable	
2* Whip Antenna (UHF)	
1*2m-Range Pole with yellow bag	

4* Lithium-ion Battery	
2* Battery Charger	
R550 Controller	
Controller Battery, Charger and Cable	
Controller Bracket	







Optional accessories:

Double Bubbles Tribrach with High Adapter	
1* 30cm Extension bar	

### 1.3.2 Optional Datalink kit

This kit is necessary for long distance radio communication, shown in the following figures:



Item	Picture
External Radio CDL7	
2-pin Lemo Power Cable	
7-pin Lemo Data Cable	
N-Type to TNC Convertor	
N-type to N-type Antenna Cable	
N-Type Radio Antenna	

### 1.3.3 Transport Cases

Standard transport case is designed for containing basic supply kit of one SinoGNSS® T300 PLUS GNSS Receiver.



Base



Rover

The optional choice is provided to have capacity of two kits of T300 PLUS receivers.



## 2 Setting up the receiver

This chapter provides general information on environmental requirements, setup, power supply and connection of the T300 PLUS receiver.

### 2.1 Environmental requirements

To keep the receiver with a reliable performance, it is better to use the receiver in safe environmental conditions:

- Operating temperature: -40°C to +65°C
- Storage temperature: -40°C to +85°C
- Out of corrosive fluids and gases
- With a clear view of sky

### 2.2 Front panel

Receiver front panel contains 5 indicator LEDs, Power button and Record button. The indicator LEDs show the status of differential, satellite tracking, WIFI/GPRS and battery. For detailed information, see [chapter 3.3](#).



### 2.3 Lower housing

Receiver lower housing contains a serial port, UHF radio antenna connector, two removable battery compartments (the SIM card slot is located in compartment A), and a threaded insert.



## 2.4 Power supply

T300 PLUS GNSS receiver supports internal batteries and external power input.

### 2.4.1 Internal batteries

The receiver is equipped with two rechargeable Lithium-ion batteries, which can be removed for charging. The T300 PLUS receiver adopts the hot swap battery design that provides you an effective survey workflow. The internal batteries typically provide about 9-hour operating time.

#### ● Battery Safety

Charge and use the battery only in strict accordance with the instructions below:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to, discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle during hot weather.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.

#### ● Charging the Lithium-ion Battery

Although a dual battery charge is provided, the lithium-ion battery is supplied partially charged. To charge the battery, first remove the battery from the receiver, and then place it in the battery charger, which is connected to AC power. Please obey the following instructions when charging your batteries:

- Charge the battery completely before using it for the first time.
- Fully charge takes approximately 6 hours per battery at room temperature.
- If the battery has been stored for a long time, charge it before your field work.
- Re-charge the battery at least every three months if it is to be stored for long time.

#### ● Storage of the Lithium-ion Battery


- Do not keep batteries inside the receiver if the receiver not used for long time.
- Keep batteries in dry conditions.
- Take out the batteries from receiver for shipment.

- Dispose of the Lithium-ion Battery
  - Discharge a Lithium-ion battery before dispose of it.
  - Dispose of batteries is an environmentally sensitive manner, and adhere to any local and national regulations concerning battery disposing or recycling.

**WARNING – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage.**

#### 2.4.2 External Power Supply

The receiver is connected to an external power supply through a lemo to RS232 cable, and make sure that the red alligator clip is connected to the positive of external power supply, black one to negative. Over-voltage function cannot protect your T300 PLUS receiver if reverse connection.

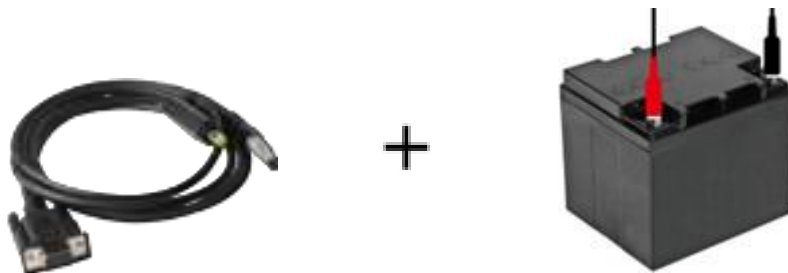


*Tip: The power consumption will be increasing if the base station transmits correction data through internal UHF in the RTK mode; therefore, we strongly suggest using external power (7-28 volt DC) for the base station.*

#### 2.4.3 Charge Battery via T300 PLUS Receiver

T300 PLUS GNSS Receiver can work as a charger, it means you can charge batteries directly if the charger not by your side.

1. Power off T300 PLUS receiver with batteries inside.  
Connect T300 PLUS receiver to 12V external power with serial cable.
2. Receiver will charge the battery from Side B to Side A, the red power led will flashing during charging and will off when battery full.

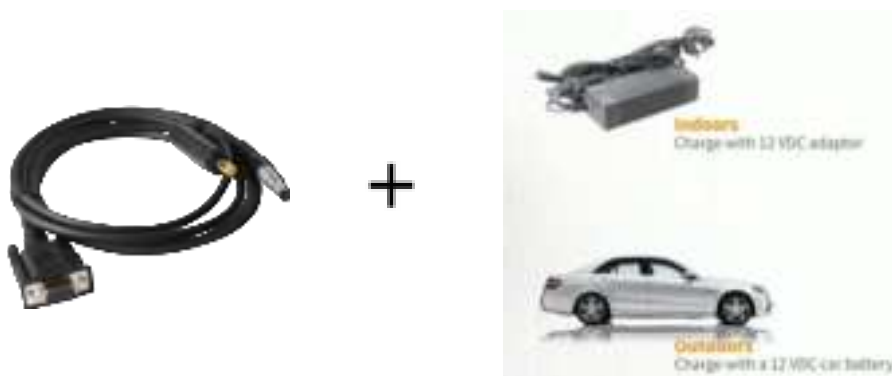

## 2.5 Pole-mounted setup

To mount the receiver on a range pole as the figure shown below:



- Thread the receiver onto the range pole
- Mount the controller bracket to the pole
- Install the controller into the bracket

*Tip: Do not tightly clamp the controller on the Range Pole.*

## 3 General Operation

This chapter introduces all controls for the general operation, including button functions and all LED behaviors on the front panel.

### 3.1 Button functions

There are two buttons on the front panel, power button and record button.

- Power button:

Press the power button for about 1 second to turn on the receiver;

To turn off the receiver, long press the button for 3-4 seconds until all LEDs off.

- Record button:


Switch to static mode: Long press the record button for about 2 seconds, release immediately when hearing beep from receiver;

Switch to RTK mode: press the button until Raw Data recording LED off.

*Tip: The record button only works when receiving satellite signals, otherwise it will show timeout.*

### 3.2 LED behavior

The LEDs on the front panel indicate receiver working status. Generally, a lit or slowly flashing indicates normal operation, and an unlit LED indicates that no operation is occurring. The following figure and table define each possible LED state:

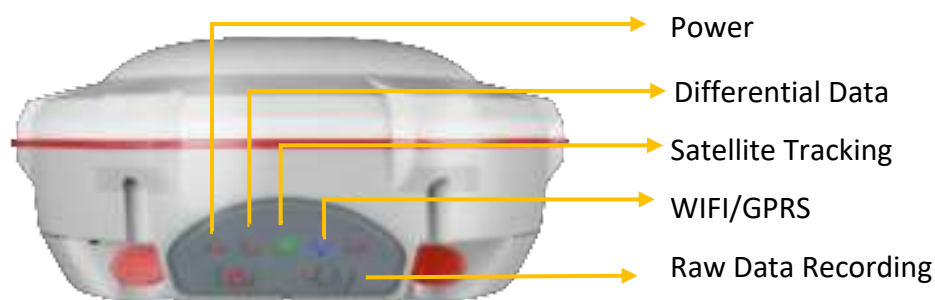

LEDs	States	Description
Power	Lit	Enough power
	Flashing	Low power
Differential Data	Flashes once per second	Receiving/transmitting differential data
Satellite Tracking	Fast flashing/ Flashes 1 time every 5 seconds	No satellite received
	Flashes N times every 5 seconds	Received N satellite signals
Internal 4G and WIFI	Flashes once per second	GPRS function is working
	Flashes once per five- second	WIFI is working
	Flashes according to the selected sample interval	1) Sample interval varies from 20Hz to 60s. 2) Flashing 1/s simultaneously with differential light if internal memory is run off

#### Power LEDs:

Power supply: 1) Two power LEDs are on if using the external power supply; 2) Only power LED of working battery will be on if using the internal battery.

Low battery: 1) Power LED will flash with beep only with one battery; 2) if with two batteries, the power LED of low battery will flash, and swapped to another battery when it is run off.

### 3.3 Receiver Web GUI interface

#### Step 1: Connect Wi-Fi of T300 PLUS receiver

Turn on the T300 PLUS GNSS receiver and wait for the T300 PLUS serial number to appear under the available Wi-Fi networks on your smart phone or office computer.

For example, **T300 PLUS-T31LXXXXX** (where xxxxx represents the last five digits of the receiver serial number).

**Enter password: 12345678**

#### Step 2: Login the Web

Select the receiver, open a web browser and then enter the following IP address:


**http://192.168.1.8**

*Tip: Most web browsers for computers / laptops and smart phones / PDAs support the receiver Web GUI*

#### Step 3: Enter the default login settings to access the main page

- Username: admin
- Password: admin

After accessing the main page, configuration menus are listed on the left, and receiver's settings on the right. Each configuration menu will be demonstrated in the following sections.

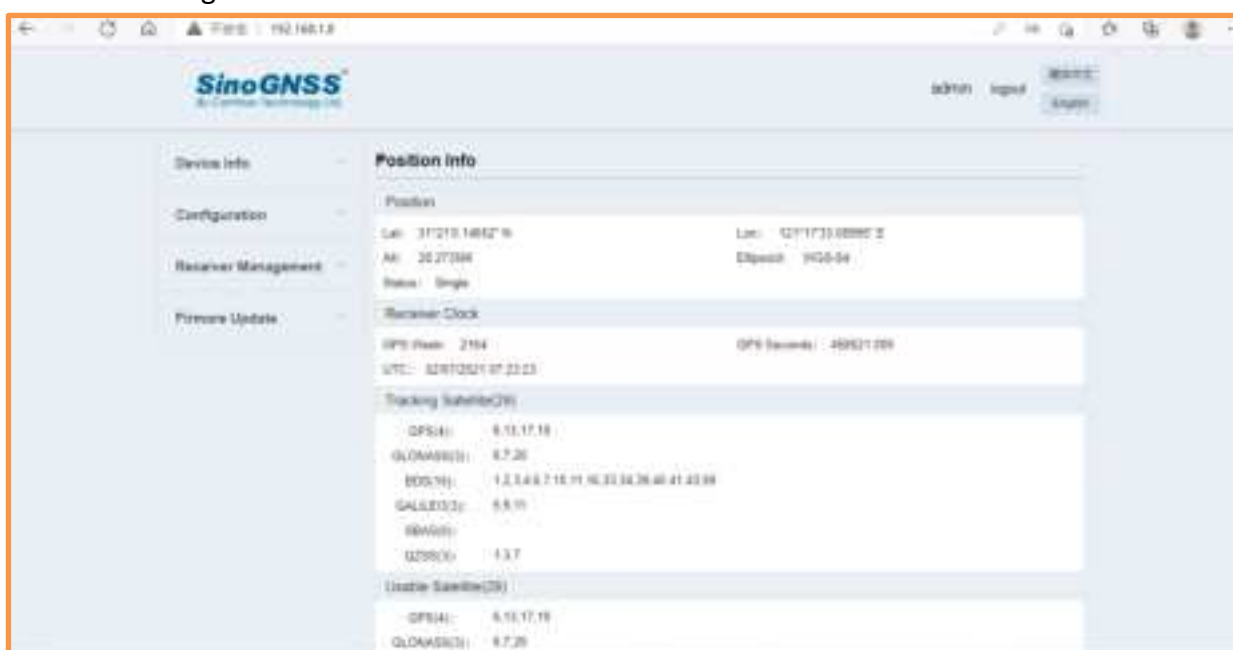



### 3.3.1 Checking the receiver status

In the section, you can check System information, Status, 4G Network, Bluetooth, Wifi, Position info, satellite info.

- (1) System information, includes the basic information includes receiver type, serial number, system firmware version, board firmware version, radio firmware (radio type), front panel firmware (T300 PLUS doesn't have front LCD panel), Web version.
- (2) Status: Show the device status and data link status, includes work mode, data link, internal storage capacity and current free storage. The default work mode is rover with the new device, others will be same with the Survey Master settings. Data link status will vary from different work mode, the default is null.

**system information**

Receiver Type:	N3
Serial Number:	N31L02594
Firmware Version:	V1.2.2
Board Firmware:	600AB-21523-1
Radio Firmware:	V1.0.3(U70)
Front Panel Firmware:	null
Web Version:	v-1.0-3

**Status**

Device Status

Work Mode:	Rover
Data Link:	
Capacity:	7.4GB
Free Storage:	7.4GB

Data Link Status

- (3) 4G Network, when there is SIM card inside in the receiver, it will start itself, and read the signal intensity, APN, and show started. If there is no SIM card inside, it will show stopped.

**4G network**

Signal Intensity:	31
Sim Card State:	OK
SIM ID:	886000679325F9302133
Net Status:	Started

APN:

Username:

Password:

**4G network**

Signal Intensity:	31
Sim Card State:	ERR
SIM ID:	
Net Status:	Stoped

APN:

Username:

Password:

- (4) Bluetooth information, shows Bluetooth name and Mac address, Bluetooth name cannot be changed; WIFI information, shows WIFI name, current Wifi password and Mac address. The Wifi password is 12345678, the client can change the password, click **Save config** to save configuration.

### Bluetooth

Name:

Mac Address:

Status:

### Wifi

Wifi Name:

Wifi Password:

Mac Address:

Status:

(5) Position info, shows position status, clock status, tracking satellites, used satellites and DOP status.

### Position Info

#### Position

Lat:  Lon:

Alt:  Ellipsoid:

Status:

#### Receiver Clock

GPS Week:  GPS Seconds:

UTC:

#### Tracking Satellite(30)

GPS(3):

GLONASS(4):

BDS(17):

GALILEO(3):

SBAS(0):

QZSS(3):

#### Usable Satellite(27)

GPS(3):

GLONASS(4):

BDS(17):

GALILEO(3):

SBAS(0):

QZSS(3):

#### DOP

PDOP:  HDOP:

VDOP:  TDOP:

(6) Satellites Info, includes Tracking graph, Tracking skyplot.

SV	Type	Elev.	Azim.	L1	L2	L5
5	GPS	76	128	47	42	0
12	GPS	16	141	48	41	0
18	GPS	49	222	43	35	49
2	GLSS	41	138	47	0	52
3	GLSS	13	174	42	0	50
7	GLSS	50	166	42	0	52
1	BDS	45	141	49	50	48
2	BDS	0	0	0	43	0
3	BDS	52	201	47	49	47
4	BDS	34	123	47	50	48
8	BDS	50	155	45	50	49
20	BDS	30	94	47	0	50
26	BDS	45	176	52	0	54
38	BDS	50	191	51	0	52
...	...	...	...	...	...	...


Sky View 200 Tracking-Graph 200



### 3.3.2 Configuration

This section includes Satellite tracking, work mode, Antenna setup and Base station configuration.

- **Satellite tracking**, includes Smooth Pseudorange, default is OFF; Elevation mask: default is 10 degrees; and every system status, supports to change by customers, click **Enter** to save settings, click **Cancel** to cancel the settings.
- **Antenna setup**: measure method supports Slant height and vertical height, choose Antenna type, and setup antenna height, click Enter to save configuration.

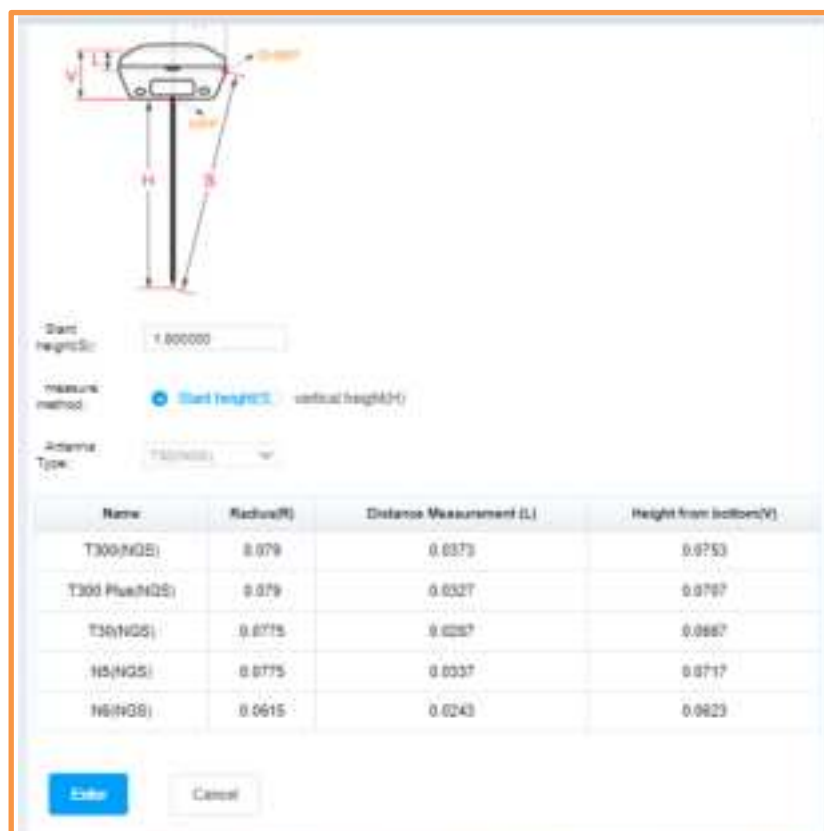


The diagram shows a top-down view of an antenna with labels for 'Slant height (S)', 'Vertical height (V)', and 'Radius (R)'. Below it is a configuration form with the following fields:

- Slant height (S): 1.000000
- Measure method: ☒ Slant height (S) ☐ Vertical height (V)
- Antenna Type: T300HQS

Name	Radius(R)	Distance Measurement (L)	Height from bottom(V)
T300HQS	0.079	0.0373	0.0753
T300 PlusHQS	0.079	0.0327	0.0797
T30HQS	0.0715	0.0257	0.0887
H5(HQS)	0.0775	0.0337	0.0717
H6(HQS)	0.0615	0.0243	0.0823

Buttons: Enter, Cancel

- **Base station configuration:** Setup the station ID, Antenna height, measure method supports slant height and vertical height; then click **Get position** to set the current position or you can enter the coordinate yourself, click **Start** to start the base setup, click **Stop** to stop the base setup.

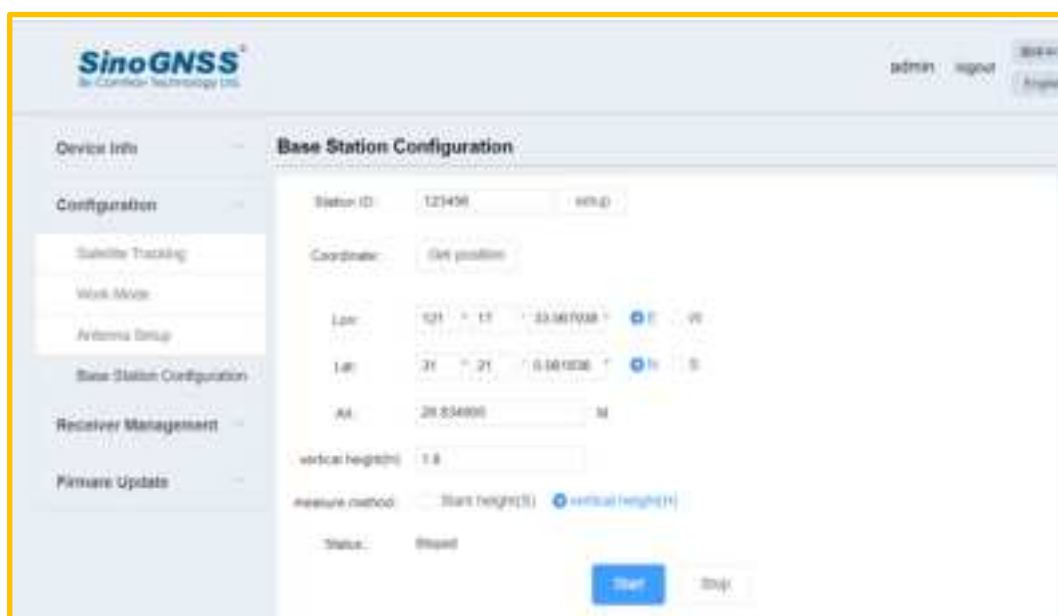


The screenshot shows the SinoGNSS Base Station Configuration web interface. The left sidebar contains navigation links: Device Info, Configuration, Receiver Management, and Firmware Update. The main content area is titled 'Base Station Configuration' and includes the following fields:

- Station ID: 123456 (with a 'Setup' button)
- Coordinate: Get position
- Lat: 21° 13' 33.867008" N (with a 'V' button)
- Lon: 111° 21' 0.081008" E (with an 'H' button)
- Alt: 28.534000 m
- Vertical height (V): 1.8
- Measure method: ☐ Slant height (S) ☒ Vertical height (H)
- Status: Stopped


Buttons: Start, Stop

- Work mode, includes rover settings and base settings.


Rover settings include Ntrip Client (Same with internal GSM in Survey Master) and Radio (Same with internal radio in Survey Master).

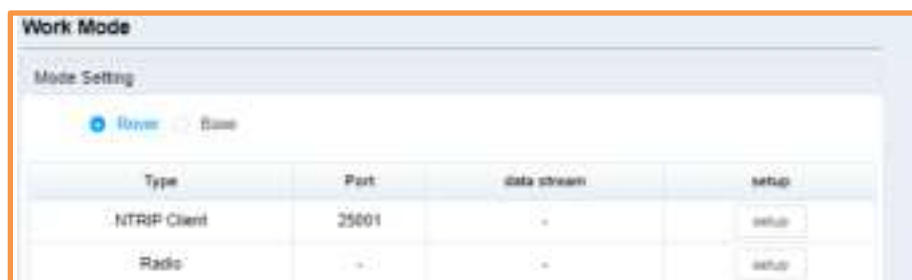


(1) Ntrip Client: Set Ntrip version, includes NTRIP v1.0 and NTRIP v2.0, IP, port, username, password, then click **Get List** and select mountpoint, check on **Use**, click **Enter** to apply the Ntrip Client; Check off **Use**, click **Enter** to cancel the work mode.

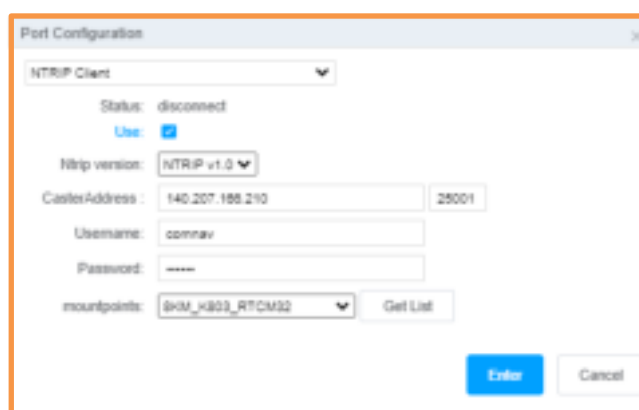


When setup the Ntrip Client, you can go to Device Info->Status to check current device status and datalink status.

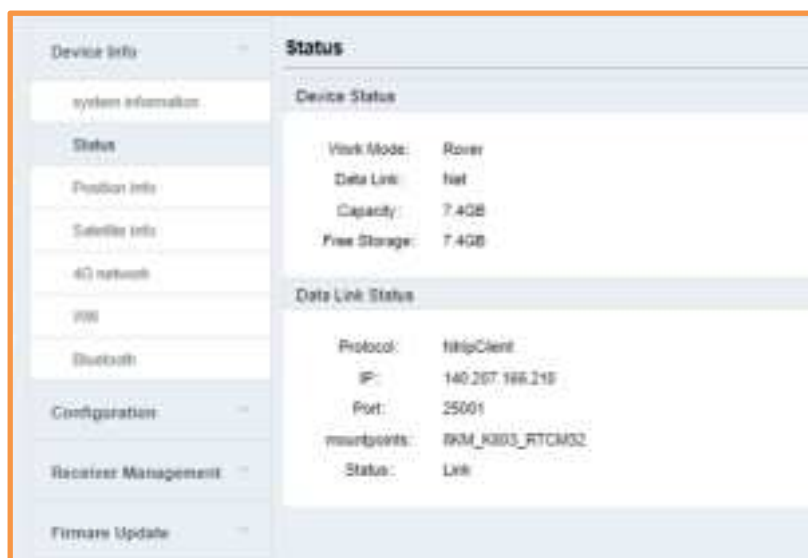

(2) Radio: The model is RX, set the frequency, minimum interval is 12.5 KHz; the protocol is Transparent; set the power, supports 0.5w, 1w and 2w; check on **Use**, click **Enter** to apply the internal radio; Check off **Use**, click **Enter** to cancel the work mode.

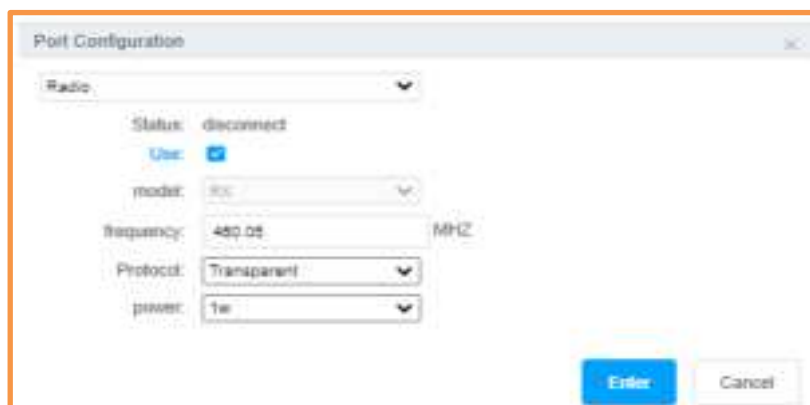


After setup, you can go to Device Info->Status to check device status.

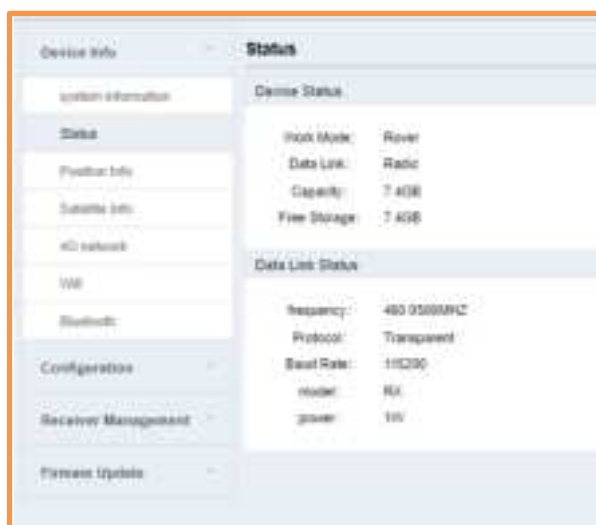

Base settings include Ntrip Server (Same with internal GSM in Survey Master) and Radio (Same with internal radio in Survey Master).

#### (1) Ntrip Server:


a) Start the base: if you have started the base setup in Base Station Configuration, then no need to setup again, just click **Next**; If you have not started base setup, you can go to **Base Station Configuration** to set the base, or you can set the station ID, and set the base coordinate here, then go to **Antenna Setup** to set the base antenna, then start the base, click Next to the Ntrip settings.

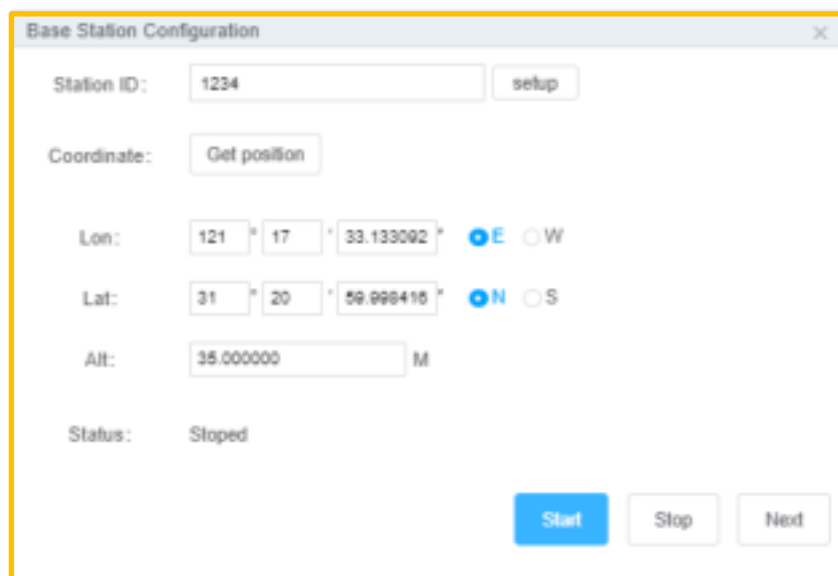

The 'Base Station Configuration' dialog box contains the following fields and controls:

- Station ID:** A text input field with the value '1234' and a 'setup' button to its right.
- Coordinate:** A button labeled 'Get position'.
- Lon:** Three input fields for degrees (121), minutes (17), and seconds (33.133092), followed by radio buttons for 'E' (selected) and 'W'.
- Lat:** Three input fields for degrees (31), minutes (20), and seconds (59.999416), followed by radio buttons for 'N' (selected) and 'S'.
- Alt:** An input field with the value '35 000000' and a unit selector 'M'.
- Status:** A label showing 'Stoped'.
- Buttons:** 'Start' (blue), 'Stop' (grey), and 'Next' (grey) buttons at the bottom right.

b) Ntrip settings: Choose Ntrip version, set IP, port, username, password, mountpoint, and choose data stream, supports RTCM3.2, RTCM3.2(MSM5), RTCM3.0, RTD, CMR. Check on **Use**, and click **Enter** to apply, click **Cancel** to cancel apply; Check off **Use**, and click **Enter** to cancel the previous base setup.

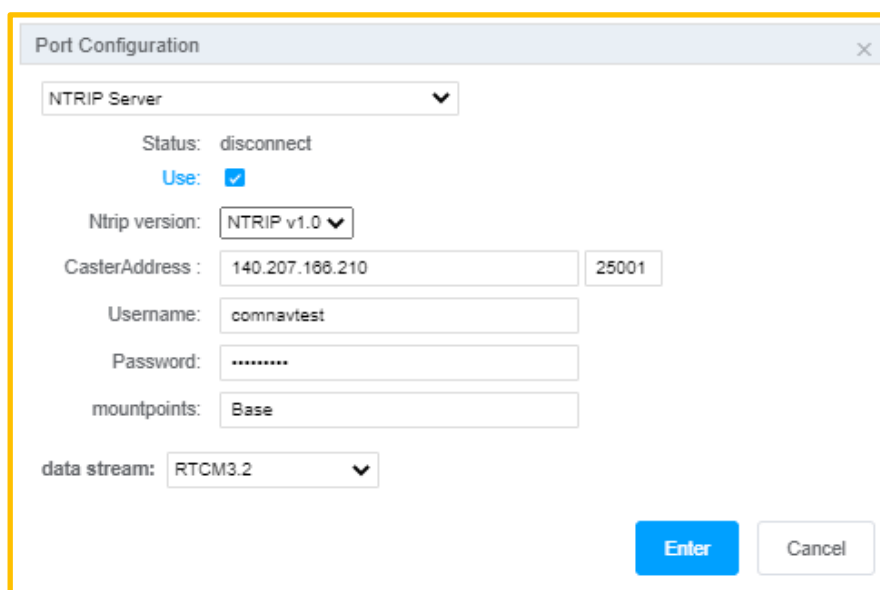

The 'Port Configuration' dialog box contains the following fields and controls:


- NTRIP Server:** A dropdown menu.
- Status:** A label showing 'disconnect'.
- Use:** A checkbox that is checked.
- Ntrip version:** A dropdown menu showing 'NTRIP v1.0'.
- CasterAddress:** Two input fields: '140.207.166.210' and '25001'.
- Username:** An input field with the value 'comnavtest'.
- Password:** An input field with masked characters '\*\*\*\*\*'.
- mountpoints:** An input field with the value 'Base'.
- data stream:** A dropdown menu showing 'RTCM3.2'.
- Buttons:** 'Enter' (blue) and 'Cancel' (grey) buttons at the bottom right.

After you setup base using Ntrip server successfully, you can go to Device->Status to check current base settings, and the rover can get the mountpoint from the server you set.

## (2) Radio:

a) You need to setup base station coordinate first, refer to the Ntrip Server settings.

b) Setup the radio parameters: The model is TX, set the frequency, minimum interval is 12.5 KHz; the protocol is Transparent; set the power, supports 0.5w, 1w and 2w; choose data stream, supports RTCM3.2, RTCM3.2(MSM5), RTCM3.0, RTD, CMR; check on **Use**, click **Enter** to apply the internal radio; Check off **Use**, click **Enter** to cancel the work mode.

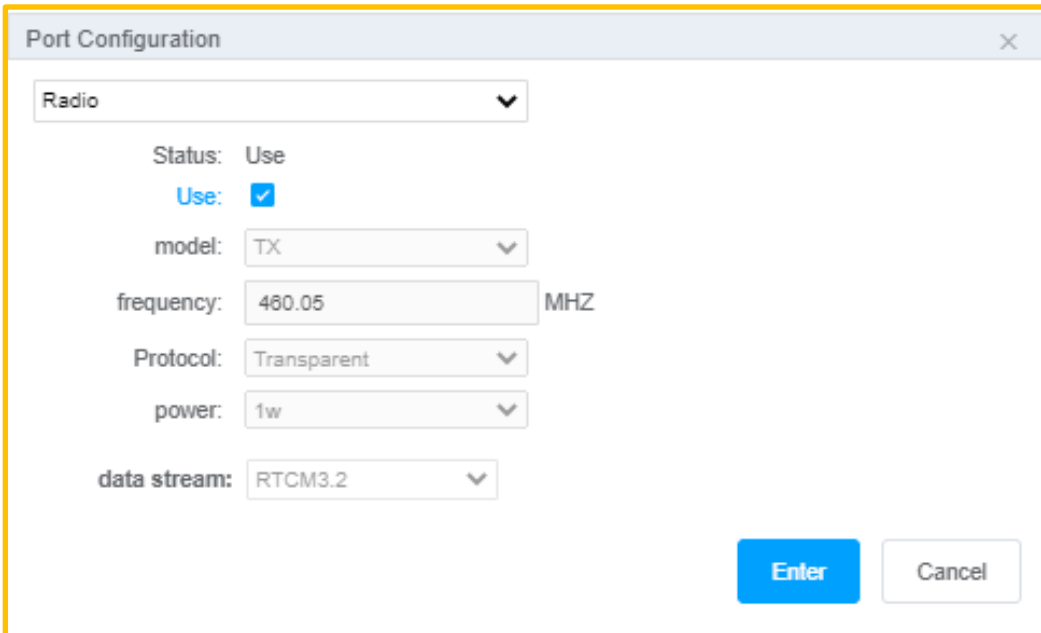

**Port Configuration**

Radio: ▼

Status: Use  
Use: ☒

model: TX ▼

frequency: 460.05 MHZ

Protocol: Transparent ▼


power: 1w ▼

data stream: RTCM3.2 ▼

**Enter** **Cancel**

After setup the base, you can go to the Device Info-> Status to check base settings.

### 3.3.3 Receiver Management

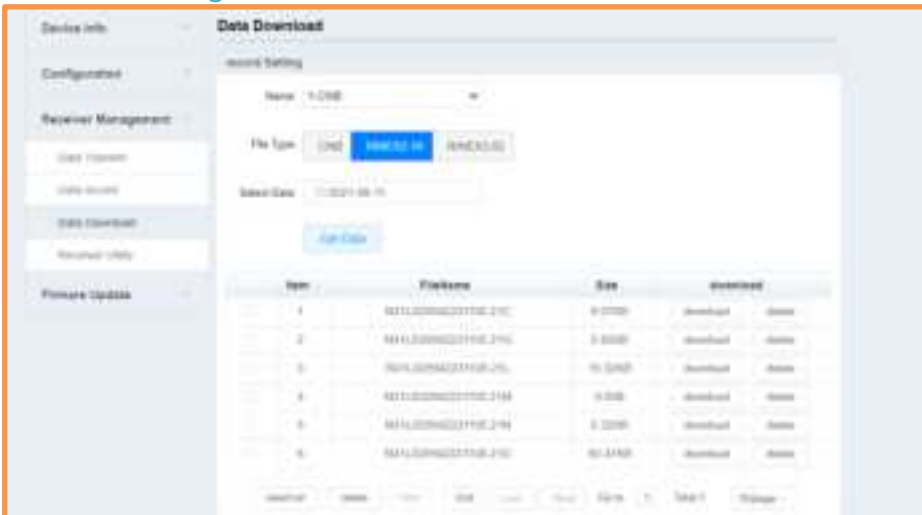

**Data Download**

second setting

Name: 1-0000

File Type: CSV RTCM3.2 RTCM3.2S

Select Date: 2024-08-15

**Full Data**

Item	Filename	Size	download	delete
1	RTCM3.20240815T021000	9.00KB	download	delete
2	RTCM3.20240815T021000	9.00KB	download	delete
3	RTCM3.20240815T021000	9.00KB	download	delete
4	RTCM3.20240815T021000	9.00KB	download	delete
5	RTCM3.20240815T021000	9.00KB	download	delete
6	RTCM3.20240815T021000	9.00KB	download	delete


selected: none | filter: all | sort: name | take: 1 | refresh



### 3.3.3.4 Receiver Utility

In this section, you can control T300 PLUS remotely, including:

- Reboot: Restart the receiver
- Factory Default: recover the receiver to factory default setting

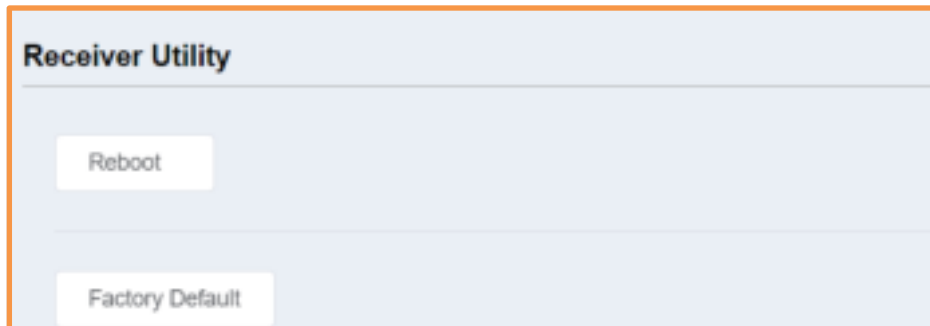


### 3.3.4 Firmware update

You can update the system firmware (OS), board firmware (GNSS), front panel firmware (LCD) and radio firmware (RADIO) in this menu. Select system, GNSS, RADIO firmware upgrade according to your demand, then click Browse to select the latest firmware version. Click Install, a progress bar shows 0 to 100% and status will be "Not allowed to do other operations during the upgrade". When completing firmware update, the receiver will restart automatically and information prompted below

*Tips:*

1. T300 PLUS receivers don't have front LCD panel, so LCD firmware will not be updated.
2. The supported firmware file is only \*.bin format.

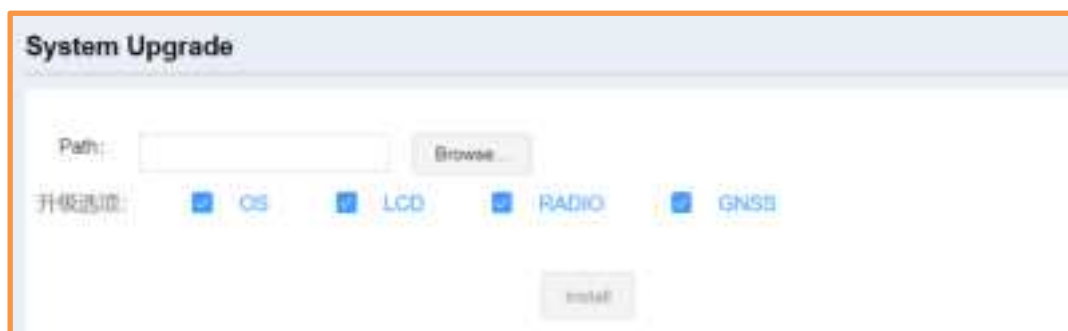

## 4 Static survey


This chapter describes static survey through T300 PLUS receiver and CRU software. For static survey, you cannot change settings through front panel, you can configure it via Compass Receiver Utility (CRU): 1) Receiver configuration; 2) check receiver settings and status; 3) convert data to Rinex format.

### 4.1 Receiver Configuration

1. Download and install CRU software from the link below (ensure the driver is properly installed in your PC):

<http://www.comnavtech.com/download.asp?bigclassid=28>

2. Put a battery in the T300 PLUS receiver and turn it on.
2. Connect the receiver with your PC through serial port cable.
3. Click **set port** in CRU -> select proper serial port in the serial port option-> enter proper baud rate -> click **Ok** to complete receiver connection. The SN of receiver will appear in the title bar if connected successfully.

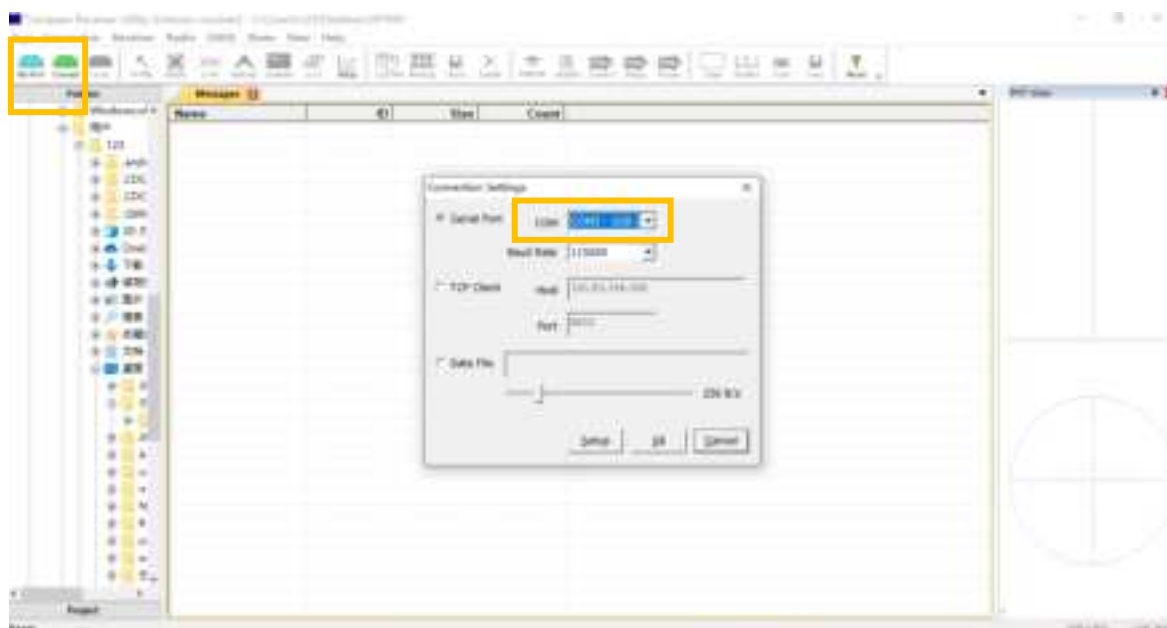

*Tips:*

- 1) For T300 PLUS receivers, USB cable is only used to download raw observation data, cannot to connect to CRU software and update firmware;
- 2) With 7-pin Lemo to RS232 cable, you can connect T300 PLUS receiver with external power or firmware upgrade.
- 3) It can not to configure the static settings, only supports to configure using web UI.

## 4.2 Static Data Collection


Static survey is mainly used for the control survey. To reach millimeter accuracy, follow as below:

- At least 3 GNSS receivers are required to form a stable triangulation network.
- It is better to set Data Log Session as manual on the known point.
- Power off the receiver before moving to other observation site.
- To quickly post-process static observation raw data, write down the station name, receiver SN, antenna height, start and end time for each observation site.

*Tip: You can start recording static data in the front panel, it's convenient for you.*

## 4.3 Static Data Download

The raw observation data is saved in internal memory of T300 PLUS receiver, when connected with PC via USB cable, the T300 PLUS receiver can work as a USB Flash Disk, which means you can copy or cut static data to PC directly.

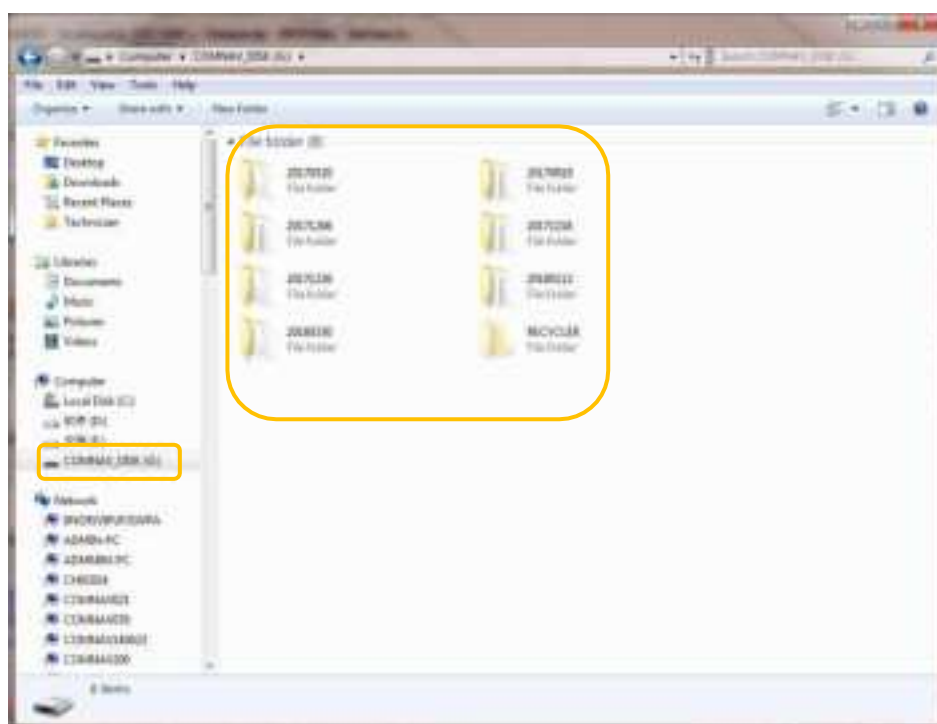


*Tips:*


1. You need to put a battery inside first, and turn it on, then you can connect to the PC.
2. Default memory for T300 PLUS receiver is 8GB, and 16GB, 32GB optional.
3. The receiver will stop recording raw data if the internal memory runs out.


## 4.4 RINEX Convert


After copy raw observation data to PC, you can convert the data from ComNav binary format (\*.cnb) to RINEX in CRU software.


1. Start CRU software;
2. Click **Folders** and select the path of your CNB data;
3. Click **Rinex Convert** to check all raw data on main window. Right click on the file to modify antenna, Convert Settings and Convert to RENIX, or use fast icon in standard bar.

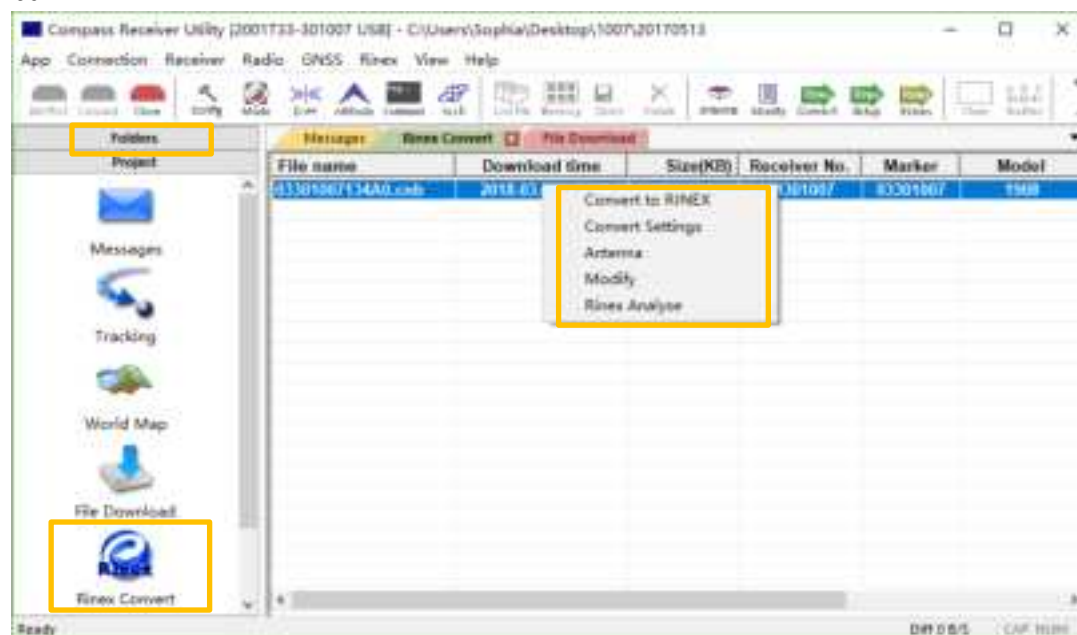


- Click  to select the **Antenna Type** and **Measurement**. If you cannot find T300 PLUS antenna, 1) input the value of R0 (horizontal offset from measurement mark to phase center), h0 (vertical offset from measurement mark to phase center) and h1 (vertical offset from measurement mark to receiver bottom). R0 is 0.079m, h0 is 0.411m and h1 is 0.038m respectively for T300 PLUS receiver; 2) or check **Enable antenna configure file** to select **Antennas.ini** file to select Antenna type again. You can also add, edit and delete antenna types based on your requirement.

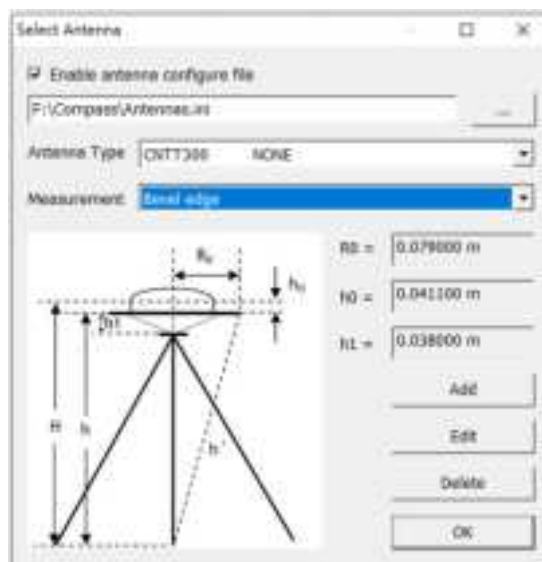

- Click  to change **Convert Settings**, mainly export format and export observation information.

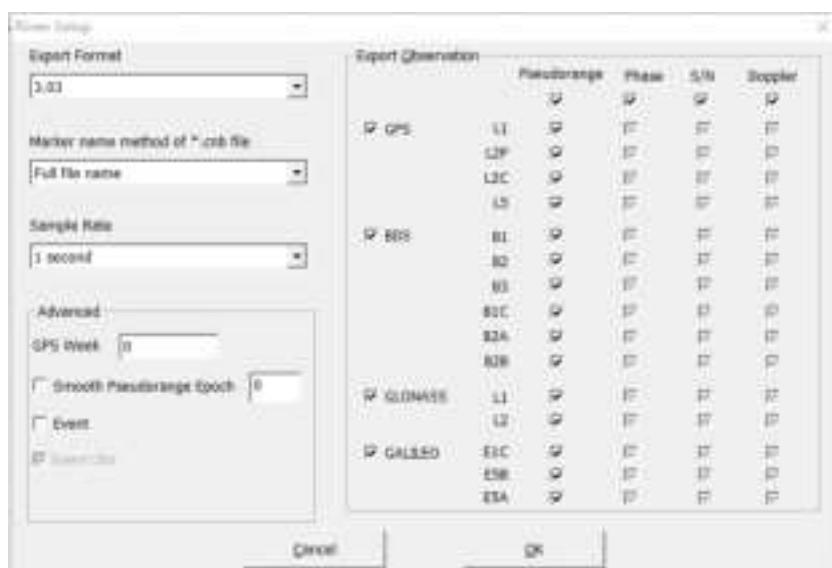

*Tip: In some Post Processing software, the BeiDou observations cannot be processed, you can uncheck the BeiDou B1,B2,B3 observations.*

- Click  to **Convert to RINEX**, the RINEX data will be save in the same path as raw observation data.

## 5 Real-Time Kinematic Survey (RTK)

This chapter introduces how to conduct RTK Survey with Survey Master Software, including software installation, start a new project, receiver connection and RTK working modes (Radio, CORS and GPRS).

### 5.1 Installation of Survey Master

Survey Master is available on Google play, you can download for free and install the software to SinoGNSS controller R550.

Also you can download the latest version from our website:


<http://comnavtech.com/download.asp?bigclassid=28>

### 5.2 Wizard function in Survey Master


Follow the Wizard, you can quickly learn the general workflow of Survey Master, also you can quick start your survey by this function no matter you are experienced one or new user.

In Project menu, tap Wizard.

1. **Project:** Click **Select** to go into Project interface to create or select a project. For detailed information, you can refer to [chapter 5.3](#).

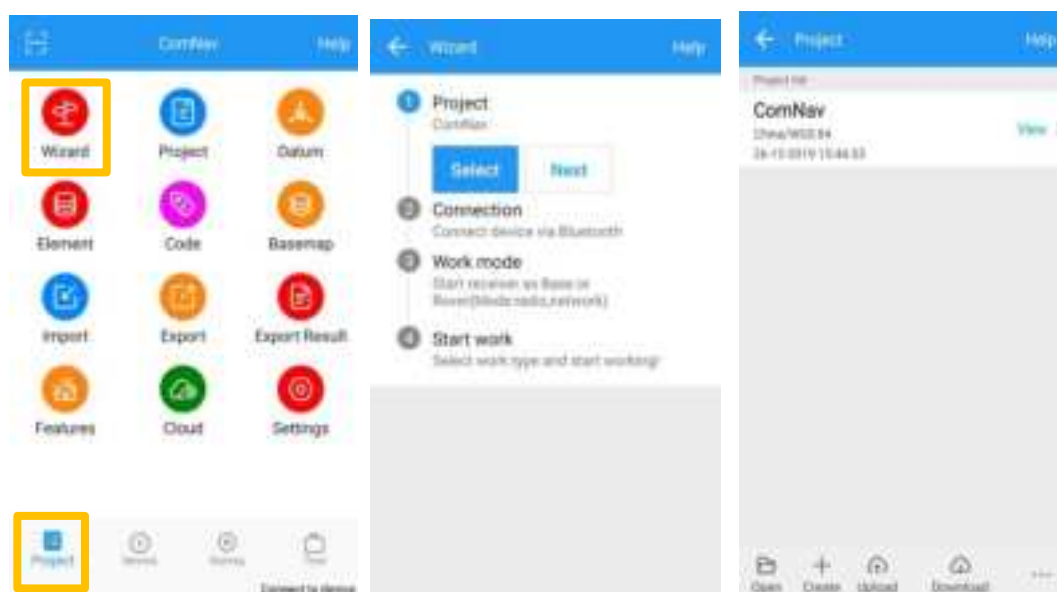


2. **Connection**: Click **Select** to go into Bluetooth connection interface. For detailed information, you can refer to [chapter 5.4](#).

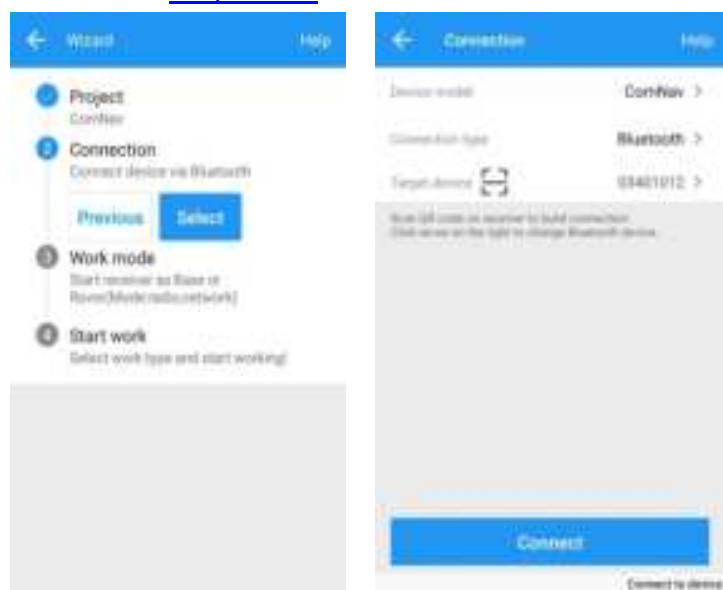


3. **Work mode**: Click **Select** to go into QuickSetup interface to start your receiver as Base/Rover. For detailed information, you can refer from [chapter 5.5](#).

If you start your receiver as Rover, then you can start work directly of topo survey or stakeout.

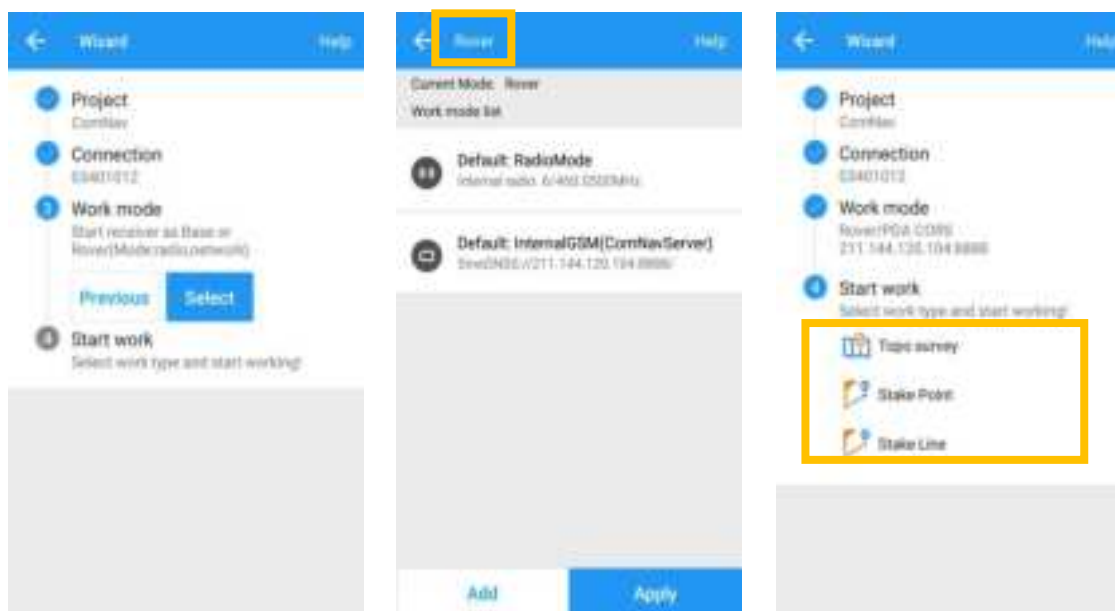


If you start your receiver as Base, after Disconnect with Base, there will be a Prompt.  
 YES: will guide you to start Rover in Wizard interface;  
 NO: will disconnect the base and exit Wizard.

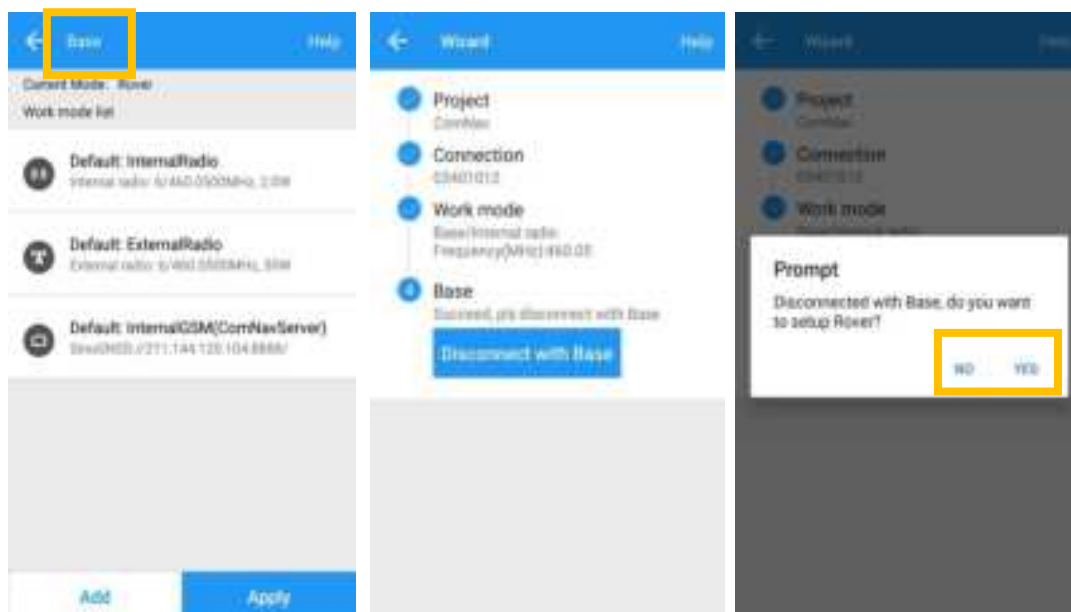


### 5.3 Start a New Project

Click **Project**, you can use the same Datum with last project, choose a datum in store and scan QR code from other controller to add Datum, even sharing project with cloud.

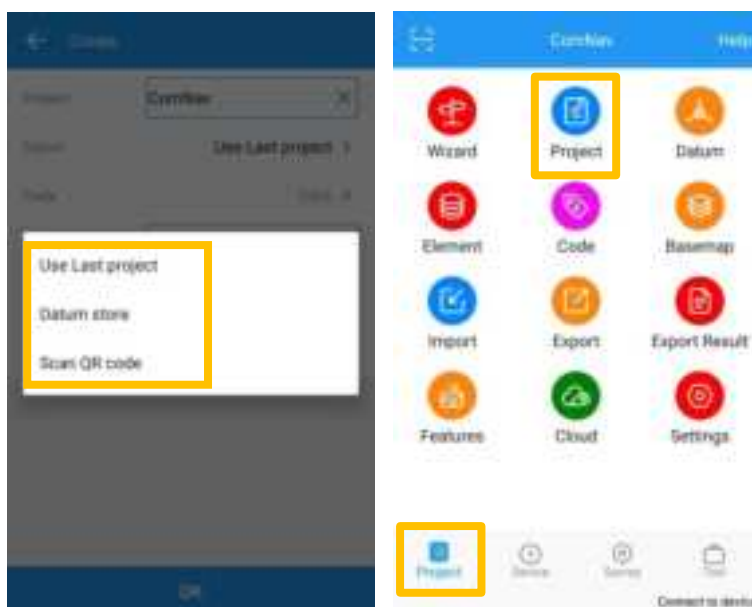




- Select a Predefined datum: You can select datum directly from the list. Survey Master currently has 49 countries datum and will add more afterwards.

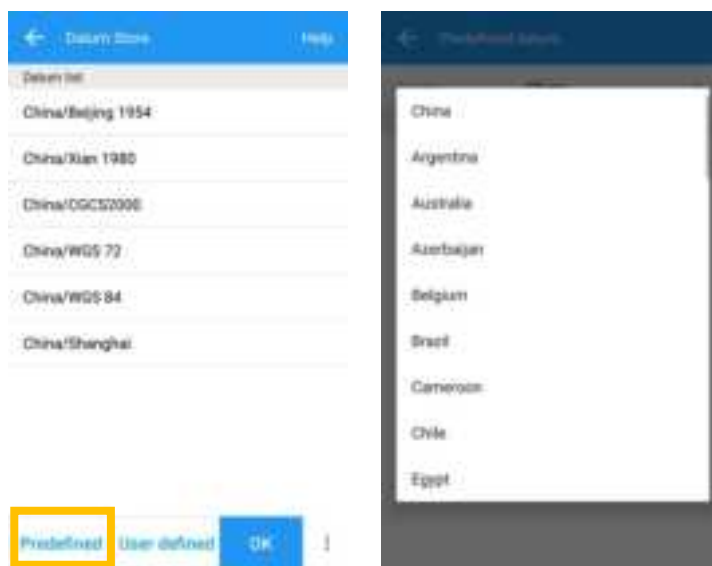


- Create a User defined datum: If you cannot find datum you want in the list, follow instructions below to add one: select Ellipsoid, Projection for your datum, and even seven parameters, geoid model based on your request.

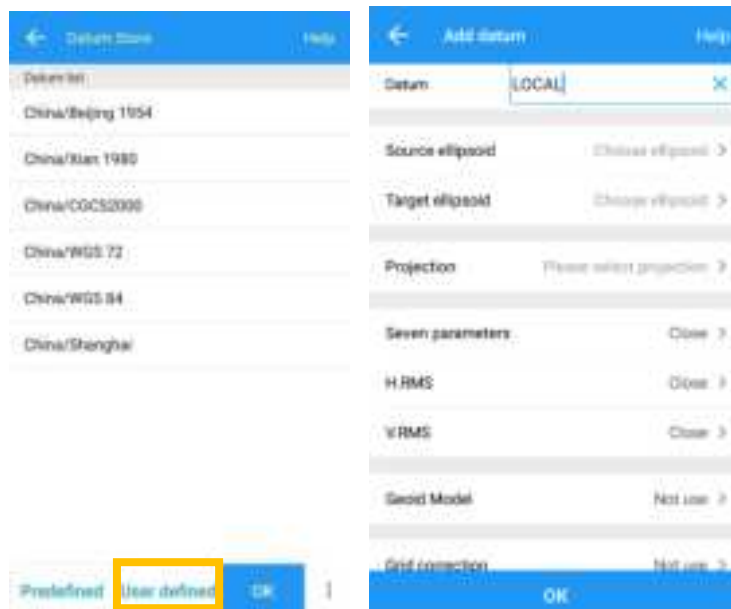

Tip1: if asked username and password for seven parameters, enter **admin admin**

Tip2: For H.RMS and V.RMS, it will show if do **Site Calibration**.


- Share Datum via QR code.
- After you build a project, press the project name, it will generate a QR code. Users can use the Scan function in the main interface to access the coordinate system.

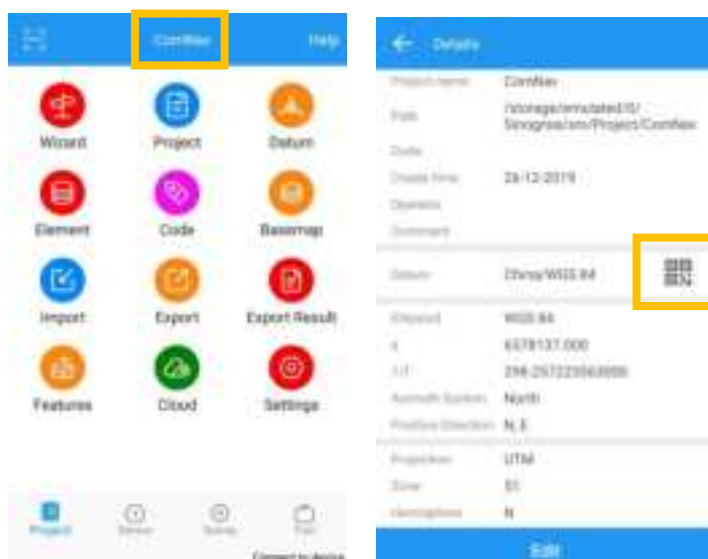


## 5.4 Bluetooth connection

To connect Survey Master with T300 PLUS, switch to **Device** interface, tap **Connection** to go into Bluetooth connection interface.

- Make sure device Bluetooth turned on;
  - Click **Find device**—select SN of your T300 PLUS receiver—allow pair
- After connect ComNav receiver, you can check the device version in **Device Info**.

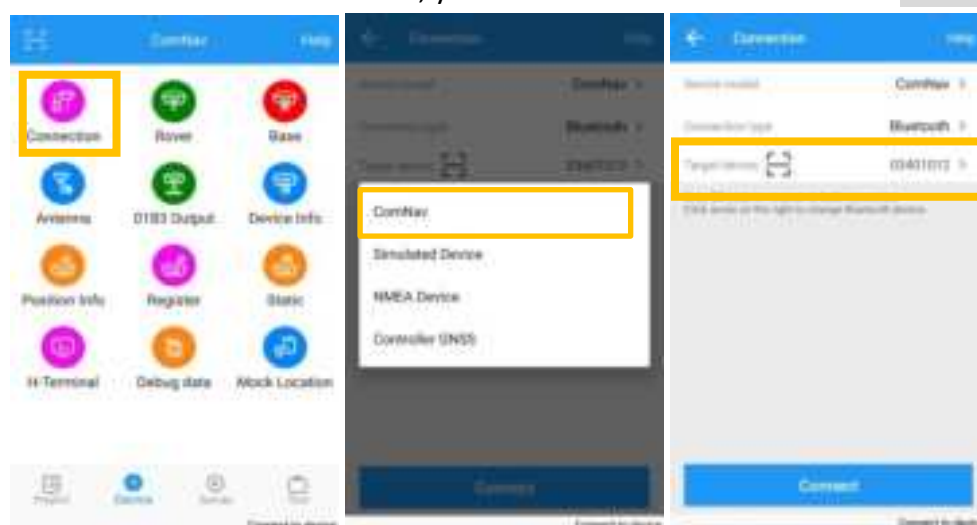

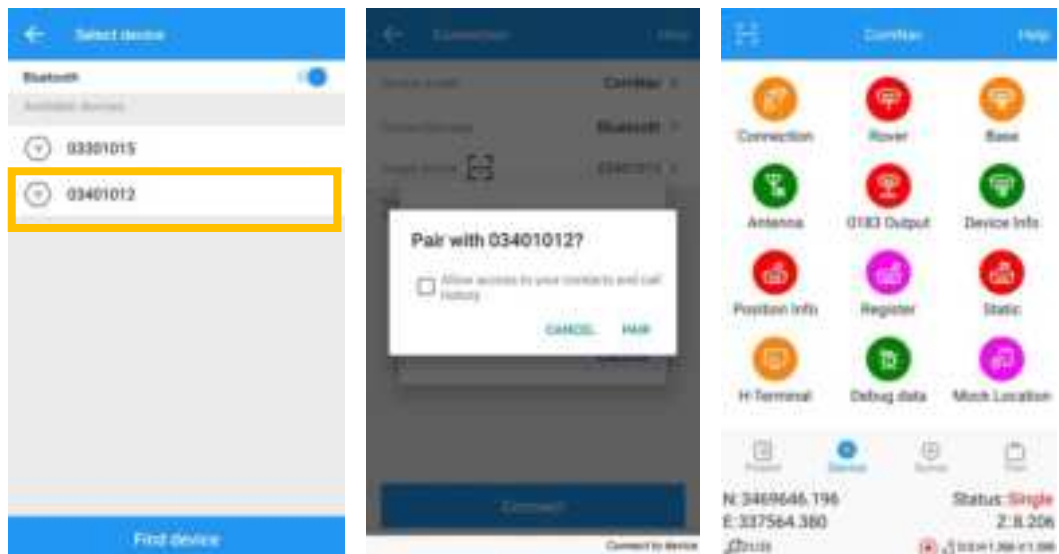

After connected successfully, the bottom will show the positioning status.

*Tip: If you are failed to connect with receiver through Survey Master, you can just follow prompt info to go into the device Bluetooth setting interface to make sure Bluetooth paired successfully. Sometimes you need restart the receiver or Survey Master Software.*


## 5.5 Internal Radio Mode

T300 PLUS GNSS receiver supports transmit & receive the correction data in internal radio mode. To conduct the RTK survey in internal radio mode, it requires:



*Tip: The external power supply is recommended when T300 PLUS set as a base station.*

*More: Aim to improve the radius of work field, we can change the base receiver's Whip Antenna to External Antenna. And others no need change.*


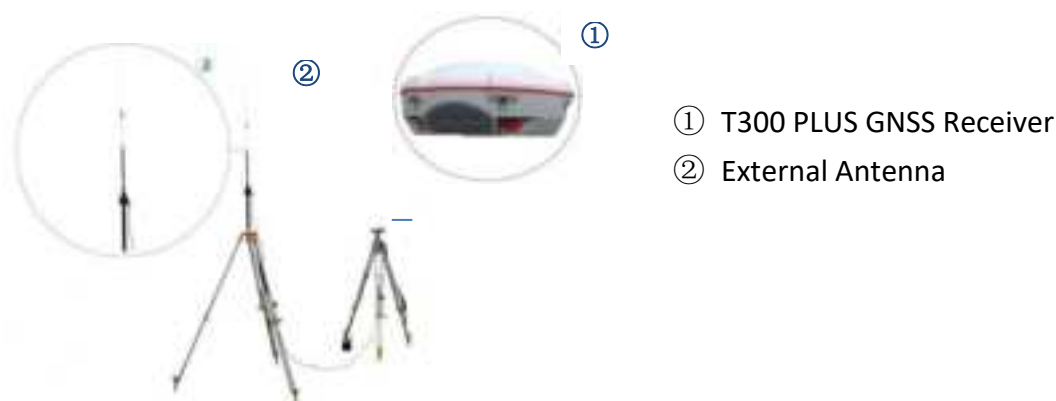


### 5.5.1 Base Station by Survey Master

Firstly, build Bluetooth connection between the T300 PLUS receiver and your controller as shown in [Chapter 5.4](#).

Secondly, modify parameters including correction format, antenna type and communication protocols:

- Click **Device**-> **Base** -> **Add**, select **Internal radio**.

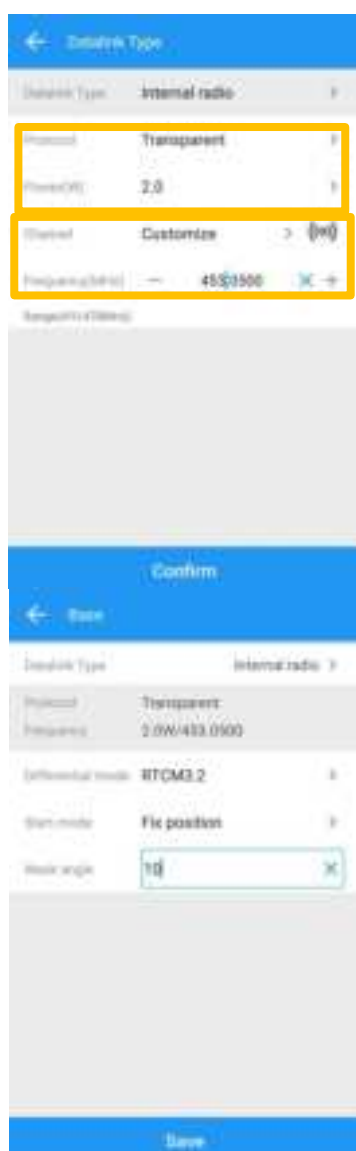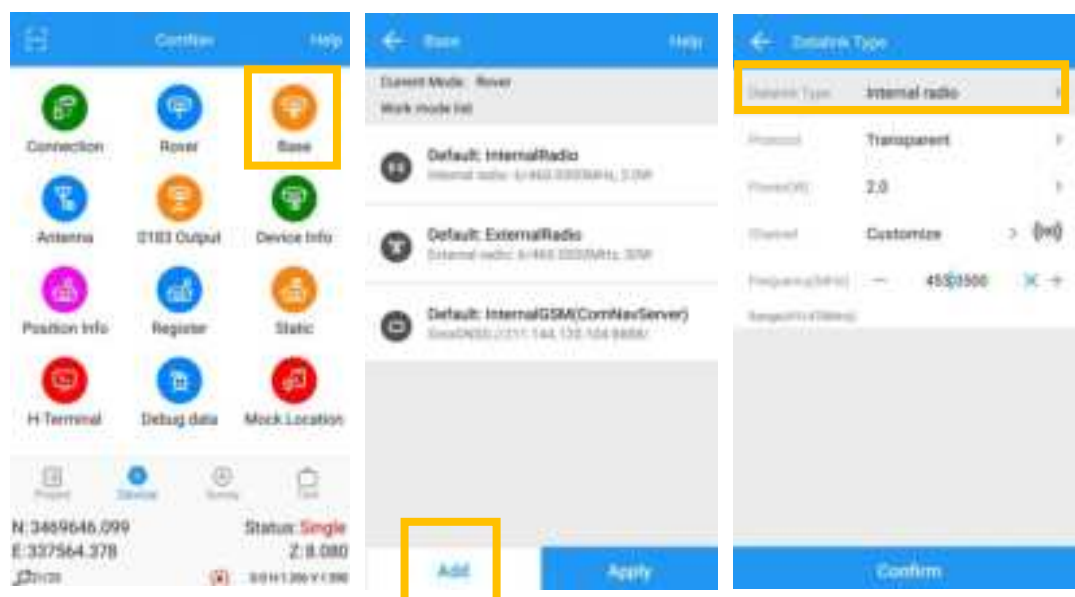


- Protocol and channel: Set protocol and frequency for the base;

- Start mode: Fix position means you have a known coordinate for base, or get a point from GNSS;
- Differential mode: Support RTCM32, RTCM32(MSM5), RTD, CMR, CMR+(GPS only)




- Library choose: Choose a known point from Element;
- Receive: Receive a point from GNSS;

When start Base succeed, it will show as below in Survey Master.

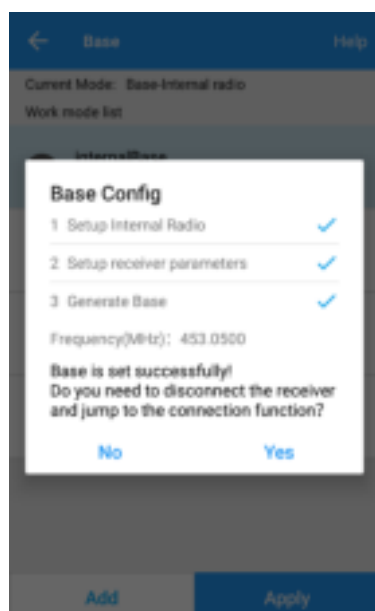

### 5.5.2 Start Rover Station by Survey Master

- Connect Survey Master with T300 PLUS receiver via Bluetooth based on [Chapter 5.4](#).
- Set same protocol and frequency with Base receiver.
- The current status on the bottom will change from Single to Fixed.

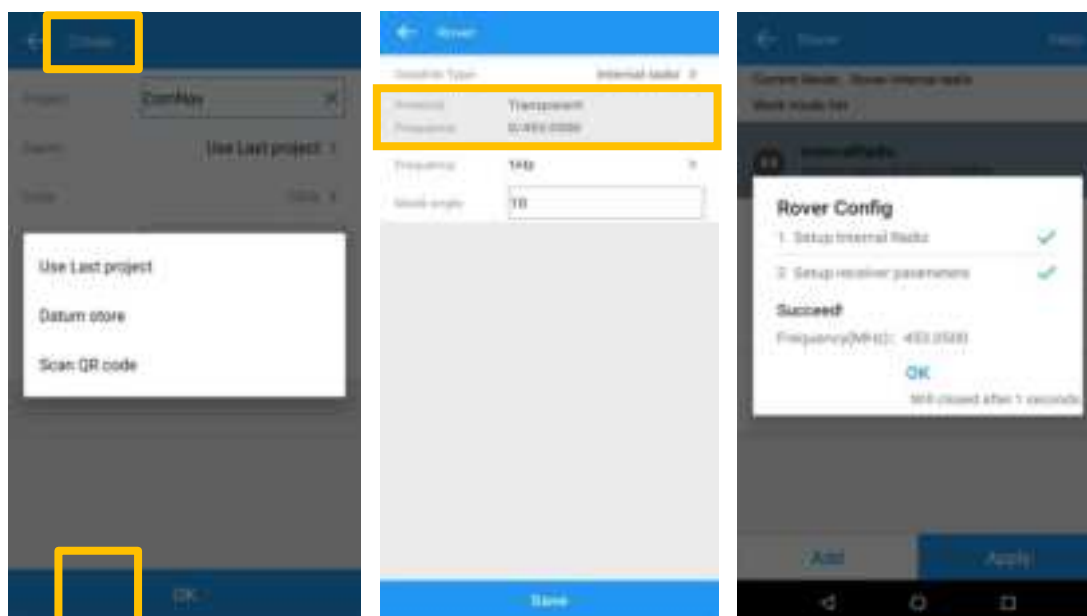

## 5.6 External radio mode

The external radio mode can extend RTK working distance, which is ideal for areas with high constructions or strong signal interference. To set up external radio mode, it requires:

- Base station



*Tip: 1) See [Appendix A](#) for detailed definition of 7-pin Lemo cable that connects the T300 PLUS receiver and external radio; 2) See [Appendix B](#) for the operating information of CDL7.*

*Warning: 1) You **MUST** connect CDL7 to external antenna firstly and then supply power, otherwise the CDL7 will have a risk of burnout; 2) You'd better put it in a shelter when raining, because it's not water-proof.*

## ● Rover station



- ① A T300 PLUS receiver
- ② A Whip antenna
- ③ A controller with software installed
- ④ A range pole with bracket

- Click **Device**-> **Base** ->**Add**, select **External radio**.



- When start succeed, set up the frequency channel, and Rover frequency should be same.
- Be sure to set the same baud rate as your CDL7(default value is 38400, you also can change in **Param tab** based on your CDL7).

## 5.7 PDA CORS Mode

Without setting up your own base stations, the T300 PLUS GNSS receiver can receive correction data transmitted from continuously operating reference station via PDA's GPRS or WIFI. To do RTK survey in PDA CORS mode, it requires:





- ① A T300 PLUS receiver
- ② A controller with SIM card and software
- ③ A range pole with bracket

Configure the Rover as below:

- Make sure your controller can access to internet via SIM card or Wi-Fi, then run Survey Master Software.
- Build Bluetooth connection as shown in [chapter 5.4](#), Click **Device** -> **Rover** -> PDA CORS.



- Enter CORS **DNS/IP address** and **port**-> Click **Source List** and select the proper source -> enter **User** and **password**.
- After **Confirm** succeed, the diff LED (yellow) on receiver will flash, and software can get a fixed result.
- It also provides TCP protocol.

## 5.8 Internal GPRS Mode

For Internal GPRS mode, T300 PLUS receiver supports Point to Point/Points and Ntrip client mode. To acquire the APN (access point number) from the mobile service provider, you need to insert a SIM card into the T300 PLUS receiver. It commonly acquires the APN from the mobile network provider, otherwise try to get via the link:

[http://www.hw-group.com/products/HWq-Ares/HWq-Ares\\_GSM\\_APN\\_en.html#top](http://www.hw-group.com/products/HWq-Ares/HWq-Ares_GSM_APN_en.html#top)


### 5.8.1 Point to Point/Points mode (P to PS mode)

In point to point mode, the correction data is transmitted from the base station to the server, then rovers can log on the server to get the correction data. Therefore, SIM cards are required both in the Base and Rover.

*Tip: ComNav technology provides a free static server address **211.144.120.104:8888**, anyone can upload CORS data as long as abide by the agreement.*

Below shows Base configuration with ComNav server:


- **Server**: select SINOGNSS server(**IP: 211.144.120.104** and **Port:8888**)
- **BaseName**: Click BaseName to get SN of Base receiver directly, when start Rover, just select the name as source
- Differential mode: make sure to choose **RTCM32**
- Fix Position: Click **Library choose** to select a known point for the Base, or **Get** from GNSS if you do not have a known point.

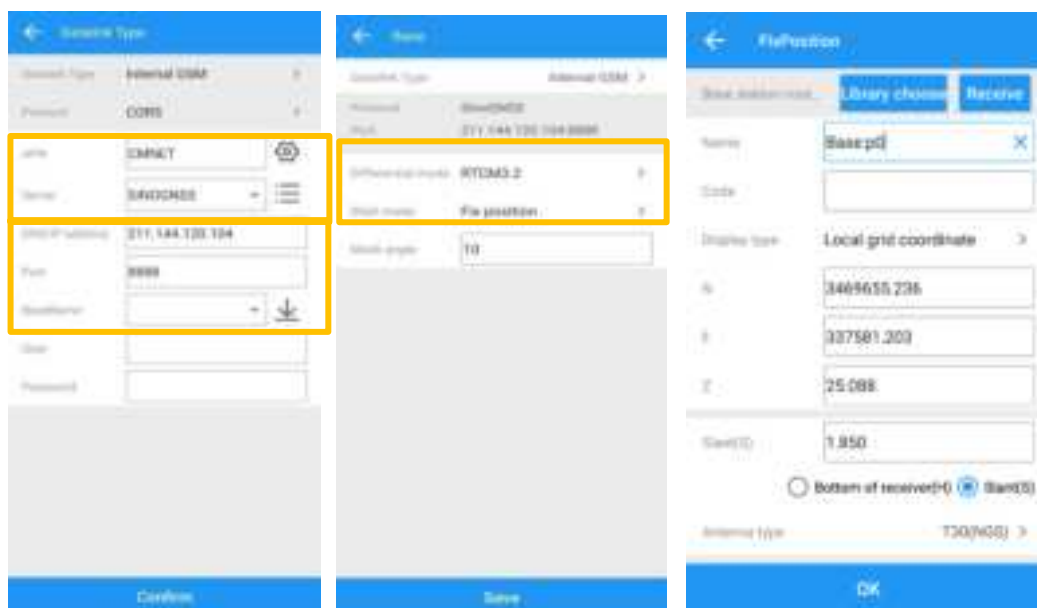

After successfully starting the Base station, the differential LED (yellow) flashes once per second, which means the Base is broadcasting correction data;

Configure the Rover as below:

- Protocol: Select **SINOGNSS** directly;
- BaseName: Enter the SN of the Base receiver.

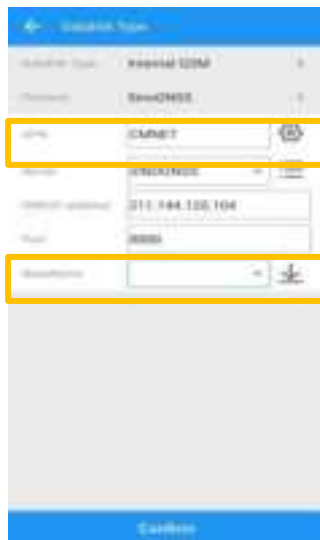

### 5.8.2 Internal 4G Ntrip client mode

For Ntrip client mode, Rover acquires correction data from Ntrip(CORS) server.




- Enter proper **APN, DNS/IP Address and Port.**
- Click **Source List**, select the proper source-> enter User and Password


## 6 Basic Survey Functions

This section describes the basic survey functions of Survey Master, including point measurement, Topo survey, Auto survey, Area survey, Static, PPK, staking, site calibration, import and export measured points.

### 6.1 Topo survey


Click Topo Survey-> enter point name, ->click  to start or stop collecting data.

- You can quickly change antenna height in the survey interface.
- Tap **Elem** to check point coordinates.
- Tap **Layer** to show the layers you want display on map.

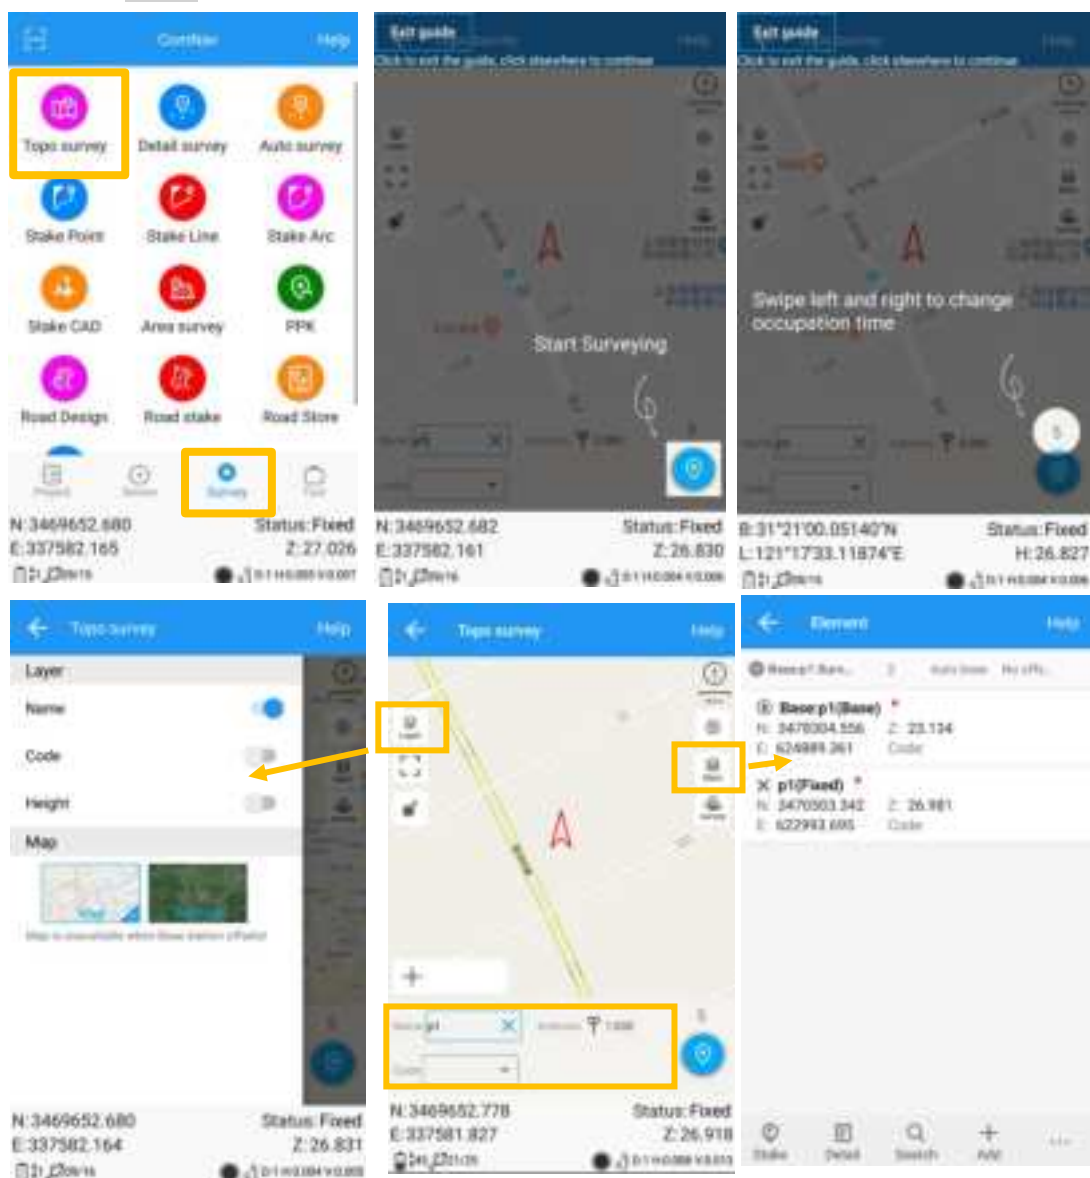


- Fast survey by pressing Code: Tap the code in nine panels, will survey the point directly.

Go into code management interface to modify code list, then you can choose code to use in nine panels.

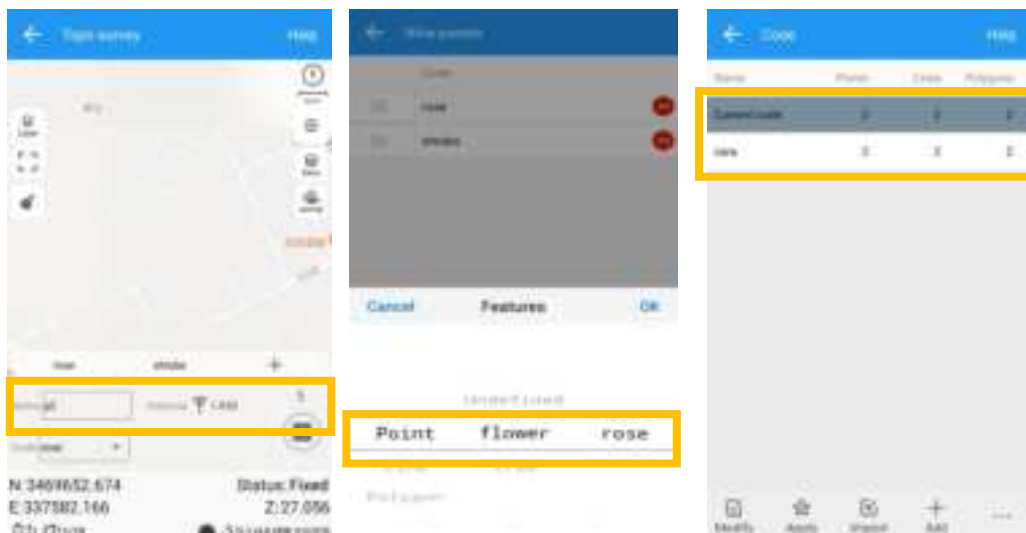


- Recover deleted points in Recycle Bin.

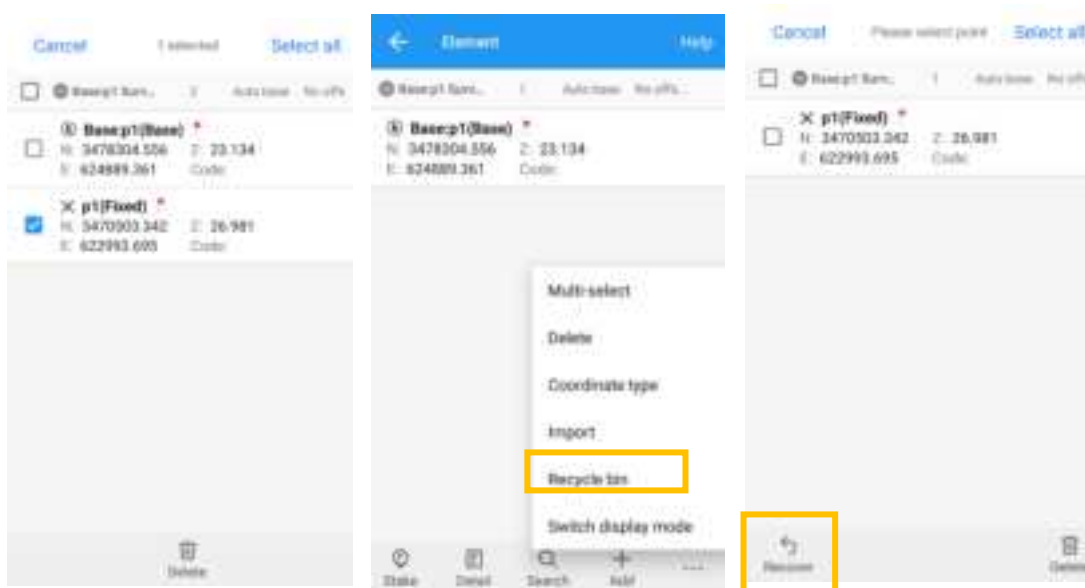

### 6.1.1 Survey settings



- Fixed: only fixed result can be saved;
- Duplicate name: allow point name same;
- RMS: point accuracy need higher than the value;
- Offset radius: point cannot offset bigger than the value during measure;
- Occupation time: measure times for one point;
- Point stepsize: for point name;
- Stake range: show circle when close to target point;

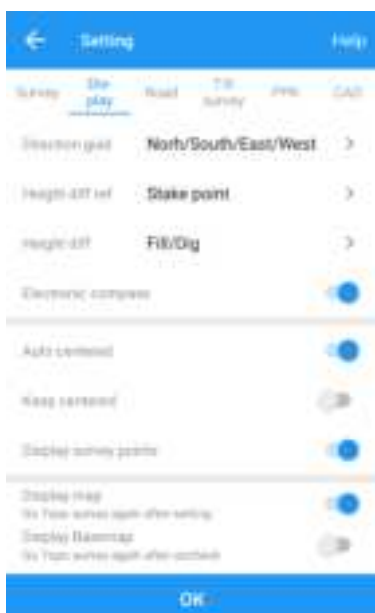


- Direction guide: 3 methods showing guide for stake out;
- Electronic compass: Use controller compass during stake out;
- Auto centered: Map will go to current location after 5 seconds;
- Keep centered: Map will go to current location after 1 second;
- Display survey points: will show all survey points on map;
- Display Basemap: for showing DXF/SHP file on map

### 6.1.2 Tilt survey

Tilt survey option will appear when receiver supports for tilt survey, it is available for ComNav Technology T300 PLUS GNSS receiver, use IMU sensor.

According to the IMU sensor, can not only meets the requirement of high precision measurement, but also relieves the users from continually checking whether the pole is plumb. When the pole tilts within  $60^\circ$ , the built-in sensor based IMU precisely calculates the actual offset, which accuracy can up to 2.5 cm

1. Open IMU: Go into Topo survey—click the button to open.

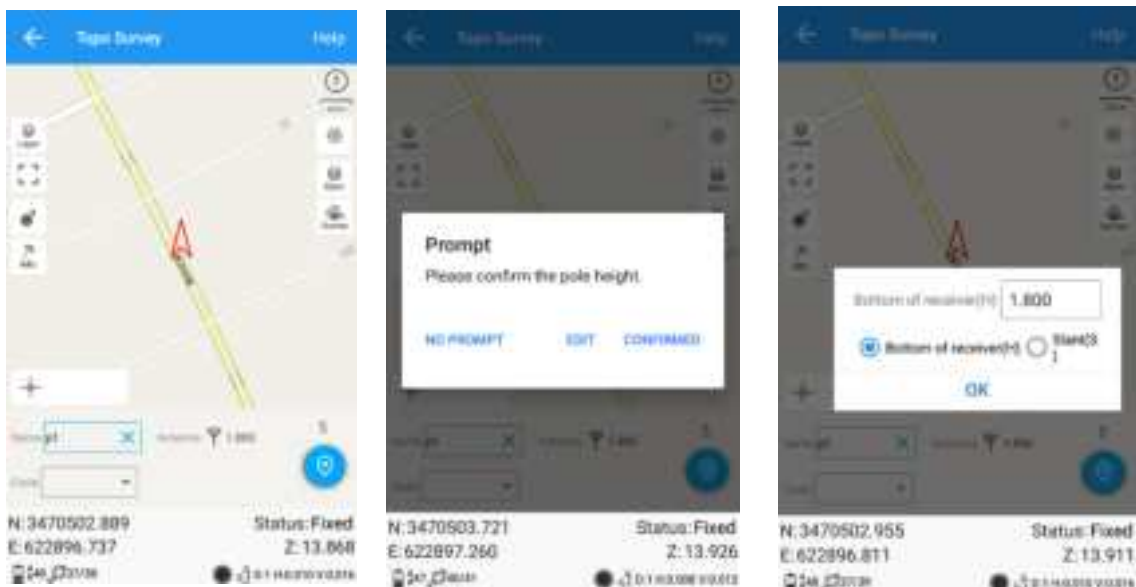

After you click IMU button, it will give you one prompt to check the antenna information.


**Edit:** Change the antenna information.

**Confirmed:** You have been confirmed the antenna information, and it is correct.

**NO PROMPT:** will not give this prompt next time when you do IMU calibration.

## 2. Initialization

If you power off the receiver or freset it, need to initialize again. After open IMU button, you can follow the guidance in interface to complete it. During operation, make receiver can search the satellites and get a fixed solution.

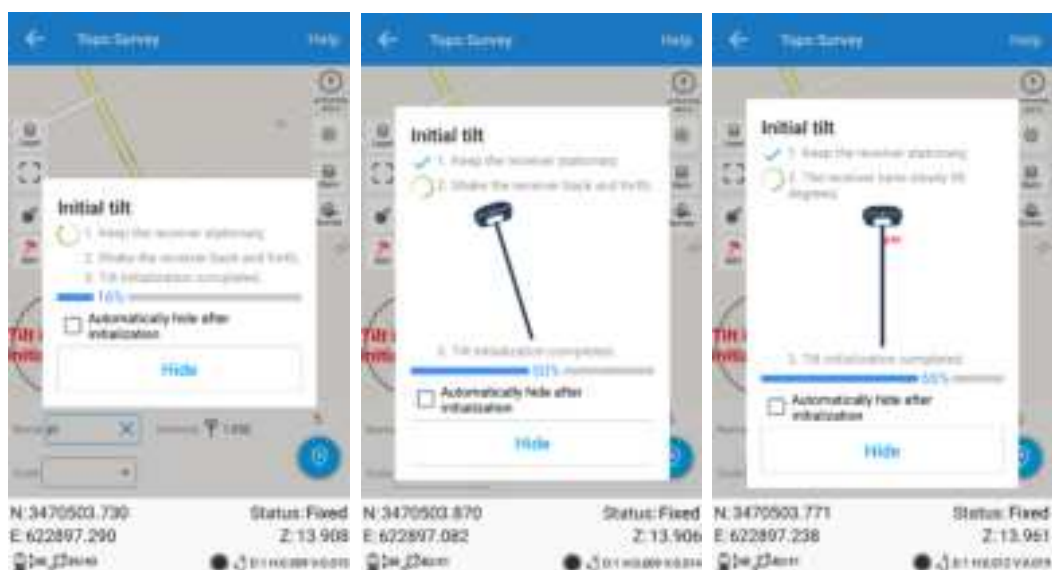

*Keep the receiver stationary*

*shake the receiver*

*rotating the receiver*

In survey interface, you can find the bubble and angle value shows the pole you tilt. For more accuracy, angle less than  $60^\circ$  will be better.




*Tip: Do not shake or rotate the receiver violently, otherwise you need to re-initialize.*




## 6.2 Auto survey/Area survey


For Auto survey, it supports automatic and continuous survey according to Time or Distance.

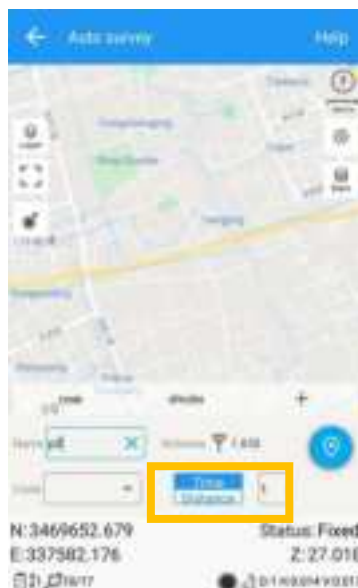



For Area survey, it can compute area directly after getting points.

Press , it will show the coordinate information, press , it will show the area result, press , it will show the shape on map.

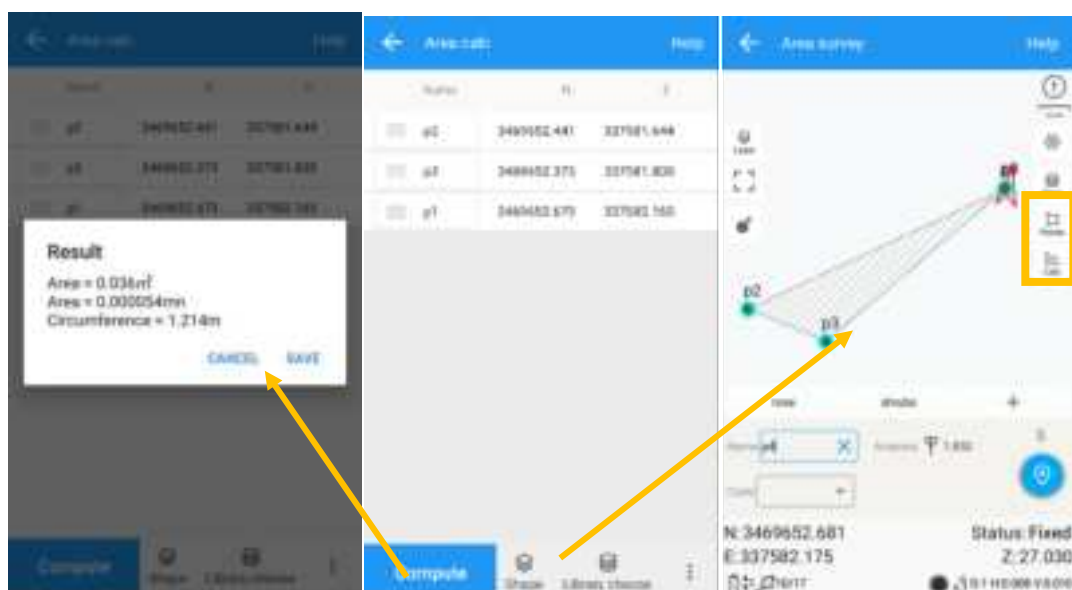

### 6.3 Stake points/lines


Go into **Stake point** interface, click to choose a point and tap **Stake**. Survey Master provides a navigation map when staking points/lines. If you are close to the target point enough, it will alarm you based on the alarm range you set.

Enter the point name and code based on your requirements, then click 




Various navigation info choices


You can also **Import** points for staking, or add from **Library choose**.

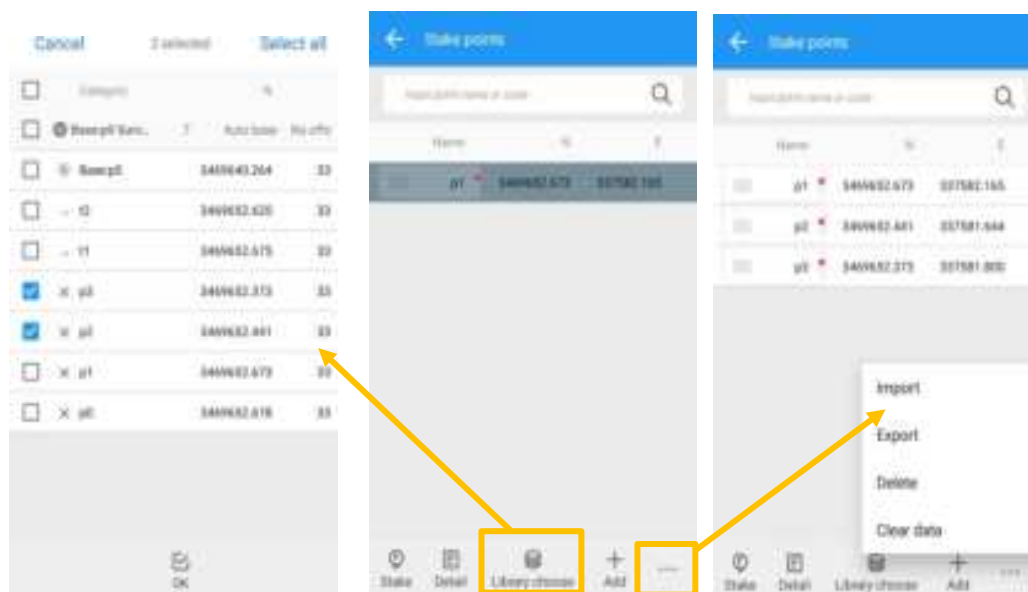

*Tip: keep your receiver vertical to the ground.*

For staking lines, click add line (Two points or Point + Azimuth + Distance) -> click -> Choose one line and click Stake. The default method to stake is “To line”, press method to choose a method you want.

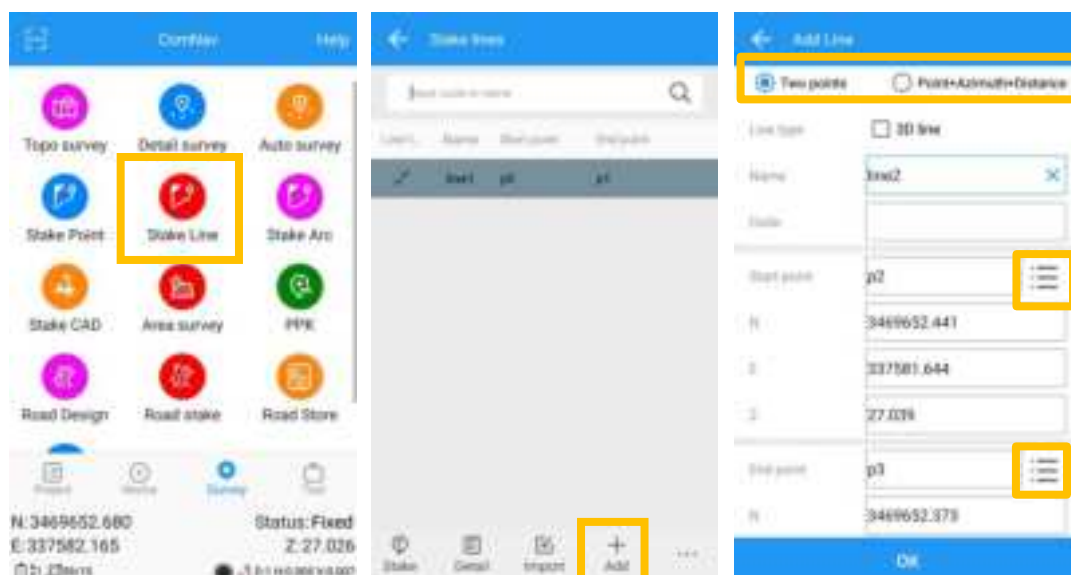

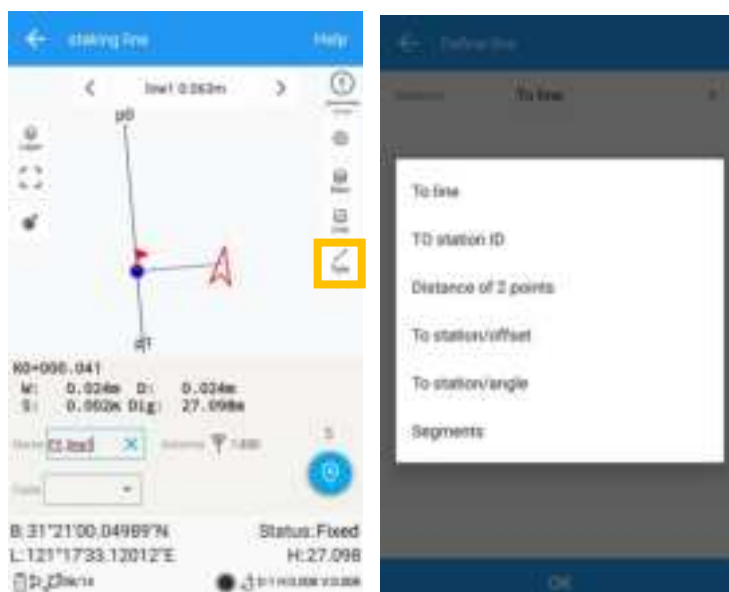


- To line: show shortest way to find a point on line;
- To station ID: stake points on line by defined interval;
- Distance of 2 points: show distance of current location to the line's start point and end point;
- Segment: Stake on line by defined segment value.


## 6.4 PPK

PPK (post processing kinetic) is the unique function of survey master, which is used for post-processing dynamic measurements.

It also needs two receivers to work together, one work as Base to record static data, and another one work as Rover as shown below.

1. Click PPK in survey interface -> choose or create a PPK file.
2. Go to settings, configure PPK settings based on your requirements.
3. To get stable epoch, click **Init** to initialize -> **Start** to start PPK survey.

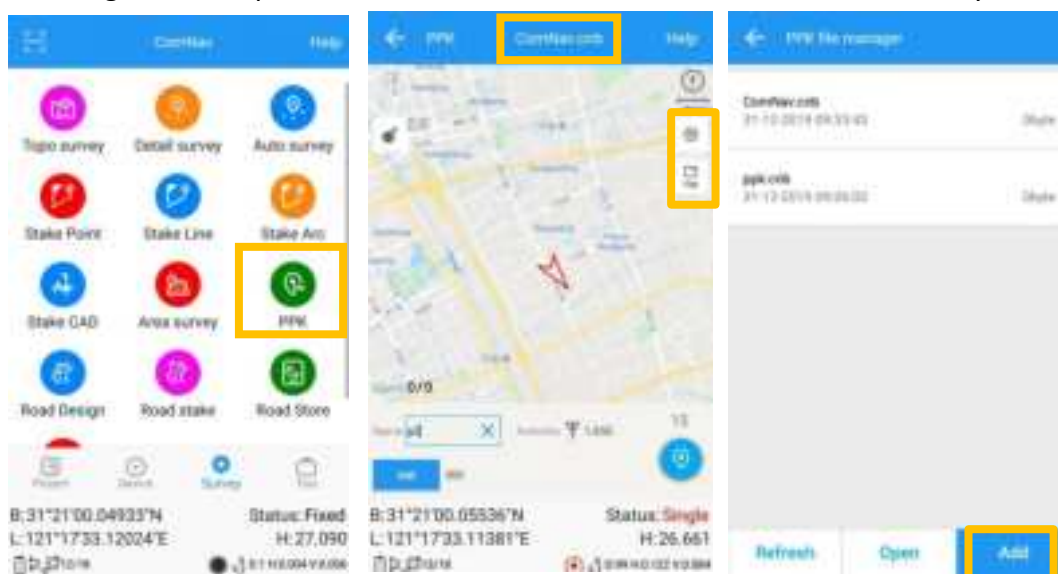

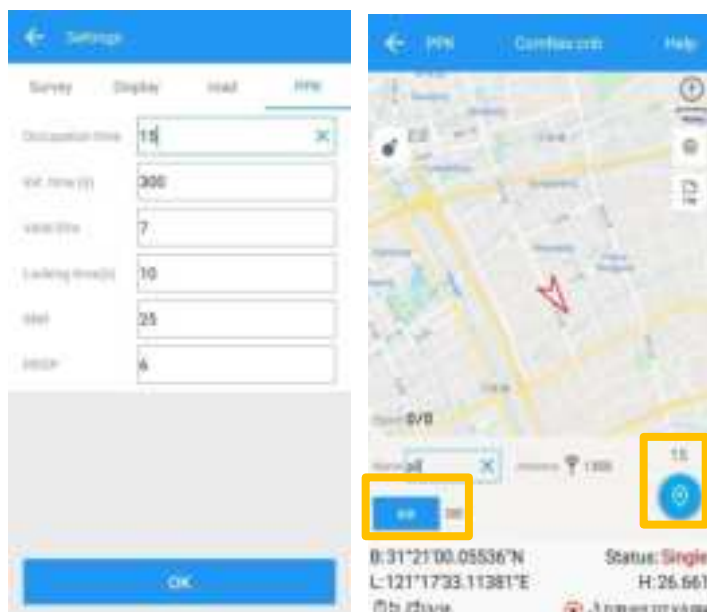


## 6.5 Site calibration/Grid Shift

### 6.5.1 Site calibration

Site calibration is commonly needed once in one project, and all the points will be collected based on calibrated datum system.

1. Choose manual pair or auto pair.

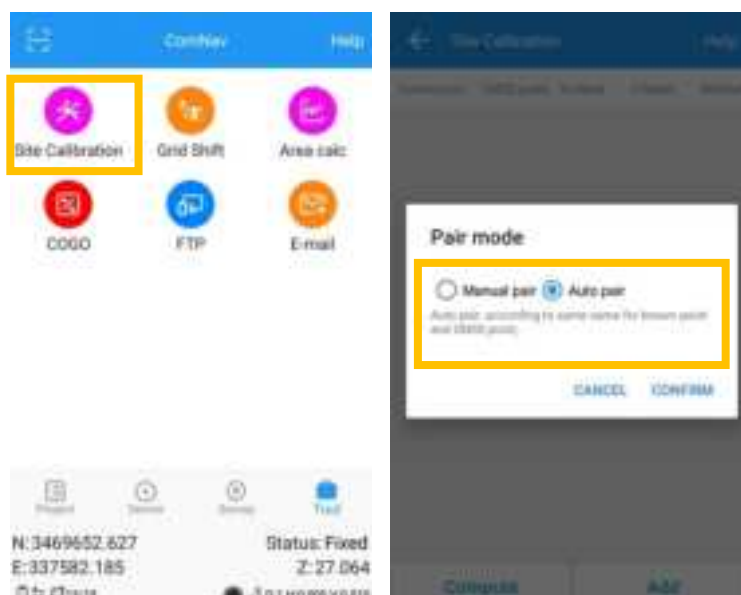


2. If you choose manual pair, you can directly enter at least three groups' point to compute. (for example, take K1,K2,K3 as known points, take A1,A2,A3 as measured points) After click **Compute** to calculate, the software will calibrate


automatically.



- If you choose auto pair, it will auto compute according to the same name for known point and measured point. After click **Compute** to calculate, the software will calibrate automatically.

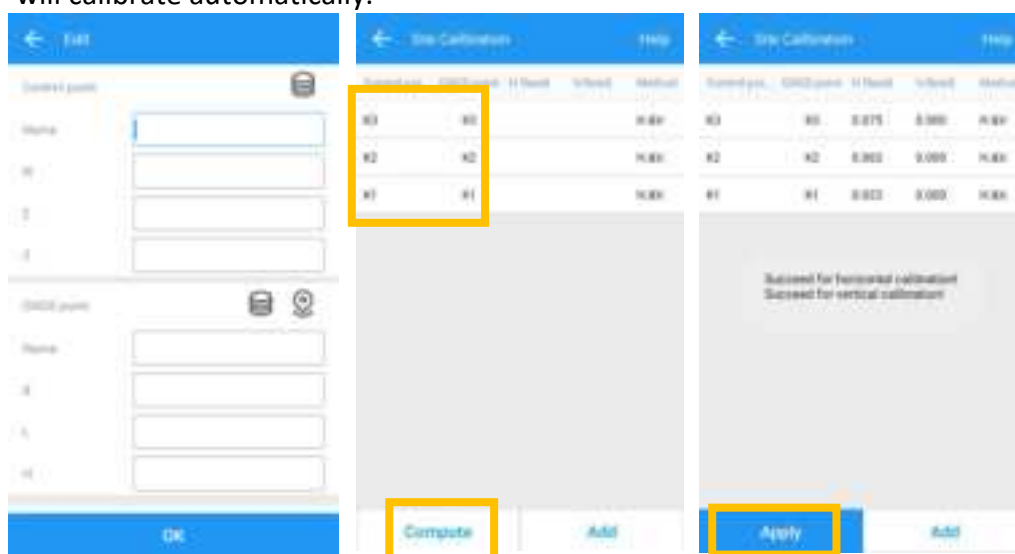


- Click **Apply** to confirm to replace datum. The value of H.Resid and V.Resid should meet the requirement ( $H.Resid \leq 0.015m$ , and  $V.Resid \leq 0.02m$ ).

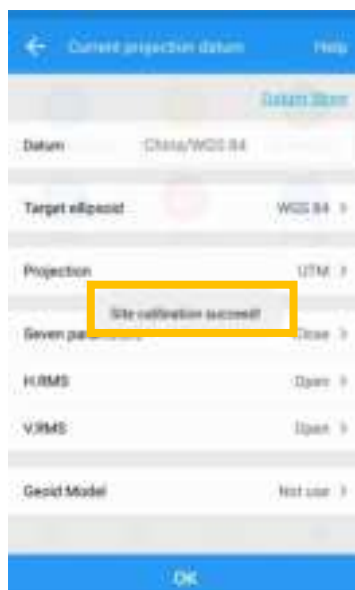

### 6.5.2 Grid Shift


Grid reset function is applied when you need to change the position of Base station in the same project.

Click **Grid Shift** in Survey interface -> add current Base point and target Base point -> Click **Compute** -> **Apply** to complete grid shift.

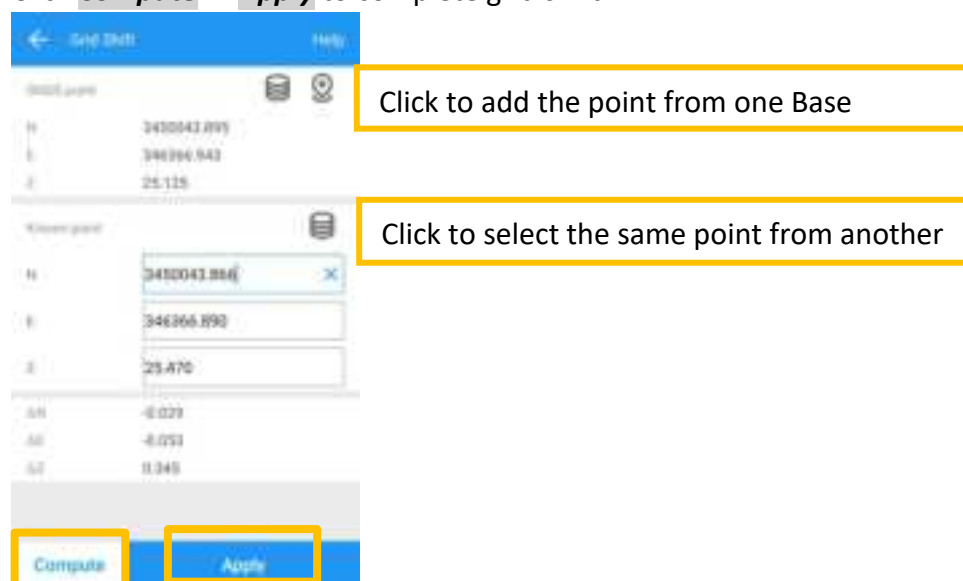

### 6.6 COGO

With COGO function, you can calculate points/lines/angle directly on field.

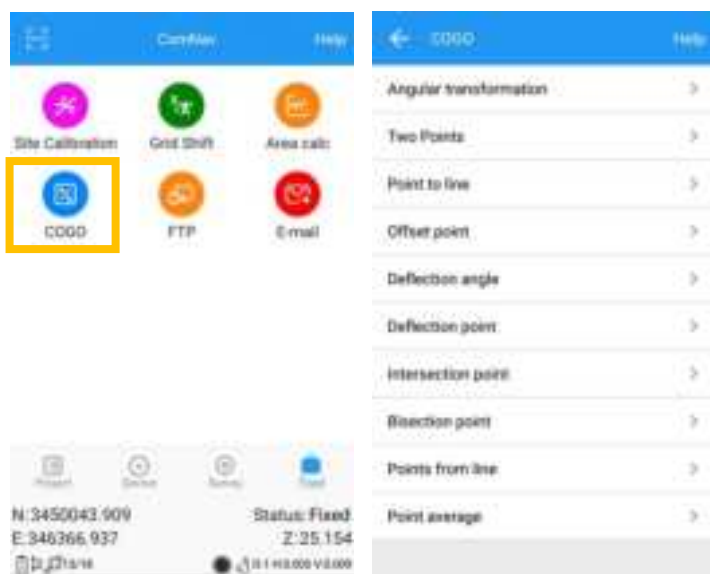

- Angular transformation: Angular type transform;
- Two points: Calculate two points distance;
- Point to line: Distance from point to one line;
- Offset point: Calculate point with azimuth and distance;
- Deflection angle: Calculate angle of two lines;
- Deflection point: Calculate point with angle and distance;
- Intersection point: Calculate intersection points from two lines;
- Bisection point: Calculate point from angle bisector;
- Points from line: Calculate points on line by distance or segment;
- Point average: Calculate average from points;

## 7 Data Export/Import


Survey Master supports to import/export data including grid coordinate, Lat/Lon coordinate with various data format, support import DXF/DWG file and export result of DXF/KML, etc.

### 7.1 Import

Tap **Import** in project interface, there are some predefined data formats, click **More formats** to get more predefined formats. Besides, you can click **Add** to create a User-defined type.

Long press the predefined data format that you don't use often, you can move this format to the More formats page; also, you can move the data format of More formats page to the previous page where stored the formats you usually use.



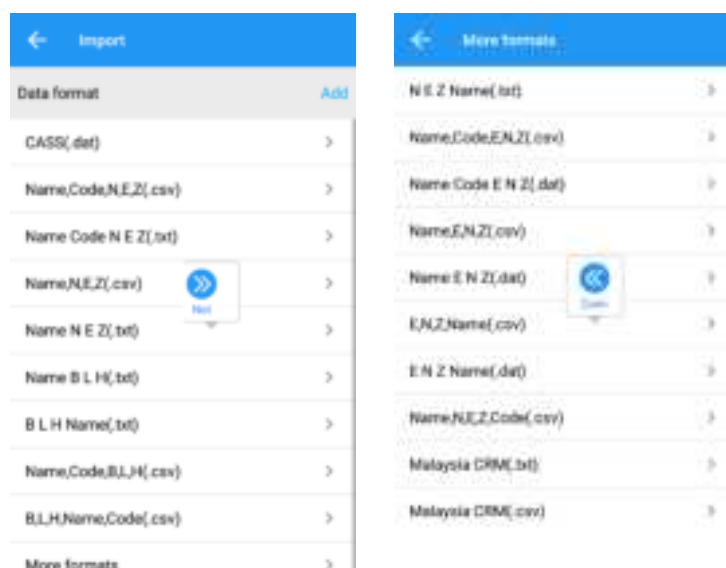


- Name: Enter the name for the format
  - Delimiter: support Comma(,), Space( ), Semicolon(;
  - File format: support \*.csv, \*.dat, \*.txt format
- Click **Select all** to choose all elements, Click **Clear** to eliminate all elements selected.

The elements include: code, name, N, E, Z, B, L, H, X RMS, Y RMS, V.RMS, status, start time, occupation time, diff age, base ID, total AntHgt, Antenna height, measure type, antenna name, ending time, comment, RMS, PDOP, HDOP, VDOP, TDOP, GDOP, total SV, used SV, elevation, tilt offset, tilt angle, tilt distance

*Tip: The format you defined will also be saved to Export interface.*

Choose one format to import data.


- The default export path is `.../Sinognss/sm/data`, you can also click **Upper folder** to change to any other path where the file is.
- Point type: support Input point, Control point, Stake point

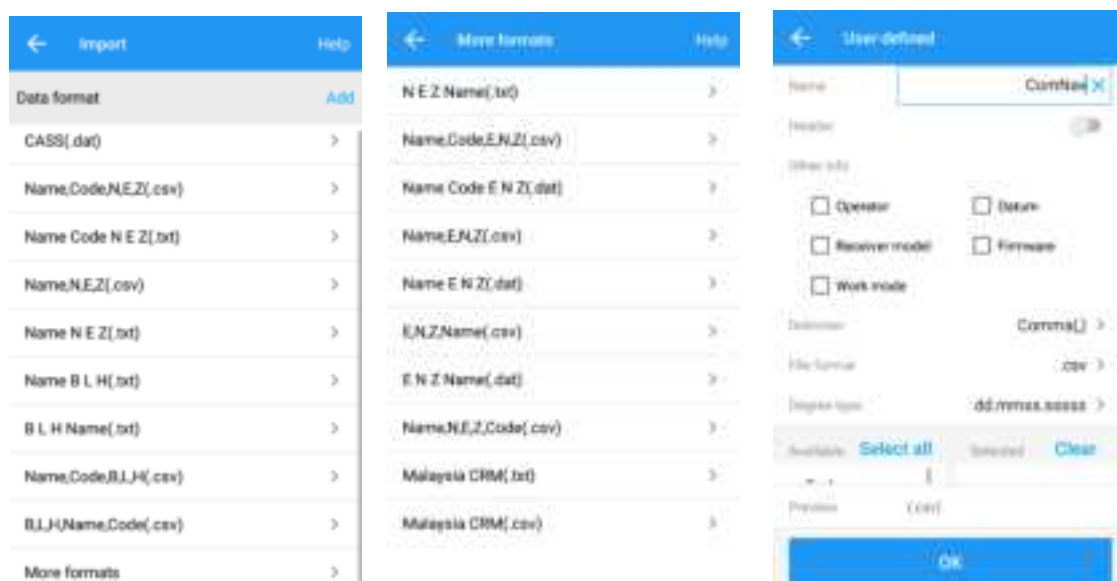

## 7.2 Export

Tap **Export** in Project interface to export simple data of survey points. Also, click **More formats** to export the survey points with detailed information or other formats like stake points/lines, DXF, SHP, KML, RAW, RW5, HTML, CASS feature result.

Same with Import result, long press the predefined data format to select the interface you want to place.

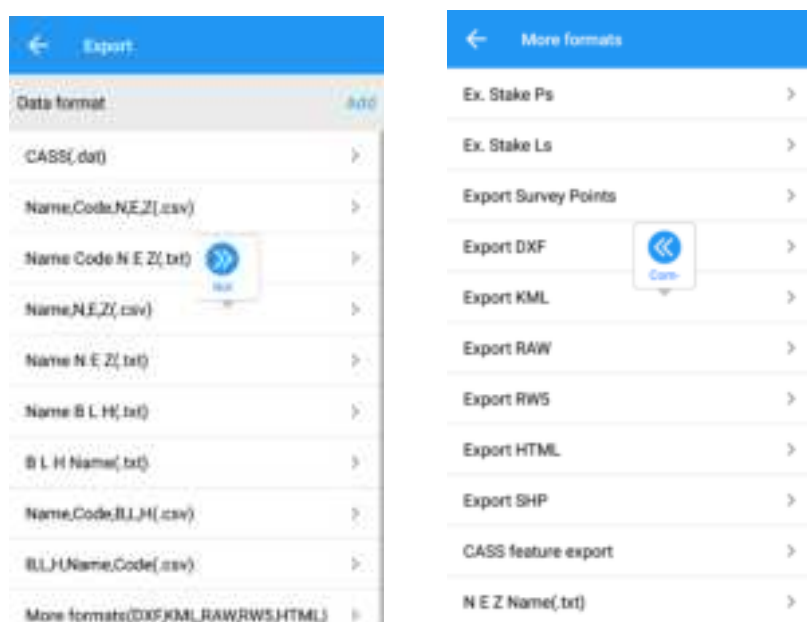


- File format: support \*.csv, \*.dat, \*.txt format

Choose one format to export data.

- Select: support Survey point, Control point, Input point, Stake point, Base, also, you can set the date, name, code of data to specific export

The default export path is `.../Sinognss/sm/export`, and the previous saved file will be shown below, you can also click **Upper folder** to change to any other path.

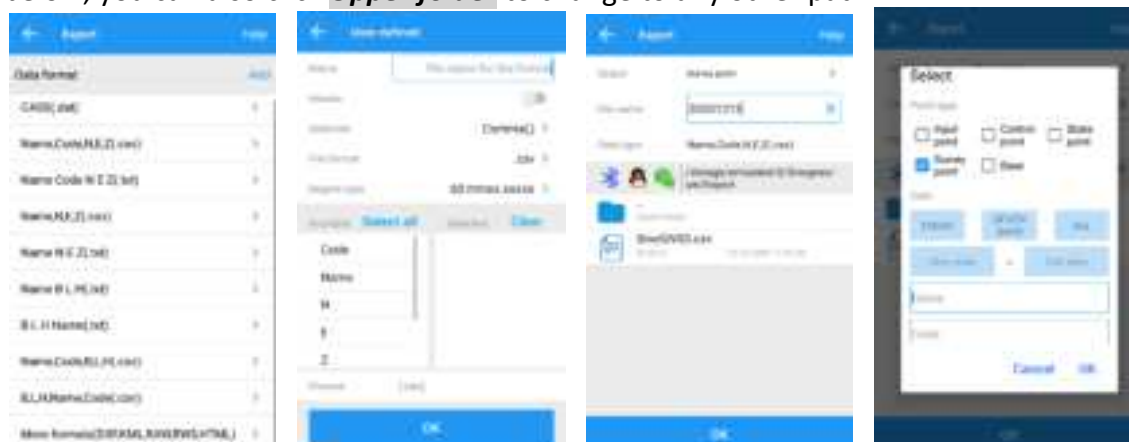

For the points, lines and polygons you surveyed in Topo survey and Feature survey, you can click **Export DXF** to export dxf file, then you can edit them in third party CAD software, or import to **Basemap** to check, or import to **Stake CAD** to stake.


Choose the data that you want to export including survey point, input point, control point, stake point, base, line and polygon, and the layer properties includes name, code and height, the default text height is 0.5.




## 7.3 Import Basemap

Tap **Basemap** to import DXF/DWG/SHP file into Survey Master.

- Add points: Save points from the dxf/dwg/shp file to element.
- Add lines: Save lines from the dxf/dwg/shp file to element.
- Prefix: Support add prefix name for points/lines saved to Elements.
- Add line endpoints: add line endpoints to point element.

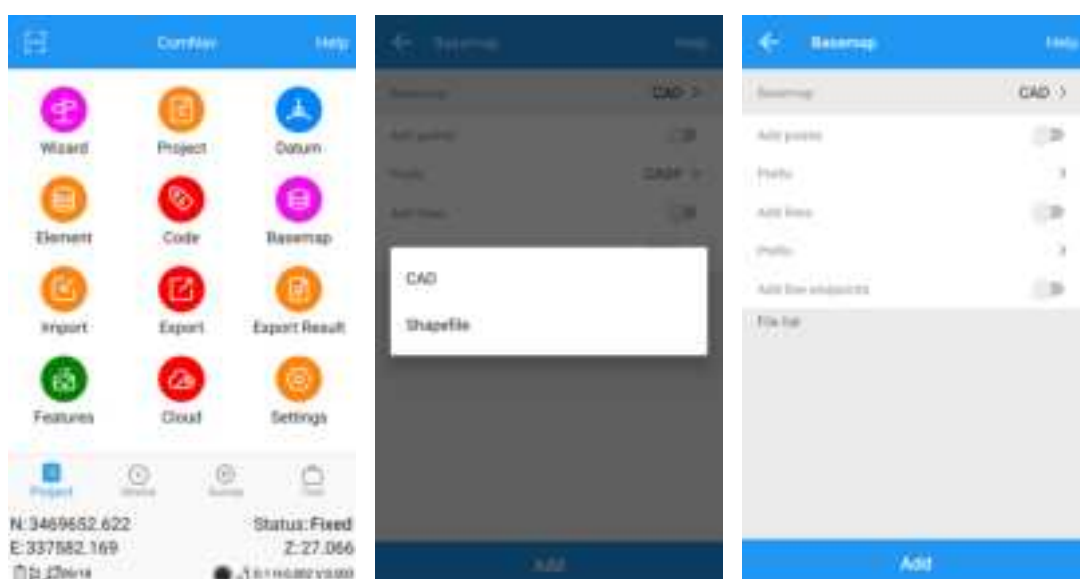

Remember go survey settings to check on display basemap, click zoom button to auto show basemap.

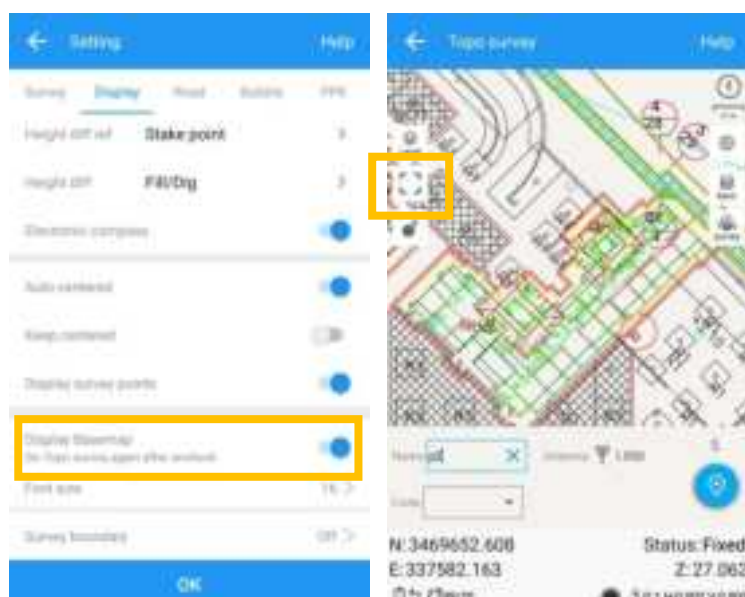


## 8 Export Result

## 8.1 NMEA 0183 output

With **NMEA 0183** function, you can quickly set to output NMEA data from lemo port or Bluetooth. In fact, this function is same as enter commands “log comX gpXXX ontime X”.

Choose NMEA Port -> Baud -> check commands you want to output.

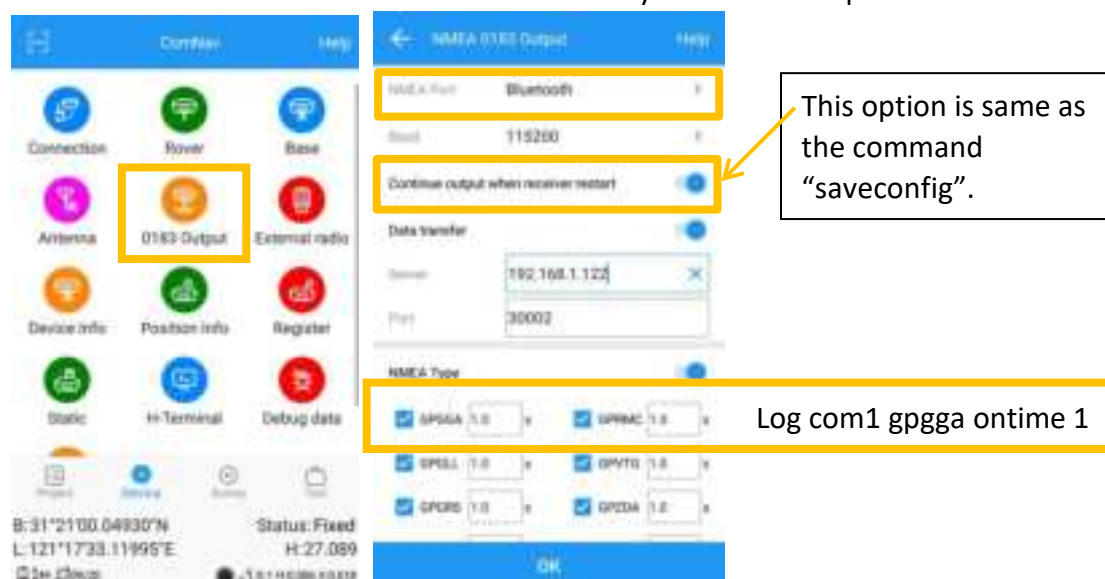

Data transfer: for transmit all the BT output to the address.

## 8.2 Register T300 PLUS via Survey Master

Normally, the register code is like this:

ID:03401012    \$\$:49-0B-79-23-00-00-00-95-85

FUNCTIONREG:2207453726-3851620954-0949162572-0697504466-0613618189-0027539229


*Note: The length of code may different according to different requirements.*

Following shows two methods to register the receiver.

### ➤ Register function

For Register function, you need only enter the number:

2207453726-3851620954-0949162572-0697504466-0613618189-0027539229

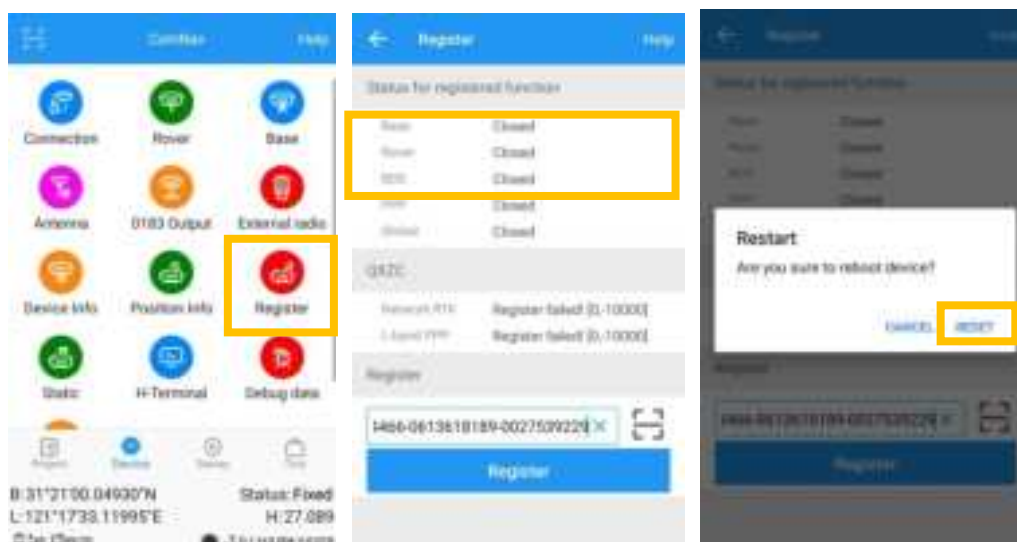

### ➤ Register via commands

You need copy the whole code, include the word 'FUNCTIONREG:'

**FUNCTIONREG:2207453726-3851620954-0949162572-0697504466-0613618189-0027539229**


Copy the whole code, and enter the cursor to next line, then send.

Send command: LOG REGLIST  
To check receiver register status.


## 9 Firmware Upgrade

### 9.1 Upgrade firmware via serial cable

1. Copy the firmware software to your PC, connect T300 PLUS to your PC via serial port cable and turn on the receiver.
2. Open the firmware program, choose "APP->Link setup", select **proper port** to connect with receiver, and then click "OK".

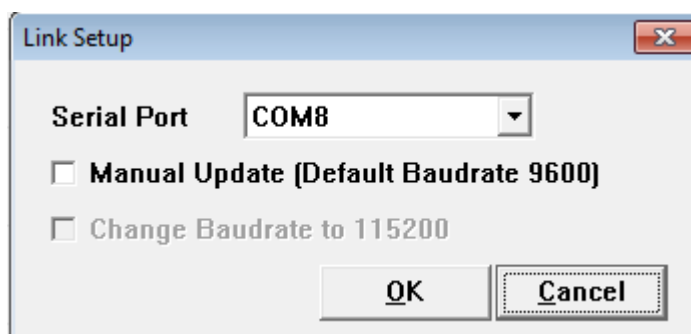

3. Click “**Link**” icon to build the connection (this is important to check if the T300 PLUS is connect to PC successful)

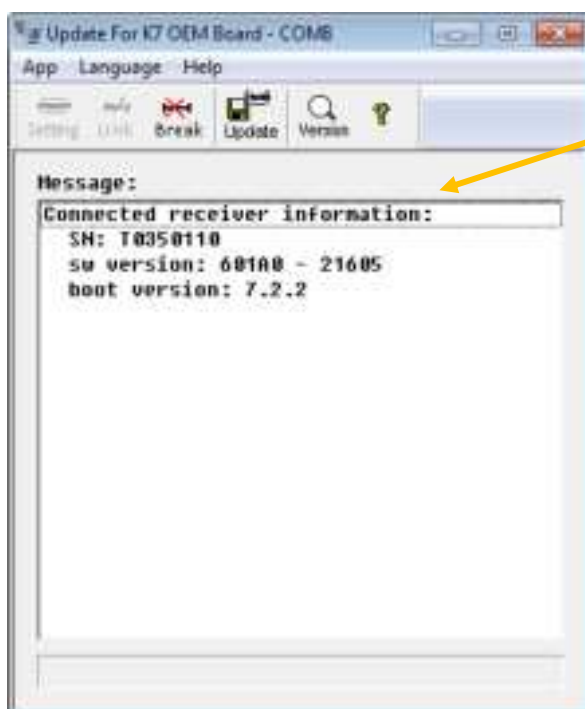

If output this receiver information means it connection correctly

Then click “**Update**” icon to start the update (a few seconds are needed), during update, the T300 PLUS will restart automatically and all LEDs on T300 PLUS should be on.

When the progress bar is full, and “**Completed!**” appear below, it seems the update has been completed and then you can click “**Break**” to finish the update.


*Tip:K8 series T300 PLUS receivers don't support USB cable to update firmware.*





## 9.2 Upgrade firmware via WIFI


- Turn on the WIFI firmware update tool.
- Check on the English option, then it will change to English interface. OS means system firmware; LCD means OEM board firmware. Click update, then just wait until the process bar reaches 100%.

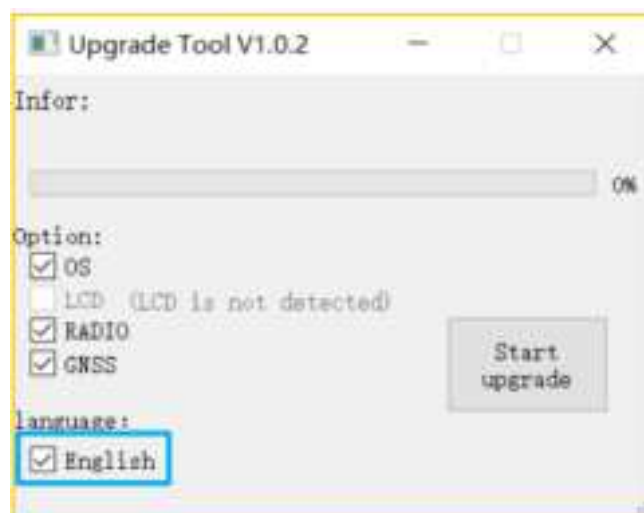

Tip: LCD is not detected means your receiver doesn't have a LED panel.

- When you click update, it will give you such prompt below, click Yes to update, click No to cancel update.



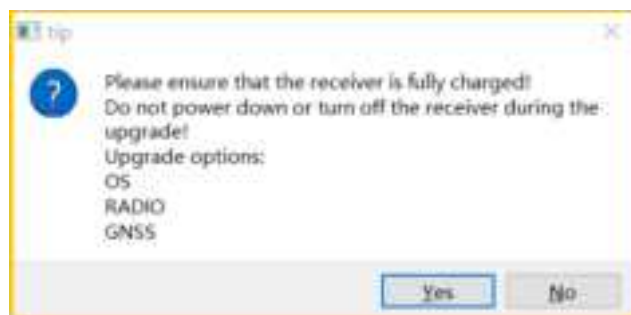


- When the update completes, it will give you an update successfully prompt. And the receiver will restart.




## Appendix A: 7-Pin Lemo definition

The following figures show the definition of 7-pin lemo, and the structure of 7-pin Lemo to RS232 Cable:

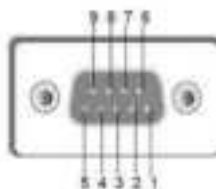

7 pin Lemo	Description
1	Signal GND
2	GND
3	TX data out (TXD)
4	NONE
5	NONE
6	Power In (+)
7	Serial data in (RXD)

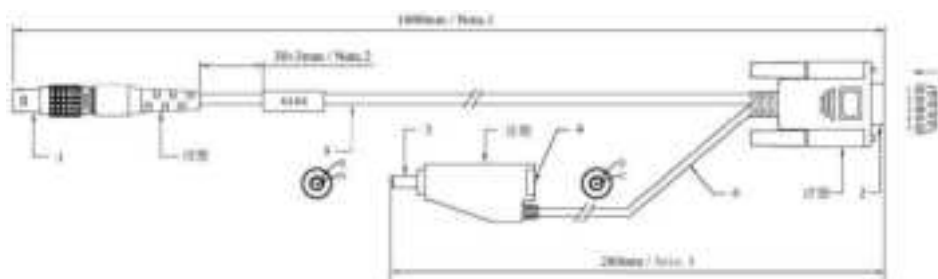

## Appendix B: Physical Parameter of Modules inside of T300 PLUS

### ➤ **Radio:**

Radio parameter	Specifications
Frequency range	410.0250-469.9750MHz
Protocol	Transparent
Airlink rate	9600 bps
Bandwidth	25kbps
Work distance	10-15km, depends on power supply and environment condition
Modulation	GMSK

### ➤ **Bluetooth:**

- Frequency Range: 2.402Ghz-2.480Ghz

**FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Exposure Information**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 50cm between the radiator and your body.