

Compliance Information

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F)



Rating Label Definitions

— Direct current symbol.



This symbol signifies that the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.



This symbol signifies and declares that this equipment complies with battery charging which complies with California CEC and energy efficiency.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Southern Telecom is under license.

Warranty Information

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER

This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our website at www.southerntelecom.com
- Click on **Product Support**
- Select the **Brand** of your device
- Select **Service Request** and fill out the form to begin your inquiry

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

SHARPER IMAGE®

2019 Sharper Image® name and logo are registered trademarks. Manufactured, marketed, and distributed under license by Southern Telecom, Inc. Brooklyn, NY 11220. © Sharper Image. All Rights Reserved.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

Printed in China
Designed in USA
v1.05-2019

SHARPER IMAGE®

TRUE WIRELESS
EAR
BUDS
PLUS



Instruction Manual
XO-9656-1

Before You Begin...

⚠ Caution

To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.

- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- **Do not disassemble, modify, or repair the device.**
- **Do not submerge in water.**
- Low battery may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not allow the USB ports, power jack or other inputs of the device to be exposed to dust, or water, or come into contact with any conductive materials such as liquids, metallic powders, etc.

Battery Life Information

Testing conducted by Southern Telecom in Feb 2019 found that these earbuds, paired with most phones, with volume set to 50%, lasted for approximately 3 hours of music and 2 hours of talk time. This testing was conducted with a fully charged set of earbuds, used to fully empty battery. Battery life will vary with device settings, environmental and other factors.


Questions & Customer Support

For questions, troubleshooting or any other assistance, please visit our website at **SouthernTelecom.com** and click on **Product Support**.

In the Box

- STBT202 - **True Wireless Earbuds Plus** (x1)
- Charging Case (x1)
- USB Charging Cable (x1)
- User Manual (x1)

Location of Controls

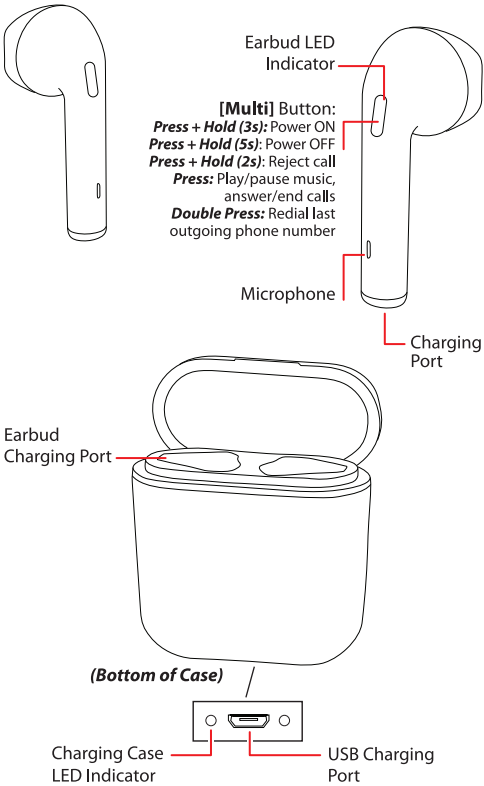

Getting Started

Charging the Case

Plug the small connector of the supplied USB charging cable into the USB charging port on the bottom of the case. Plug the large connector into the USB port on a computer, a USB charging device, or **5V USB adapter** (*not included*) and plug into a wall socket.

The LED indicator on the bottom of the case will **flash RED** while the case is being charged, and **turn solid RED** when the case is fully charged.

Charging the Earbuds

Open the lid of the charging case and slide the earbuds into case's earbud charging ports. The earbuds will automatically begin charging. The earbuds' LED indicators will **turn solid RED** when they are charging and turn OFF when they are fully charged.

NOTE: When the earbuds are low on power, a voice will be heard indicating that they need to be charged.

Powering ON/OFF

- **Press and hold** both earbuds' **[Multi]** buttons for 3 seconds to power ON, and 5 seconds to power OFF.
- Insert the earbuds into the charging case to automatically power them OFF and begin charging.


Phone Calls

You must be paired to a Bluetooth device to listen to music and use the earbuds' phone functions. Consult the **Pairing the Earbuds** section of this user manual for instruction.

- Press either **[Multi]** button to answer an incoming call.
- Press either **[Multi]** button again to end the call.
- Double press a **[Multi]** button to redial the last number dialed.
- Press and hold either **[Multi]** button for 2 seconds to reject an incoming call.

Pairing the Earbuds

1. Power both earbuds ON at the same time, holding them close together as shown. The LED indicators on both earbuds will **briefly flash BLUE**.
2. After a moment, a voice will be heard, indicating that the 2 earbuds are connected to each other. The left earbud will **flash RED and BLUE**, and the right earbud will **intermittently flash BLUE**.
3. Set your Bluetooth-enabled device to search for Bluetooth devices. Select XO-9656-1 when it appears on the list of found devices.
4. Once successfully paired to your device, a voice will be heard and both earbuds will **intermittently flash BLUE**.

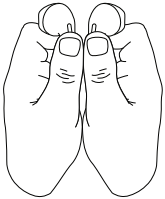

ⓘ Note: if you are only able to pair one earbud, please consult the **Re-Pairing the Earbuds** section below.

Adjusting Playback

Once you have paired to the earbuds, you can adjust playback and volume with the controls on your paired device, or with the earbud controls below.

- Press either **[Multi]** button to pause. Press again to resume. The earbuds' LED indicators will intermittently flash blue while audio is paused, and turn off when audio is playing.

Re-Pairing the Earbuds

If the earbuds fail to pair to each other, or you are only able to pair one earbud at a time, follow the steps below to reset your earbuds to default settings.

1. Power both earbuds OFF.
2. Press and hold the **[Multi]** buttons on **both earbuds** for 15 full seconds. A tone will be heard and the LED indicators will flash. Continue holding until both LED indicators turn OFF.
3. The earbuds should now be reset to factory settings. Consult the **Pairing the Earbuds** section above and try pairing again.