

76.2mm


Axel Bass Boost Bluetooth® Headphone

IC ID: 21530-100165  
FCC ID: 2AGR4-100165

BC

Instruction Manual

OVERVIEW

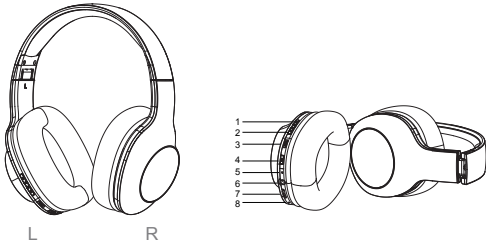

- 1. Volume Up / Previous Track Button
- 2. Volume Down / Next Track Button
- 3. Bass Boost Button (Extra Bass On/Off Button)
- 4. Power/Multifunction Button
- 5. LED Indicator Light
- 6. 3.5mm AUX Port
- 7. Micro USB Charging Port
- 8. Mic

SPECIFICATION

Bluetooth specifications: Bluetooth® version 4.2  
Support profile: AVRCP, A2DP, HFP  
Transmission distance: up to 10m (This may vary based on environmental factors or the type of Bluetooth® device being used)  
Built-in battery: 350 mAh Lithium Battery  
USB Recharge voltage: 3.7V  
Frequency Response: 20hz-20Khz  
Sensitivity: 100dB ± 3

PACKING LIST

- Bluetooth® Headphones
- USB Charging Cable
- 3.5mm AUX cable
- Storage Pouch
- User Manual
- Gift Box

BLUETOOTH® OPERATION

1. Please ensure that the Bluetooth function has been turned on in the settings of your Bluetooth enabled device.
2. Turn the headphones on by pressing the power/multifunction button until the LED indicator light begins to flash. The LED indicator light will flash to detect Bluetooth enabled devices near you and will enter pairing mode.
3. " GEMLINE HP " will appear on the Bluetooth device list, select " GEMLINE HP " to establish pairing.
4. When you want to play audio from another Bluetooth device, disconnect the headphones from the original device and follow steps 1-3 to re-pair the headphones with a new Bluetooth enabled device.

BUTTON CONTROL

- Power On/Off: Press and hold the power/multifunction button for approximately 4 seconds.
- Play/Pause: Press the power/multifunction button once to Play/Pause.

- Volume Up/Previous Track: Press once to increase volume, press and hold for previous track.
- Volume Down/Next Track: Press once to decrease volume, press and hold for next track.
- Hands-free Phone Use: Press the power/multifunction button once to answer an incoming call. While on a call, press the power/multifunction button once to end the call.
- Reject a call: Press the power/multifunction button twice to reject an incoming phone call.
- Bass Boost Button (Extra Bass On/Off Button): Press once to turn the bass boost feature On/Off. Bring out the bass in your music when the bass boost feature is ON.

AUX PLAYBACK OPERATION

1. Connect the headphones to a smartphone, audio device, or laptop with the 3.5mm AUX cable (included).
2. The next/previous song button can only be adjusted on the device that is connected through the 3.5mm AUX cable.

CHARGING THE HEADPHONES

1. When the battery is low, please charge via the included USB cable. The charging time is approximately 2-3 hours, and provides up to 10-12 hours of continuous operation.
2. The LED indicator light will be red during charging and will turn off once it is fully charged. When the battery is low, the LED indicator light will flash red.

WARNING

1. Do not disassemble, repair, or modify the headphones.
2. Do not place product in or near fire to avoid danger, as it uses a lithium battery.
3. Avoid storage at extreme temperatures, this can shorten the battery life and may affect the headphones.
4. Keep the headphones dry and do not store the headphones in damp areas to avoid damage to the headphones.
5. Avoid dropping the headphones as it may cause damage the product.

KIND REMINDER

1. To prolong the headphones life span and to avoid hearing damage, please do not listen to music under high volume for long periods of time.
2. When an error occurs with the headphones, please turn off the headphones and restart it to troubleshoot.
3. When the headphone power is low, the Bluetooth range may be affected. Please charge the headphones to avoid disruptions during use.

PROBLEM	TROUBLESHOOTING METHOD
Unable to pair the headphones with a mobile device	1. Inspect whether the headphones are searching for a Bluetooth enabled device to connect to. If not, restart the headphones. 2. Difficulty in searching and connecting to a desired device can be affected if multiple devices are equipped, turned on, and in range for Bluetooth connectivity. Please turn off or disable the Bluetooth function on the other devices. 3. The power of the battery is insufficient, please recharge the headphones.

PROBLEM	TROUBLESHOOTING METHOD
The music stops from time to time	1. Inspect the distance between the headphones and the Bluetooth enabled device, it may exceed the Bluetooth transmission range. 2. Inspect if there is an obstacle between the headphones and the Bluetooth enabled device. 3. The power of the battery is insufficient, please recharge the headphones.
The sound is low or distorted	1. Inspect the volume of the connected headphones or Bluetooth enabled device and adjust the volume as needed. 2. The power of the battery is insufficient, please recharge the headphones.
The Bluetooth indicator light remains OFF	1. The power of the battery is insufficient, please recharge the headphones. 2. Restart the headphones.

The *Bluetooth®* word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by The Gem Group is under license. Other trademarks and trade names are those of their respective owners.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.  
L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :  
(1) L' appareil ne doit pas produire de brouillage;  
(2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

5

76.2mm

6

7

8