


BACK


FRONT

55 mm

PRODUCT OVERVIEW

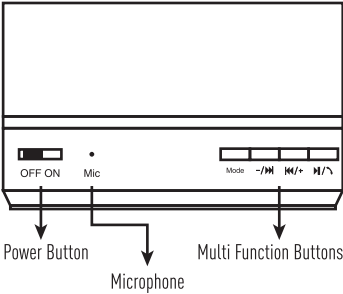

55 mm

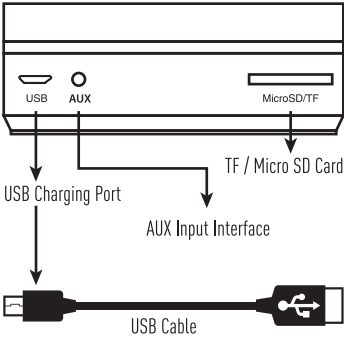

55 mm

TF (MICRO SD) CARD

1. Slide the **OFF/ON** switch to the **ON** position.
2. Insert TF (Micro SD) card into the TF (Micro SD) Card slot. Sound message "Play by TF Card" is voiced and music will stream automatically.
3. Long press **⏮** or **⏭** button to increase or decrease the volume.
4. Press **⏮** or **⏭** to move forward or backward on your playlist.
5. Press **⏮** or **⏭** to play or pause a track.

55 mm

"AUX-IN" JACK

1. Slide the **OFF/ON** switch to the **ON** position.
 2. Plug the 3.5mm AUX-in jack to AUX port of the speaker and another side to the audio device (such as phone / computer / tablet / etc.).
 3. You hear sound message "AUX mode"
 4. Select your favourite song from the source device.
- Note:** While using AUX-in, all functions such as Skip Forward/Backward and Volume control will operate from your audio device.
- Long press **⏮** or **⏭** button to increase or decrease the volume.

55 mm

FM RADIO

1. Slide the **OFF/ON** switch to the **ON** position.
2. Plug the USB charging cord (included) to the DC 5V charging port of the speaker; **this serves as FM Antenna as well.**
3. Short press **Mode** button until you hear sound message "FM mode".
4. Press **⏮** or **⏭** button once and the device will automatically search and store all the FM Radio stations.
5. Long press **⏮** or **⏭** button to increase or decrease the volume.
6. Short press **⏮** or **⏭** to change the FM Radio station.

55 mm

MINI SPEAKER

Model # 74497
PRODUCT MANUAL

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference & (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A39K-74497

Note: changes or modifications not expressly approved which could void the user's authority to operate this equipment.

55 mm

55 mm

FEATURES

- Battery Voltage: 3.7V Capacity: 300mAh S/N: 85Db
- Range: Up to 33ft(10m)
- Charging Time: 1-2 hours
- Play Time: 2 hours @ 50% Volume

SPECIFICATION

- AUX Input Plug makes it easy to listen to music from your PC or Phone.
- Bluetooth Handsfree works using Bluetooth® connectivity for wireless communication.
- Stereo Bluetooth® Speaker supports A2DP/AVRCP, allowing you to enjoy quality wireless music.

IMPORTANT NOTES

- This product is not a toy.
- Do not drop or damage the speaker.
- Do not use in humid or extreme temperatures.
- Do not place the speaker near an open flame.
- Do not block the sound of the speaker while it is in use.
- Do not use the unit if it has been dropped or damaged in any way.
- If damaged, do not attempt to repair or disassemble the speaker.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

BLUETOOTH® PAIRING

1. Slide the **OFF/ON** switch to the **ON** position.
2. You will hear the indication tone with sound message "Bluetooth® Mode"; speaker is now in pairing mode.
3. Place the speaker and Bluetooth® device (phone or music device) so that they are no further than 1 meter apart.
4. Activate the Bluetooth® function on your Bluetooth® device (phone or music device). Please refer to the manufacturer's instruction manual to enable Bluetooth® on your device.
5. Select the speaker "Mini Speaker" from the list of available Bluetooth® devices.

6. If required, enter the password "0000".
7. Once paired successfully, you will hear the confirmation of indication tone.
8. If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.
9. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range.
10. The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

MULTI FUNCTION BUTTONS

- Mode** A long press of this button will reject calls. In AUX mode this button will be AUX exchange.
- ⏮** In Bluetooth® mode, press this button to skip to the previous song. This does not work in AUX mode. Hold this button down for longer to decrease the volume.
- ⏮** In Bluetooth® mode, press this button to: Play / Pause / Answer / End / Cancel Dial.
- ⏮** In Bluetooth® mode, press this button to skip to the next song. This doesn't work in AUX mode. Hold this button down for longer to increase the volume.

TIPS

1. Press **Mode** button to switch different functions of the speaker. Order of the functions is: Bluetooth® / FM Radio.
2. Turn **OFF** the device when not in use to save power.

CHARGING

The speaker includes a built-in rechargeable battery. It is recommended to charge the battery fully prior to first use.

Connect the USB cable to a computer or other USB charging port and the Mini USB plug into the charging port of the speaker.

FCC ID 2AJ9K-74497



FCC STATEMENT

1.This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation

2.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/ TV technician for help.

Made in China

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.