

Music Boxing Machine

Precautions


1. Please fix this product on a sturdy and reliable wall, please hit in the hitting area, is strictly prohibited to hit the corners of the area to avoid hand injuries or equipment damage.
2. This product is suitable for adults, children should be used under the supervision of adult guidance.
3. Beginners should not hit too hard to avoid hand injuries. First of all, pay attention to the safety of the movement process, it is strictly prohibited to leg strike, knee strike.
4. is strictly prohibited to hit the speaker area.
5. equipment can not start or abnormal please check whether the power is too low, should be charged in time, charging The length of time should not be more than 8 hours, when not in use for a long time, it is recommended to charge once every 1-2 months!
6. This product is not waterproof, wipe the boxing target with a thousand cloth, do not get wet.
7. please keep the manual properly, in order to supply the emergency use.

3



Smart music boxing target Instruction Manual

Product introduction

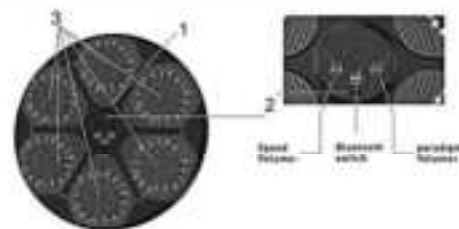

1. Speaker 2. Type-C charging port 3. Strike zone

Control Panel Introduction

1. Switch: Hold the button for 3 seconds to turn on or off.
2. Bluetooth (Music Connection): After powering on, press the Bluetooth button to connect to a device once the background music stops.
3. Speed/Speed Adjustment: speed level cycles up with display showing H01-H09, higher numbers indicate faster light changes, default is H01.
4. Mode (Strike Mode): Mode adjustment button, with display showing P01-P09, indicating 9 flashing light modes corresponding to training zones.
5. COOL (Smart Counting): Mode adjustment button, similar display as Mode, with 9 light change modes each corresponding to different training zones.

1

Installation Instructions

Installation mode one:

1. with adhesive abrasive paste on the back of the product aligned.
2. Tear off the upper part of the double-sided tape.
3. Put it in the right position and align it with the wall.



Installation mode two:

1. Tear off the double-sided tape on the upper part of the EVA sticker first.
2. Align the EVA sticker on the back of the product.
3. Tear off the double-sided tape on the lower part of the EVA sticker.
4. Put it in a good position and stick it on the wall.



Installation Video Link

Mode Selection



- | | | | |
|-----------------------------|-----------------------------|-----------------------------|---|
| Mode 1-3
Flashing lights | Mode 5-9
Flashing lights | Mode 4-6
Flashing lights | Increase speed
H0-H9, with mode 1 open the boxing speed exercise |
|-----------------------------|-----------------------------|-----------------------------|---|

2

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.