

Precautions

1. Please fix this product on a strong and reliable wall. When hitting, please hit within the hitting area. It is strictly forbidden to hit the corner area to avoid hand injury or equipment damage.

2. This product is suitable for adults. Children should use it under adult supervision.

3. Beginners should not hit too hard to avoid hand injuries. Pay attention to safety first during exercise, and leg and knee strikes are strictly prohibited.

4. It is strictly prohibited to hit the speaker area.


5. If the device cannot be turned on or has abnormalities, please check whether the battery is too low and charge it in time. The charging time should not exceed 8 hours. If it is not used for a long time, it is recommended to charge it once every 1-2 months.

6. This product is not waterproof. When wiping the boxing target, use a dry cloth and do not get it wet.

7. Please keep the instructions properly for emergency use.


3

Third Generation Smart Music Boxing Target

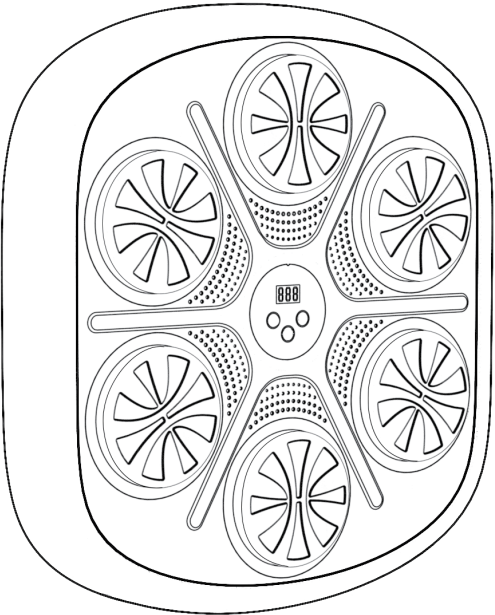

Instruction Manual

Product Description

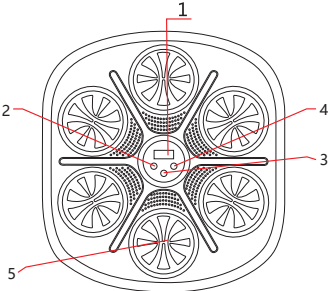

1、Display

2、 speed Button

3、 on/off Button

4、 mode Button

5、 Hit Point

Installation Notes

Installation Way1:

1.First, tear off the double-sided tape on the upper half of the EVA.

2.The EVA paste is aligned on the back of the product.

3.Tear off the double-sidedtape on the lower half of the EVA sticker.

4.Put it in place and stick it firmly on the wall.

Installation Way2:

1.Align and paste the hook and loop fasteners with glue on the back of the product.

2.Peel off the double-sided tape on the top half.

3.Align the position with the wall and stick it firmly.

Troubleshooting

NO.	Symptoms	Cause Analysis	Method of exclusion
1	No lights and no sound	The product is not powered on	Short press the switch
2	No lights and no sound	Battery drain	Charge
3	Lights flicker	Low battery	Charge
4	Short press the switch can not turn on	The main chip capacitor is short of power due to long-term non- startup	Repeatedly short press the swith
5	Banging sound inside the device	Issued by the internal active stress structure	Normal phenomenon

Instructions For Use

Voltage:

3.7V lithium battery

Charging:

888 outer ring cycle racing display

Bluetooth name:

Gordon 03

Full:

Shows FUL

Display:

button adjustment mode, speed, volume, display corresponding interface, None The score screen is displayed after 5 seconds of operation or after striking.

Key:

(SPEED/volume reduction) SPEED key:

1: Short press to adjust the speed, range H01-H09, 9 speeds.

2: Press and hold to reduce the volume. The range is U00-U30.

(Start/play/Pause) ON/OFF key:

1: Press and hold the switch for 1 second.

2: After Bluetooth connection, short press to play/pause music.

(MODE/Volume plus) MODE key:

1: Tap to switch modes. Range: P01-P09, 9 modes.

2: Press and hold to increase the volume. The range is U00-U30.

Boot without connected Bluetooth:

1: 3 minutes automatic shutdown.

2: No connection, and a background tone is played repeatedly.

Bluetooth connected:

1: Can play Bluetooth music.

Boxing:

1: 6 boxing positions, according to the position of the light, when the light is successful, you can score.

2: Failed to hit: No score, play failed voice, there are three kinds of failed voice.

3: Hit successfully: Play successful voice, add 1 point, score 000-999, clear after more than 999 points.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.