图纸编号: SDH-2000-LP-C06-001


品名:说明书

规格:52\*72mm

材质:128g双铜纸

印刷:单黑正反印刷

折叠方式:对折+对折

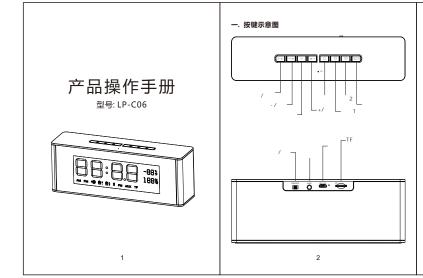

## 二. 蓝牙模式

- 1. 蓝牙版本: Bluetooth 4.2, 支持HSP, HFP, A2DP, AVRCP协议,带纯铃声提示音,蓝牙设备名称为 LP-C06。
- 2. 将开关拨到ON位置, 主机开机, 屏幕显示时间、时间 图标,温度、电量。
- 3. 长按音响开关键,进入/退出音响工作模式。进入蓝牙 模式,此时温度显示关闭,再次长按音响开关键,将 音响功能关闭,温度显示恢复。
- 4. 蓝牙配对:主机进入蓝牙工作模式后,蓝牙图标快 闪、进入配对状态,手机搜索到LP-C06设备名称确认 即可连接,如需密码则输入(0000),连接成功后、 音箱发出提示音,蓝牙图标长亮,音乐播放过程中蓝 牙图标慢闪。本机可自动回连最近一个连接过的手
- 5. 按键分为两部分: 音响功能调节和时钟设置

- 1. 开机后插入TF卡,自动进入TF卡播放模式。
- 2. 播放时, TF图标慢闪, 暂停时, TF图标长亮。 3. 拔出TF卡设备, 音箱自动进入蓝牙模式

## 四. AUX模式

1. 开机后插入line in 线,自动进入line in模式,AUX图

2. 拔出line in线,音箱自动进入蓝牙模式。

## 五,FM收音模式

- . 在蓝牙工作模式状态下,短按"M"键,切换至FM收 音模式,有内置天线(插入充电USB线作为天线,提 高收音质量)
- . 进入FM收音模式后,短按 O/▶II 键进入搜台状态,搜 台时FM图标闪亮。
- . 搜台完成,短按+/-键加减音量,长按音量+/-键切换

### 六:充电

- 1. 将USB连接线插入音箱连接5V充电器或电脑即可对音 箱内置电池充电
- 2. 充电时"充电"指示灯红灯亮, 充满后红灯灭

### 七: 备注

- 1 本机所有模式下开机音量默认为10,最大为15。
  - 2 电池电量低于15%, 电量显示闪动, 语音提示低电 后,关闭音响功能,仅保留时钟功能。按任意键,时 钟显示3秒熄灭。
  - 3 关机后,时钟继续走时。
  - 4 进入音响工作模式后,显示屏暂时不显示温度,退出 后,会自动重新显示。

5 闹铃响时,按任意键进入贪睡模式,双击调光键,关

### 八 时间设置

再显示时间状态下,再短按一次"时钟按键",进入时 钟设置界面,此时屏幕小时灯慢闪,短按"上一曲"与 "下一曲"调节时钟数值增减。短按"时钟按键"切换 小时,分钟。设置完成后,再短按一次"时钟按键"退

设置步骤:短按一次"时钟"按键 小时灯慢闪 短按上一曲/下一曲调节时钟时数值(短按 "时钟"按键切换小时,分钟) 时钟调节 完成后, 短按一次"时钟"按键保存退出

## 九. 闹钟设置

短按闹铃1按键一次,主机显示闹铃时间(系统默 认,00:00),再短按一次"闹铃1"按键进入闹钟设置 界面, 小时灯慢闪, 短按"上一曲/下一曲"按键调节时 钟数值,短按"闹铃1"按键分别切换,小时,分钟,闹 铃提示音,闹钟时间,ON/OFF(闹钟是否开启/关闭),退 出闹钟设置模式。

## 备注:闹钟2的设置方法与闹钟1同样。

备注:闹铃声选择:主机系统默认提示音有1.2.3.4.5五 种提示音,第6种为TF卡提示音(插入有音乐的TF卡才 有效),第7种为"FM收音"提示音,短按"上一曲"

## 或"下一曲"切换选择

备注2 闹钟是否循环;闹铃设置到闹铃是否循环时,短 按"上一曲"或"下一曲"按键切换选择是否循环 备注3 闹铃保存:闹铃设置至ON/OFF选择阶段,短按 "上一曲"或"下一曲"按键选择闹铃是否打开或关闭 备注4 闹钟2的设置方法与闹钟1同样。

## 

十、按键切能一览表					
17 4 1	<b>⊕</b> /▶II	-/-	М	<b>≫</b> /+	
蓝牙	短按播放/暂停 短按来电接听 或挂断 长按来电拒接 长按进入/退出 音响工作模式	短按音量减 长按上一曲	1. 短按模式切换 2. 长按断开当前 蓝牙重新配对	短按音量加 长按下一曲	
TF卡	长按进入/退出 音响工作模式 短按播放/暂停	短按音量减 长按上一曲	短按模式切换	短按下一曲 长按音量加	
AUX	长按进入/退出 音响工作模式 短按播放/静音	短按音量减	短按模式切换	长按音量加	
FM 收音	长按进入/退出 音响工作模式 短按搜索电台	短按音量减 长按上一电 台	短按模式切换	短按音量加 长按下一电 台	
6					

在任何情况下,短按时钟模式键,可切换到当前时间 周钟1时间 周钟2时间 长按时钟模式键 可进入当前 设置(时钟、闹钟1、闹钟2)

注:关闭音响后,其它三个按键无效。

钟按键 设置	时钟设置	闹钟1 设置	闹钟2 设置		
-/44	短按数值减	短按数值减	短按数值减		
<b>→</b> /+	知按数值加	短按数值加	短按数值加		
•	短按一次进入 时间设置界面 继续短按切换: 小时,分钟与退 出保存时钟设置				
Ō	短按一次显示 闹钟1时间	1.短按显示闹钟时间 2.短按分别切换:小时,分钟-闹铃声- 闹钟时间-闹钟时间ON/OFF-退出设置			
<u> </u>	短按一次显示 闹钟2时间	1.短按显示闹钟时间 2.短按分别切换:小时,分钟-闹铃声- 闹钟时间-闹钟时间ON/OFF-退出设置			
NOOZE IMMER	短按切换屏幕 亮度	短按切换屏幕 亮度	短按切换屏幕 亮度		

注:在非设置时,时钟模式键的-/+两个按键无效。 闹铃响时,按任意键进入贪睡模式,双击调光键,

Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate

This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause

If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

interference by one or more of the following measures:


-- Reorient or relocate the receiving antenna.

equipment off and on, the user is encouraged to try to correct the


harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation.

# **USER MANUAL** ITEM NO.:LP-C06

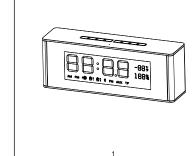

# button instruction

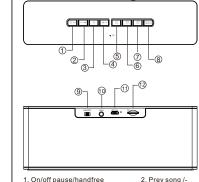

Clock

8.dimmer

11.charge

3 modeclock 4 Next song/+

7. Alarm 2

10.Aux

6. Alarm 1

12.TF card

9.On/off

## Bluetooth mode

- Bluetooth Version: Bluetooth 4.2 support HSP.HFP,A2DP,AVRCPA GREEMENT,with pure ring tins Bluetooth device pairing name is LPC-06
- Press button ON to turn on the device, screen show time time icon temperature hattery · Long press on/off button to in /out the working mode
- unde the Bluetooth working mode, temperature icon turn off.long press the ON/OFF button again, turn off the speaker speaker function, temperature display recovery.
- · Bluetooth pairing:after device working, Bluetooth icon quick flash, enter pairing situation, phone searching LP-C06 to connect, if need passport, just input"0000", after connected, device tips, Bluetooth icon long light, but during the playing Bluetooth icon slowing flash.
- · Device can automatically connect the phone after the first connected
- Button devided into 2 parts. Audio function and Clock setting.

## TF card mode

- Turn on the device insert the TF card, automatically into the TF card playing mode During playing.TF icon slowly flash.after paused.TF
- icon long light Take out the TF card, speaker enter into the
- Bluetooth mode

- Turn on the speaker, insert the line in cable, into the line in mode, AUX icon long light. Take out the line in cable, speaker enter into the
- Bluetooth mode

- Under the Bluetooth playing mode, short press ⊙ → button, change to FM radio mode, speaker match with inner antenna (insert the USB cable as for the antenna to enhance the singal.
- Enter into the FM radio mode, short press o ▶ button to searching the station, during the searching FM icon flash After the searching ,short press +/- to adjust the

volumn, long press +/- change the station

# Charging Insert USB cable to speaker.connect the 5V power

or computer then can charge the inner battery. · Insturtion light show red color during charging, after

full charged red light disapper

- The defualt Volumn under all the function is 10,the maximum is 15.
- Battery is lower than 15%, battery icon flash, voice tips low battery,turn off the speaker function,only keep the clock fuction, press any button, time show

## 3 seconds ,then disapper . Clock keeping work after power off.

- Buring the speaker working mode, screen not show the temperature, will showed after stop playing. · Press any button enter into snooze mode during the
- alarm ring.double press the dimmer button, turn off the snooze clock

Under the time stuation, short press clock button, enter the time setting , hours lights flash, short press forward or backward to adjust the hours number, short press clock button change to minitues setting, after the setting, short press the clock button to exit and save the setting

## Setting steps:

Short press clock button hours light slowly flash. Short press forward/backword to adjust the numbers.(short press clock button to change hours .minutues)after the clock time setting.short press clock button to exit and save the setting.

Short press alarm 1, screen show the defaule time(0000)short press alarm 1 again to enter clock setting ,hours flash, short press forward and backward to adjust the numbers.short press alarm 1 button to change the hours ,minitues, alarm rings, alarm time, ON/OFF( whether the alarm is on /off), exit the

Remark: alarm 2 setting way is the same to alarm 1 Remark: alarm ring choice: device default 5 alarm ring to choose, the 6th is the TF card(only work under the IT card is in the spaker), the 7th is the FM radio , short press forward or back ward to change.

Remark 2: alarm circle:whether the alarm setting is circle, show press forward /backward to chooce whether circle.

## Remark 3: alarm ring save,

During the alarm setting on/off ,short press forward /backward to choose whether thrn on or turn off . alarm 2 setting way is the same to alarm 1.

# Function keys

## Bluetooth

Short press" () / ▶ || "playing/paused or answer the phone or hang off Long press "O/II" to refused the phone or enter /exit sevice working mode

Short press"-/ "lower volum, Long press"-/ "forward song. Short press" M "to change Long press" M "disconnect the paring

Short press" ▶/+"large volum Long press" ▶/+ "next song

## TFcord

Long press" O/▶II "enter/exit speaker working mode Short press" O/▶II"playing/paused Short press"-/ "lower the volum,long press " -/ " previous song, Short press" M "mode to change Short press" ▶/+ "next song,long press" ▶/+" large the volumn

Long press" O/▶II"enter/exit the speaker working mode,short press"O/▶II"pause/ slient Short press" -/ "lower the volumn Short press"M"change the mode Long press " ▶/+ " large the Volumn

## FM radio

Long press"O/▶II "enter/exit the working mode. short press "O/>III" search the sation Short press" -/ ■ "lower the volumn. Short press" M "change mode Short press" ►/+ "large the volumn Long press" → +" next station

turn off the speaker, another 3 button not work At any situation, short press clock button to change the

Alarm 1 time, alarm 2 time, long press the clock mode can enter the setting(clock\_alarm1,alarm 2)

# Clock button setting

clock setting alarm 1 seeting alarm 2 setting Short press\* enter into time setting, keep short press\* change hours,minitues,and exit save the clock setting Short press" (7) " show the alarm 1 time, short press to show the clock time Short press " (1) "change hours ,minutes,alarm ring. Clock time.clock time on/off, exit the setting Short press" 🗿 "show alarm 2 time Short press " 7 show the clock time Short press " (3) "change the hours, minitues, ring. Alarm time-alarm time on/off exit and save the setting

## SNOOZE DIMMER

Short press" SNOOZE" tto choose the screen light,

# Under the non setting, clock mode -/+ button are

When the alarm ring working, press any button to snooze mode.double pre

反面

正面