



Camera Diagram

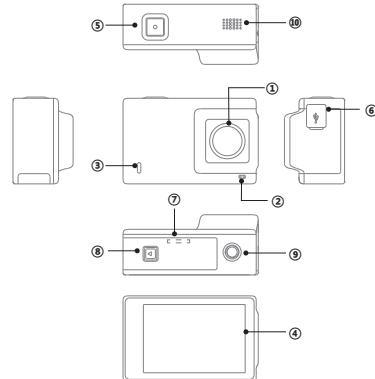


1. Lens
2. Microphone: Audio input port
3. Status Indicator: Solid red means charging and light off when full charge. Solid green means power on; green flashing means recording; green flashing once means shooting. Blue flashing means WiFi under working.
4. Screen: LCD Screen
5. Power/Shutter Button: Press and hold to power on/off; press once to start/finish recording.
6. T-Type-c Port: Charging; data transmission
7. Micro SD Slot: Max support 64GB SD card
8. Battery Cover
9. 1/4 Threaded Port: Connect selfie stick/tripod
10. Speaker

Insert/Pull out Micro SD Card (Separate for Sell)

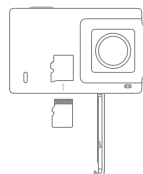

Insert Micro SD Card: Insert SD card into the SD card slot and push to the bottom.
Pull Out Micro SD Card: Push SD card edge with fingertip to make the SD card pop up.

Install and Remove the Battery

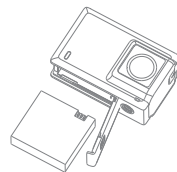

Install the Battery:
1. Open the battery cover and insert the battery follow by the arrow direction.
2. Close the battery cover and ensure it's closed.
Remove the Battery:
Open the battery cover and grab the holder on battery to pull out the battery.

Charging

1. Open the soft rubber cover and charge the battery through the Micro USB cable and the adaptor or connecting to PC.
2. Solid red on screen top left means charging and light off means full charged.

FlightGo APP

APP can control taking photos and downloading, recording videos and playback. Photos can be shared to the social medias or directly share to APP community to communicate with the fans.




Scan the QR and install the APP

You also can search for FlightGo in App Store or Google Play, or login HighGreat website to download the APP.


More Accessories for Fun (Separate for Sell)



Flat surface and cambered surface base / 3M tape



Adjustable Base



Holder



Binding Band



Steel Wire Rope



Official HighGreat Website




Official Wechat Account

Address: Yuanlingzai Park, Henggang Town, Longgang District, Shenzhen City, Guangdong Province

Shenzhen HighGreat Innovation Technology Development Co., Ltd.
All right reserved

Official Standard Set



View Action Camera X1



Battery X1



USB Cable X1



User Manual X1

VIEW Action Camera Warranty

Warranty Regulations

The after-sales service of HighGreat VIEW action camera is as follows:

1. Within 7 days from the date of your signing and the product is functional fault proved by HighGreat after-sales center, the product can be returned or replaced.
2. Within 8 to 15 days from the date of your signing and the product is functional fault proved by HighGreat after-sales center, the product can be replaced or repaired for free.
3. Within 12 months from the date of your signing and the product is functional fault proved by HighGreat after-sales center, the product can be repaired for free.

Non-warranty Regulations


Including but not limited as below:

1. Improper use, maintain or keep the product and not follow the instruction of user manual.
2. The damage caused by force majeure factors such as fire, flood and lightning strike.
3. The product model code on the warranty certificate is inconsistent with the goods.
4. Damage caused by non-HighGreat after-sales service repair.
5. The normal decolorization, wear and consumption of the product during using.
6. * In case of any of these situations, you should seek solutions from the responsible parties or choose paid services.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

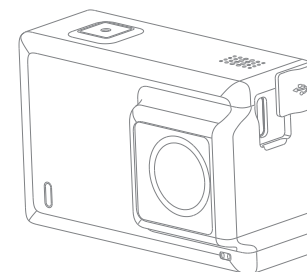

VIEW 1S
S02 User Manual

V 1.0.0