


ANJANK

AC-199 User Manual

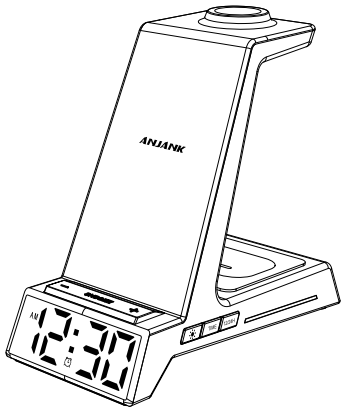

1 Year Warranty

If a faulty product is found when setting up please

Email us at **customer01@kerchanstar.com**



TIPS:

Battery backup is for saving TIME and ALARM settings only. It cannot be used to charge your device. Please keep plugged in!

Please read all the instructions carefully and keep this in a safe place for future reference.

Power Specifications

DC 5V \leq 3A / 9V \leq 2A /

Features

- Wireless Charging (Phone/Watch/Headphone)
- 9 Minutes Snooze
- 1-3 Levels Adjustable Volume
- 6 Levels of the Display Dimmer
- 12/24H Mode
- Battery Backup (Only Memory Function)
- LED indicator light

Package Include

- 1 * 4 in 1 Wireless Charging Station
- 1 * 1.5m USB-C Charging Cord
- 1 * Adapter
- 1 * User manual
- 1 * CR2025 Battery

Front View

Wireless Charging
Pad for Watch

Wireless Charging
Pad for Phone

ANJANK

Snooze

Down

Up


AM

12:30


Time

Alarm


Back View

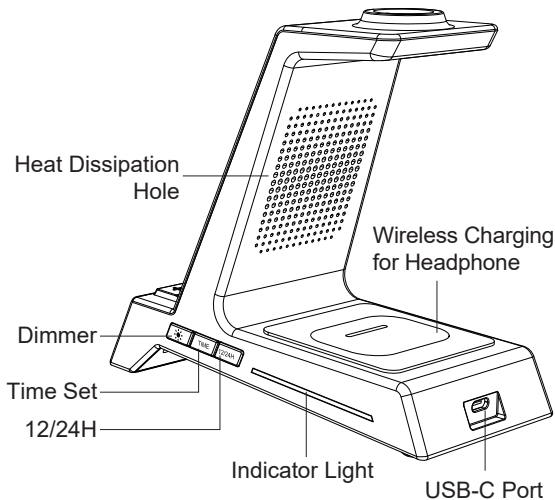

Left View

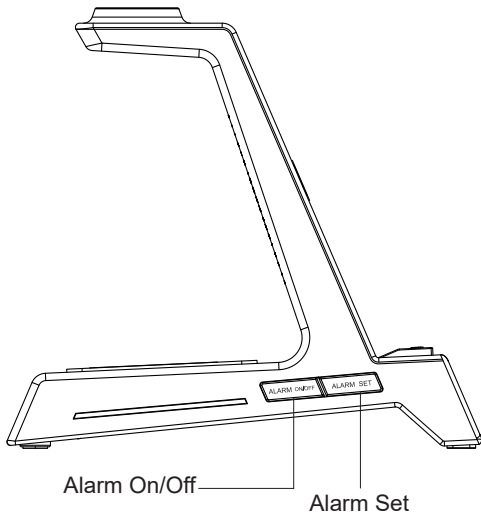

Bottom View

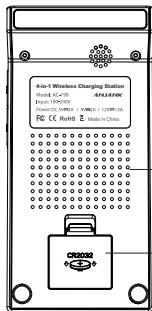


Heat Dissipation Hole

Battery Compartment
(Battery is built in already)

Getting Started

1. Plug the adaptor into a standard household outlet, you will see 12:00 on the display and the clock is ready to be set.
2. Please remove the battery tab before use.

Notice:

1. If the display is “ blank ” after plugging in, please press repeatedly the “  ” button to check whether the display dimmer is at bright position.
2. Under the battery power, the display will go blank and preset alarm will not go off.
3. Once the battery is removed and with an interruption of power, the time and alarm need to be reset when the power comes back.

Switch Time Format (12/24H)

Press 12/24H button to switch between 12 and 24 hour mode.

Notice:


In 12 hour mode, “ AM ” will appear in the morning and “PM” will appear in the afternoon.

Time Setting

1. Press the “ TIME ” button to enter HOUR setting. The HOUR digits will flash on the display. Press “+” or “-” button to advance to the correct hour.




2. Press the “ TIME ” button to confirm and enter MINUTE setting. When the MINUTE digits flash , press “+” or “-” button to advance to the correct minute.

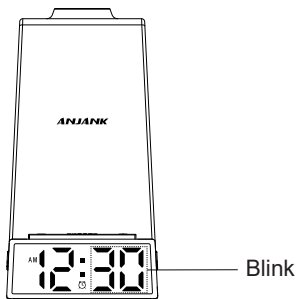


3. Press the “ TIME ” button to confirm and exit the time setting mode.

Alarm And Alarm Volume Setting


1. Press the “ALARM SET” button to enter ALARM HOUR setting. The HOUR digits will flash on the display. Press “+” or “-” button to advance to the desired hour.

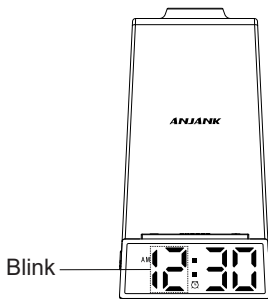

2. Press the “ALARM SET” button to enter ALARM MINUTE setting. The MINUTE digits will flash on the display. Press “+” or “-” button to advance to the desired minute.

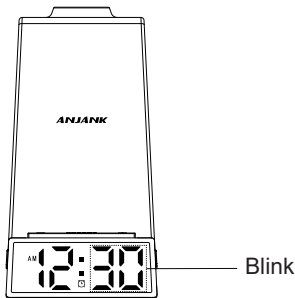

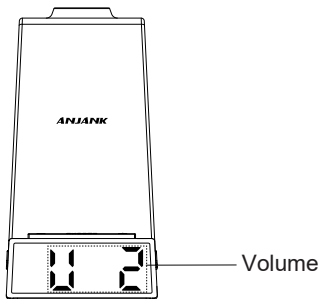

3. Press the “ ALARM SET ” button once again to enter the ALARM VOLUME setting. A number will be shown on the display and sounds will be played accordingly to indicate the volume level (U1 is LOW, U2 is MEDIUM, U3 is HIGH). Press the “ + ” or “ - ” button to select the volume level.




4. Press the “ ALARM SET ” button to confirm and exit the alarm setting mode.

Alarm On/Off

Press the “ ALARM ON/OFF ” button to turn on or off alarm. If the “  ” icon displays, it means the alarm is on. If the “  ” icon doesn't display, it means the alarm is off.

Alarm Pause & Snooze

When the alarm goes off, you have two options:

1. Press any button on the both sides to stop the alarm when it's ringing. Alarm will go off on the next day.
2. Press the “ SNOOZE ” button to snooze, the “  ” icon will flash on the display. The alarm will go off again 9 minutes later.

Notice :


You can also remove your phone to snooze when the alarm is ringing.

Brightness Control

Press repeatedly the “☀️” button to choose the display brightness of the alarm clock. (It can be adjusted to 1-6 levels)

Wireless Charging Function

Place your device in the correct position, the indicator light on both sides will light up for 5 seconds and then turn off.

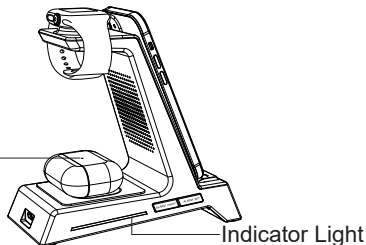

Notice:

1. The indicator light on both sides will alert you by flashing if there is a foreign object on the wireless charging pad.
2. Please remove any protective cases containing magnets, metal, or materials thicker than 0.19'(5mm).
3. Please make sure that your headphone's indicator light is facing upwards when charging.

Wireless Charging Compatible Models

1. Compatible phones : iPhone 13/13 Mini/13 Pro/13 Pro Max/12/12 Mini/12 Pro/12 Pro Max/11/11 Pro/11 Pro Max/XS/Max/XS/ XR/ X/8/ 8 Plus, Samsung Galaxy Note 9/Note8 /S8/ S8 Plus/ S7/ S7 Edge/ S6 Edge Plus/ S9/S10/ S10 Plus/S10E, LG V30,Nexus 7/6/5, and other enabled wireless charging phones.
2. Compatible watches : iWatch 7/6/5/SE/4/3/2.
3. Compatible headphone : AirPods 3/2/pro.

Battery Backup

Install 1* CR2025 battery into Battery Compartment.
(Battery is built in already)

Notice:

1. Battery backup is for saving TIME and ALARM settings only. It cannot be used to charge your device.
2. Under the battery power, the display will go blank and preset alarm will not go off.

Support

The 4-in-1 wireless charging station comes with one year warranty. If you have any issue with this wireless charger station, please contact us at customer01@kerchan-star.com. We will address your issue within 24 hours.

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure com