

User Manual

Dear Customers

Thank you for choosing and using VR products.

High quality and high performance are the characteristics that VR products possess. For better usage, please read the manual, and follow the operation steps. If you have any questions, please contact us in reference to the number and address listed in the warranty card, we'll be at your service.

VR—sincerity always for you!

Directory

1. Notice.....	1
2. Operation guideline.....	2
2.1. Function keys instruction.....	2
2.2 HMD.....	4
2.3. Home page.....	4
2.4 Settings.....	5
2.4.1 Wireless network.....	5
2.4.2 Bluetooth.....	6
2.4.3 General.....	6
2.4.4 System.....	7
2.5 Media player.....	7
2.6 Application store.....	8
2.7 All applications.....	9
3、FAQ and solutions:	9

VR

User manual

1. NOTICE

Please use original accessories such as the power adapter

Please keep the machine dry

Please preview the user manual before operation;

If suddenly the machine stopped working, press and hold the power button for 15 seconds to force a shutdown. 10 seconds later, turn the power on again.

Please use original adapter for charging

The machine will be automatically powered on during charging even when it is already powered off.

The blue light out on the surface case will be on during charging.

For better charging efficiency, please keep the machine in sleep mode.

When the battery status is lower than 5%, please charge up the machine. If the battery is used up completely, please better turn the machine on after it has been charged for 10 minutes.



Use the HDMI cable to connect the device to the computer, then search for the storage disk and transfer the target data.


Insert the TF card into the slot, and then the device will identify the TF card.

Insert 3.5mm standard headphone connector into the target interface for audio output.

2. OPERATION GUIDELINE

2.1. Function keys instruction

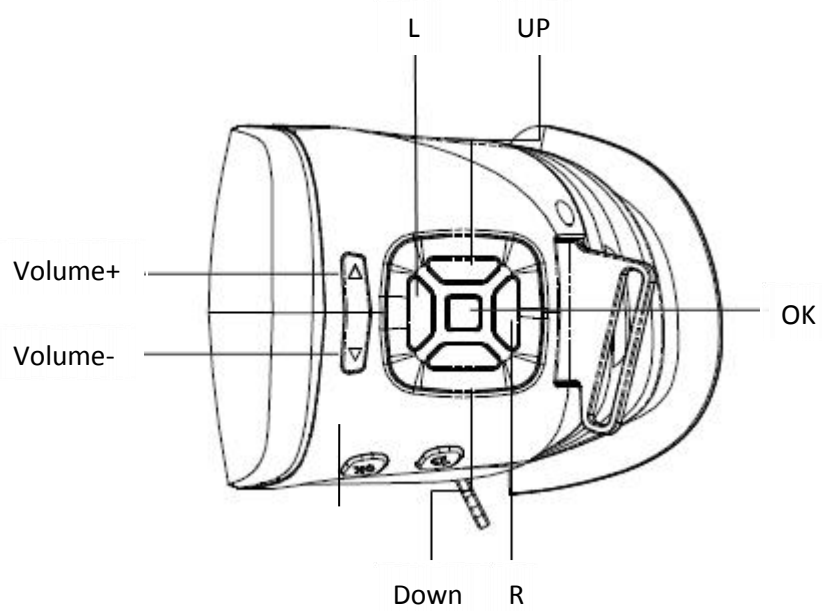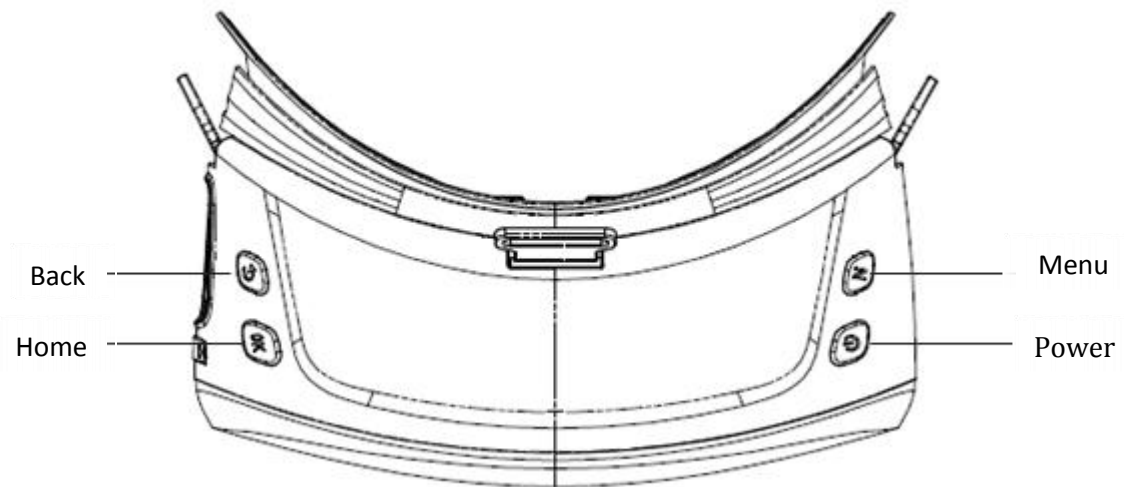

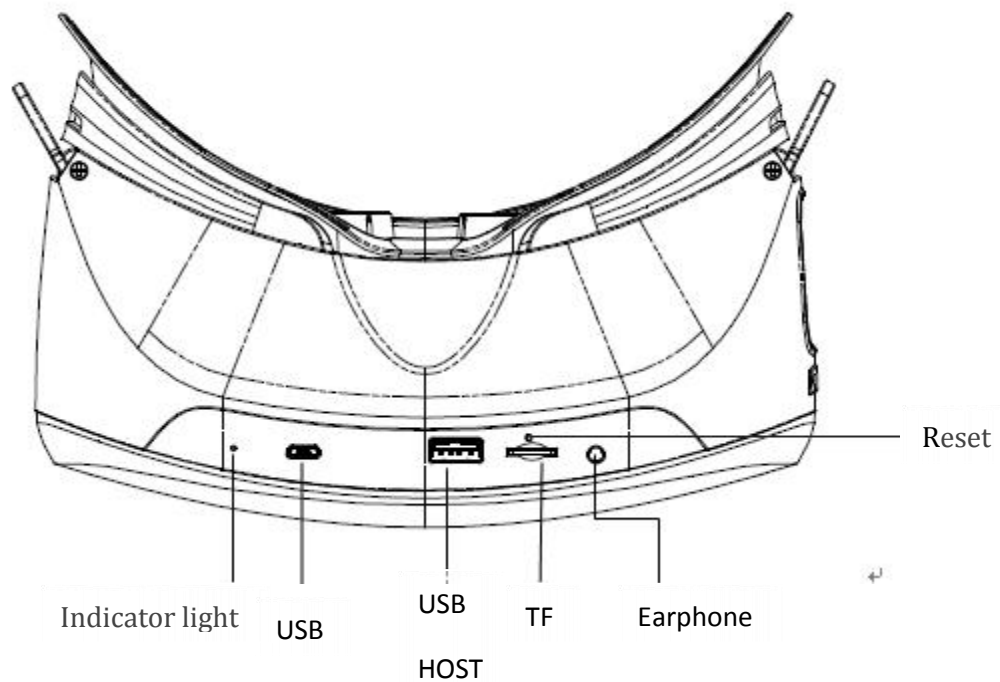

Power key: long pressing (3 seconds) on the key to achieve power on /off, short pressing to achieve sleep/wake-up action, long pressing (15 seconds) to force shutdown.

Volume key: volume up or down

Up: press to select up

Down: press to select down

Left: press to select left

Right: press to select right

Ok key: press to confirm

Object distance adjustment: 51mm \pm 5mm

Pupil distance adjustment: 62mm \pm 5mm

TF card slot: insert TF card

USB2.0: insert USB flash disk

USB charging slot: charging and transmitting

Earphone jack: connect the earphone

Short pressing on Menu key: on / off of HMD cursor, the adjusting of brightness, the switching of dual screen mode, and also the closing of application.

Long pressing on Menu key: reset and center the HMD display

Homepage: back to the main menu

Back: back to the previous menu

2.2 HMD

1) The HMD will be powered on after around 40 seconds, and there will be 6 main application icons on the main menu. The calibration of Gyroscope will be working after pressing on the menu button for 5 seconds.

2) The white dot is subject to gyro function, and can be used as the mouse cursor, Press the OK button to confirm, or the Home button to back to main menu, or the Back button to back to the former directory.

2.3. Home page




The main menu includes local applications, online cinema, panorama view of OL, VR bar of singing, photos, setting and other statuses displaying such as battery level, time, accessed devices and wireless network.

2.4 Settings



Setting options include Wi-Fi, Bluetooth, General, System, Connecting external devices.

2.4.1 Wireless network

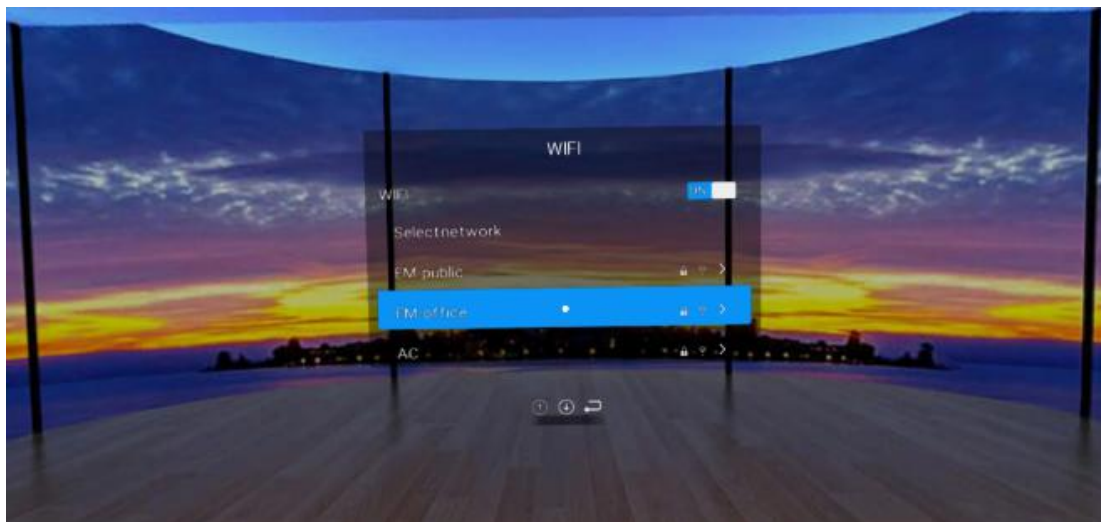

Scan for available wireless networks , choose the wireless network and enter the password to connect.

2.4.2 Bluetooth



When the Bluetooth is turned on, then it will automatically search for devices and come up a list of devices which can be connected.

Notice: When the paired devices cannot be connected, cancel it and try again.

2.4.3 General

The adjustment of the screen brightness, the settings of the volume, language, dormancy time, and time zone are all included.



2.4.4 System

System update, factory reset and about device, these 3 parts are included.


Methods for system update:

- a. If there is a new version available online, then it can be downloaded and updated directly.
- b. Transfer the downloaded software into local file, and then update it manually.

About devices: User can check the system version, machine hardware/software parameters.



2.5 Media player

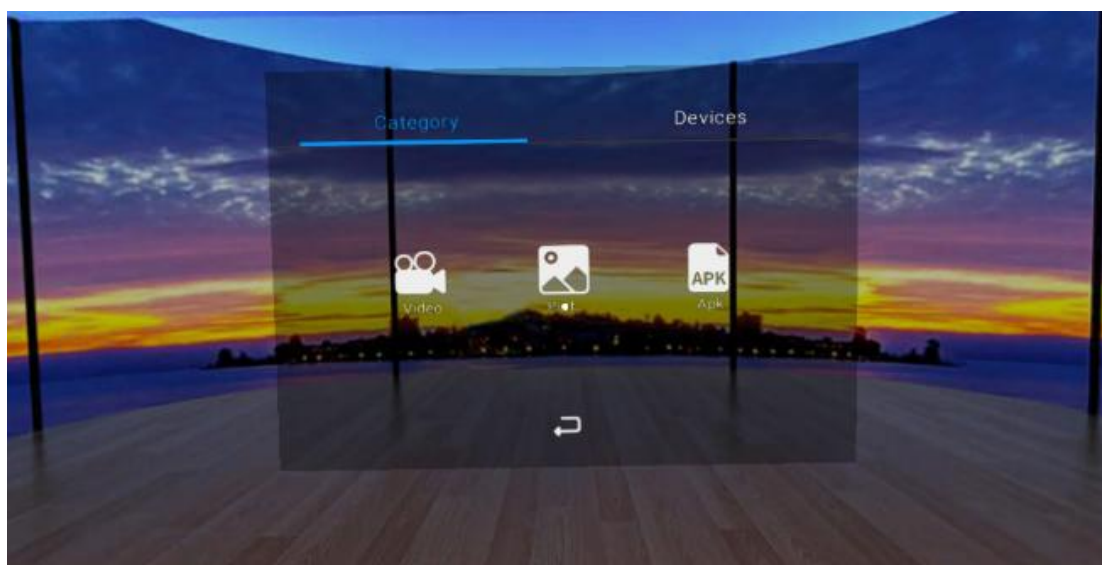

Player includes local video and online video section.

Select the video: Using paired remote control or buttons on the mini host to select the video

Play video: After the video is selected, press the OK button to play

Pause video: Press the OK button when the video is playing to pause

Volume adjustment: Press up/down button to adjust the volume

Fast forward/fast backward: Move the cursor, and then press OK button

Exit play mode: Press the Back button

Remarks: If the dual screen mode appeared when the video starts to play, please exit the play mode and start again.

2.6 Application store



User can download and install games and other applications from app market via Wi-Fi.

2.7 All applications



All of the games, applications installed will be displayed in the option of all applications. Users can manage these installed applications. Click on the icon of delete down on the right, and then the selected application can be uninstalled.

3、 FAQ AND SOLUTIONS:

- 1) The device cannot be powered on: Please ensure that you have press and hold the power button for 3 seconds, and check the battery status
- 2) The splash screen happens once the application is entered: back to the previous directory and try again.
- 3) There are three patterns in VR video: 2D、 3D、 pano360, you can click the menu option down on the right and then switch the patterns.

Packing list

No.	Name	Quantity
1	VR All-in-one	1
2	Power adaptor	1
3	USB2.0 cable	1
4	Headbands	1

Warranty Card

Notifications:

1, Welcome and thank you for choosing VR All-in-one, if there are any malfunction caused from the quality issues, please send the device back to the specified maintenance office or the sales agency. In 7 days since the purchase, the device can be returned, in 15 days, the device can be exchanged for a new one, and the validity of maintenance is 1 year.

2, Improper use or disassembling which cause malfunction are not included in free maintenance.

3, Please safely save the warranty card and apply for maintenance with it, and do not alter the terms stated.

Customer name	
Contact	
Address	
Product model	
Purchase date	
Invoice number	
Sales agency name	

Sales agency address	
Zip code	

FCC caution

This device was tested for typical body-worn operations with the back of the handset kept 5mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information(SAR)

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types AVR2-BK Android device (FCC ID:2ANTOR551-C-AVR2-BK) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.084W/kg.