

**LINKSYS**<sup>™</sup>  
PERFORMANCE PERFECTED<sup>™</sup>



USER GUIDE

**AC2600**

MU-MIMO GIGABIT ROUTER

Model# EA8500

# Table of Contents

## Product overview

EA8500 . . . . .1

## Setting Up Your Router

Where to find more help . . . . .3

How to install your router . . . . .3

    How to connect to Linksys Smart Wi-Fi . . . . .4

    How to change router settings . . . . .4

## Troubleshooting

Your router was not successfully set up . . . . .7

Windows XP Service Pack update . . . . .7

*Your Internet cable is not plugged in message* . . . . .8

*Cannot access your router message.* . . . . .8


## Specifications

Linksys EA8500 . . . . .10

# Product overview


## EA8500

### Front view

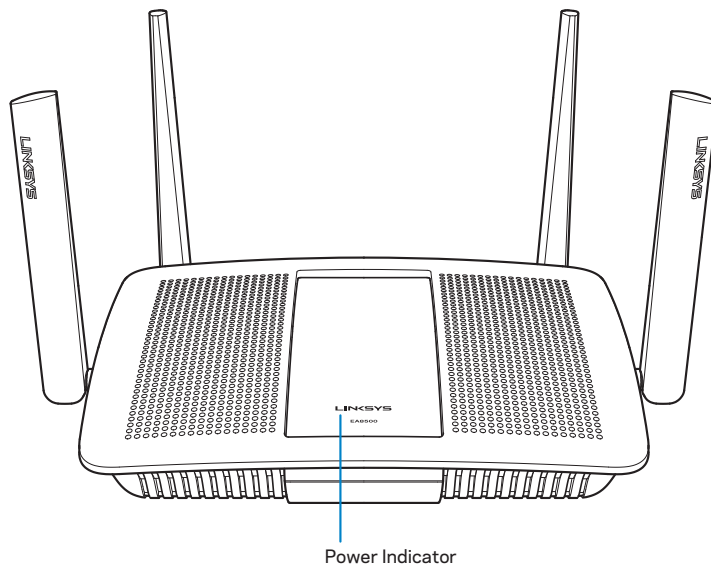

- **Power Indicator** — The Linksys logo stays on steadily while connected to the Internet. It flashes or pulses slowly during bootup, self-testing and firmware upgrades. It flashes quickly when indicating connection errors.

### Back view

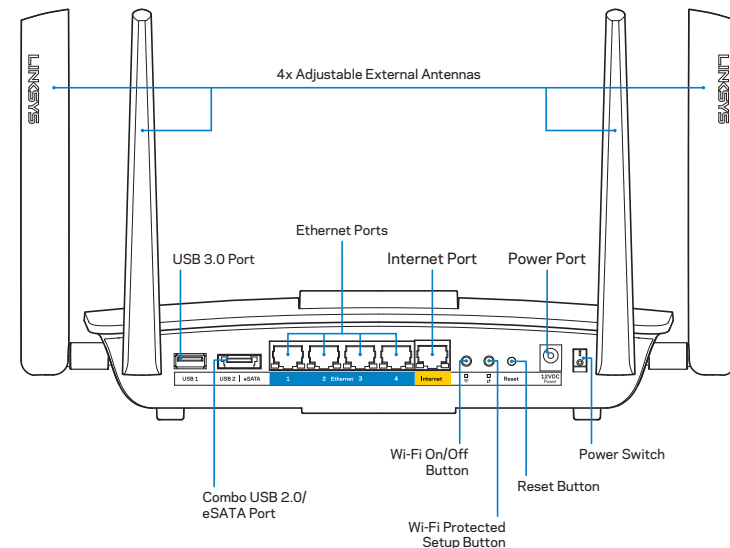

- **Adjustable external antennas**—This router ships with four adjustable external antennas that should be connected to the router before powering it on. To connect the antennas, twist the antenna clockwise onto the antenna connector on the router.

#### NOTE

For best performance, position the side antennas vertically as shown in the picture.

- **USB 3.0 port**—Connect and share a USB drive or USB printer on your network or on the Internet.
- **USB 2.0/eSATA combo port**—Connect and share a USB/eSATA drive or a USB printer on your network or on the Internet.

- **Ethernet ports**—Connect Ethernet cables (also called network or Internet cables) to these Gigabit Ethernet (10/100/1000) ports and to other wired devices on your network.
- **Ethernet activity indicators**—Green light is on when there is a wired connection. Yellow light blinks while the router is sending or receiving data.
- **Internet port**—Connect an Ethernet cable to this port and to your modem.
- **Internet activity indicators**—Green light is on when there is a wired connection. Yellow light blinks while the router is sending or receiving data.
- **Wi-Fi button**—Press to enable/disable the wireless function.
- **Wi-Fi indicator**—Lights up green when wireless function is on.
- **Wi-Fi Protected Setup™ (WPS) button**—Press to easily configure wireless security on Wi-Fi Protected Setup-enabled network devices. For more information, see “Wireless Security” on page 6.
- **Wi-Fi Protected Setup™ (WPS) indicator**—LED blinks slowly while accepting Wi-Fi Protected Setup connections. LED blinks quickly when there is a Wi-Fi Protected Setup error.
- **Reset button**—Press and hold until all port lights blink at the same time to reset the router to its factory defaults.
- **Power**—Connect the included AC power adapter to this port.
- **Power switch**—Press | (on) to power on the router.

# Setting Up Your Router

## Where to find more help

- **Linksys.com/support/EA8500** (documentation, downloads, FAQs, technical support, live chat, forums)
- Linksys Smart Wi-Fi (linksysmartwifi.com; click **Help** at the top of the screen)

### NOTE

Licenses and notices for third party software used in this product may be viewed on <http://support.linksys.com/en-us/license>. Please contact <http://support.linksys.com/en-us/gplcodecenter> for questions or GPL source code requests.

## How to install your router

Note: If replacing an existing router, disconnect that router first.

1. Connect the antennas (if included) and plug in the router to a power source. Press power switch to | (on) to power on the router. (Not all routers have power switches.)
2. Connect the Internet cable from your modem to the yellow Internet port on the back of your router. Wait until the power indicator on your router is solid.
3. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change these details later.) Select the option to automatically connect to this network in the future. You will not have Internet access until you complete router setup (see Step 4).
4. Open a web browser to launch the Linksys Smart Wi-Fi Router setup instructions. If you don't see the instructions, type [linksysmartwifi.com](http://linksysmartwifi.com) in the address bar.

At the end of setup, follow the on-screen instructions to set up your Linksys Smart Wi-Fi account. Use Linksys Smart Wi-Fi to manage your router's settings, including:

- Change your router's name and password
- Set up guest access
- Configure parental controls
- Connect devices to your network
- Test your Internet connection speed



### NOTE

As part of Linksys Smart Wi-Fi account setup, you will be sent a verification e-mail. Make sure that you open the e-mail from Linksys and click the provided link, and log in from a device connected directly to the router.

## How to connect to Linksys Smart Wi-Fi

1. Open a web browser and go to **www.linksysmartwifi.com**.
2. Enter the e-mail address and password you set up earlier and click **Sign in**.

## How to change router settings

### NOTE


For additional help on any menu, click Help at the top of the screen.

- Open Linksys Smart Wi-Fi and log in to your account.
- In the menu on the left, click an option:


**Network Map** — Lets you display and manage all network devices connected to your router. You can view devices on your main network and your guest network, or display information about each device.



**Guest Access** — Lets you configure and monitor a network that guests can use without accessing all of your network resources.

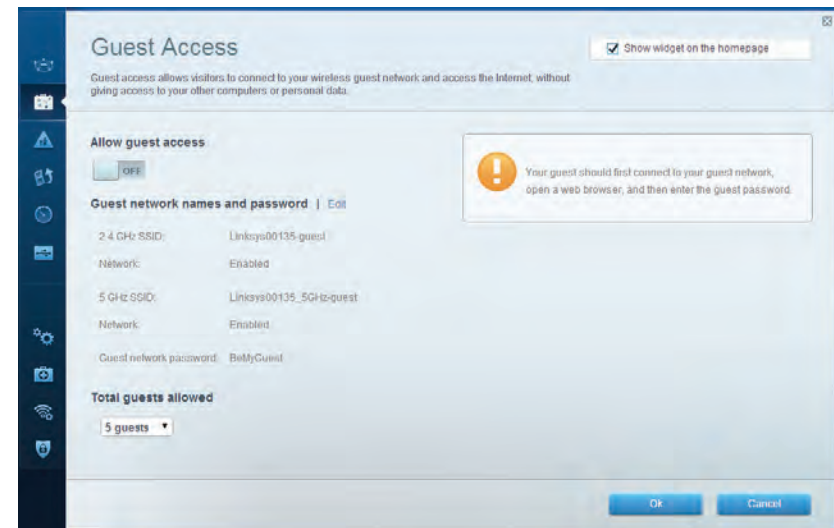


**Parental Controls** — Lets you block web sites and set Internet access times.

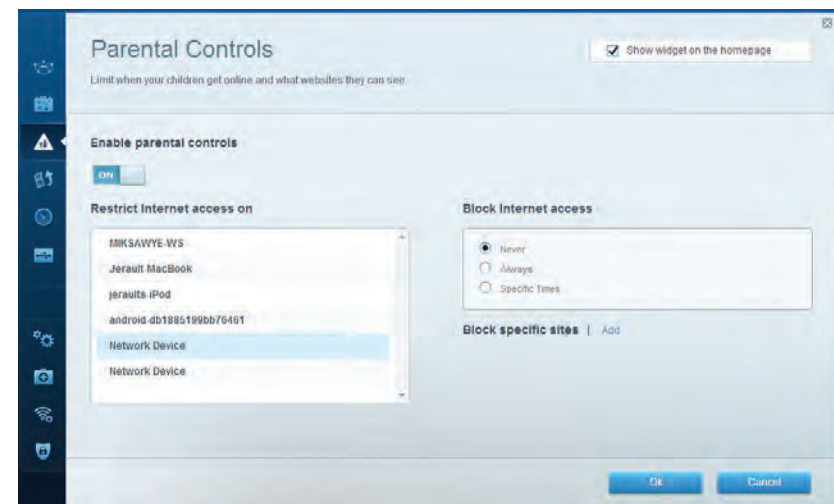





**Media Prioritization** — Lets you set which devices and applications have top priority for your network traffic.

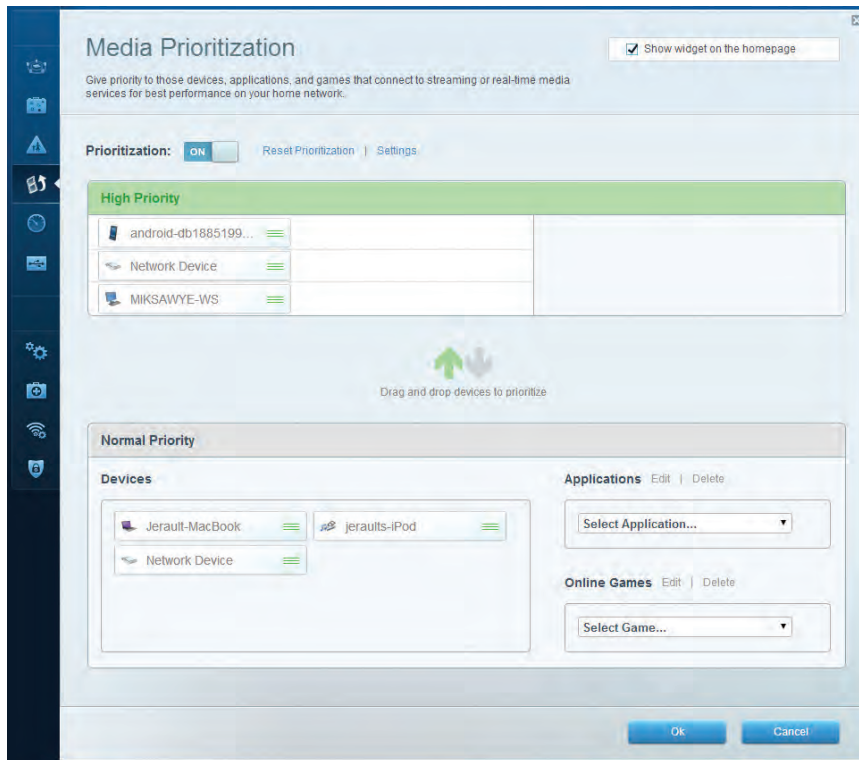

**Speed Test** — Lets you test your network's Internet connection speed.

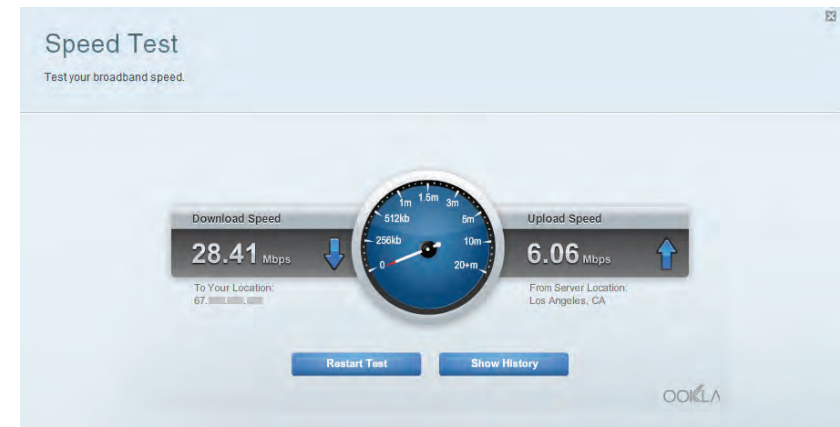

**External Storage** — Lets you access an attached USB drive (not included) and set up file sharing, a media server, and FTP access.

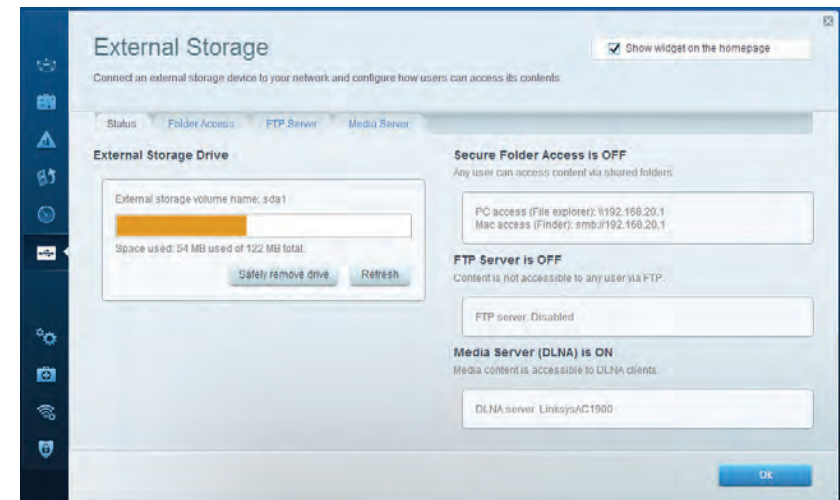

**Connectivity** — Lets you configure basic and advanced network settings.

**Connectivity**  
View and change router settings

Basic | Internet Settings | Local Network | Advanced Routing | Administration

**Network Name and Password** | Edit

2.4 GHz network name (SSID): Linksys00135  
Network password: inline131  
5 GHz network name (SSID): Linksys00135\_5GHz  
Network password: inline131

**Router Password** | Edit

Router password: \*\*\*\*\*

**Firmware Update**

☐ Automatic (Current Version: 1.1.7.180227)  
Check for Updates

**Time Zone**

(GMT-08:00) Pacific Time (USA & Canada)  
☒ Automatically adjust for Daylight Savings Time

**Activity Lights**

☒ ON Enable/disable activity lights. Power light will remain on.

OK Cancel Apply

**Troubleshooting** — Lets you diagnose problems with your router and check the status of the network.

**Troubleshooting**  
Troubleshoot router settings

Status | Diagnostics | Logs

Devices | Report

Name	MAC address	IPv4 address	Connection
MIKSAWYE-WS	00:21:6A:8D:71:E0	192.168.20.50	Wireless
Jerauth-MacBook	70:56:91:98:78:99	192.168.20.43	LAN
Jerauths-iPod	00:C5:10:19:A8:3A	192.168.20.41	Wireless
android-db1885199bb76461	38:AA:3C:D9:A1:9A	192.168.20.20	Wireless
Network Device	00:27:12:B7:9E:40	192.168.20.24	LAN
Network Device	B6:75:0E:1E:1D:E4	192.168.20.58	LAN

Refresh  
Open in browser  
Print

Name	MAC address	IPv6 address	Connection
MIKSAWYE-WS	00:21:6A:8D:71:E0	fe80:0000:0000:0000:78e7:9d56:cb30:3885	Wireless
android-db1885199bb76461	38:AA:3C:D9:A1:9A	fe80:0000:0000:0000:3aaa:3cffe0:2a19a	Wireless

DHCP client table

OK

**Wireless** — Lets you configure your router's wireless network. Among the settings you may change are network name (SSID), security mode, password, MAC filtering, and connect devices using Wi-Fi Protected Setup.

**Wireless**  
View and change router settings

Wireless | MAC Filtering | Wi-Fi Protected Setup

**Smart Connect:** ☒ 5 GHz band steering ☐ Off (Individual networks)

**2.4 GHz**

Network name: My Home Network Network: ON  
Password: password Hide network: No Channel: Auto  
Security mode: WPA2/WPA Mixed P Network mode: Mixed Channel width: Auto

**5 GHz**

Network name: My Home Network\_5GHz Network: ON  
Password: password Hide network: No Channel: Auto  
Security mode: WPA2/WPA Mixed P Network mode: Mixed Channel width: Auto

OK Cancel Apply

**Security** — Lets you configure your router's wireless security. You can set up the firewall, VPN settings, and make custom settings for applications and games.

**Security**  
View and change router settings

Firewall | DMZ | Apps and Gaming

**Firewall**

IPv4 SPI firewall protection ☒ Enabled  
IPv6 SPI firewall protection ☒ Enabled

**VPN Passthrough**

IPSec Passthrough ☒ Enabled  
PPTP Passthrough ☒ Enabled  
L2TP Passthrough ☒ Enabled

**Internet filters**

☒ Filter anonymous internet requests  
☐ Filter multicast  
☐ Filter Internet NAT redirection  
☒ Filter ident (Port 113)

**IPv6 Port Services**

Description	Protocol	IPv6 Address	Allow	Enabled
Add IPv6 Firewall Setting				

OK Cancel Apply




# Troubleshooting

This chapter can help you solve common setup issues and connect to the Internet. You can find more help from our award-winning customer support at [linksys.com/support](http://linksys.com/support).

## Your router was not successfully set up

If Linksys Smart Wi-Fi did not complete the setup, you can try the following:

Press and hold the **Reset** button on your router with a paperclip or pin until the LED starts flashing (about 10 seconds), then install the router again.

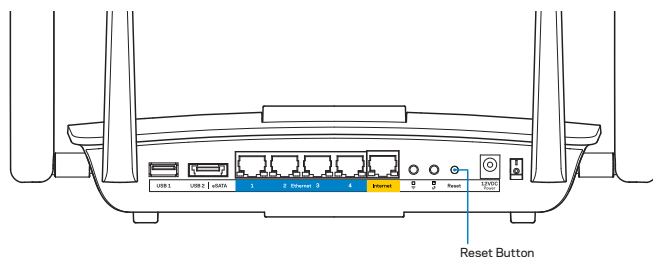

If you still haven't set up the router, find another computer, and use that computer to install the router again.

## Windows XP Service Pack update

On Windows XP computers, Linksys Smart Wi-Fi requires Service Pack 3. If the currently installed Service Pack is older than version 3, you need to download and install Service Pack 3.

### NOTE

To temporarily connect to the Internet and download the required Service Pack, you can use the included Ethernet cable to connect your computer directly to your modem.


To Install Service Pack 3:

1. Connect to the Microsoft Update website ([update.microsoft.com/windowsupdate](http://update.microsoft.com/windowsupdate)).
2. Follow the instructions on the website or contact Microsoft if you need further help.
3. After downloading and installing Service Pack 3, install the router again.


## Your Internet cable is not plugged in message

If you get a “Your Internet cable is not plugged in” message when trying to set up your router, follow these troubleshooting steps.


Make sure that an Ethernet cable (or a cable like the one supplied with your router) is securely connected to the yellow **Internet** port on the back of the router and to the appropriate port on your modem. This port on the modem is usually labeled **Ethernet**.

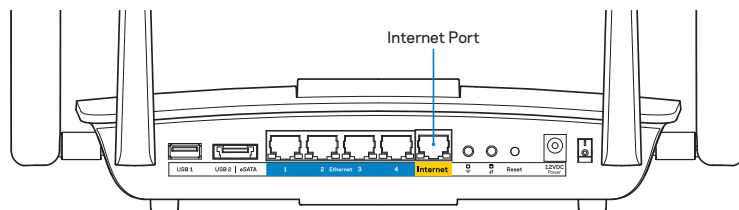

Back view of router

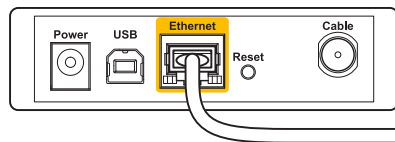

Back view of cable modem

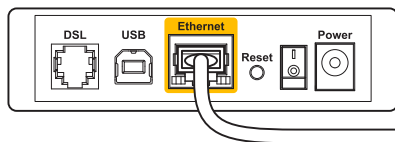

Back view of DSL modem

Make sure that your modem is connected to power and is turned on. If it has a power switch, make sure that it is set to the **ON** or **I** position.

If your Internet service is cable, verify that the cable modem's **CABLE** port is connected to the coaxial cable provided by your ISP.

Or, if your Internet service is DSL, make sure that the DSL phone line is connected to the modem's **DSL** port.

If your computer was previously connected to your modem with a USB cable, disconnect the USB cable.

Install the router again.

## Cannot access your router message

To access your router, you must be connected to your own network. If you have wireless Internet access, the problem may be that you have accidentally connected to a different wireless network.

To fix the problem on Windows computers:


1. On your Windows desktop, right-click the wireless icon in the system tray. The icon can differ depending on your version of Windows.




2. Click **View Available Wireless Networks**. A list of available networks appears.

Disable
<b>Status</b>
Repair
View Available Wireless Networks
Change Windows Firewall settings
Open Network Connections

3. Click your own network name, and click **Connect**. In the example below, the computer was connected to another wireless network named *JimsRouter*. The name of the Linksys EA8500 network, *BronzeEagle* in this example, is shown selected.

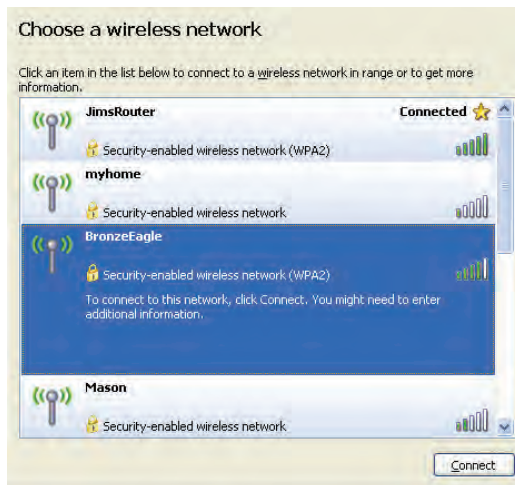

4. If you are prompted to enter a network key, type your password (Security Key) into the **Network key** and **Confirm network key** fields. Click **Connect**.

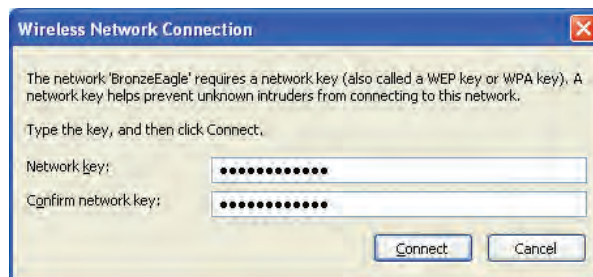


5. You should be able to access the router.

#### To fix the problem on Mac computers:

In the menu bar across the top of the screen, click the Wi-Fi icon. A list of wireless networks appears. Linksys Smart Wi-Fi has automatically assigned your network a name.

In the example below, the computer was connected to another wireless network named *JimsRouter*. The name of the Linksys EA8500 network, *BronzeEagle* in this example, is shown selected.

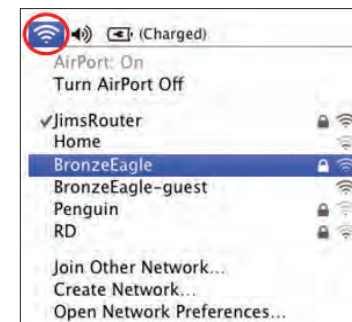

Click the wireless network name of your Linksys EA8500 (*BronzeEagle* in the example).

Type your wireless network password (Security Key) into the **Password** field, and click **OK**.



# Specifications

## Linksys EA8500

Model Name	Linksys AC2600 MU-MIMO Gigabit Router
Model Number	EA8500
Switch Port Speed	10/100/1000 Mbps (Gigabit Ethernet)
Radio Frequency	2.4 GHz and 5 GHz
# of Antennas	4 external adjustable antennas, 1 internal antenna
Ports	Power, Internet, Ethernet (1-4), USB 3.0, USB 2.0 / eSATA combo
Buttons	Reset, Wi-Fi Protected Setup, Wi-Fi, Power
LEDs	Power, Internet, Ethernet (1-4), Wi-Fi, Wi-Fi Protected Setup
UPnP	Supported
Security Features	WEP, WPA2, RADIUS
Security Key Bits	Up to 128-bit encryption
Storage File Systems Support	FAT, NTFS, and HFS+
Browser Support	Latest versions of Google Chrome, Firefox, Safari (for Mac and iPad), and Internet Explorer versions 8 and newer

## Environmental

Dimensions	10.09" x 2.21" x 7.22" (256.3 x 56.2 x 183.5 mm) without antennas
Unit Weight	20.67 oz (586 g) without antennas 23.39 oz (663 g) with antennas
Power	12V, 3.5A
Certifications	FCC, IC, CE, Wi-Fi (IEEE 802.11a/b/g/n/ac), Windows 7, Windows 8, DLNA
Operating Temp.	32 to 104°F (0 to 40°C)
Storage Temp.	-4 to 140°F (-20 to 60°C)
Operating Humidity	10 to 80% relative humidity, non-condensing
Storage Humidity	5 to 90% non-condensing

### Notes

For regulatory, warranty, and safety information, see the CD that came with your router or go to [Linksys.com/support](http://Linksys.com/support).

Specifications are subject to change without notice.

Maximum performance derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

Visit [linksys.com/support](https://linksys.com/support) for award-winning technical support

BELKIN, LINKSYS and many product names and logos are trademarks of the Belkin group of companies. Third-party trademarks mentioned are the property of their respective owners. © 2015 Belkin International, Inc. and/or its affiliates. All rights reserved.

LNKPG-00215 Rev. A00