



RD6000

Radio System
Operating Manual



Airplane • Helicopter • Sailplane

This equipment has been tested in accordance with the requirements contained in the appropriate Commission regulations. To the best of our knowledge, these tests were performed using measurement procedures consistent with industry or Commission standards and demonstrate that the equipment complies with the appropriate standards. Each unit manufactured, imported or marketed, as defined in the Commission's regulations, will conform to the sample(s) tested within the variations that can be expected due to quality production and testing on a statistical basis.

We further certify that the necessary measurements were made by Kansai Electronic Industry Development Center, Ikoma Emission Measurement Station, 10830, Takayama-Cho, Ikoma-City, Nara, 630-01 Japan.

TABLE OF CONTENTS

	SECTION I	INTRODUCTION
Page		
4		RD6000 Radio Control System
4		RD6000 Transmitter / Receiver Specifications
5		Transmitter Features all Types of Models
5		Advanced Aircraft Features (Basic OFF)
5		Advanced Helicopter Features (Basic OFF)
6		Academy of Model Aeronautics
6		Initial Preparation
7		Airborne System Connections
8		Airborne Components
8		PCM Receiver Low Voltage Alarm
8		Connectors
8		Audio Low Voltage Alarm
9		Transmitter Battery Removal
9		Control Stick Length Adjustment
9		Throttle High Warning
10		Transmitter Stick Tension Adjustment
11		Trainer System
12		Using the RD-6000 Micro-Processor
12		Bar Graph Voltage Indicator
13		Basic Features for Aero
13		Basic Features for Heli
	SECTION II	AIRPLANE
Page		
14		RD6000 Users Manual- Aircraft
14		Receiver Channel Assignments
15		Aircraft BASIC Menu Structure
15-17		Programming for Aircraft BASIC (Model Type)
18		Implementation of Aircraft BASIC Control Functions
18		Servo Reversing
19		Control Centering
20		Dual Rate
21		End Point Adjustments
22		Landing Gear End Points
23		Data Reset
24		Programming Model Selection
25-26		Stop Watch
27		Aircraft ADVANCED Menu Structure
28-29		Aircraft ADVANCED OPTIONS
30-31		Programming Aircraft Advanced Functions
32		Trim Memory
33		TIMER
34		Model Naming
35-36		Exponential
37-38		Elevator to Flap Mixing
39-40		Compensation Mixers

SECTION II AIRPLANE Contd.

41-42	Data Copy
43	Switch Reverse
44	Modulation Selection
45	Battery Failsafe
46	Click (Audio)
47	Spoiron
48	Landing Differential
49	Crow
50-51	Flaperons
52	Aileron Differential
53	Alarms
54	Elevons
55-56	Fail Safe
56	Aileron to Rudder Mix
57	Rudder to Aileron Mix
58	V-Tail Rudder to Elevator Mix
59	Throttle to Elevator Mix
60	Rudder to Elevator Mix
61	Throttle Cut

SECTION III HELICOPTER

Page	
62	RD-6000 Users Manual- Helicopter
62	Receiver Channel Assignments
63	Helicopter BASIC Menu Structure
63-65	Programming for Helicopter BASIC (TYPE)
65-67	Pitch Curves
68-69	Throttle Curves
70	Revolution Mixing
71	Gyro Adjustment
72	Helicopter ADVANCED Menu Structure
73-74	Helicopter ADVANCED OPTIONS
74-75	Programming Helicopter ADVANCED Functions
76	Trim Memory and Authority
77-78	Exponential
79	Throttle Cut
80-81	Fail Safe
81	Model Name
82-84	Compensation Mixers
85	Integral Timer
85	Switch Reverse
86-87	Data Copy
88	Modulation
89	Click (Audio)
90	Battery Fail Safe
91-92	Throttle Hold
92-93	Dynamic Trim Memory
94-95	Swash Mode (CCPM)
	APPENDIX A
96-99	RD6000 Aircraft and Heli set-up pages

RD6000 RADIO CONTROL SYSTEM

Thank you for selecting the Airtronics RD6000 Radio System. In designing the RD6000 we have made every effort to provide you with a radio that will allow you to extract the maximum performance from your powered airplane, sailplane or helicopter, while at the same time simplifying the task of setting up and adjusting your model. These instructions are written in great detail to help you understand what all of your RD6000 capabilities are. Because of the many features of the RD6000, this manual is quite long. Don't be intimidated! To actually use the system, you may only need to read the INTRODUCTION section, and study the section that applies to your type of aircraft. Each type of aircraft, i.e., fixed wing and helicopter has its own self-contained section describing each feature and its implementation.

Again, we appreciate your selection of an Airtronics Radio Control System and wish you many hours of flying enjoyment.

RD6000 TRANSMITTER SPECIFICATIONS:

Transmitter Type:	6 Channel, Dual Stick with propriety Microprocessor
Dimensions:	W: 7.5" x H: 8.0" x D: 2.5"
Weight:	1lb. 10ozs.
Power Output:	600 mWatts
Frequencies:	72 MHz
Modulation:	PPMFM, PCMFM and PPMFM Invert
Power Supply:	9.6 Volt, 600 mAh Sanyo NiCd
Current Drain:	180 MA
Temperature Range:	0 to 160 degrees F.
Pulse Width:	1.5 ms (nominal)

RD6000 RECEIVER SPECIFICATIONS

Receiver Specifications:	92777 PPMFM 7 Channel, Super Narrow Band, with Universal "Z" Connectors. (The following additional receivers are compatible if Part number 99399 "Z" Adapters are used): 92745 PPMFM 4 Channel, Micro Super Narrow Band, 92765 PPMFM 6 Channel, Super Narrow Band, 92065 PCMFM 6 Channel, Super Narrow Band, or 92185 PCMFM 8 Channel, Super Narrow Band receiver.
Receiver Sensitivity:	1.5 microvolts
Dimensions:	L: 2.25", W: 0.6", H: 0.82"
Weight:	1.2 ounces
Receiver Power Supply:	Four Cell, 4.8 Volt, 600 mAh Sanyo NiCd

RD6000 TRANSMITTERS FEATURES

The RD6000 narrow band PPM/FM & PCM/FM computer radio control system is designed for use by powered model, sailplane and helicopter pilots who demand a quality product. The RD6000 is packed with all of the capabilities that the beginner as well as the more advanced modelers demand for all three types of flying. It has the features available to get the most out of any type of model.

BASIC Program Features for all types of models (BASIC turned ON)

4 Model Memory	Model Type selection
Stop Watch	Center Adjust on EI, AI, TH, RU and P-F
Digital Trims	Data Reset
Servo Reversing on all channels	LCD Transmitter Voltage Meter
Dual Rate on Elevator and Aileron Channels (Plus Rudder on Heli)	High Capacity Sanyo Transmitter/Receiver NiCd Batteries
Large Screen Liquid Crystal Display (LCD)	Adjustable Stick Tension and Length
End Point Adjustment on all channels	Low Battery, High Throttle and Power Alarms

AIRCRAFT ADVANCED FEATURES (BASIC turned OFF)

All of the features listed under the Program with the BASIC turned ON are also included in this Advanced Features section.

PPM/FM, PCM/FM and PPM/FM Reverse Modulation	V-Tail Mix
Exponential	Aileron Differential
Trim Memory	Landing Differential
Trim Authority (STEP) For Digital Trims	Crow
Sub Trim	Dual Rate Alarm
Model Naming (3 Letters)	Menu Options
Failsafe/Hold (PCM Rx only)	Flap to Elevator Mix
Receiver Battery Failsafe (PCM Rx only)	Throttle to Elevator Mix
Low Battery Alarm	Rudder to Aileron Mix
Integral System Timer	Aileron to Rudder Mix
Data Copy	Rudder to Elevator Mix
Flaperon Mix	Two Separate Compensation Mixers
Spoiler Mix	Switch Reverse
Elevon Mix	

ADVANCED HELICOPTER FEATURES (BASIC turned OFF) All of the features listed under the Program with the BASIC turned ON are included in this Advanced Features section.

High Point Throttle/Pitch Curve Adjust	End Point Adjustments on EI, AI, TH and Ru
3rd Point Throttle/Pitch Curve Adjust	Trim Authority
2nd Point Throttle/Pitch Curve Adjust	Trim Memory
1st Point Throttle/Pitch Curve Adjust	Model Naming (3 Letters)
Low Point Throttle/Pitch Curve Adjust	Integral Timer
Revolution Mix High Point	Switch Reverse
Revolution Mix Middle Point	Data Copy
Revolution Mix Low Point	PPM/FM, PCM/FM and PPM/FM Reverse Modulation
Gyro	Menu Options
Dynamic Trim Memory	Flight Mode Switch
Throttle Hold	Failsafe/Hold (PCM Rx only)
CCPM	Battery Failsafe
Two Separate Compensation Mixers	Idle Up
Dual Rate Rudder	Throttle Cut
Exponential on EI, AI, and Ru	

ACADEMY OF MODEL AERONAUTICS

5151 East Memorial Drive
Muncie, Indiana 47302

The Academy of Model Aeronautics (AMA) is a national organization representing modelers in the United States. We urge you to examine the benefits of membership, including liability protection in the event of certain injuries. The Academy has adopted simple and sane rules which are especially pertinent for radio controlled flight as the OFFICIAL AMA NATIONAL MODEL AIRCRAFT SAFETY CODE, which we have partially reprinted below:

1. I will not fly my model aircraft in sanctioned events, airshows or model flying demonstrations until it has been proven to be airworthy by having been previously, successfully flight tested.
2. I will not fly my model higher than approximately 400 feet within 3 miles of an airport without notifying the airport operator. I will give the right-of-way and avoid flying in the proximity of full-scale aircraft. Where necessary, an observer shall be utilized to supervise flying to avoid having models fly in the proximity of full-scale aircraft.
3. Where established, I will abide by the safety rules for the flying site I use, and I will not willfully and deliberately fly my models in a careless, reckless and/or dangerous manner.
4. I will have completed a successful radio equipment ground range check before the first flight of a new or repaired model.
5. I will not fly my model aircraft in the presence of spectators until I become a qualified flyer, unless assisted by an experienced helper.
6. I will perform my initial turn after take off away from the pit or spectator areas, unless beyond my control.
7. I will operate my model using only radio control frequencies currently allowed by the Federal Communications Commission. (See chart below) Only properly licensed amateurs are authorized to operate equipment on amateur band frequencies.

72 MHz BAND

CH #	Freq.	CH #	Freq.	CH #	Freq.	CH #	Freq.	CH #	Freq.
11	72.010	21	72.210	31	72.410	41	72.610	51	72.810
12	72.030	22	72.230	32	72.430	42	72.630	52	72.830
13	72.050	23	72.250	33	72.450	43	72.650	53	72.850
14	72.070	24	72.270	34	72.470	44	72.670	54	72.870
15	72.090	25	72.290	35	72.490	45	72.690	55	72.890
16	72.110	26	72.310	36	72.510	46	72.710	56	72.910
17	72.130	27	72.330	37	72.530	47	72.730	57	72.930
18	72.150	28	72.350	38	72.550	48	72.750	58	72.950
19	72.170	29	72.370	39	72.570	49	72.770	59	72.970
20	72.190	30	72.390	40	72.590	50	72.790	60	72.990

INITIAL PREPARATION


PACKAGING:

The packaging of your Airtronics RD6000 Radio Control System has been especially designed for the safe transportation and storage of the radio's components. After unpacking your radio, DO NOT DISCARD THE CONTAINERS! You should set the packaging aside for use if you ever need to send your radio in for service, or to store your radio in case you do not plan to use it for an extended period of time.

NiCd BATTERY CHARGING:

The first thing you should do after unpacking your RD6000 system is to charge the transmitter and receiver NiCd batteries. You should charge the transmitter and receiver NiCd batteries for 24 hours. Subsequent recharges should require only a 12 hour charge.

AIRBORNE SYSTEM CONNECTIONS

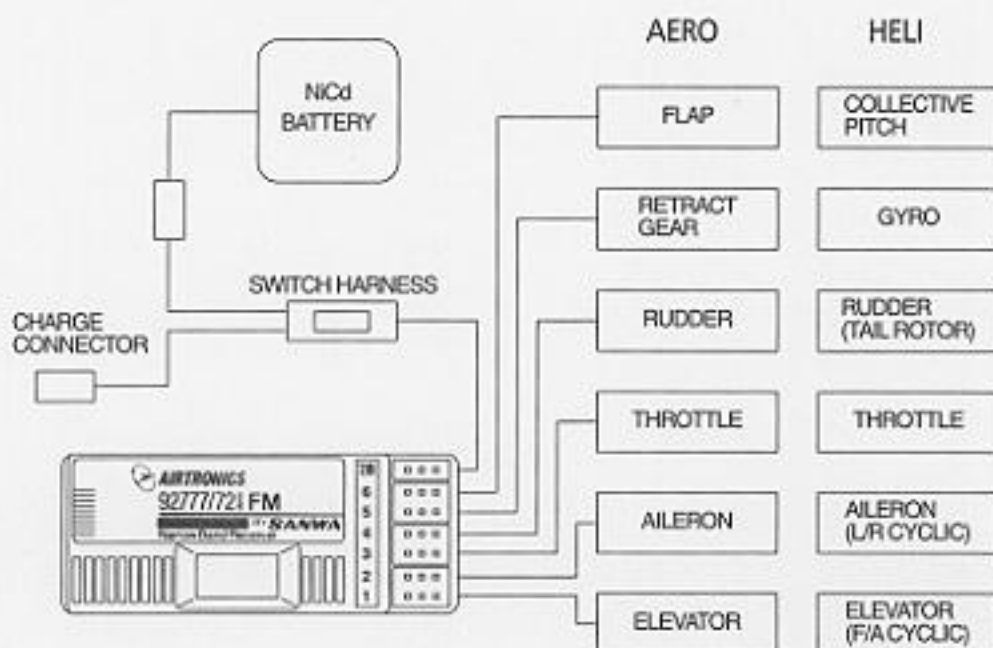

The above diagram show how to connect the components of your RD6000 system together. At this point, your objective is to get the system operating on your workbench. Once connected, you must then refer to the corresponding diagram for your system, i.e., either AERO or HELI showing the transmitter control sticks' function.

SPECIAL NOTE: If you change modulation from PPM/FM to PCM, Channel #1 and Channel #3 outputs are changed as per the following table.

MODULATION	CHANNEL # 1	CHANNEL # 3
PPM/FM	Elevator	Throttle
PPM/FM-REV	Elevator	Throttle
PCM/FM-1	Throttle	Elevator
PCM/FM-2	Throttle	Elevator

PPM/FM will operate RD6000 p/n 92777 FM receiver. PPM/FM-REV will operate other brand PPM type receivers. (Note that channel outputs for OTHER BRAND receivers may not be the same as indicated on the above diagram).

PCM/FM-1 will operate the STYLUS p/n 92185 PCM receiver.

PCM/FM-2 will operate the INFINITY 660 and VANGUARD p/n 92065 receivers.

AIRBORNE COMPONENTS

While your system's batteries are charging, you can familiarize yourself with the airborne portion of your radio. The airborne portion of the radio refers to any components which are mounted in your plane or helicopter and carried aloft when you fly. The airborne components consist of the receiver, which receives the signals from the transmitter, decodes them, and relays the commands to the servos; the servos, which are simply electronically controlled motors used to move the controls of the plane; the NiCd battery pack, which provides power for the receiver and servos to operate; and the switch harness which allows you to turn the airborne package on and off.


PCM RECEIVER LOW VOLTAGE ALARM

The PCM receiver for the RD6000 has the ability to warn you when the airborne battery pack voltage drops below 4.1 volts. When the airborne battery arrives at this voltage, the throttle servo will move to a reduced throttle position for 0.5 seconds, then return to normal. This cycling of the throttle will occur about once each minute until you land and recharge the NiCd battery pack. **IT IS RECOMMENDED THAT YOU LAND IMMEDIATELY** if the receiver failsafe warns you of low voltage conditions! If you wish to disable the Low Voltage Alarm, you can do so by Inhibiting the B-F-S Function in the Advanced portion of the RD6000 transmitters program.

CONNECTORS

Your RD6000 unit is equipped the new universal AIRTRONICS "Z" connectors which are color coded blue, and are electrically compatible with the receivers of other radio control system manufactures. The connectors are rugged but should be handled with care. Note that these connectors are not compatible with older AIRTRONICS R/C equipment unless Adapter p/n 993992 is used!


"Z" CONNECTOR

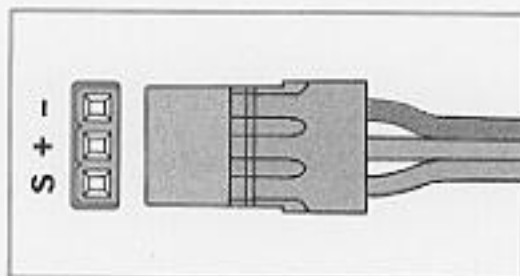

AUDIO LOW VOLTAGE ALARM

Your RD6000 transmitter is equipped with an Audio Alarm which will sound whenever the transmitter batteries drop below 9.5 volts during transmitter operation. If the alarm sounds while you are flying, land immediately and don't operate the transmitter until it has been charged for 12 hours. The transmitter should normally operate 120 to 150 minutes before the alarm sounds. If the alarm sounds even after the batteries have been on charge for the required time it indicates that there is a problem with either the battery pack or the transmitter, and you should contact AIRTRONICS about service.

RD6000 USERS MANUAL-AIRCRAFT

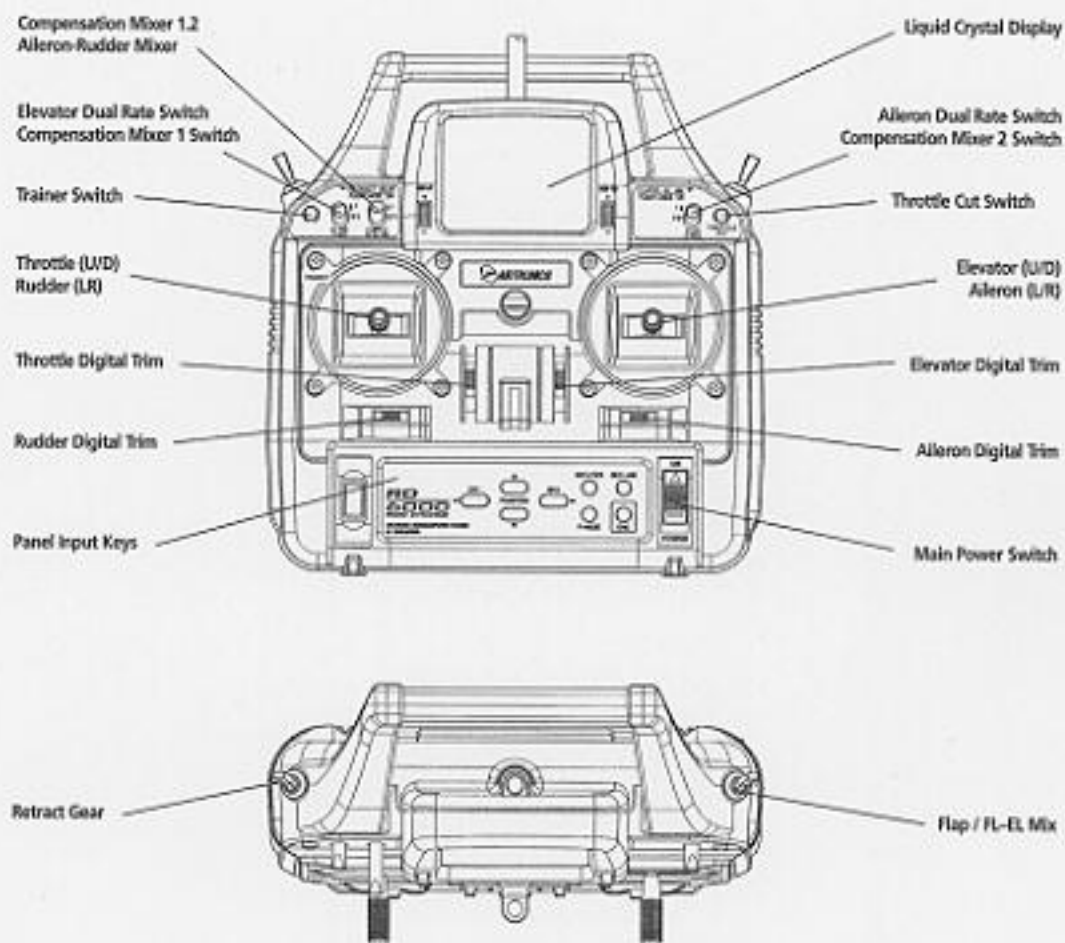

92777 RECEIVER CHANNEL ASSIGNMENTS

Receiver Plug Number	Plug In Servo For:
1	Elevator
2	Aileron
3	Throttle
4	Rudder
5	Gear
6	Flap or 2nd Aileron Servo
7/B	Battery



Get The Advantage

Airtronics Inc. 1185 Stanford Court, Anaheim, CA 92805 (714) 978-1895 Fax (714) 978-1540