

# Inner Range SIFER Smart Card Reader

P/N: 994720 (Std) / 994720MF (Multi-format)

## Features

- Suitable for narrow door frames or mullions.
- Optical tamper device.
- Configurable RGB LEDs and Beeper.
- Multi-format version reads CSN or UID data from other 13.56MHz formats. *See Data Sheet.*
- Connects to host Module via multi-drop RS485.
- Firmware updates over system wiring in Inner Range systems. **Latest firmware recommended.**



Non-metallic mounting surface recommended.  
See 'Mounting Surface' note on page 2.

Optional Spacer for  
metallic surface  
P/N: 999033

## Compatibility

Product	Version	SIFER Readers per Module
ISC / IAC	V4.0 or later	16 (IAC ONLY)
ILAM	V2.0 or later	16
SLAM	V2.0 or later	4
Integriti Software	V4.0 or later	n/a
Inception Controller	V1.0 or later	8 (SIFER f'ware must be V1.5.0 or later in Inception Systems)

## UL Requirements (North America)

Refer to the Inner Range host LAN Module Installation manual for details of UL regulatory requirements.

This manual is subject to change without notice.  
© 2014 - 2020. Inner Range Pty. Ltd.

www.innerrange.com.au  
Doc. Part No: 634720

## FCC (North America)

This device complies with Part 15 of the FCC Rules and Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

## Class B product:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off & on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning: Any changes or modifications not expressly approved by Inner Range Pty Ltd could void the user's authority to operate this equipment

## ISED Canada

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Parts List

- Installation manual. (This document)
- Reader body with integrated pigtail cable.
- Mounting plate and Countersunk screw.

## Specifications

Environment:	Operating Temp: -35°C to +65°C.
	Ingress Protection: IP67
Physical dimensions.	Height: 94 mm Width: 40 mm
	Depth: 16 mm (26mm with Spacer)
Mounting plate.	91.5 mm (H) x 38 mm (W)
Power supply input:	11-14V DC <500mV ripple.
Current consumption:	75 - 100mA* typical. 150mA max.
	*Depends on LED configuration.
V+/0V must only be connected to a power-limited circuit.	

Maximum Cabling Distance using recommended cables.

### Power (V+/0V). @100mA\* per Reader.

- To 1 Reader using 2-Pair 7/0.2 cable: 100m.
- To 1 Reader using 2-Pair 14/0.2 cable: 200m.
- To 2 Readers using 3-Pair (2 pairs for +V/0V) 100m.

### Data (Data A/Data B/0V).

- Access Module to furthest Reader: 1000m.
- Total data cabling on one "RDR RS485" Port: 1000m.

For longer cable runs &/or multiple Readers on the same run. One of the following may be required:

- Heavier duty 2-pair cable.
  - Additional pair or separate heavy duty fig. 8 for +V/0V.
  - A separate battery-backed local power supply.
- See "READER POWER" below for more details.

## Extending Cable

See "Preliminary Installation Notes 3 & 4" on page 2.

The pigtail cable can be extended with twisted-pair multistrand data cable. Pair 1 for Data A/B; Pair 2 for V+/0V. Shielded cable provides additional noise immunity. RS485/RS422 data cable, balanced data cable and multistrand UTP cable are recommended. Specific recommendations are provided below.

**READER POWER:** Remember to allow for voltage drop on V+/0V over longer distances and/or when Readers are wired in a daisy chain (multi-drop) configuration. Supply voltage drop on the cable is approx. 17mV per metre per Reader using 7/0.2 (24AWG) cable and assuming each Reader draws 100mA.

### OVERALL SHIELD (2 Pair)

Tycab. DPF4702 or DCK4702	Belden. 9842
Electra. EAS7202P or EAS7302P	Garland. MCP-2S
General Cable. B2002CS	Alpha. 6413
Roadworx. RW600224	Olex. JD2PS485A

### OVERALL SHIELD (3 Pair)

Belden. 9843	Tycab. DPF6702
General Cable. B2003CS	Garland. MCP-3S
Electra. EAS7203P	Electra. EAS7303P

### INDIVIDUALLY SHIELDED PAIRS (2 Pair)

Tycab. DQQ47025	Garland. MCP-2IS
Alpha. 2466C	Belden. 8723

### UTP

Garland UTPL5EMTP (4 Pair stranded UTP patch cable)

If you have a requirement to use other cable types (e.g. short runs of non-twisted cable), please contact Inner Range Technical Support for advice.


Preliminary Installation Notes

1. MOUNTING SURFACE. SIFER Readers should be installed on non-metallic surfaces. Mounting on a metallic surface is not recommended and will impair performance. In circumstances where installation on a metallic surface is unavoidable, the SIFER Reader Spacer (P/N: 999033) or another non-metallic spacer/mounting block that provides 8mm or more of separation must be used.
2. IN/OUT READERS. If two SIFER Readers are installed back to back on either side of a Door, mount the Readers at different heights to minimize interference.
3. CABLING. SIFER Readers are wired in a star and/or daisy-chain configuration from the ‘RDR RS485’ Port (or Inception ‘READER’ Port), within the limits defined under Specifications on page 1. The pigtail cable can be extended using twisted pair cable. 2-pair, 7/0.20 twisted pair data cable is recommended. See “Wiring Diagram” opposite. See “Specifications” and “Extending Cable” on page 1 for cabling distances and recommended cables. If the cable has more than 2 Pairs, a spare pair may also be connected in parallel to V+ & 0V to reduce voltage drop.
4. SHIELDED CABLE. If shielded cable is used:

a) Do NOT use the shield as the 0V (negative) connection or allow the shield to contact other wiring or metalwork.

b) Shield is terminated to a protective earth (if available) or 0V, at one end of the cable. i.e. At the host Module.
5. Make a note of the Serial number of each Reader & where it will be installed. See “Serial Number” opposite.

Wiring Diagram

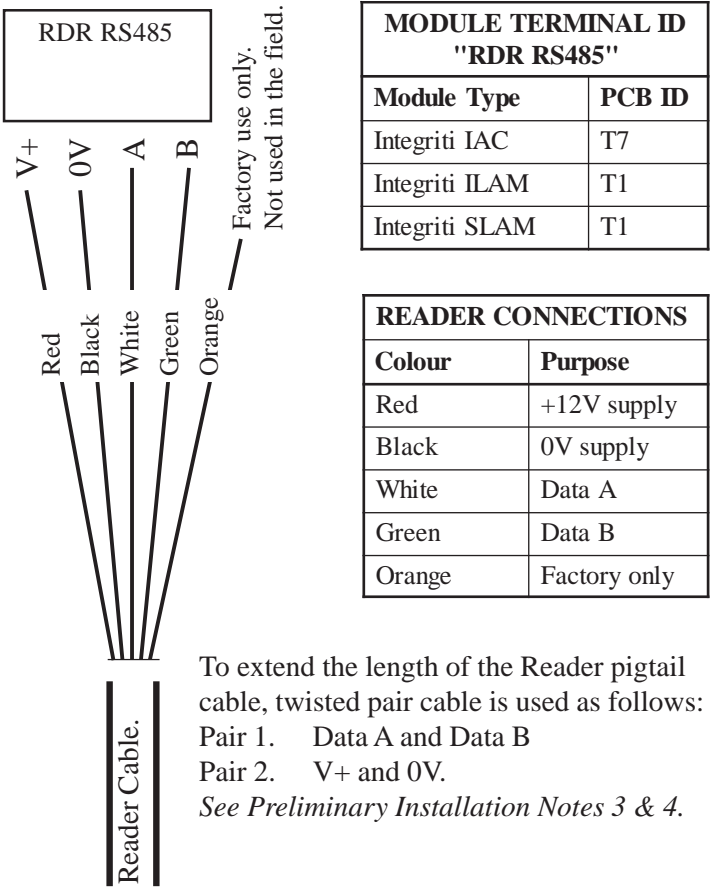

Installing the Reader


1. The Reader should be mounted on a flat, solid surface at an appropriate height. Determine the mounting location for the Reader and ensure that cable access is available.
2. If the mounting plate is attached to the body of the Reader, remove it. Insert a small flat blade screwdriver into one of the two rectangular slots at the bottom rear of the Reader and gently lift the mounting plate out of the Reader body.
3. Using the mounting plate, or the template opposite, mark out, then drill holes for the 2 mounting screws and the cable entry at the mounting location, then secure the mounting plate to the surface using appropriate hardware.
4. Join the extending cable (if required) to the Reader pigtail cable using appropriate terminals/joiners. Note the wire colours (as they may be different), then route the cable from the mounting location to the Access Module.
5. Fit off the cable to the Access Module “RDR RS485” terminal as shown above opposite.
6. Test the installation, including tamper detection\* (if used), then fit the Reader body to the mounting plate as follows:

a) Position the tabs in the top of the Reader body into the slots at the top of the mounting plate.

b) Push the bottom of the Reader body onto the mounting plate until it clicks into place.

c) Secure the body to the mounting plate at the bottom of the assembly with the countersunk screw provided.
- \*NOTE: If tamper detection is unreliable due to the mounting surface, adding a white/reflective sticker, or similar, on the surface behind the sensor will assist.

Serial Number

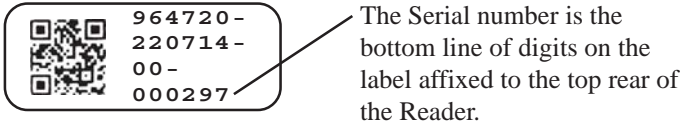

Mounting Plate Template

