



Operation


Playing Songs from the USB

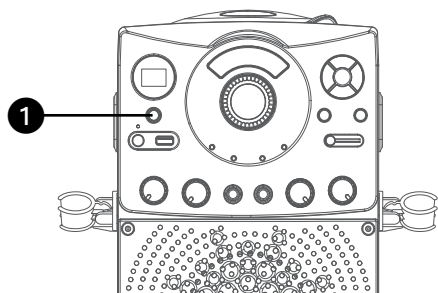

1 Connect the unit as described previously. Press the **ON/OFF** button to turn the unit on.

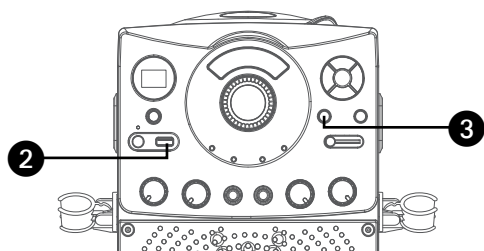


2 Insert a USB flash drive into the USB port on the unit so it faces upward. Make sure to download music from the Karaoke store, see “Where to Download MP3+G Files”.

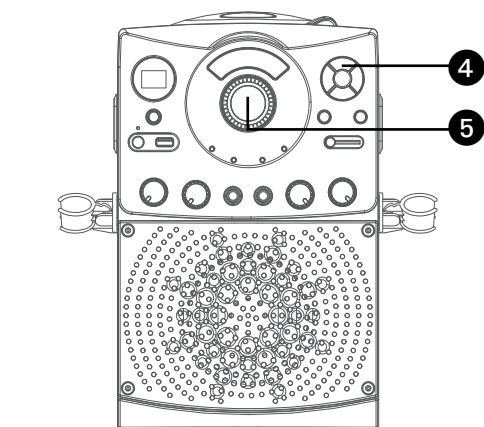

3 Repeatedly press the **CDG/USB/BT** button to select the USB mode; “usb” will appear when searching the drive and then the total number of files will appear.

Note: The USB mode cannot be accessed until a flash drive is inserted.

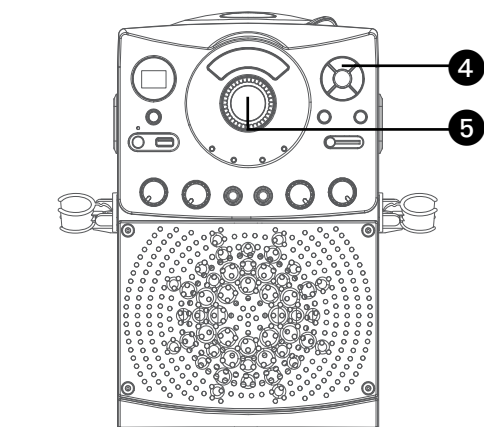


4 Press the **PLAY/PAUSE** ►|| button to start playback; if listening to an MP3+G file, the image and lyrics will appear on the TV screen (if connected).

5 Adjust the volume to a comfortable level using the **MASTER VOLUME** control.

Note: If connected to a TV or other audio source, adjust the volume of the TV using its own volume control.

Operation

Playing Songs from the USB (Continued)

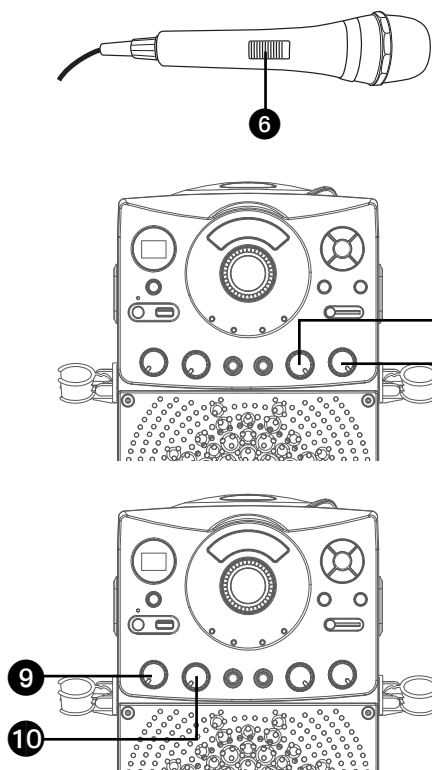

6 Connect microphone(s) and slide the **ON/OFF** switch on the microphone to the ON position.

7 Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.


8 Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards MAX to increase the echo effect.

9 AUTO VOICE CONTROL can be activated by rotating the **AVC** control. The higher this control is set to, the more the vocals on the multiplex recording will be muted when the singer starts to sing through the microphone. When the singer stops singing, the recorded vocals on the multiplex recording will resume to normal.

10 Rotate the **BALANCE** control clockwise to hear the music and recorded vocals from a multiplex recording or counterclockwise to hear the music only from a multiplex recording.

Operation


Playing Songs from the USB (Continued)

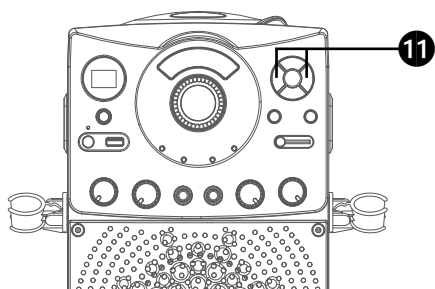


11 SKIP: Advance or go back one track by pressing the ◀ or ▶ buttons. You can also skip ahead 10 files/tracks using the **Skip10+** button.

SEARCH: When playing any audio from the USB, press and hold the ◀ or ▶ buttons. The USB will search at high speed in the forward or backward direction. Normal play will continue when you release the button.

During Stop mode you can also select a file using the ◀ or ▶ buttons to scroll right/left.

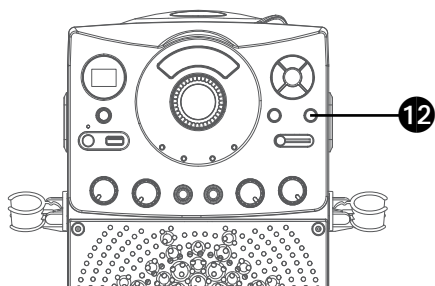


12 REPEAT: During playback, press the **REPEAT/PROG** button once during playback, the Repeat indicator will blink and the current track will be repeated. Press the **REPEAT/PROG** button twice, the Repeat indicator will blink, all MP3 tracks inside the current folder will be repeated continuously. Press the **REPEAT/PROG** button three time, the Repeat indicator will light solid, all MP3 tracks will be repeatedly. To stop repeat function by press the button again, the Repeat indicator will turns off.

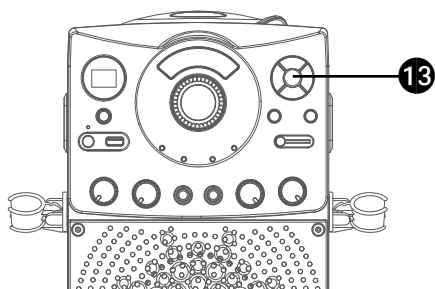

Operation

Playing Songs from the USB (Continued)

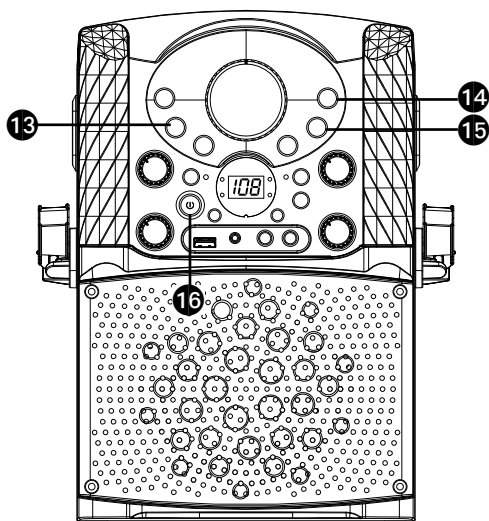

13 PROGRAM: You can program up to 20 tracks for playback in any desired order. While in Stop mode, press the **REPEAT/PROG** button; Program indicator will blink and “P00” appear. Select the first track using **SKIP Back** ◀◀ or **SKIP Forward** ▶▶ buttons, then press the **REPEAT/PROG** button. Repeat to set up to 20 tracks into memory. When done, press the **PLAY/PAUSE** ▶|| button to start playback.

Note: Press the **STOP** ■ / **PAIR** button TWICE to stop and clear the program.


14 PAUSE: During playback, if you wish to pause the music momentarily, press the **PLAY/PAUSE** ▶|| / **ENTER** button. Press again to resume normal playback.

15 Press the **STOP** ■ / **PAIR** button to stop playback.

16 Press the **ON/OFF** button to turn the unit off.

Operation

Using a Bluetooth Device

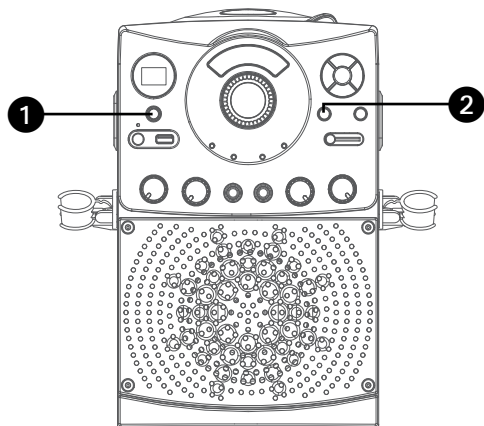

1 Connect the unit as described previously. Press the **ON/OFF** button to turn the unit on.

2 Repeatedly press the **CDG/BT/USB** button to select the Bluetooth; “bt” will blink in the display as the unit automatically searches for and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present, connect as shown in the next step.

Note: You can also press the **STOP ■ /PAIR** button to disconnect any paired devices in order to pair another device.


3 Turn on your device’s Bluetooth option in settings to search for a discoverable device with a Bluetooth signal. Select “**Singing Machine**” from the device results on the Bluetooth menu.

Note: Also refer to the user manual of your Bluetooth device for detailed instructions.

4 “bt” will light solid in the display and a successful pairing sound will be heard..


Notes:

- If your Bluetooth prompts you for a passcode during the pairing process, please enter “0000” to connect.
- On some Bluetooth devices, once pairing is complete, select your Bluetooth device as “Use as Audio Device” or similar.
- If connection is lost after successful pairing, check to make sure the distance between speaker and Bluetooth-enabled device does not exceed 30 feet/10 meters.
- Nothing will appear on the connected TV when using the Bluetooth mode.

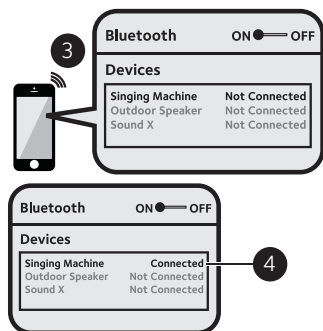


Operation

Using a Bluetooth Device (Continued)

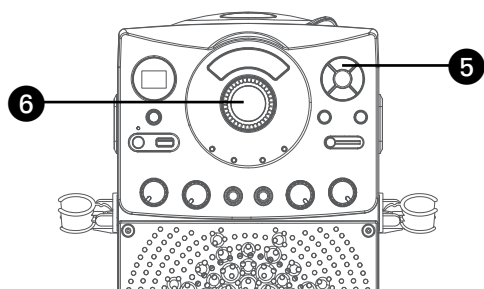


5 To control your Bluetooth device from this unit, press the **PLAY/PAUSE** ►|| button to start playback. Press the **PLAY/PAUSE** ►|| button during playback to pause the song.

6 Adjust the volume to a comfortable level using the **MASTER VOLUME** control on this unit as well as the volume on your Bluetooth device.

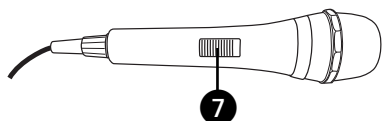


7 Connect microphone(s) and slide the ON/OFF switch on the microphone to the ON position.

8 Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.

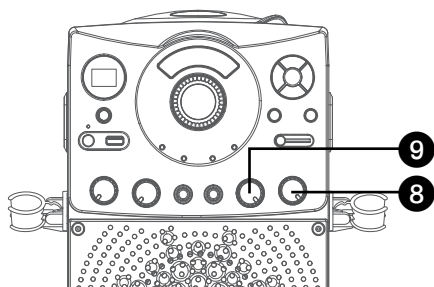

9 Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards MAX to increase the echo effect.

10 Adjust the balance between the speakers using the **BALANCE** control.

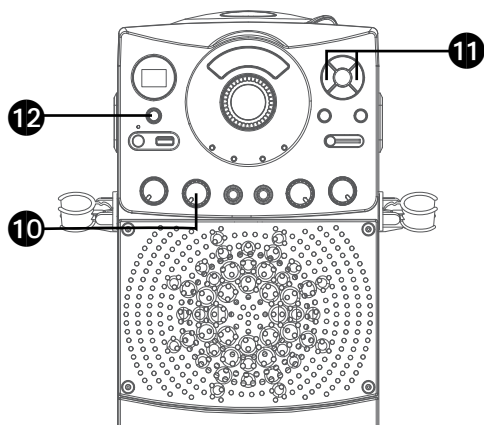


11 **SKIP:** Advance or go back one track by pressing the **SKIP** ◀/SKIP ▶ buttons.

12 **RECORD YOUR SINGING:** To record your singing as well as the music, press the **RECORD** button. Recording will begin and the record indicator will light solid. When done recording, press the **RECORD** button again; the record indicator will turn off.


13 Press the **ON/OFF** button to turn the unit off.

Operation

Using the LINE IN Jack

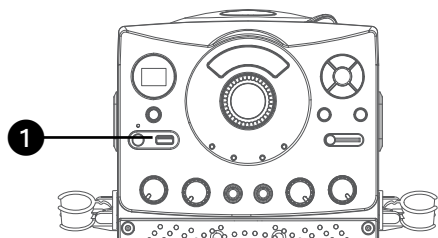


- 1 Connect the unit as described previously. Press the **ON/OFF** button to turn the unit on.

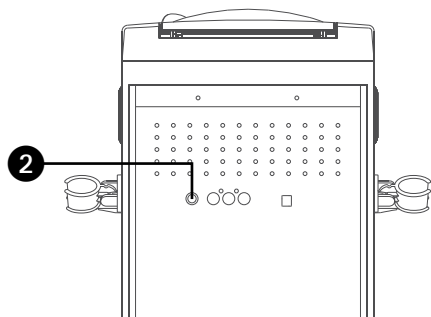


- 2 Connect the external unit to the LINE IN Jack on the back of this unit. Connecting an external unit will allow the audio to be played through your Singing Machine. LINE IN function is automatically selected once the audio cable is plugged in.

Notes:

- It is highly recommended to set the volume on the auxiliary unit to 1/3 or lower to avoid distortion.
- Skipping files/tracks is not possible on this unit when using an external device.

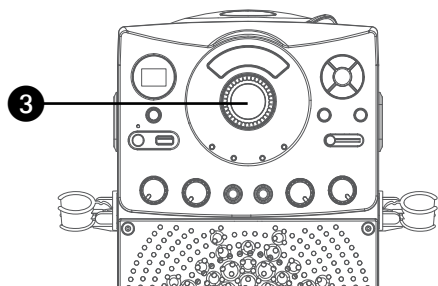


- 3 Adjust the volume using the **MASTER VOLUME** control on this unit or your external device's volume control.

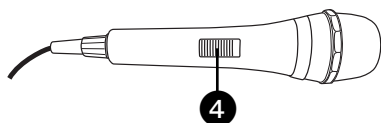


- 4 Connect microphone(s) and slide the **ON/OFF** switch on the microphone to the ON position.

Operation

Using the LINE IN Jack (Continued)

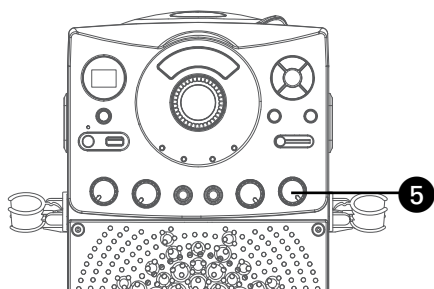

- 5 Adjust the **MIC VOLUME** control as desired. Increasing this control will increase the volume of both microphones.

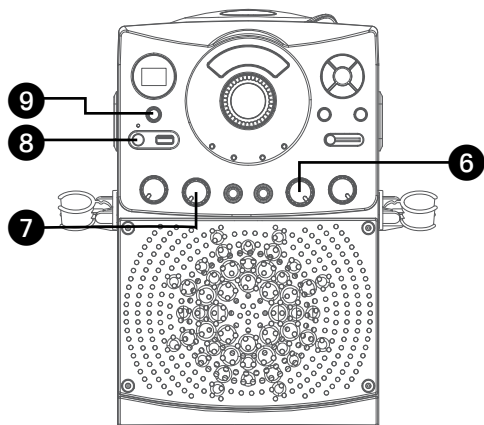

- 6 Rotate the **ECHO** control to add an echo effect to your voice. Rotate towards **MAX** to increase the echo effect.

- 7 Adjust the balance between the speakers using the **BALANCE** control.

- 8 **RECORD YOUR SINGING:** To record your singing as well as the music, press the **RECORD** button. Recording will begin and the record indicator will light solid. When done recording, press the **RECORD** button again; the record indicator will turn off.

- 9 Press the **ON/OFF** button to turn the unit off.

Operation

Where to Download MP3+G Files

Helpful Hints:

The .mp3 and .cdg files are delivered for download in a single, compressed MP3+G.zip file. The MP3+G file cannot be played as a .zip file on a USB flash drive. To play karaoke songs using a USB flash drive, the MP3+G .zip file must be unzipped as follows:

- Connect a USB flash drive to your computer.
- Download the MP3+G file from your Digital Locker and save the .zip* file to a folder on your computer.
- Double click the .zip file to open the .zip (you will see the .mp3 and .cdg files).
- Drag and drop the .mp3 and .cdg files to the USB flash drive.
- Remove (eject) the USB flash drive from your computer.


Turn on the Singing Machine and connect the USB flash drive.

FAQ

- Where can I get additional help with the file formats?
Visit <http://singingmachine.com/smc-music/> to get additional resources about the right type of FILE FORMAT for your system.

- To purchase and download karaoke music, please visit <http://store.singingmachine.com> to access over 13,000+ of your favorite karaoke songs. You will need a USB flash drive (not included) to transfer the downloads to this unit.
- Follow these easy steps:
- 1 Go to <http://store.singingmachine.com> using your internet browser, and then register.
 - 2 Select and purchase your favorite karaoke music from the Singing Machine Download Store.
 - 3 Download your selected purchase(s) from the Singing Machine Digital Locker to your USB flash drive.
 - 4 Insert the USB flash drive as shown on page E12 and enjoy!

Note: Your downloaded songs can also be burned to a blank CDR/CDRW.

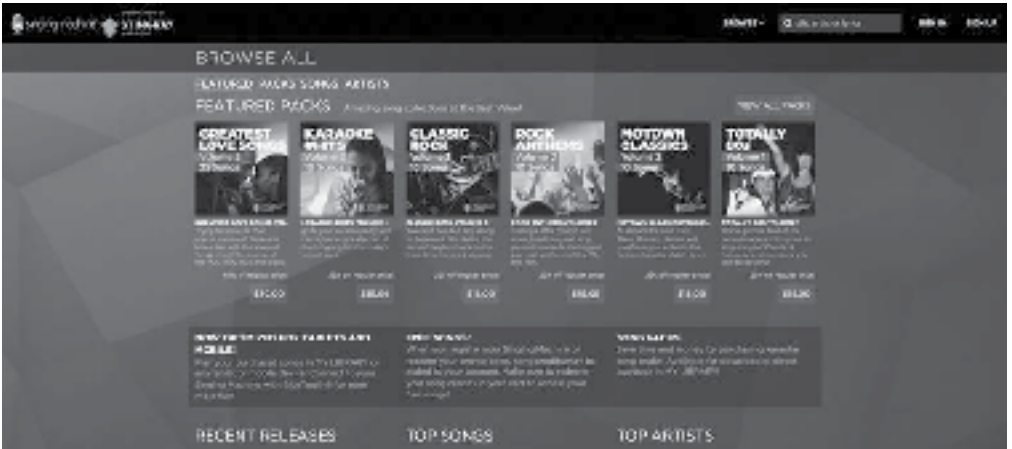

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; press the **ON/OFF** button to turn power on.
- Confirm the AC adapter is connected securely to the back of the unit.
- Connect the unit to a different outlet.

No Sound – General

- **MASTER VOLUME** is set to minimum; raise volume.
- Correct Function was not selected; select using the **CDG/BT/USB** button.
- If using an external device, raise the volume.
- Check if the LINE IN jack is still connected by a cable.

No Sound – If connected to a TV

- Volume on the TV is muted or too low.
- Correct source (usually AV) was not selected on the TV's menu.

Lyrics do not appear on the TV screen

- If connected to a TV, Video plug is not connected properly; see page E5.
- If connected to a TV, select the correct source on the TV (usually AV).
- The file/track being played is not a track recording with lyrics. These are the only files that allow you to view the lyrics on the TV screen.
- Nothing will appear on the TV screen when using Line In or Bluetooth.

File(s) on USB Jack not playing

- The file is corrupted; replace the file.
- The file is not in a format this unit will play.
- The connected USB device is not supported by the product.

No sound from the microphone

- Make sure the microphone is firmly connected to the MIC 1 or MIC 2 jack.
- Make sure the **ON/OFF** switch on the Mic is set to the ON position.
- Make sure the mic's volume is not set too low.
- **MASTER VOLUME** is set to minimum; raise volume.
- Adjust the **ECHO** control past the mid point on the Singing Machine.

The Bluetooth device cannot be paired or connected with the unit

- You have not activated the Bluetooth function of your device; see page E16 or refer to the Bluetooth device user's manual.
- The system is not in pairing mode; press the **STOP/PAIR** button to restart pairing.

The Music is not available on the unit after successfully connecting the Bluetooth

- Ensure your Bluetooth device can support the A2DP Bluetooth profile.
- The volume on the external Bluetooth device is set to low or muted; raise as desired.

Specifications

AUDIO

OUTPUT POWER (MAXIMUM)..... 3.5 Watts (RMS)
OUTPUT IMPEDANCE 3 Ohms

CD PLAYER SECTION

FREQUENCY RESPONSE 100Hz – 20kHz
SIGNAL-TO-NOISE RATIO 50dB
NUMBER OF PROGRAMS..... 20 Step Random Access Programming
SAMPLING SYSTEM 8 Times Over Sampling

BLUETOOTH

Bluetooth Version V2.1+EDR
Working Distance..... Up to 30 feet/10 meters measured in open space

USB

Format.....FAT32
Maximum Compatibility.....32GB

AUX IN SECTION 3.5 mm Stereo Headphone Jack
MICROPHONE-74db 600 Ohm Impedance with 6.3 mm Dynamic Microphone

POWER SECTION DC 5.8V 1.5A
POWER CONSUMPTION..... 8.7 W
DIMENSIONS (HxWxD) 13.2 x 10.5 x 9.3 inches / 33.6 x 26.6 x 23.5 cm
WEIGHT 7.2 lbs / 3.3 kgs

Specifications are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Visit Our Website: www.singingmachine.com
Visite nuestro sitio web: www.singingmachine.com
Visitez notre site Web : www.singingmachine.com

The Singing Machine Company, Inc.
4060 E Jurupa Street, Unit B
Ontario, CA 91761-1413 USA

Copyright © 2018 All Rights Reserved.
Derechos de autor © 2018 Todos los derechos reservados.
Droit d'auteur © 2018 Tous Droits Réservés.

PRINTED IN CHINA
IMPRESO EN CHINA
IMPRIMÉ EN CHINE
385U-xxxx-ESF01-US