

Table of Contents

Introduction..... 1

Main Features 1

Packing List 2

Computer Configuration Requirements (Windows XP System) 3

Computer Configuration Requirements (Windows Vista System) 3

Getting to Know Your Camera..... 4

Preparing Your Camcorder for Use 5

Inserting SD Card 7

DVRFunctionControl. 8

Technical Parameters 26

Trouble Shooting..... 26

Introduction

Thank you for purchasing our portable digital video camera! This camera can be used to shoot videos as well as take photos. Additionally, it supports SD cards of up to 64GB capacity to extend the memory of the DVR camera.

Main Features

- Digital Video resolutions: – 1920 x 1080 (FHD 30fsp), 1280 x 720 (HD 30 fps), and 640 x 480 (VGA 30 fps)
- mega-pixel camera, providing 10 definitions: 5600 x 4200 (24M), 5200 x3900(20M), 4640 x 3480 (16M), 4000 x 3000 (12M), 3648 x 2736 (10M), 3648 x 2048 (7MHD), 2592 x 1944 (5M), 2048 x 1536 (3M), 1920 x 1080 (2MHD) and 640 x 480 (VGA)
- 3.0" touchscreen, LCD
- 16x digital zoom
- External high sensitivity microphone
- External Hot Shoe
- HDMI output
- WIFI

- Supports remote control
- Supports LED light-compensating lamp
- Supports 64GB external SD card (Grade 6 or above strongly recommended)
- Internal microphone and speaker
- can be used to shoot videos and take photos
- Supports deleting, protecting and printing of photos on the camera

Packing List

- High-Definition digital camera
- USB cable
- User manual
- Warranty card
- HDMI Cable
- Remote control
- Charger
- Battery

Computer Configuration Requirements (Windows XP System)

To make sure that the photos and videos can be exported to your computer, the minimum requirements are:

- Pentium 4 processor or above, 2.8 GHZ, and supports Windows XP Service Pack 2 operations System
- 512 MB RAM, and 580 MB available disk space
- USB ports
- CD-ROM drive
- Screen definition of 1024 x 768 or above
- Display adapter of 16 Bit or above
- Windows Media Player 9 or above as the default multimedia player



Computer Configuration Requirements (Windows Vista System)

To make sure that the photos and videos can be exported to your computer, the minimum requirements are:

- 800 MHz processor and 512 MB RAM
- 20 GB disk with at least 15 GB available

- Supports VGA (Video Graphics Array)
- USB ports
- CD-ROM drive

Getting to Know Your Camera

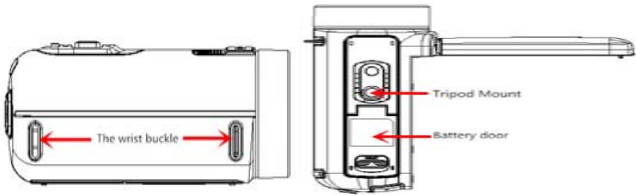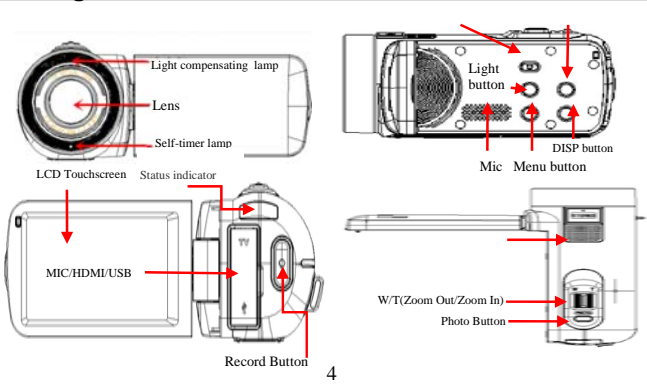




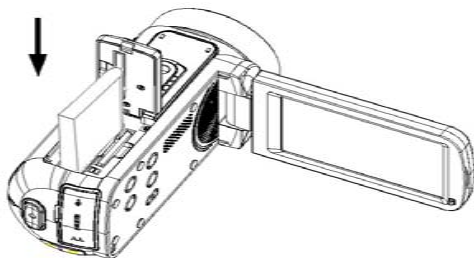
Preparing Your Camcorder for Use

Installing the Battery

Your DVR camcorder requires 1 pc Lithium battery;

1. Open the battery compartment on the side of the camera.
2. Insert the battery with the correct polarity as indicated.
3. Replace the battery compartment cover.
4. Press the power button to turn on the camera. The battery status icon will display at the right bottom corner of the LCD screen.

5.  Full battery charge  Medium-level battery charge  Low battery



Battery Status Indication

1. Connect the camera to the computer or charger with the USB cable to charge your camera. The charge indicator lights up, indicating that your camera is being charged. The indicator will turn off automatically after the charging is complete.


6

2. If the battery charge is low, a message "Low Battery" displays on the screen. A few seconds later, the camera will be powered off automatically.

Note:

- When the camera is powered off or the battery is removed, the photos and videos saved in the internal memory will be lost.
- It is recommended to export the photos and videos saved in the camera to the computer periodically.
- To extend the service life of the camera, if it will not be used for a long term, remove the battery from it.


• **Inserting SD Card**

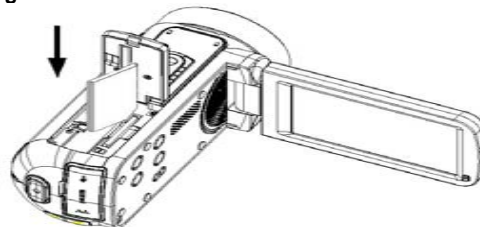

7

An SD card of up to 64G capacity (not supplied) shall be inserted into the camera to extend the memory, save more photos and videos and export them to your computer. The files saved in the SD card will not be lost when the camera has low power or the battery is removed.

1. Find SD card slot on the bottom of the camera.
2. Insert an SD card in the right direction as indicated.
3. Press the SD card until you hear a click. If the SD card is inserted properly, the edge of the SD card will align with that of the camera.

Note: When an SD card is properly inserted, an icon  will display on the LCD screen, indicating that the SD card is correctly installed and that all the photos and videos you take or shoot will be saved in the external SD card, rather than the internal memory.

- The camcorder supports a 64 GB SD card.
- Formatting the SD card will permanently delete all the data saved in the SD card, including those protected.
- Do not remove the SD card during formatting, or the SD card might be damaged and can never be used again.
- Be sure to format the card with the camcorder.

8

DVR Function Instructions

To turn on the high-definition digital camera, you need to unfold the LCD screen and then press the power button located on the inside of the DVR.

Power on

Press the power button or unfold the LCD screen to start the DVR.

The LCD screen will light up, indicating that the camera is ready for use.

Power off

Press the power button to turn off the DVR.


The DVR will turn off automatically if no operation is performed within 3 minute, 5 or 10 minutes.


If the battery charge is low, a message "Low Battery" displays on the screen. A few seconds later, the camera will be powered off automatically.

Capturing the Videos

9

Press the power button to turn on the camera. Then insert a 32 GB SD card for normal operation.

Then the icon  will display at the right upper corner of the LCD screen.

1. Press the Rec button to start shooting.
2. The  icon will display and start to flash, and the shooting time will display at the right upper corner of the LCD screen.
3. Press the Rec button again to stop shooting.
4. The recorded video will be saved as an MOV file.

Note:

1. During shooting, you can adjust the focal length of the camera to focus on the object you want to shoot.
2. You can check the MOV file in the Replay mode.
3. You can check the videos via video players on your computer after the files being exported.
4. Insert a 64GB SD card to ensure normal operation.
5. If the internal memory is full, a message "Memory is full" will display on the LCD screen when you attempt to shoot a video.

Insert an SD card with available spaces to shoot more videos.

10

Definition

In video mode, you can select the definition out of three options before capturing a video. The higher the definition, the better the video quality, though better-quality videos require larger memory.

1. Press the power button the turn on the camera.
2. Press the menu button or touch the MENU icon on the screen to access the menu.
3. Touch the screen definition icon.
4. Select the zoom in/out button or the corresponding icon on the screen to select a definition: 1920 x 1080 (FHD/30fps), 1280 x 720 (HD/30fps), and 640x480 (VGA/30fps).

Note: The selected definition icon will display at the right upper corner of the LCD screen.

White Balance

This function is used to adjust the color of the video based on the light.

1. Press the menu button or touch the MENU icon on the screen to access the menu.
2. Touch the screen and select the white balance icon.
3. Touch the screen and select **auto, daylight, cloudy, fluorescent or tungsten**.

Color

1. Press the menu button or touch the MENU icon on the screen to access the menu.
2. Touch the screen and select the color icon.
3. Touch the screen and select standard, brown, black-and-white or real.

11

Exposure 1. Press the menu button or touch the MENU icon on the screen to access the menu. 2. Touch the screen and select the exposure icon. 3. Touch the screen and select an exposure compensation value (from +3 to -3) from the displayed menu.	
Metering 1. Press the menu button or touch the MENU icon on the screen to access the menu. 2. Touch the screen and select the metering mode icon. 3. Touch the screen and select center weighted average, AIAE (average exposure) or automatic spot exposure.	

Taking Photos Turn on the camera and insert a 64 GB SD card to ensure normal operation. Capture the image on the LCD screen to structure your target. 1. Hold the camera firmly and press the shutter button near the zoom in/out buttons on the top of the camera. 2. The photo you take is now saved to the memory. 3. The number of photos of the selected definition you can take will display at the left upper corner of the LCD screen.	
--	--

12

White Balance This function is used to adjust the color of the video based on the light.	
--	--

- | | |
|--|--|
| 1. Press the menu button or touch the MENU icon on the screen to access the menu.
2. Touch the screen and select the white balance icon.
3. Touch the screen and select
auto, daylight, cloudy, fluorescent or tungsten. | |
|--|--|

Color 1. Press the menu button or touch the MENU icon on the screen to access the menu. 2. Touch the screen and select the color icon. 3. Touch the screen and select standard, brown, black-and-white or real.	
---	--

Exposure 1. Press the menu button or touch the MENU icon on the screen to access the menu. 2. Touch the screen and select the exposure icon. 3. Touch the screen and select an exposure compensation value (from +3 to -3) from the displayed menu.	
---	--

ISO	
------------	--

15

- | | |
|---|--|
| 4. The number decreases as you take photos.
5. If the internal memory is full, a message "Memory is full" will display on the LCD screen when you attempt to take a photo. Export the photos to your computer or delete them to take more photos.
6. The total number of photos you can take depends not only on the capacity of the installed SD card but also on the selected definition. The higher the definition, the better the photo quality, though better-quality photos require larger memory.
You can set the following parameters to capture photos of better quality. | |
|---|--|



Definition The size and quality settings of the photo decide the memory a photo requires and the total number of photos you can take. The better the quality, the larger memory it will need. The size and quality of a photo also affects the maximum size of the printed photo.	
---	--

Setting the Definition 1. Press the menu button or touch the MENU icon on the screen to access the menu. 2. Touch the screen and select the definition icon. 5600 x 4200 (24M), 5200 x3900(20M),4640 x 3480 (16M), 4000 x 3000 (12M), 3648 x 2736 (10M), 3648 x 2048 (7MHD), 2592 x 1944 (5M), 2048 x 1536 (3M), 1920 x 1080 (2MHD) and 640 x 480 (VGA) Note: The selected definition icon will display at the left upper corner of the LCD screen.	
--	--

13

- | | |
|--|--|
| 1.Press the menu key or click the MENU icon on LCD Touchscreen.
2.Click the ISO on LCD Touchscreen.
3.Click on the icon on LCD Touchscreen directly to choose the best option from the menu that appears:Auto/100/200/400. | |
|--|--|

Note: the corresponding ISO icon will appear at the bottom of the LCD Touchscreen.

Replay Mode 1. Press the mode button to access the menu. 2. Touch the screen and select replay mode  and the  icon will display at the left upper corner of the LCD screen. You can replay the photos, audio files or videos on your camera. 3. Swipe the screen or press the zoom in/out buttons to turn to the previous or next file. In replay mode, you can delete, rotate or protect your photos, and delete and protect the videos.	
---	--

Note: If no media file is saved in the memory, a message "No file" will display on the LCD screen.

Deleting You can delete unwanted photos to spare the memory. You can delete a photo at a time or all the unprotected photos saved on the SD card at once.	
---	--

16



Self-Timer You can set this function to prolong the time difference between pressing the shutter and actually taking the photo, so that you will have enough time to make movements and take photos of yourself.	
--	--

- | | |
|---|--|
| 1. Press the menu button or touch the MENU icon on the screen to access the menu.
2. Touch the screen and select the self-timer icon.
3. Touch the screen and select off, 2 seconds, 5 seconds or 10 seconds. | |
|---|--|


The camera will start to count down after you press the shutter button for 2, 5 or 10 seconds until it takes and saves the photo.

Note: Note: The corresponding self-timer icon will display at the left bottom corner of the LCD screen.

Multi-Snapshots 1. Press the menu button or click the MENU icon on LCD Touchscreen 2. Click the Multi-Snapshots ICON on LCD Touchscreen 3. Click on the LCD Touchscreen to choose :On/Off.	
--	--

Note: The icon  change for ,it will appear at the top left corner of the LCD screen if you select "On".

14

- | | |
|---|--|
| 1. In replay mode, press the menu button or touch the MENU icon on the screen.
2. Touch the screen and select the delete icon  .
3. Touch the screen and select this photo (the currently selected) or all (all the unprotected).
4. Then a confirmation message "Delete this photo?" will display on the screen. Select "Yes" to delete the file or select "No" to cancel. | |
|---|--|



Protecting You can set this function to protect your photos from being deleted by mis-operation.	
--	--

- | | |
|---|--|
| 1. In replay mode, press the menu button or touch the MENU icon on the screen.
2. Touch the screen and select the protect icon.
3. Touch the screen and select protect the current, unprotect the current, protect all or unprotect all.
Note: If protect the current is selected, the lock icon will display on the LCD screen above the currently selected photo. Select unprotect the current to unprotect this file as described in Step 3. | |
|---|--|

MOV File Operations You can replay the MOV files saved on your camera.	
--	--

- | | |
|---|--|
| 1. Switch to replay mode.
2. Swipe the screen or press the zoom in/out buttons to select the MOV file you want | |
|---|--|

17


- to play.
3. Touch the screen to  play the file.
 4. Touch the screen again to  pause the replay.
 5. Press the shutter button to stop the replay.

Settings

In this mode, you can set the language, TV mode , , mute, auto power off, frequency, , time ,formatting and default settings.

Language

The camera supports 13 languages, including English, German, French, Spanish, Italian, Turkish, Russian, Portuguese, Dutch, Simplified Chinese, Traditional Chinese, Japanese and Polish.

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon. 
3. Touch the screen and select language.
4. Touch the screen and select English, Spanish, French,....

TV Mode

When the camera is connected to a TV using the supplied TV connection cable, the images captured on the LCD screen of the camera will also display on the TV.

1. Press the mode button to access the menu.

18

4. Touch the corresponding icon on the screen and use the up and down arrows to set the date and time.

Note: If on is selected, the date and time will display on the photo. If off is selected, they will not display.

Formatting


You can use this function to delete all the files saved in the internal memory or the external SD card.

Note: Make sure all the files have been exported to your computer before formatting. The files will be deleted permanently and the process is irreversible.


1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon.
3. Touch the screen and select formatting.
4. Touch the screen and select yes or no.

Default Settings

If your camera is in abnormal mode, you can set this function to restore all the settings to the factory default.

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon. 
3. Touch the screen and select default settings.

21

2. Touch the screen and select the settings icon.
3. Touch the screen and select TV mode .
4. Touch the screen and select PAL or NTSC mode based on the setting of your TV.
5. Connect the camera to the TV using the supplied TV connection cable.

Note: When the camera is connected to the TV, the images will not display on the LCD screen of the camera.

Mute

The camera beeps or gives other sounds as you press any buttons. The sound is on by default, and you can use this function to turn it off.

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon.
3. Touch the screen and select mute.
4. Touch the screen and select on or off.

Auto Power Off

You can set the auto power off time to save battery charges. After setting, the camera will turn off automatically if no operation is performed at the set time.



19


4. Touch the screen and select yes or no.

Slide Show

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon
3. Touch the screen MENU icon and select setting slides playing time 2 s/5 s/10 s.

WIFI

1. Press the mode button to access the menu.
 2. Touch the screen and select the settings icon .
 3. Enter the WIFI password and Name will be shown
- Touch the screen of your phone and select the settings icon  press WIFI Button

3. Turn on the phone and Click the icon  to search of your camcorder.
- After Input Password and connection mode is completed, Back to the main interface can be Real-time preview picture..


22

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon.
3. Touch the screen and select auto power off.
4. Touch the screen and select off, 1 minute, 3 minutes or 5 minutes.

Note: If off is selected, the camera will not power off automatically unless the battery is out of power.
If the camera is kept on for an extended period, the battery will run out.

Frequency

Generally, 60HZ is for the U.S.A and other countries around, while 50 HZ is for European countries and Japan and so on. The default is 50HZ.

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon.
3. Touch the screen and select frequency .
4. Touch the screen and select 50 HZ or 60 HZ.

Time

This function is used to set the correct date and time.

1. Press the mode button to access the menu.
2. Touch the screen and select the settings icon.
3. Touch the screen and select setting date.


20

APP Operation Instructions

1. Please download and install APP" LzxViewer" in your telephone, from BIDU,91 and HiMarker if you are a phone user with an Android system.


download and install APP" LzxViewer" from App store ,if you are a phone user with Apple system.

2. The camera wireless on, Username and password displayed on the LCD screen.

3. Turn on the phone and Click the icon  to search of your camcorder.


Input Password(Username and password show on the screen) connection mode is completed.

23

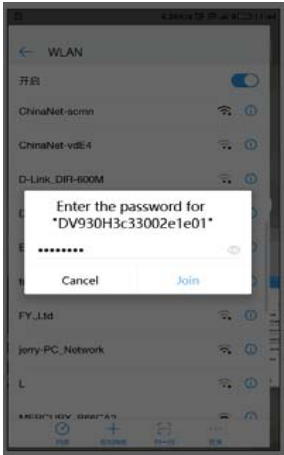


24

4.Open the application of LzxViewer and connection mode is completed.,
You can back to the main interface can be Real-time preview picture

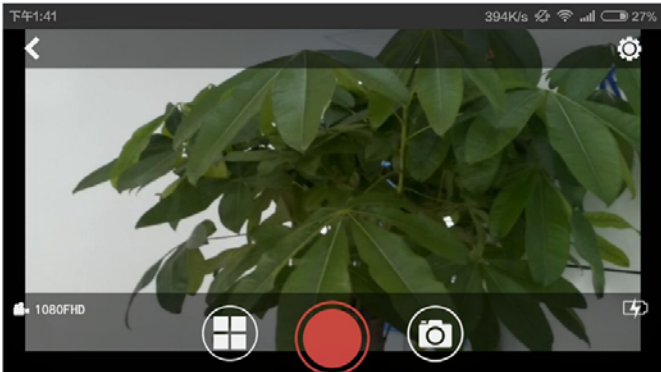

25

6.Through the three ICONS at the bottom of the mode switch: Playback, Record, Photo

7.Click the top-right corner of setting icon  to Parameter setting for camcorder: Video definition, Image definition, Exposure, Memory card capacity,Formatting, Change the password /username, reset all settings....

Technical Parameters

Imaging sensor	8 mega-pixel CMOS sensor
Image definition	5600 x 4200 (24M), 5200x3900(20M),4640x3480(16M), 4000 x 3000 (12M), 3648 x 2736 (10M), 3648 x 2048 (7MHD), 2592 x 1944 (5M), 2048 x 1536 (3M), 1920 x 1080 (2MHD) and 640 x 480 (VGA)
Video definition	1920 x 1080 (FHD 30fsp)

26

	1280 x 720 (HD 60fsp) 1280 x 720 (HD 30fsp) 640 x 480 (VGA 30fsp)
LCD screen	3.0" touchscreen, LCD
Internal memory	128MB DDR3 (Buffer memory)
External storage	Supports 64GB SD card (Grade 6 or above strongly recommended)
HDMI output	Yes
Lens	f=3.8mm , FNo.2.6
Digital zoom	16X
Self-Timer	2 s/5 s/10 s
File formats	JPEG (Still image)/MOV (Video)
Lightcompensating lamp	LED
Exposure	EV-3.0 ~ EV+3.0
感光度	Auto,100,200,400
White Balance	Auto/Daylight/Sunlight/Cloudy/Fluorescent/Tungsten

27

Image Stabilizer	Yes
Burst shooting	Yes
Hot Shoe	Yes
Microphone	Yes
Speaker	Yes
Remote control	Yes
Interface	USB 2.0
System requirements	Windows XP/Windows Vista/Windows 7/Windows 8
Battery	Li-ion (3.7V)
Working Temperature	0 - 40 °C (32°F - 104°F)

Troubleshooting

Related parts	Description	Cause and corrective actions
---------------	-------------	------------------------------

28

Shooting videos/taking photos	Failed to shoot videos or take photos after the shutter button is pressed	The battery power is low. Please charge the battery. The camera is not in the video/photo mode. Set the camera to the correct mode. The camera is powered off. Please restart your camera. The SD card is out of memory. Please delete unwanted files or replace it with another SD card.
Power off	The camera turns off automatically.	The battery is depleted.
Battery pack	The battery pack has low power.	The temperature is low. The battery pack is depleted. Please charge the battery pack.
Camera & battery	The camera or battery is overheat.	The camera has run for too long.
Photos	The photos are blur.	The exposure is insufficient.
Deleting	File cannot be deleted.	The file is protected.
SD card	The SD card cannot be inserted.	The direction might be wrong.
Export	The photo or video cannot be exported to a computer.	The setting is improper. Refer to "How to enter computer mode". The correct driver has not been installed on the computer. Install the drive before exporting files.

29

Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference,
and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .
This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.