

1. External Photograph of EUT

Brand Name: Zebra / Model Name: TC520K




Brand Name: Zebra / Model Name: TC520K



Brand Name: Zebra / Model Name: TC520K



Brand Name: Zebra / Model Name: TC520K

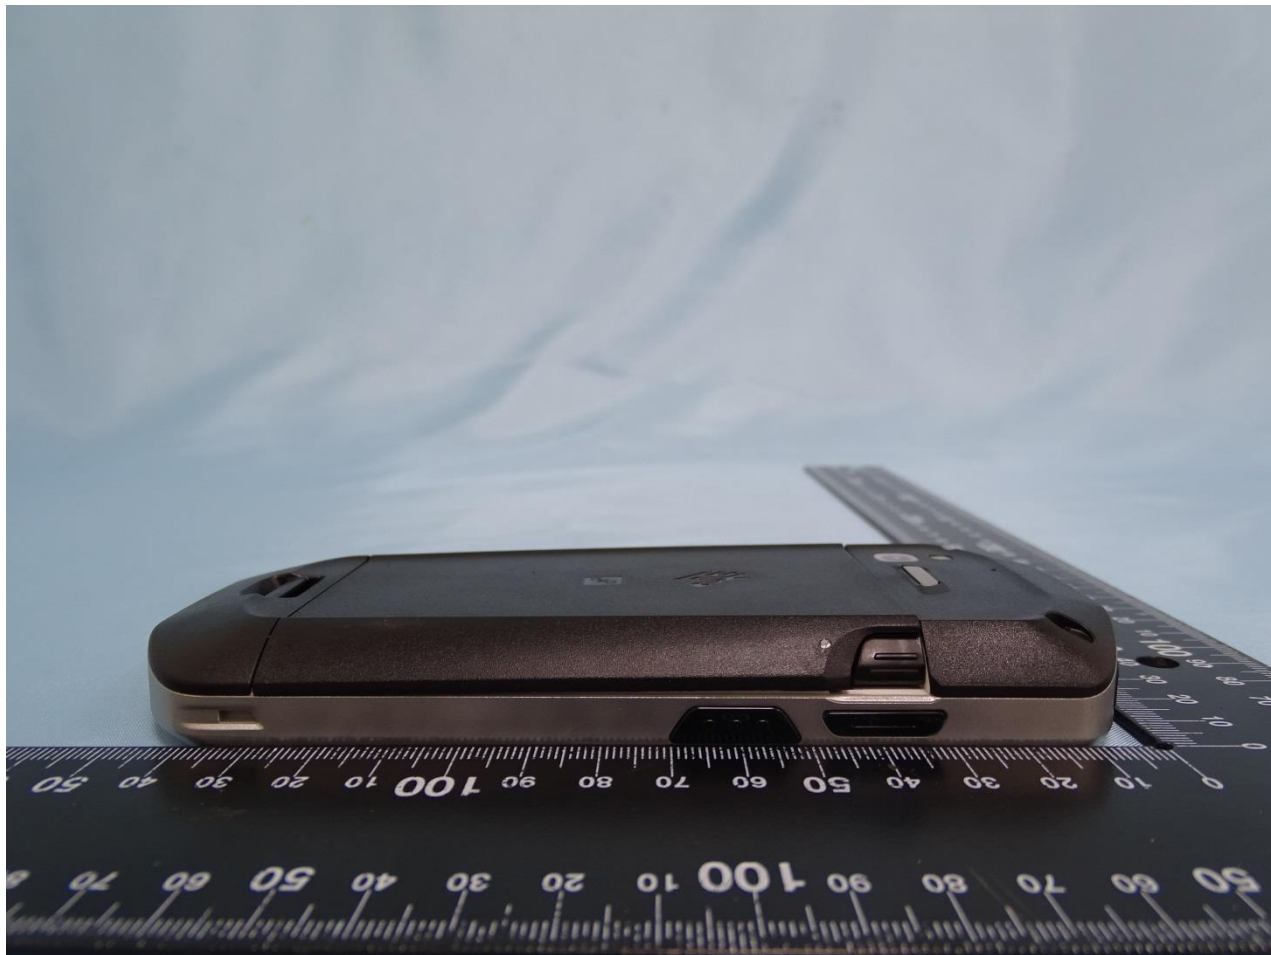

Brand Name: Zebra / Model Name: TC520K



Brand Name: Zebra / Model Name: TC520K



2. Photograph of Accessory

Brand Name: Zebra / Model Name: TC520K

Specification of Accessory		
Adapter	Brand Name	Zebra
	Part Number	PWR-WUA5V12W0US
Battery 1	Brand Name	Zebra
	Part Number	BT-000314-50
Battery 2	Brand Name	Zebra
	Part Number	BT-000314-01
USB cable	Brand Name	Zebra
	Part Number	CBL-TC51-USB1-01
Headset Jumper 1	Brand Name	Zebra
	Part Number	CBL-TC51-HDST25-01
Headset Jumper 2	Brand Name	Zebra
	Part Number	CBL-TC51-HDST35-01
2.5mm Earphone	Brand Name	Zebra
	Part Number	HDST-25MM-PTVP-01
3.5mm Earphone	Brand Name	Zebra
	Part Number	HDST-35MM-PTVP-01
Exoskeleton	Brand Name	Zebra
	Part Number	SG-TC51-EX01-01
Trigger Handle	Brand Name	Zebra
	Part Number	TRG-TC51-SNP1-01
Soft Holster	Brand Name	Zebra
	Part Number	SG-TC51-HLSTR1-01
Hand strap	Brand Name	Zebra
	Part Number	SG-TC51-BHDSTP1-03
USB-C Adaptor	Brand Name	Zebra
	Part Number	ADPTR-TC56-USBC-01
USB Type C cable	Brand Name	Zebra
	Part Number	N/A


Remark: For accessories equipped with this EUT, please refer to the following photos.

Brand Name: Zebra / Model Name: TC520K



Brand Name: Zebra / Model Name: TC520K

Adapter

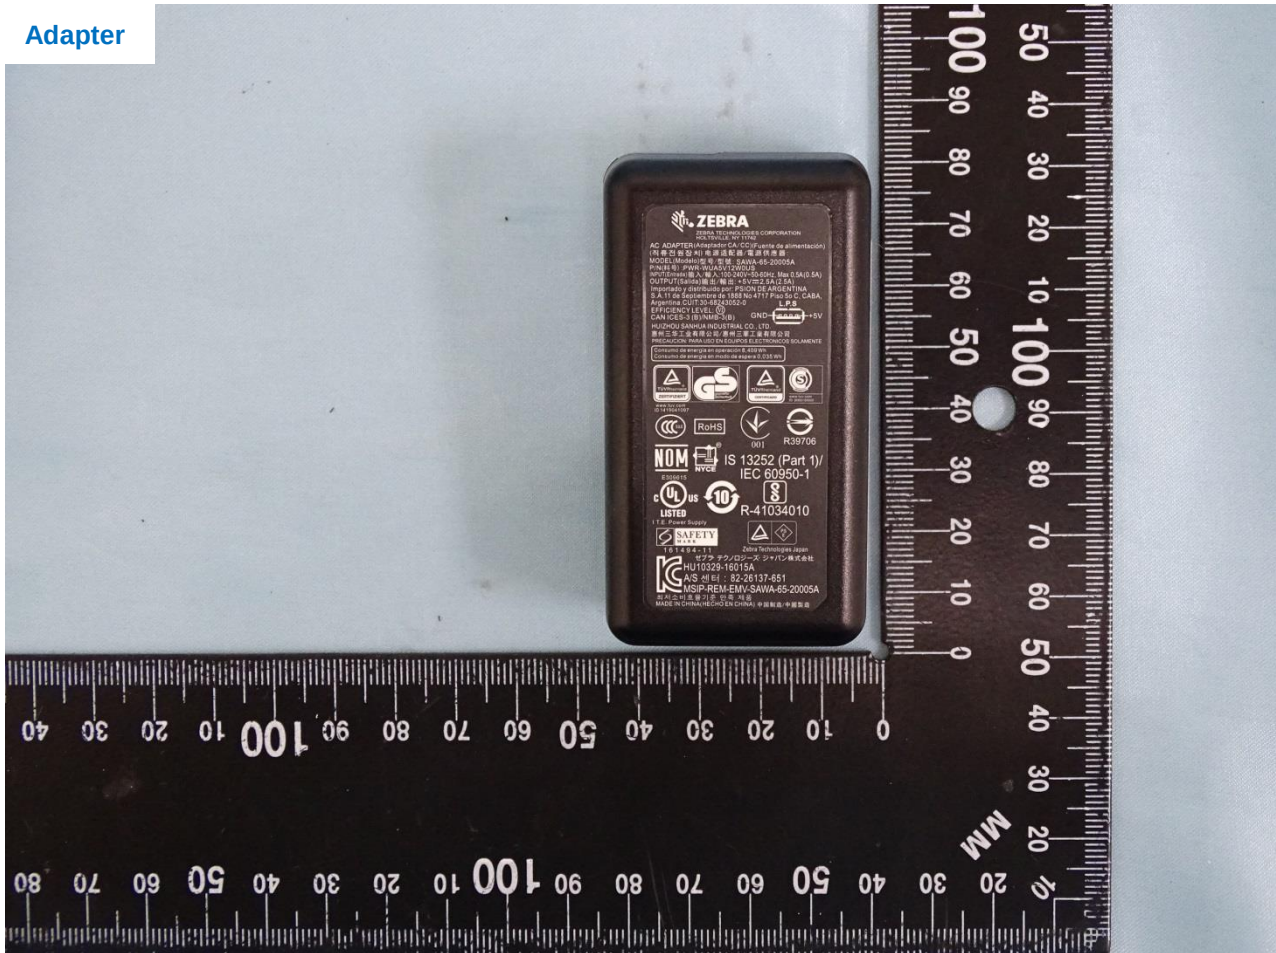

Brand Name: Zebra / Model Name: TC520K

Battery 1



Brand Name: Zebra / Model Name: TC520K

Battery 2



Brand Name: Zebra / Model Name: TC520K

USB-C Adaptor

