


System > Settings > Screen Calibration
Touch each crosshair to calibrate the screen.


DRAFT

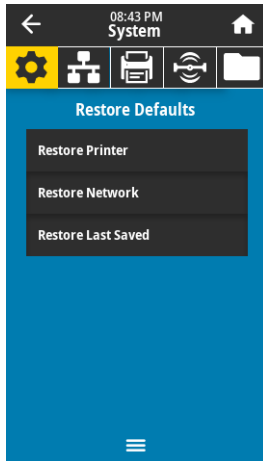

System > Settings > Restore Defaults

Restore specific printer, print server, and network settings back to the factory defaults. Use care when loading defaults because you will need to reload all settings that you changed manually. This menu item is available through two user menus with different default values for each.

<i>Accepted values:</i>	PRINTER—Restores all printer settings other than the network settings back to the factory defaults. Use care when loading defaults because you will need to reload all settings that you changed manually. NETWORK—Reinitializes the printer's wired or wireless print server. With a wireless print server, the printer also reassociates with your wireless network. LAST SAVED—Loads settings from the last permanent save.
<i>Related ZPL command(s):</i>	PRINTER—<code>^JUF</code> NETWORK—<code>^JUN</code> LAST SAVED—<code>^JUR</code>
<i>Control panel key(s):</i>	PRINTER—Hold FEED + PAUSE during printer power-up to reset the printer parameters to factory values. NETWORK—Hold CANCEL + PAUSE during printer power-up to reset the network parameters to factory values. LAST SAVED: N/A
<i>Printer web page:</i>	PRINTER—View and Modify Printer Settings > Restore Default Configuration NETWORK—Print Server Settings > Reset Print Server LAST SAVED—View and Modify Printer Settings > Restore Saved Configuration

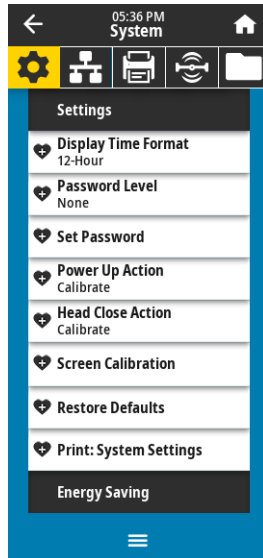


System > Settings > Print: System Settings

Prints a printer configuration label. The following is a sample label.

PRINTER CONFIGURATION	
Zebra Technologies ZTC ZT620R-203dpi ZPL 76J162700886	
+30.0.....	DARKNESS
6.0 IPS.....	PRINT SPEED
-007.....	TEAR OFF
TEAR OFF.....	PRINT MODE
CONTINUOUS.....	MEDIA TYPE
TRANSMISSIVE.....	SENSOR SELECT
DIRECT-THERMAL.....	PRINT METHOD
1344.....	PRINT WIDTH
2000.....	LABEL LENGTH
P1085892/00005 2.....	PRINT HEAD ID
15.0IN 380MM.....	MAXIMUM LENGTH
MAINT. OFF.....	EARLY WARNING
CONNECTED.....	USB COMM.
BIDIRECTIONAL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
9600.....	BAUD
8 BITS.....	DATA BITS
NONE.....	PARITY
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
NORMAL MODE.....	COMMUNICATIONS
<-> 7EH.....	CONTROL PREFIX
<-> 5EH.....	FORMAT PREFIX
<-> 2CH.....	DELIMITER CHAR
ZPL II.....	ZPL MODE
INACTIVE.....	COMMAND OVERRIDE
FEED.....	MEDIA POWER UP
LENGTH.....	HEAD CLOSE
DEFAULT.....	BACKFEED
+000.....	LABEL TOP
+0000.....	LEFT POSITION
OFF.....	APPLICATOR PORT
ENABLED.....	ERROR ON PAUSE
PULSE MODE.....	START PRINT SIG
DISABLED.....	REPRINT MODE
080.....	WEB SENSOR
090.....	MEDIA SENSOR
255.....	TAKE LABEL
027.....	MARK SENSOR
027.....	MARK MED SENSOR
000.....	TRANS GAIN
005.....	TRANS BASE
080.....	TRANS LED
002.....	MARK GAIN
100.....	MARK LED
OPCSWFM.....	MODES ENABLED
1344 8/MM FULL.....	MODES DISABLED
4.0.....	RESOLUTION
V80.20.03 <-.....	LINK-OS VERSION
6.6.0 22.89.....	FIRMWARE
32768K.....	XML SCHEMA
524288K.....	HARDWARE ID
NONE.....	RAM
MM/DD/YYYY 24HR.....	ONBOARD FLASH
05/11/17.....	FORMAT CONVERT
08:40.....	LED DISPLAY
ENABLED.....	RTC DATE
2.1.....	RTC TIME
READY.....	ZBI VERSION
TIME MICRO.....	ZBI STATUS
20.00.00.01.....	RFID READER
01.03.00.18.....	RFID HW VERSION
USA/CANADA.....	RFID FW VERSION
USA/CANADA.....	RFID REGION CODE
RFID OK.....	RFID COUNTRY CODE
16.....	RFID ERR STATUS
16.....	RFID READ PWR
0.....	RFID WRITE PWR
0.....	PROG. POSITION
NONE.....	RFID VALID CTR
570 LABELS.....	RFID VOID CTR
570 LABELS.....	ADAPTIVE ANTENNA
570 LABELS.....	RFID ANTENNA
2.798 IN.....	NONRESET CNTR
2.798 IN.....	RESET CNTR1
2.798 IN.....	RESET CNTR2
7.107 CM.....	NONRESET CNTR
7.107 CM.....	RESET CNTR1
7.107 CM.....	RESET CNTR2
001 WIRELESS.....	SLOT 1
*** EMPTY.....	SLOT 2
0.....	MASS STORAGE COUNT
0.....	HID COUNT
OFF.....	USB HOST LOCK OUT
FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

Related ZPL command(s):	~WC *
Control panel key(s):	Do one of the following:* - Hold CANCEL during printer power-up. (Formerly called a CANCEL self test. - Hold FEED + CANCEL for 2 seconds when the printer is in the Ready state.
Printer web page:	View and Modify Printer Settings > Print Listings on Label *

* Prints a printer configuration label and a network configuration label.

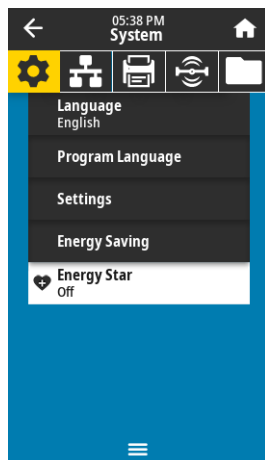


System > Energy Saving > Energy Star

When Energy Star mode is enabled, the printer goes into a “sleep” mode after a timeout period, thereby lowering power consumption. Press any button on the control panel to bring the printer back to an active state.

Accepted values:	- ON - OFF
SGD command used:	<code>power.energy_star.enable</code> <code>power.energy_star_timeout</code> (to set the amount of idle time before Energy Star is invoked)

Connection Menu

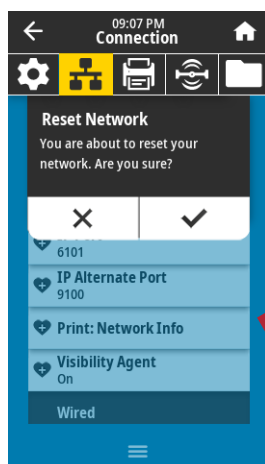


Connection > Networks > Reset Network

This option resets the wired or wireless print server and saves any changes that you made to any network settings.



Important • You must reset the print server to allow changes to the network settings to take effect.


Related ZPL command(s):	<code>~WR</code>
SGD command used:	<code>device.reset</code>
Printer web page:	Print Server Settings > Reset Print Server

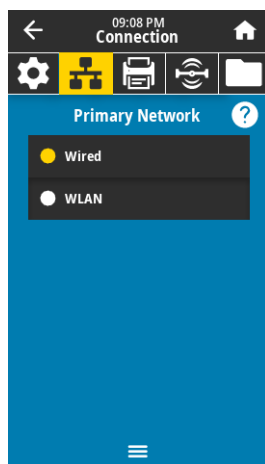

Connection > Networks > Primary Network

View or modify whether the wired or wireless print server is considered primary. You may select which one is primary.


Accepted values:	- Wired - WLAN
Related ZPL command(s):	<code>^NC</code>
SGD command used:	<code>ip.primary_network</code>

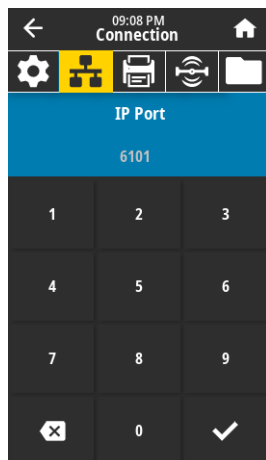

Connection > Networks > IP Port

This printer setting refers to the internal wired print servers port number that the TCP print service is listening on. Normal TCP communications from the host should be directed to this port.

<i>SGD command used:</i>	<code>internal_wired.ip.port</code> <code>wlan.ip.port</code>
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings

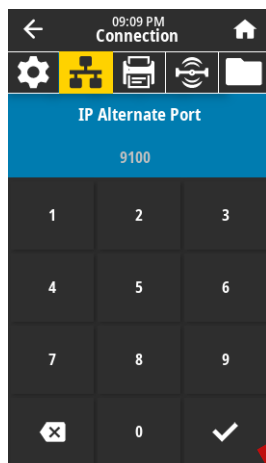


Connection > Networks > IP Alternate Port

This command sets the port number of the alternate TCP port.



Note • Print servers supporting this command will monitor both the primary port and the alternate port for connections at the same time.

<i>SGD command used:</i>	<code>internal_wired.ip.port_alternate</code> <code>wlan.ip.port_alternate</code>
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings

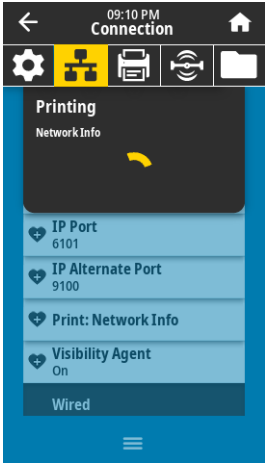


Connection > Networks > Print: Network Info

Prints the settings for any print server or Bluetooth device that is installed. The following is a sample label.

Network Configuration	
Zebra Technologies ZTC ZT620R-203dpi ZPL 76J162700886	
Wired.....	PRIMARY NETWORK
PrintServer.....	LOAD LAN FRONT
INTERNAL WIRED.....	ACTIVE PRINTSRVR
Wired*	
ALL.....	IP PROTOCOL
192.168.000.017.....	IP ADDRESS
255.255.255.000.....	SUBNET
192.168.000.254.....	GATEWAY
000.000.000.000.....	WINS SERVER IP
YES.....	TIMEOUT CHECKING
300.....	TIMEOUT VALUE
000.....	ARP INTERVAL
9100.....	BASE RAW PORT
9200.....	JSON CONFIG PORT
Wireless	
ALL.....	IP PROTOCOL
000.000.000.000.....	IP ADDRESS
255.255.255.000.....	SUBNET
000.000.000.000.....	GATEWAY
000.000.000.000.....	WINS SERVER IP
YES.....	TIMEOUT CHECKING
300.....	TIMEOUT VALUE
000.....	ARP INTERVAL
9100.....	BASE RAW PORT
9200.....	JSON CONFIG PORT
INSERTED.....	CARD INSERTED
02d4H.....	CARD MFG ID
9134H.....	CARD PRODUCT ID
ac:3f:a4:82:05:9c.....	MAC ADDRESS
YES.....	DRIVER INSTALLED
INFRASTRUCTURE.....	OPERATING MODE
125.....	ESSID
1.0.....	CURRENT TX RATE
OPEN.....	WEP TYPE
WPA PSK.....	WLAN SECURITY
1.....	WEP INDEX
000.....	POOR SIGNAL
LONG.....	PREAMBLE
NO.....	ASSOCIATED
ON.....	PULSE ENABLED
15.....	PULSE RATE
OFF.....	INTX MODE
USA/CANADA.....	REGION CODE
USA/CANADA.....	COUNTRY CODE
0x7FF.....	CHANNEL MASK
Bluetooth	
4.3.1b1.....	FIRMWARE
02/13/2015.....	DATE
on.....	DISCOVERABLE
3.0/4.0.....	RADIO VERSION
on.....	ENABLED
ac:3f:a4:82:05:9c.....	MAC ADDRESS
76J162700886.....	FRIENDLY NAME
no.....	CONNECTED
1.....	MIN SECURITY MODE
no.....	CONN SECURITY MODE
supported.....	IOS
FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

Related ZPL command(s):	~WL
Control panel key(s):	Do one of the following:* • Hold CANCEL during printer power-up. (Formerly called a CANCEL self test. • Hold FEED + CANCEL for 2 seconds when the printer is in the Ready state.
Printer web page:	View and Modify Printer Settings > Print Listings on Label *

* Prints a printer configuration label and a network configuration label.

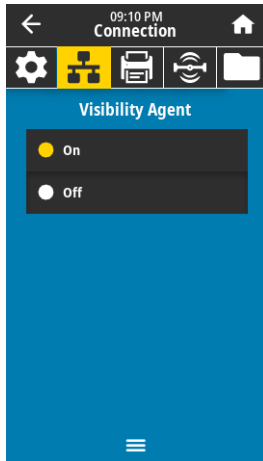


Connection > Networks > Visibility Agent

When the printer is connected to a wired or wireless network, it will attempt to connect to Zebra's Asset Visibility Service via the Cloud-based Zebra Printer Connector using an encrypted, certificate-authenticated web socket connection. The printer sends Discovery Data and Settings and Alerts Data. Data printed via any label formats is NOT transmitted.

To opt out of this feature, disable this setting. For more information, see the "Opting Out of the Asset Visibility Agent" application note at <http://www.zebra.com>.

Accepted values:	- ON - OFF
SGD command used:	<code>weblink.zebra_connector.enable</code>
Printer web page:	View and Modify Printer Settings > Network Configuration > Cloud Connect Settings

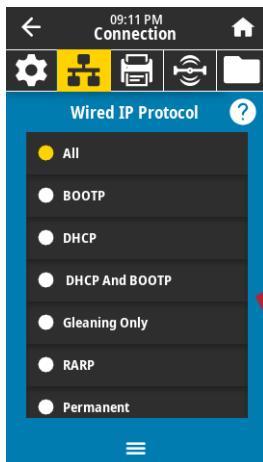

Connection > Wired > Wired IP Protocol

This parameter indicates if the user (permanent) or the server (dynamic) selects the wired print server's IP address. When a dynamic option is chosen, this parameter tells the method(s) by which this print server receives the IP address from the server.



Important • You must reset the print server to allow changes to the network settings to take effect. See [Connection > Networks > Reset Network](#) on page 64.

Accepted values:	- ALL - GLEANING ONLY - RARP - BOOTP - DHCP - DHCP & BOOTP - PERMANENT
Related ZPL command(s):	<code>^ND</code>
SGD command used:	<code>internal_wired.ip.protocol</code>
Printer web page:	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings




Connection > Wired > Wired IP Address

View and, if necessary, change the printer's wired IP address.

To save changes to this setting, set [Connection > Wired > Wired IP Protocol](#) on page 67 to PERMANENT, and then reset the print server (see [Connection > Networks > Reset Network](#) on page 64).

<i>Accepted values:</i>	000 to 255 for each field
<i>Related ZPL command(s):</i>	^ND
<i>SGD command used:</i>	internal_wired.ip.addr
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings

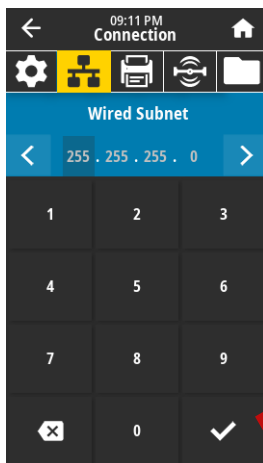


Connection > Wired > Wired Subnet

View and, if necessary, change the wired subnet mask.

To save changes to this setting, set [Connection > Wired > Wired IP Protocol](#) on page 67 to PERMANENT, and then reset the print server (see [Connection > Networks > Reset Network](#) on page 64).

<i>Accepted values:</i>	000 to 255 for each field
<i>Related ZPL command(s):</i>	^ND
<i>SGD command used:</i>	internal_wired.ip.netmask
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings

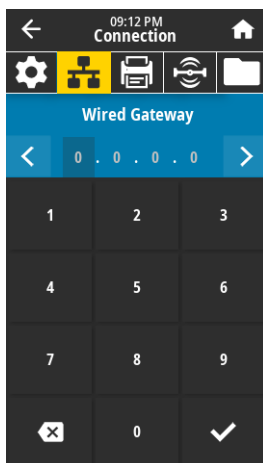


Connection > Wired > Wired Gateway

View and, if necessary, change the default wired gateway.

To save changes to this setting, set [Connection > Wired > Wired IP Protocol](#) on page 67 to PERMANENT, and then reset the print server (see [Connection > Networks > Reset Network](#) on page 64).


<i>Accepted values:</i>	000 to 255 for each field
<i>Related ZPL command(s):</i>	^ND
<i>SGD command used:</i>	internal_wired.ip.gateway
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings

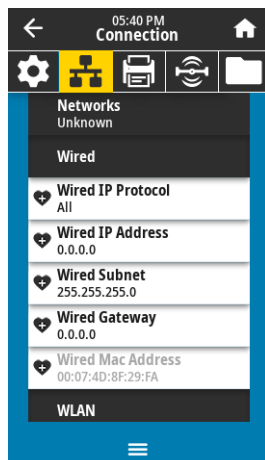

Connection > Wired > Wired Mac Address

View the Media Access Control (MAC) address of the wired print server. This value cannot be modified.

<i>SGD command used:</i>	<code>internal_wired.mac_addr</code>
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > TCP/IP Settings

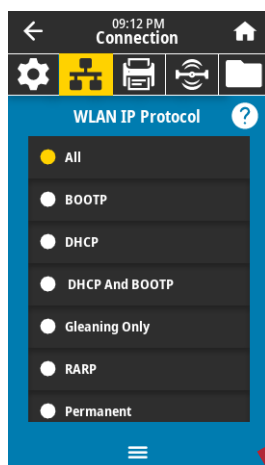


Connection > WLAN > WLAN IP Protocol

This parameter indicates if the user (permanent) or the server (dynamic) selects the wireless print server's IP address. When a dynamic option is chosen, this parameter tells the method(s) by which this print server receives the IP address from the server.



Important • You must reset the print server to allow changes to the network settings to take effect. See [Connection > Networks > Reset Network](#) on page 64.

<i>Accepted values:</i>	• ALL • GLEANING ONLY • RARP • BOOTP • DHCP • DHCP & BOOTP • PERMANENT
<i>Related ZPL command(s):</i>	<code>^ND</code>
<i>SGD command used:</i>	<code>wlan.ip.protocol</code>
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

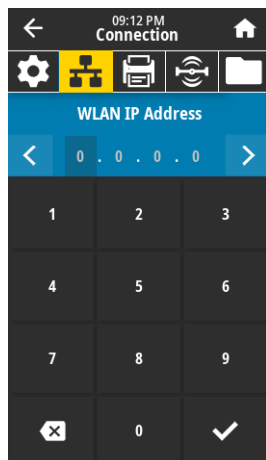


Connection > WLAN > WLAN IP Address

View and, if necessary, change the printer's wireless IP address.

To save changes to this setting, set [Connection > WLAN > WLAN IP Protocol](#) on page 69 to PERMANENT, and then reset the print server (see [Connection > Networks > Reset Network](#) on page 64).

<i>Accepted values:</i>	000 to 255 for each field
<i>Related ZPL command(s):</i>	^ND
<i>SGD command used:</i>	ip.addr, wlan.ip.addr
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

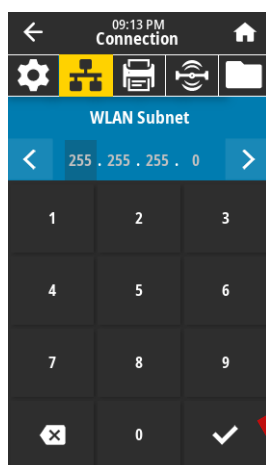


Connection > WLAN > WLAN Subnet

View and, if necessary, change the wireless subnet mask.

To save changes to this setting, set [Connection > WLAN > WLAN IP Protocol](#) on page 69 to PERMANENT, and then reset the print server (see [Connection > Networks > Reset Network](#) on page 64).

<i>Accepted values:</i>	000 to 255 for each field
<i>Related ZPL command(s):</i>	^ND
<i>SGD command used:</i>	wlan.ip.netmask
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

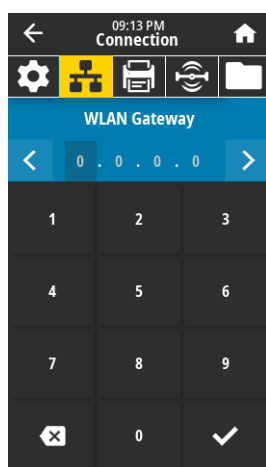


Connection > WLAN > WLAN Gateway

View and, if necessary, change the default wireless gateway.

To save changes to this setting, set [Connection > WLAN > WLAN IP Protocol](#) on page 69 to PERMANENT, and then reset the print server (see [Connection > Networks > Reset Network](#) on page 64).


<i>Accepted values:</i>	000 to 255 for each field
<i>Related ZPL command(s):</i>	^ND
<i>SGD command used:</i>	wlan.ip.gateway
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

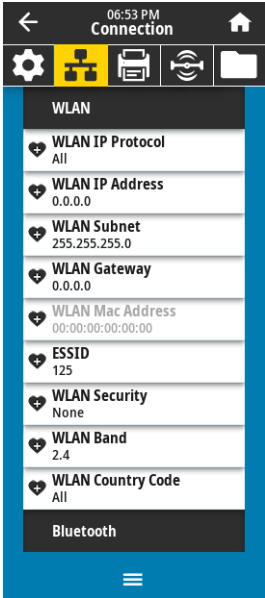

Connection > WLAN > WLAN Mac Address

View the Media Access Control (MAC) address of the wireless print server. This value cannot be modified.


SGD command used:	wlan.mac_addr
Printer web page:	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

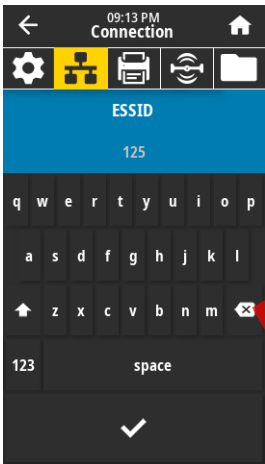

Connection > WLAN > ESSID

The Extended Service Set Identification (ESSID) is an identifier for your wireless network. This setting, which cannot be modified from the control panel, gives the ESSID for the current wireless configuration.


Accepted values:	32-character alphanumeric string (default 125)
SGD command used:	wlan.essid
Printer web page:	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

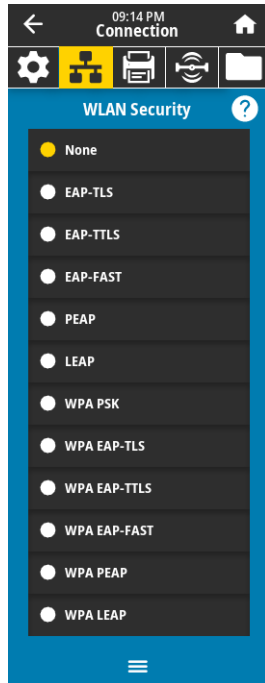

Connection > WLAN > WLAN Security


Select the security type being used on your WLAN.

<i>Related ZPL command(s):</i>	<code>^WX</code>
<i>SGD command used:</i>	<code>wlan.security</code>
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > Wireless Encryption Setup

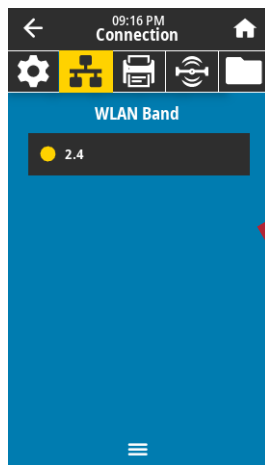

Connection > WLAN > WLAN Band ???

<i>Accepted values:</i>	???
<i>SGD command used:</i>	???
<i>Printer web page:</i>	View and Modify Printer Settings > Network Communications Setup > Wireless Setup

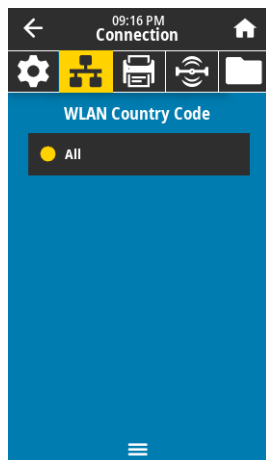

Connection > WLAN > WLAN Country Code


The country code defines the regulatory country for which the wireless radio is currently configured.



Important • The list of country codes is specific to each printer and depends on the printer model and its wireless radio configuration. The list is subject to change, addition, or deletion with any firmware update, at any time, without notice.

To determine the country codes available on your printer, issue the `! U1 getvar "wlan"` command to return all commands related to WLAN settings. Locate the `wlan.country.code` command in the results and view the country codes available for your printer.

SGD command used:	<code>wlan.country_code</code>
-------------------	--------------------------------

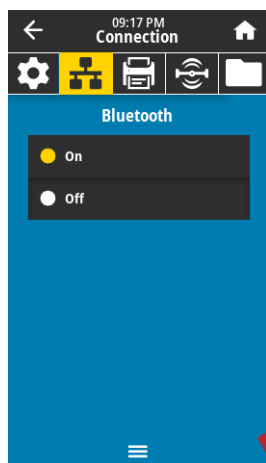


Connection > Bluetooth > Bluetooth

Select if the printer is "Discoverable" for Bluetooth device pairing.

Accepted values:	ON—Enables the Bluetooth radio. OFF—Disables the Bluetooth radio.
------------------	--

SGD command used:	<code>bluetooth.enable</code>
-------------------	-------------------------------

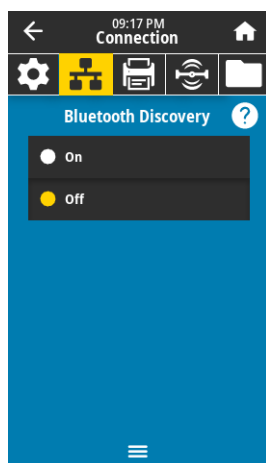


Connection > Bluetooth > Bluetooth Discovery

Select if the printer is "Discoverable" for Bluetooth device pairing.

Accepted values:	ON—Enables Bluetooth discoverable mode. OFF—Disables Bluetooth discoverable mode.
------------------	--

SGD command used:	<code>bluetooth.discoverable</code>
-------------------	-------------------------------------

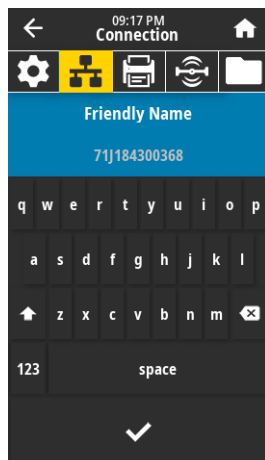


Connection > Bluetooth > Friendly Name

This command sets the friendly name, which is used during service discovery. For changes to take effect, you must power cycle the printer or issue the `device.reset` command (see [Connection > Networks > Reset Network](#) on page 64).

If you do not set a friendly name, it will default to the printer serial number.


Accepted values:	17-character text string
SGD command used:	<code>bluetooth.friendly_name</code>

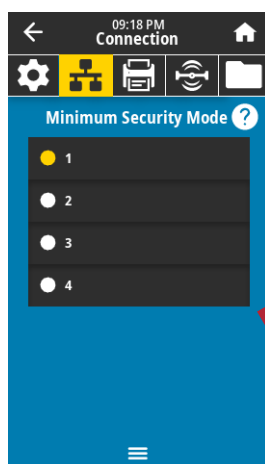

Connection > Bluetooth > Minimum Security Mode

This printer setting parameter sets the Bluetooth Minimum Security mode. Minimum Security Mode provides for different levels of security, depending on the printer radio version and printer firmware. See the *Zebra Programming Guide* at <http://www.zebra.com/manuals> for more information.


Accepted values:	1, 2, 3, 4
SGD command used:	<code>bluetooth.minimum_security_mode</code>

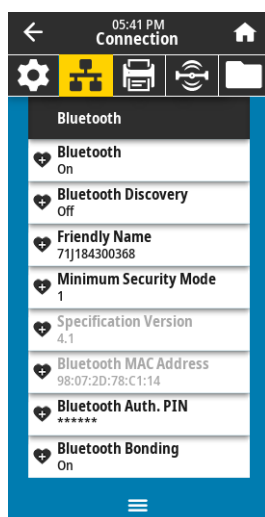

Connection > Bluetooth > Specification Version

This parameter displays the Bluetooth library version number.


SGD command used:	<code>bluetooth.version</code>
-------------------	--------------------------------

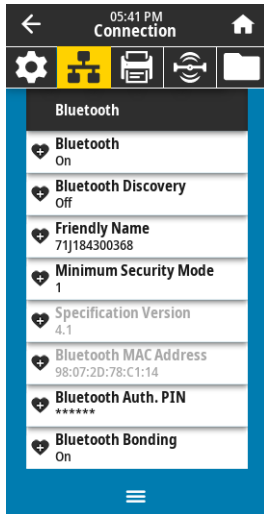

Connection > Bluetooth > MAC Address

This parameter displays the Bluetooth device address.


<i>SGD command used:</i>	<code>bluetooth.address</code>
--------------------------	--------------------------------

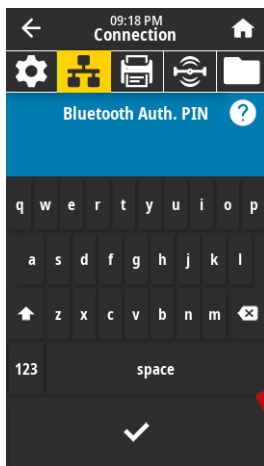

Connection > Bluetooth > Bluetooth Auth. PIN

Set the PIN used when Bluetooth authentication is enabled.

<i>SGD command used:</i>	<code>bluetooth.bluetooth_pin</code> (to set the PIN) <code>bluetooth.authentication</code> (to enable authentication)
--------------------------	---

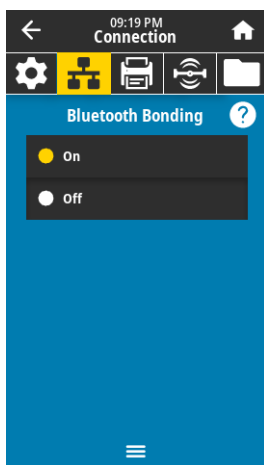


Connection > Bluetooth > Bluetooth Bonding

???

<i>Accepted values:</i>	ON—Enables Bluetooth bonding. OFF—Disables Bluetooth bonding.
<i>SGD command used:</i>	<code>bluetooth.???</code>


Print Menu

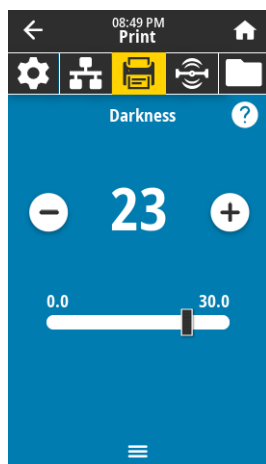

Print > Print Quality > Darkness

Set the print darkness to the lowest setting that provides good print quality. If you set the darkness too high, the label image may print unclearly, barcodes may not scan correctly, the ribbon may burn through, or the printhead may wear prematurely.


<i>Accepted values:</i>	0.0 to 30.0
<i>Related ZPL command(s):</i>	^MD, ~SD
<i>SGD command used:</i>	print.tone
<i>Printer web page:</i>	View and Modify Printer Settings > General Setup > Darkness

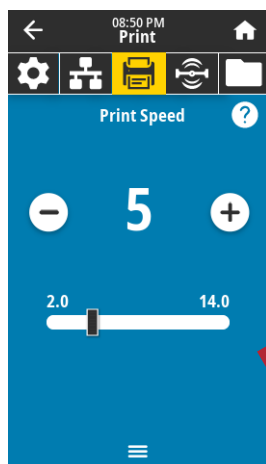

Print > Print Quality > Print Speed

Select the speed, in inches per second (ips), for printing a label. Slower print speeds typically yield better print quality.


<i>Accepted values:</i>	ZT610 203 dpi = 2 to 14 ips ZT610 300 dpi = 2 to 12 ips ZT610 600 dpi = 1 to 6 ips ZT620 203 dpi = 2 to 12 ips ZT620 300 dpi = 2 to 8 ips
<i>Related ZPL command(s):</i>	^PR
<i>SGD command used:</i>	media.speed
<i>Printer web page:</i>	View and Modify Printer Settings > General Setup > Print Speed

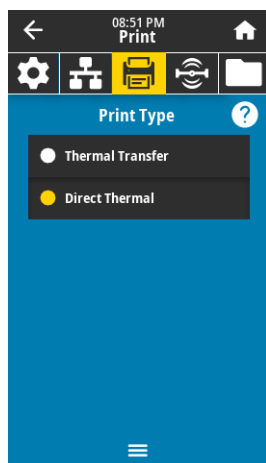

Print > Print Quality > Print Type

Specify if the printer needs to use ribbon for printing.


<i>Accepted values:</i>	THERMAL TRANS—Uses ribbon and thermal transfer media. DIRECT THERMAL—Uses direct thermal media and no ribbon.
<i>Related ZPL command(s):</i>	^MT
<i>SGD command used:</i>	ezpl.print_method
<i>Printer web page:</i>	View and Modify Printer Settings > Media Setup > Print Method

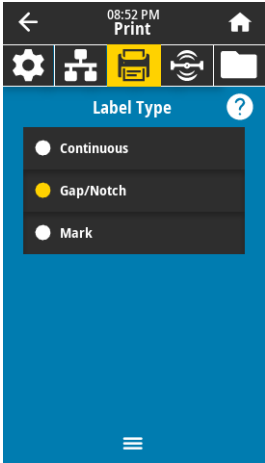

Print > Print Quality > Label Type


Select the type of media that you are using.

Accepted values:	- CONTINUOUS - GAP/NOTCH - MARK If you select CONTINUOUS, you must include a label length in your label format (^LL if you are using ZPL). If you select GAP/NOTCH or MARK for various noncontinuous media, the printer feeds media to calculate the label length.
Related ZPL command(s):	^MN
SGD command used:	ezpl.media_type
Printer web page:	View and Modify Printer Settings > Media Setup > Media Type

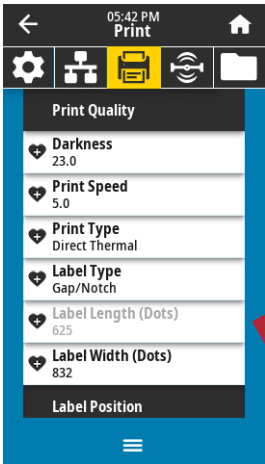

Print > Print Quality > Label Length

View the calibrated label length in dots. This value cannot be modified.

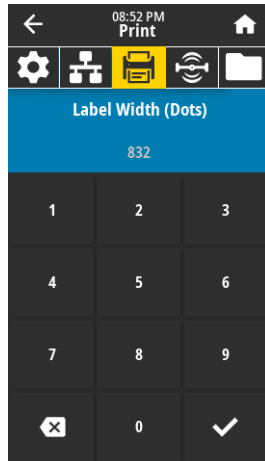

Print > Print Quality > Label Width (Dots)

Specify the width of the labels being used, in dots. The default value is the maximum width for the printer, based on the printhead's DPI value.

Accepted values:



Note • Setting the width too narrow can result in portions of a label format not being printed on the media. Setting the width too wide wastes formatting memory and can cause the printer to print off of the label and onto the platen roller. This setting can affect the horizontal position of the label format if the image was inverted using the ^POI ZPL II command.

ZT610 203 dpi = 0002 to 832

ZT610 300 dpi = 0002 to 1248

ZT610 600 dpi = 0002 to 2496


ZT620 203 dpi = 0002 to 1344

ZT620 300 dpi = 0002 to 1984

Related ZPL command(s): ^PW

SGD command used: ezpl.print_width

Printer web page: View and Modify Printer Settings > Media Setup > Print Width

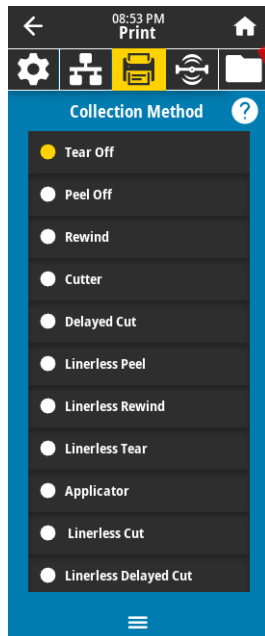

Print > Label Position > Collection Method

Select a collection method that is compatible with the options available on your printer.


Accepted values:

- Tear Off
- Peel-off
- Rewind
- Cutter
- Delayed Cut
- Linerless Peel
- Linerless Rewind
- Linerless Tear
- Applicator
- Linerless Cut
- Linerless Delayed Cut

Related ZPL command(s): ^MM

SGD command used: media.printmode


Printer web page: View and Modify Printer Settings > General Setup > Print Mode

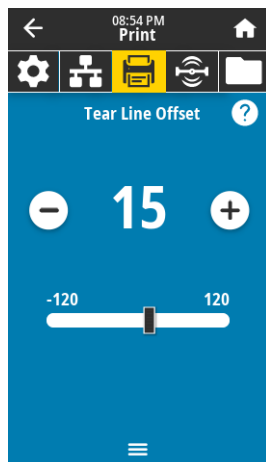


Print > Label Position > Tear Line Offset

If necessary, shift the position of the media over the tear-off bar after printing.

- Lower numbers move the media into the printer by the specified number of dots (the tear line moves closer to the edge of the label just printed).
- Higher numbers move the media out of the printer (the tear line moves closer to the leading edge of the next label).

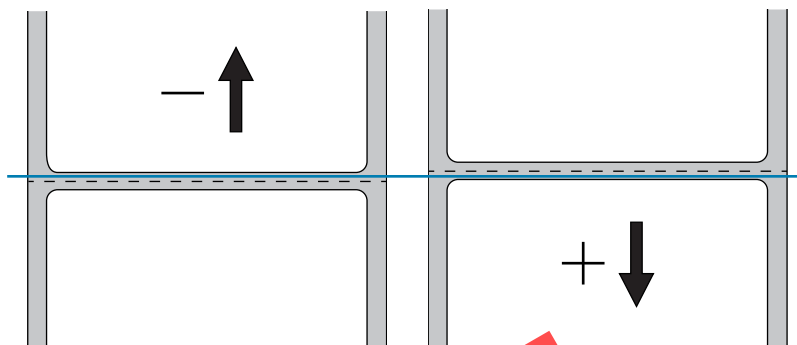

Accepted values:	-120 to +120
Related ZPL command(s):	~TA
SGD command used:	ezpl.tear_off
Printer web page:	View and Modify Printer Settings > General Setup > Tear Off

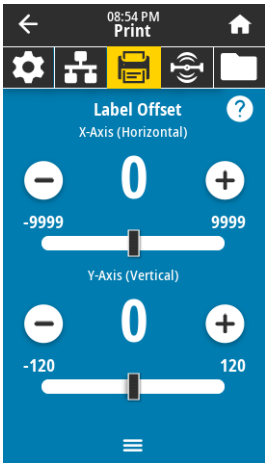


Print > Label Position > Label Offset

If necessary, shift the position of the image horizontally or vertically on the label.

Horizontal


- Negative numbers move the left edge of the image toward the left edge of the label by the number of dots selected.
- Positive numbers move the edge of the image toward the right edge of the label.

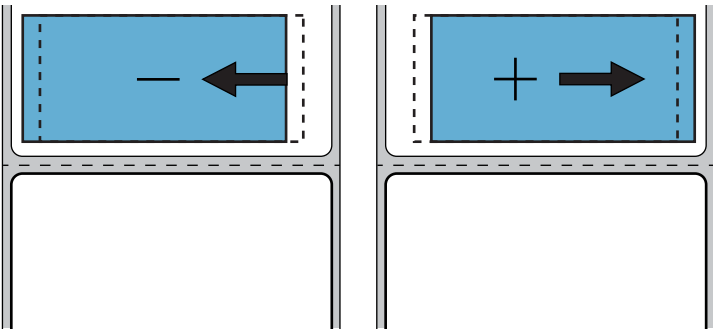


Accepted values:	-9999 to 9999
Related ZPL command(s):	^LS
SGD command used:	zpl.left_position
Printer web page:	View and Modify Printer Settings > Advanced Setup > Left Position

Vertical

- Lower numbers move the image higher on the label (toward the printhead).
- Higher numbers move the image farther down on the label (away from the printhead) by the specified number of dots.

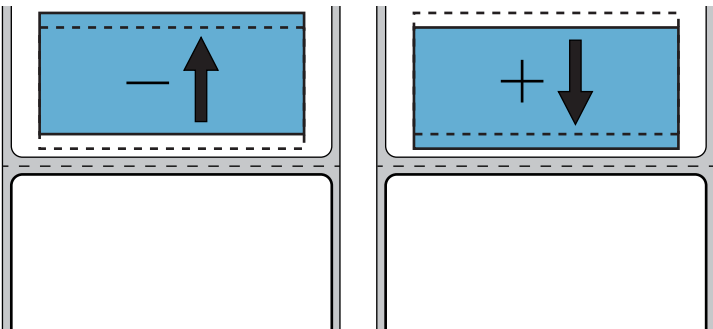


Accepted values:	-120 to +120
Related ZPL command(s):	^LT
Printer web page:	View and Modify Printer Settings > General Setup > Label Top

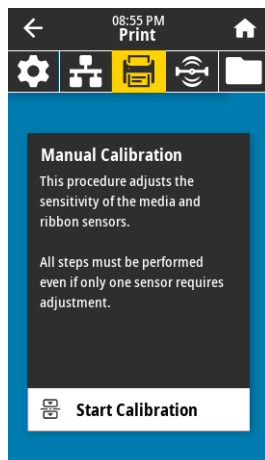

Print > Sensors > Manual Calibration

Calibrate the printer to adjust the sensitivity of the media and ribbon sensors.

<i>Related ZPL command(s):</i>	~JC
<i>SGD command used:</i>	ezpl.manual_calibration
<i>Control panel key(s):</i>	Hold PAUSE + FEED + CANCEL for 2 seconds to initiate calibration.
<i>Printer web page:</i>	The calibration procedure cannot be initiated through the web pages. See the following web page for settings that are set during sensor calibration: View and Modify Printer Settings > Calibration  Important • Do not change these settings unless you are told to do so by Zebra Technical Support or by an authorized service technician.

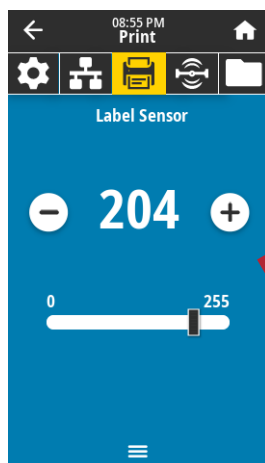


Print > Sensors > Label Sensor

Set the sensitivity of the label sensor.

 **Important** • This value is set during sensor calibration. Do not change these settings unless you are told to do so by Zebra Technical Support or by an authorized service technician.


<i>Accepted values:</i>	0 to 255
<i>SGD command used:</i>	ezpl.label_sensor
<i>Printer web page:</i>	View and Modify Printer Settings > Calibration

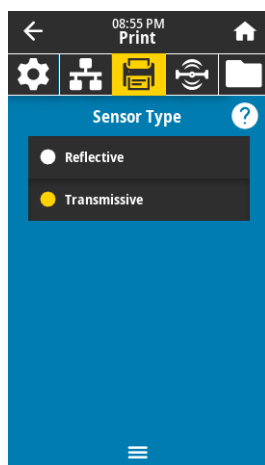

Print > Sensors > Sensor Type

Select the media sensor that is appropriate for the media that you are using. The reflective sensor typically is used only for black mark media. The transmissive sensor typically is used for other media types.


<i>Accepted values:</i>	- TRANSMISSIVE - REFLECTIVE
<i>Related ZPL command(s):</i>	^JS
<i>SGD command used:</i>	device.sensor_select
<i>Printer web page:</i>	View and Modify Printer Settings > Media Setup

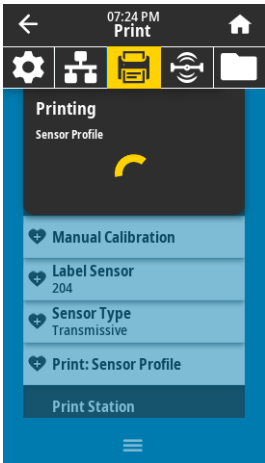

Print > Sensors > Print: Sensor Profile

Shows the sensor settings compared to actual sensor readings. To interpret the results, see [Sensor Profile on page 122](#).

<i>Accepted values:</i>	- TRANSMISSIVE - REFLECTIVE
<i>Related ZPL command(s):</i>	~JG
<i>Control panel key(s):</i>	Hold FEED + CANCEL during printer power-up.
<i>Printer web page:</i>	View and Modify Printer Settings > Print Listings on Label

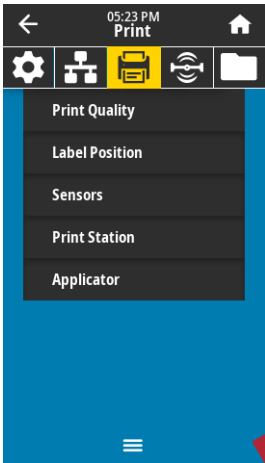

Print > Print Station


Use this menu item to fill in variable fields in a label format and print the label using a Human Input Device (HID), such as a USB keyboard, scale, or barcode scanner. A suitable label format must be stored on the E: drive of the printer to use this option.

When you plug an HID into one of the printer's USB host ports, use this user menu to select a form on the printer's E: drive. After you have been prompted to fill in each variable ^FN field on the form, you can specify the desired quantity of labels to print.

For more information about using the ^FN command or the SGD commands related to this feature, see the [Zebra Programming Guide](#) at <http://www.zebra.com/manuals> for more information.

* This menu item can be used only if a USB Flash drive with a suitable label format is inserted into a USB host port on the printer.


<i>SGD command used:</i>	<code>usb.host.keyboard_input</code> (must be set to ON) <code>usb.host.template_list</code> <code>usb.host.fn_field_list</code> <code>usb.host.fn_field_data</code> <code>usb.host.fn_last_field</code> <code>usb.host.template_print_amount</code>
--------------------------	--

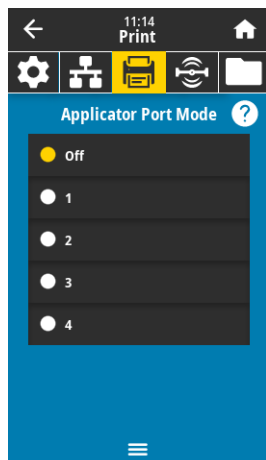

Print > Applicator > Applicator Port Mode

Controls the way in which the applicator port's "End Print" signal functions.


Accepted values:	Off 1 = End Print signal normally high, and low only when the printer is moving the label forward. 2 = End Print signal normally low, and high only when the printer is moving the label forward. 3 = End Print signal normally high, and low for 20 ms when a label has been printed and positioned. 4 = End Print signal normally low, and high for 20 ms when a label has been printed and positioned.
Related ZPL command(s):	^JJ
SGD command used:	device.applicator.end_print

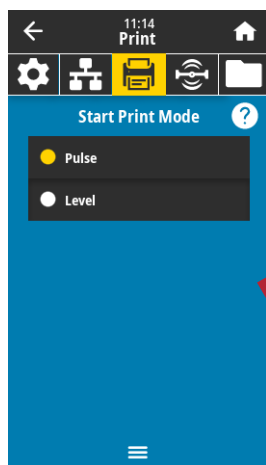

Print > Applicator > Start Print Mode

Determines if the applicator port's "Start Print" signal is in level mode or pulse mode.


Accepted values:	Pulse—Start Print signal must be deasserted before it can be asserted for the next label. Level—Start Print signal does not need to be deasserted to print the next label. As long as the Start Print signal is low and a label is formatted, a label prints.
Related ZPL command(s):	^JJ
SGD command used:	device.applicator.start_print

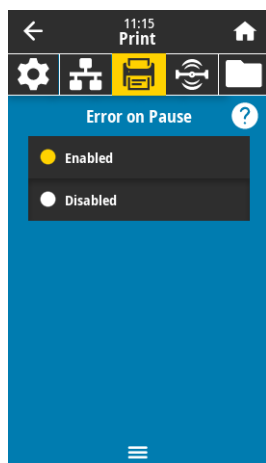

Print > Applicator > Error on Pause

Determines how applicator port errors are treated by the printer. Enabling this feature also causes the "Service Required" pin to be asserted.

Accepted values:	ENABLED DISABLED
SGD command used:	device.applicator.error_on_pause
Printer web page:	View and Modify Printer Settings > Advanced Setup > Error on Pause

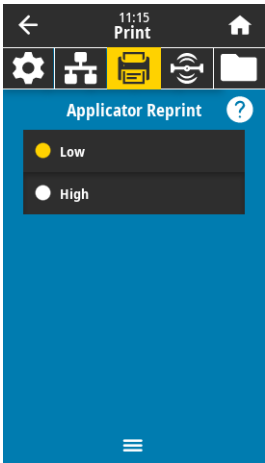


Print > Applicator > Applicator Reprint

Specifies if a high or low value is required for an applicator to reprint a label. Enables or disables the ~PR command, which when enabled reprints the last printed label. It also enables the Reprint button on the Home screen.

<i>Related ZPL command(s):</i>	^JJ and ~PR
<i>SGD command used:</i>	device.applicator.reprint


RFID Menu

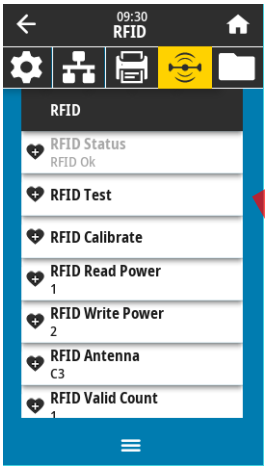

RFID > RFID Status

Display the status of the RFID subsystem of the printer.

<i>Related ZPL command(s):</i>	^HL or ~HL
<i>SGD command used:</i>	rfid.error.response

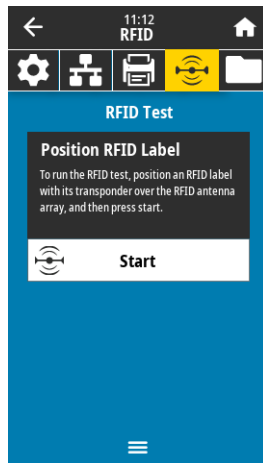


RFID > RFID Test

During the RFID test, the printer attempts to read and write to a transponder. No printer movement occurs with this test.


To test an RFID label:

1. Position the RFID label with its transponder over the RFID antenna array.
2. Touch **Start**.

The results of the test are shown on the display.

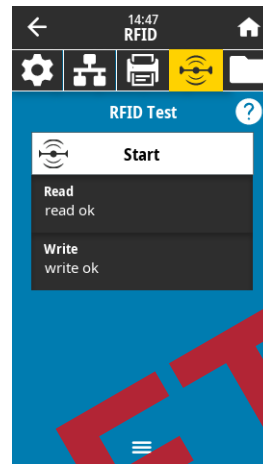

SGD command used:	<code>rfid.tag.test.content</code> and <code>rfid.tag.test.execute</code>
-------------------	--

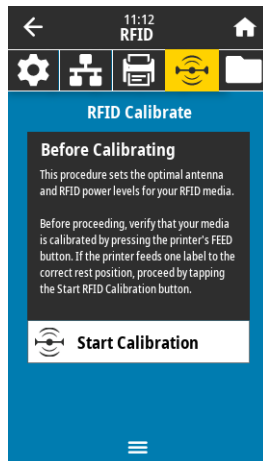

RFID > RFID Calibrate


Initiate tag calibration for RFID media. (Not the same as media and ribbon calibration.) During the process, the printer moves the media, calibrates the RFID tag position, and determines the optimal settings for the RFID media being used. These settings include the programming position, the antenna element to use, and the read/write power level to use. See the *RFID Programming Guide 3* for more information.



Important • Before running this command, load the printer with RFID media, calibrate your printer, close the printhead, and feed at least one label to make sure that tag calibration will begin from the correct position.

Leave all transponders before and after the tag that is being calibrated. This allows the printer to determine RFID settings which do not encode the adjacent tag. Allow a portion of media to extend out the front of the printer to allow for backfeed during the tag calibration procedure.


Related ZPL command(s):	<code>^HR</code>
SGD command used:	<code>rfid.tag.calibrate</code>

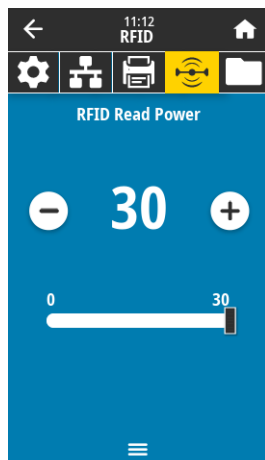

RFID > Read Power

If the desired read power is not achieved through RFID tag calibration, a value may be specified.


<i>Accepted values:</i>	0 to 30
<i>Related ZPL command(s):</i>	<code>^RW</code>
<i>SGD command used:</i>	<code>rfid.reader_1.power.read</code>
<i>Printer web page:</i>	View and Modify Printer Settings > RFID Setup > RFID READ PWR

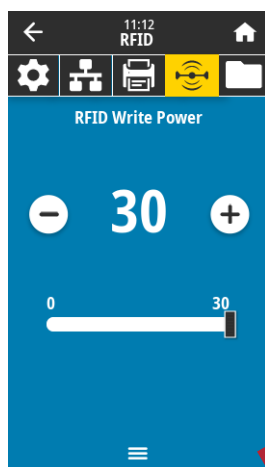

RFID > Write Power

If the desired write power is not achieved through RFID tag calibration, a value may be specified.


<i>Accepted values:</i>	0 to 30
<i>Related ZPL command(s):</i>	<code>^RW</code>
<i>SGD command used:</i>	<code>rfid.reader_1.power.write</code>
<i>Printer web page:</i>	View and Modify Printer Settings > RFID Setup > RFID WRITE PWR

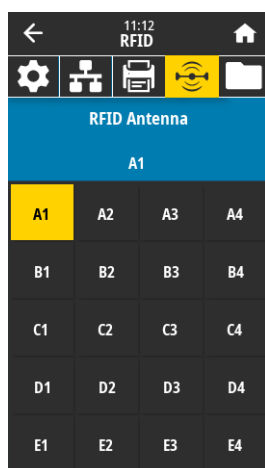

RFID > RFID Antenna

If the desired antenna is not achieved through RFID tag calibration, a value may be specified.


<i>Accepted values:</i>	A1, A2, A3, A4 B1, B2, B3, B4 C1, C2, C3, C4 D1, D2, D3, D4 E1, E2, E3, E4
<i>Related ZPL command(s):</i>	<code>^RW</code>
<i>SGD command used:</i>	<code>rfid.reader_1.antenna_port</code>
<i>Printer web page:</i>	View and Modify Printer Settings > RFID Setup > RFID ANTENNA

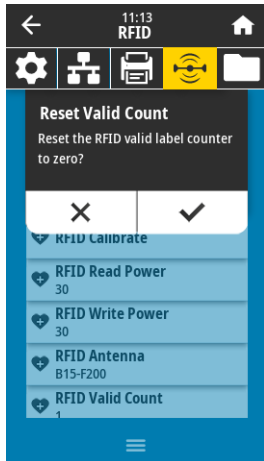

RFID > RFID Valid Count

Resets the RFID valid label counter to zero.

<i>Related ZPL command(s):</i>	~R0
<i>SGD command used:</i>	odometer.rfid.valid_resetable

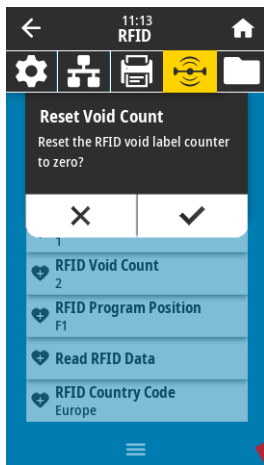


RFID > RFID Void Count

Resets the RFID void label counter to zero.

<i>Related ZPL command(s):</i>	~R0
<i>SGD command used:</i>	odometer.rfid.void_resetable

DRAFT

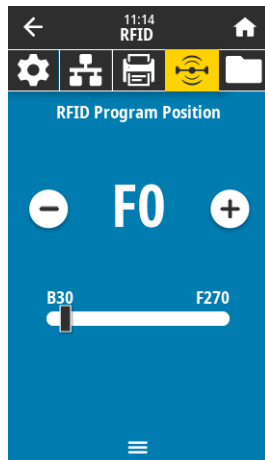


RFID > RFID Program Position

If the desired programming position (read/write position) is not achieved through RFID tag calibration, a value may be specified.

<i>Accepted values:</i>	F0 to Fxxx (where xxx is the label length in millimeters or 999, whichever is less)—The printer feeds the label forward for the specified distance and then begins programming. B0 to B30—The printer backfeeds the label for the specified distance and then begins programming. To account for the backfeed, allow empty media liner to extend out of the front of the printer when using a backward programming position.
<i>Related ZPL command(s):</i>	^RS
<i>SGD command used:</i>	rfid.position.program
<i>Printer web page:</i>	View and Modify Printer Settings > RFID Setup > PROGRAM POSITION

DRAFT

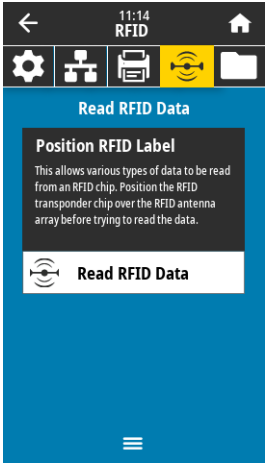


RFID > Read RFID Data

Read and return the specified tag data from the RFID tag located over the RFID antenna. No printer movement occurs while tag data is being read. The printhead can be open or closed.

To read and display the information stored on an RFID tag:


1. Position the RFID label with its transponder over the RFID antenna.
2. Touch **Read RFID Data**.

The results of the test are shown on the display.

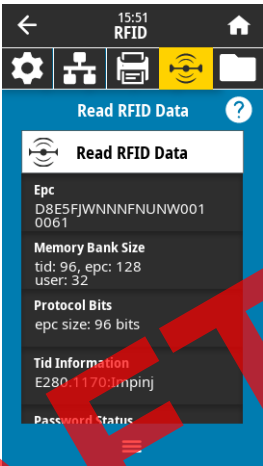

Related ZPL command(s):	^RF
SGD command used:	rfid.tag.read.content rfid.tag.read.execute

Storage Menu

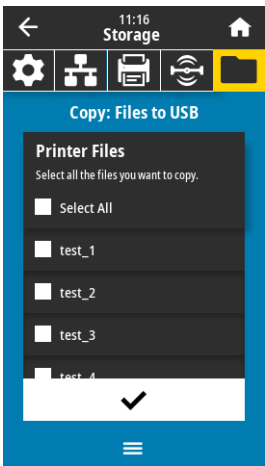


Storage > USB > Copy: Files to USB

Select files from the printer to store on a USB Flash drive.

To copy files from the printer to a USB Flash drive:

1. Insert a USB flash drive into the printer's USB host port.
The printer lists available files.
2. Touch the box next to the desired files. **Select All** is also available.
3. Touch the check mark to copy the selected files.

SGD command used:	usb.host.write_list
-------------------	---------------------

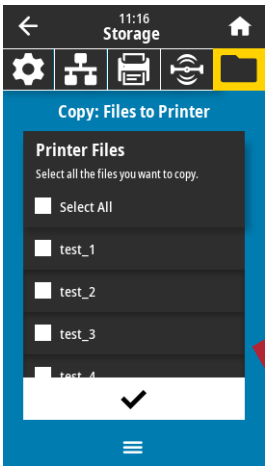


Storage > USB > Copy: Files to Printer

Select files to copy to the printer from a USB Flash drive.

To copy files to the printer from a USB Flash drive:

1. Insert a USB flash drive into the printer's USB host port.
The printer lists available files.
2. Touch the box next to the desired files. **Select All** is also available.
3. Touch the check mark to copy the selected files.


SGD command used:	usb.host.read_list
-------------------	--------------------

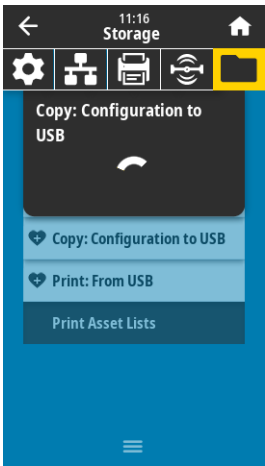

Storage > USB > Copy: Configuration to USB

Use this function to copy the printer's configuration information to a USB mass storage device, such as a USB Flash drive, that is plugged into one of the printer's USB host ports. This makes the information accessible without having to print physical labels.

Related ZPL command(s):	^HH—Returns the printer configuration information returned to the host computer.
Printer web page:	Printer Home Page > View Printer Configuration (to view printer configuration information on your web browser) View and Modify Printer Settings > Print Listings on Label (to print the configuration information on labels)

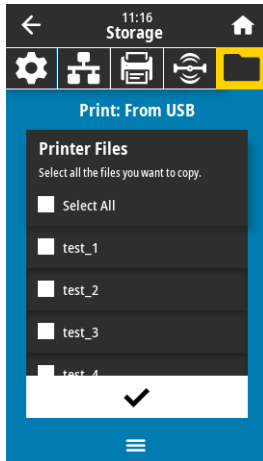


Storage > USB > Print: From USB

Select files to print from a USB Flash drive.

To print files from a USB Flash drive:

1. Insert a USB flash drive into the printer's USB host port.
The printer lists available files.
2. Touch the box next to the desired files. **Select All** is also available.
3. Touch the check mark to print the selected files.

<i>SGD command used:</i>	<code>usb.host.read_list</code>
--------------------------	---------------------------------

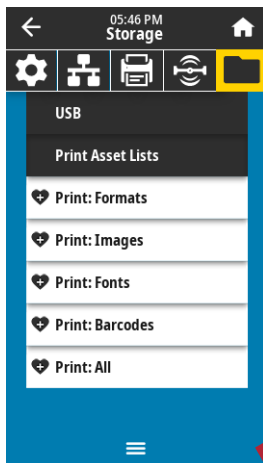

Storage > Print Asset Lists

Print the specified information on one or more labels.

Accepted values:

- **FORMATS**—Prints the available formats stored in the printer's RAM, Flash memory, or optional memory card.
- **IMAGES**—Prints the available images stored in the printer's RAM, Flash memory, or optional memory card.
- **FORMATS**—Prints the available fonts in the printer, including standard printer fonts plus any optional fonts. Fonts may be stored in RAM or Flash memory.
- **BARCODES**—Prints the available barcodes in the printer. Barcodes may be stored in RAM or Flash memory.
- **ALL**—Prints the previous labels plus the printer configuration label and the network configuration label.

<i>Related ZPL command(s):</i>	<code>^WD</code>
--------------------------------	------------------


<i>Printer web page:</i>	View and Modify Printer Settings > Print Listings on Label
--------------------------	---

Calibrate the Ribbon and Media Sensors

Use the procedure in this section to calibrate the printer, which adjusts the sensitivity of the media and ribbon sensors.

To perform sensor calibration, complete these steps:

1. Touch **Print > Sensors > Manual Calibration**.

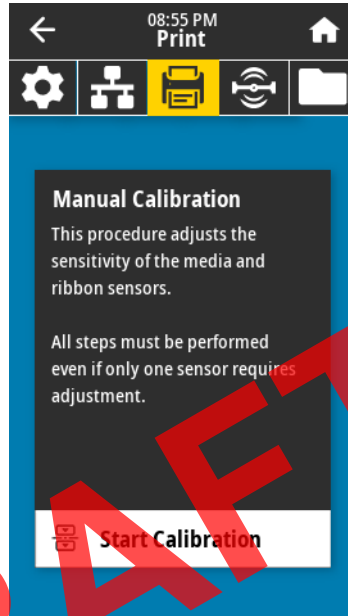

2. Touch **Start Calibration**.
3. Follow the steps in the calibration procedure.



Important • Follow the calibration procedure exactly as presented. You may press and hold **CANCEL** at any step in the procedure to cancel the calibration process.


4. When calibration is complete, press **PAUSE** to exit pause mode and enable printing.

Adjust the Printhead Pressure

You may need to adjust printhead pressure if printing is too light on one side, if you use thick media, or if the media drifts from side to side during printing. Use the lowest printhead pressure necessary to produce good print quality.

See [Figure 2](#). The printhead pressure adjustment dials have setting marks from 1 to 4.

Figure 2 • Printhead Pressure Adjustment Dials



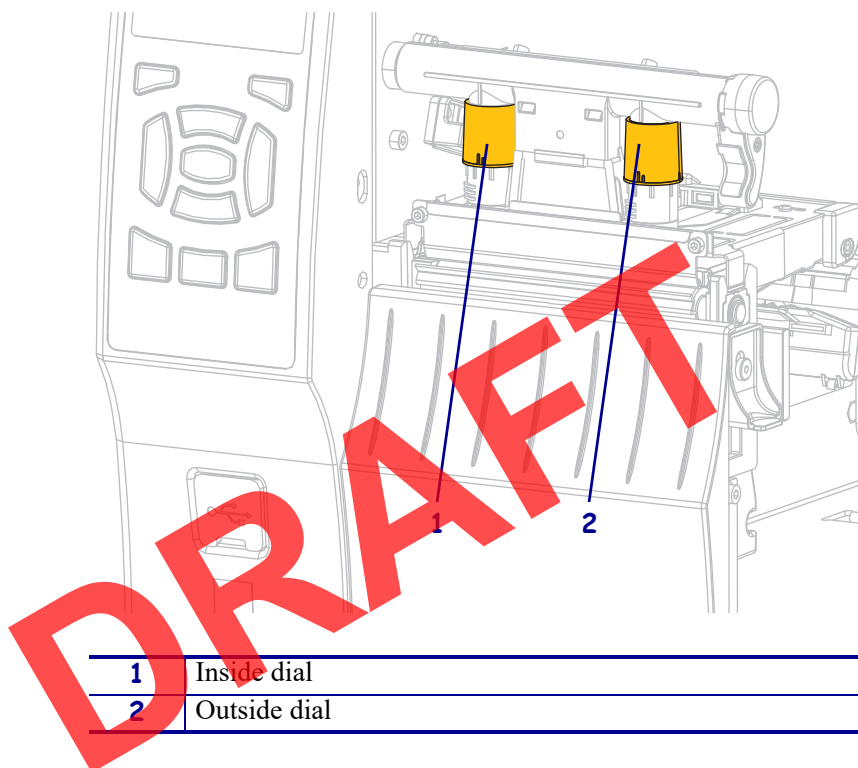




See [Table 3](#). Begin with the following pressure settings, based on your printer and media width, and make adjustments as necessary.

Table 3 • Pressure Setting Starting Points



Printer	Media Width	Inside Dial Setting	Outside Dial Setting
ZT411	1 in. (25 mm)	4	1
	2 in. (51 mm)	3	1
	3 in. (76 mm)	2.5	1.5
	≥ 3.5 in. (89 mm)	2	2
ZT421	2 in. (51 mm)	4	1
	3 in. (76 mm)	3.5	1
	4 in. (102 mm)	3	2
	≥ 5 in. (127 mm)	2.5	2.5

If necessary, adjust the printhead pressure adjustment dials as follows:

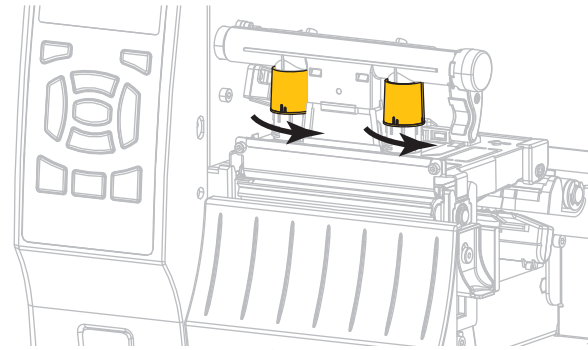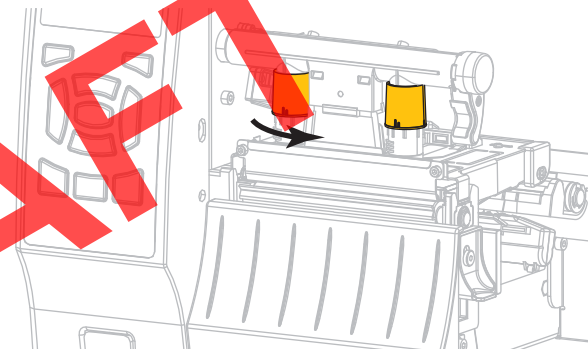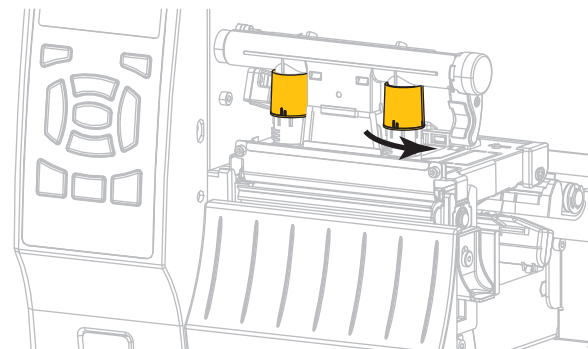If the media...	Then...
Requires higher pressure to print well	Increase both dials one position. 
Prints too lightly on the left side of the label.	Increase the inside dial setting one position. 
Prints too lightly on the right side of the label.	Increase the outside dial setting one position. 

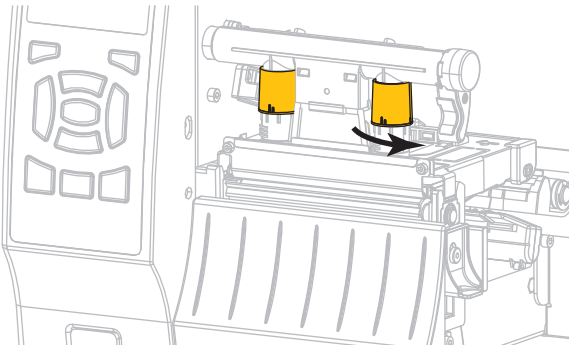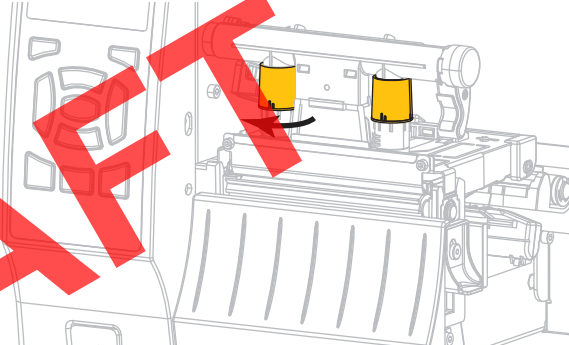If the media...	Then...
Shifts left while printing	Increase the outside dial setting one position.  OR Decrease the inside dial setting one position. 

DRAFT

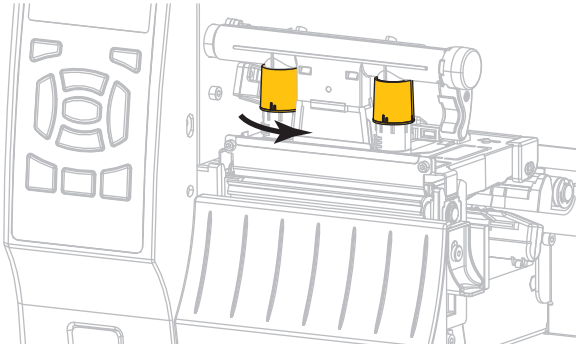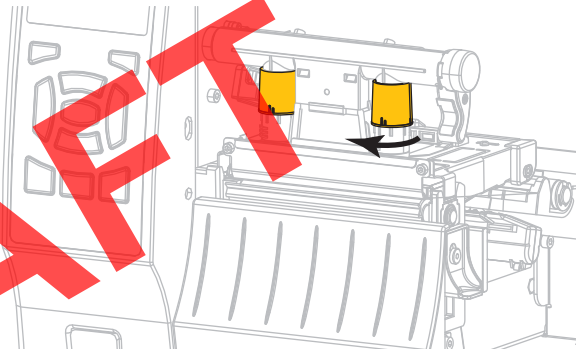If the media...	Then...
Shifts right while printing	Increase the inside dial setting one position.  OR Decrease the outside dial setting one position. 

DRAFT

Routine Maintenance

This section provides routine cleaning and maintenance procedures.

Contents

Cleaning Schedule and Procedures	98
Clean the Exterior, the Media Compartment, and the Sensors	99
Clean the Printhead and Platen Roller	102
Clean and Lubricate the Cutter Module	110
Replacing Printer Components	115
Ordering Replacement Parts	115
Recycling Printer Components	115
Lubrication	115

Cleaning Schedule and Procedures

Routine preventive maintenance is a crucial part of normal printer operation. By taking good care of your printer, you can minimize the potential problems that you might have with it and help to achieve and to maintain your standards for print quality.

Over time, the movement of media or ribbon across the printhead wears through the protective ceramic coating, exposing and eventually damaging the print elements (dots). To avoid abrasion:

- Clean the printhead frequently.
- Minimize printhead pressure and burn temperature (darkness) settings by optimizing the balance between the two.
- When using Thermal Transfer mode, ensure that the ribbon is as wide or wider than the media to prevent exposing the printhead elements to the more abrasive label material.



Important • Zebra is not responsible for damage caused by the use of cleaning fluids on this printer.

Specific cleaning procedures are provided on the following pages. Table 4 shows the recommended cleaning schedule. These intervals are intended as guidelines only. You may have to clean more often, depending upon your application and media.

Table 4 • Recommended Cleaning Schedule

Area		Method	Interval
Printhead		Solvent*	Direct Thermal Mode: After every roll of media (or 500 feet of fanfold media). Thermal Transfer Mode: After every roll of ribbon.
Platen roller		Solvent*	
Media sensors		Air blow	
Ribbon sensor		Air blow	
Media path		Solvent*	
Ribbon path		Solvent*	
Pinch roller (part of Peel-Off option)		Solvent*	
Cutter module	If cutting continuous, pressure-sensitive media	Solvent*	After every roll of media (or more often, depending upon your application and media).
	If cutting tag stock or label liner material	Solvent* and air blow	After every two or three rolls of media.
Tear-off/peel-off bar		Solvent*	Once a month.
Take-label sensor		Air blow	Once every six months.

* Zebra recommends using the Preventive Maintenance Kit (p/n 47362 or p/n 105950-035 - multipack). In place of this kit, you may use a clean swab dipped in 99.7% isopropyl alcohol.

For 600 dpi printers, use Save-a-Printhead cleaning film. This specially coated material removes contamination buildup without damaging the printhead. Call your authorized reseller or distributor for more information.

Clean the Exterior, the Media Compartment, and the Sensors

Over time, dust, grime, and other debris may build up on the outside and inside of your printer, particularly in a harsh operating environment.

Printer Exterior

You may clean the exterior surfaces of the printer with a lint-free cloth and a small amount of a mild detergent, if necessary. Do not use harsh or abrasive cleaning agents or solvents.




Important • Zebra is not responsible for damage caused by the use of cleaning fluids on this printer.

Media Compartment and Sensors

To clean the sensors, complete these steps:

1. Brush, air blow, or vacuum any accumulated paper lint and dust away from the media and ribbon paths.
2. Brush, air blow, or vacuum any accumulated paper lint and dust away from the sensors.

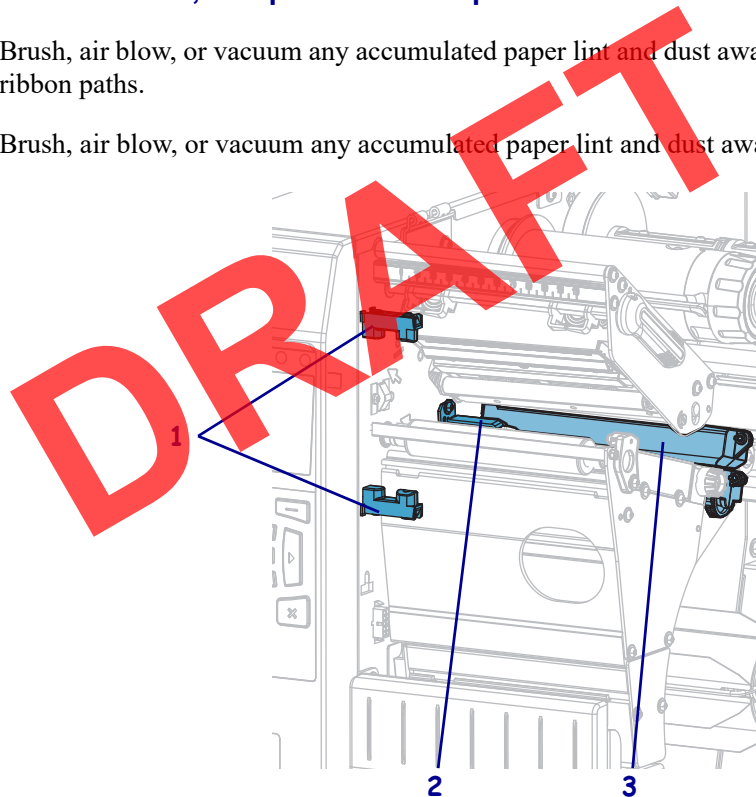

1	Take-label sensor
2	Ribbon sensor
3	Media sensor


Remove Used Ribbon

At minimum, remove used ribbon from the ribbon take-up spindle each time you change the roll of ribbon. With ribbon that is half or less the width of the printhead, remove used ribbon each time you load a new roll of media. This ensures that uneven pressure on the ribbon take-up spindle does not interfere with the ribbon release bars on the spindle.

To remove used ribbon, complete these steps:


1. Has the ribbon run out?

If the ribbon...	Then
Ran out	Continue with the next step.
Did not run out	Cut or break the ribbon before the ribbon take-up spindle.

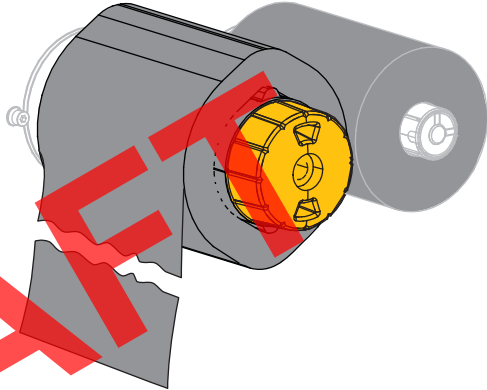


Caution • Do not cut the ribbon directly on the ribbon take-up spindle. Doing so may damage the spindle.

2. While holding the ribbon take-up spindle, turn the ribbon release knob to the left until it stops.

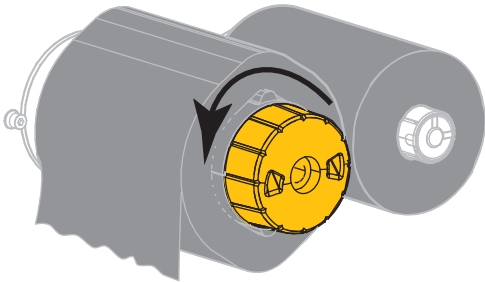

The ribbon release bars pivot down, easing the spindle’s grip on the used ribbon.

3. After the ribbon release bars have pivoted down, if possible, turn the ribbon take-up spindle one full to the right to help loosen the ribbon on the spindle.
4. Slide the used ribbon off of the ribbon take-up spindle and discard.

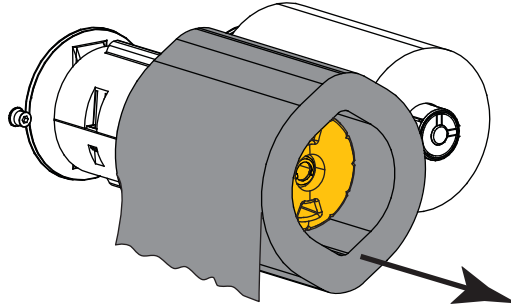

DRAFT

Clean the Printhead and Platen Roller

Inconsistent print quality, such as voids in the bar code or graphics, may indicate a dirty printhead. For the recommended cleaning schedule, see [Table 4 on page 98](#).

Caution • While performing any tasks near an open printhead, remove all rings, watches, hanging necklaces, identification badges, or other metallic objects that could touch the printhead. You are not required to turn off the printer power when working near an open printhead, but Zebra recommends it as a precaution. If you turn off the power, you will lose all temporary settings, such as label formats, and you must reload them before you resume printing.



Note • For printers with a peel assembly, keep the peel assembly closed while cleaning the platen roller to reduce the risk of bending the tear-off/peel-off bar.




Caution • The printhead may be hot and could cause severe burns. Allow the printhead to cool.



Caution • Before touching the printhead assembly, discharge any built-up static electricity by touching the metal printer frame or by using an antistatic wriststrap and mat.

To clean the printhead and platen roller, complete these steps:


1. Raise the media door.

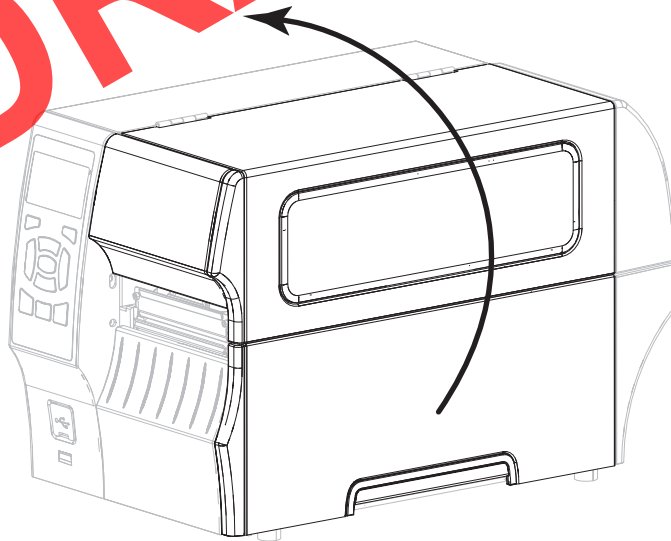




2. **Caution** • The printhead may be hot and could cause severe burns. Allow the printhead to cool.


Open the printhead assembly by rotating the printhead-open lever.

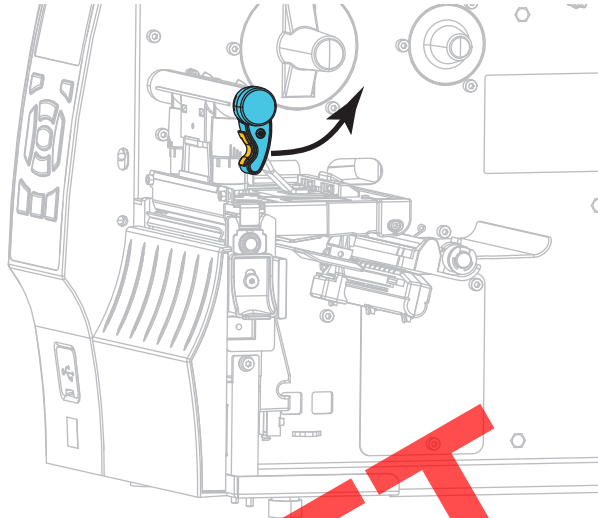


3. Remove the ribbon (if used) and the media.
4. Using the swab from a Zebra Preventive Maintenance Kit, wipe along the brown strip on the printhead assembly from end to end. In place of the Preventive Maintenance Kit, you may use a clean swab dipped in 99.7% isopropyl alcohol. Allow the solvent to evaporate.

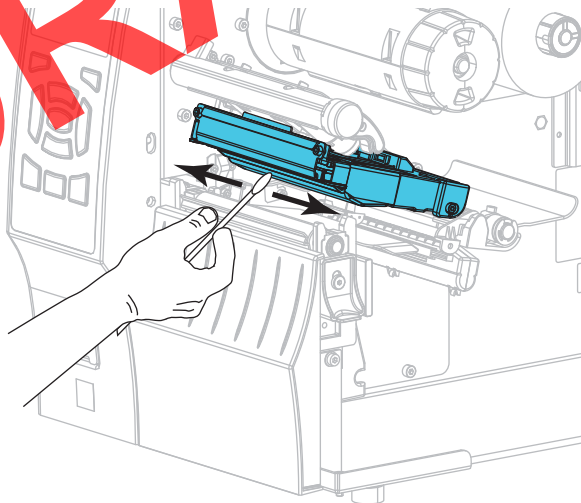


5. While manually rotating the platen roller, clean it thoroughly with the swab. Allow the solvent to evaporate.

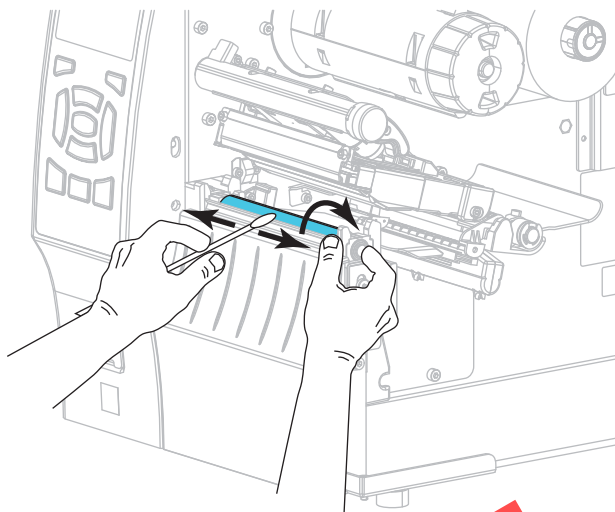

6. Reload the ribbon (if used) and the media. For instructions, see [Load the Ribbon on page 43](#) or [Load the Media on page 17](#).
7. Rotate the printhead-open lever downward until it locks the printhead in place.

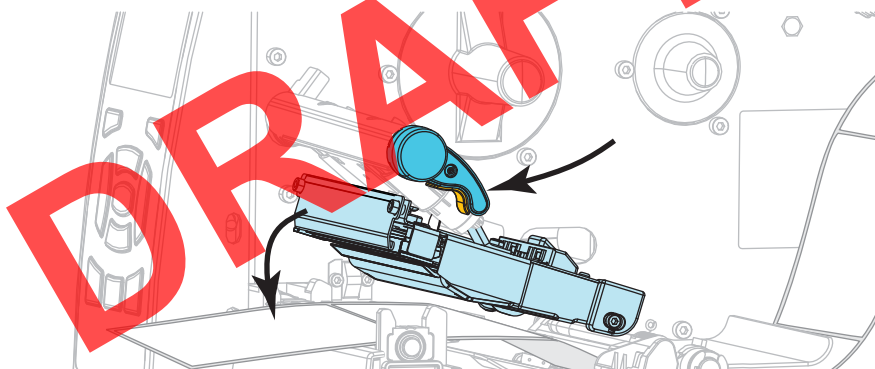

8. Close the media door.

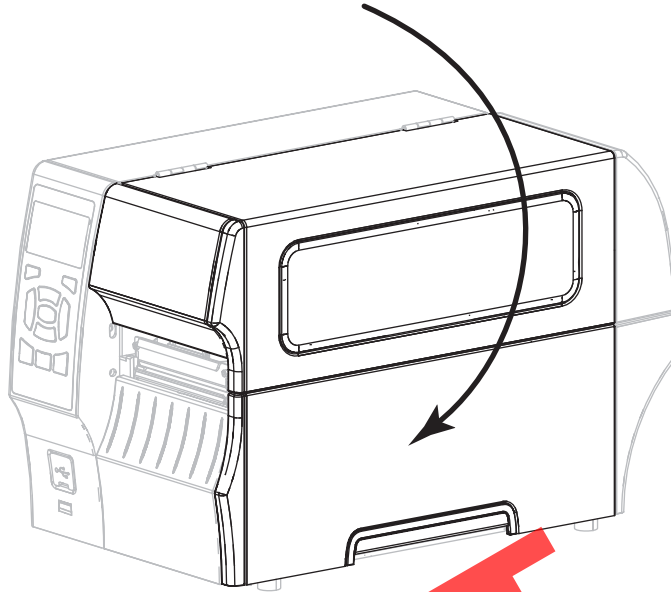

The printer is ready to operate.

9. Press PAUSE to exit pause mode and enable printing.

The printer may perform a label calibration or feed a label, depending on your settings.



Note • If performing this procedure does not improve print quality, try cleaning the printhead with *Save-A-Printhead* cleaning film. This specially coated material removes contamination buildup without damaging the printhead. Call your authorized Zebra reseller for more information.

Clean the Peel Assembly


The peel assembly, which is part of the Peel-Off and Liner Take-Up options, consists of several spring-loaded rollers to ensure the proper roller pressure. Clean the pinch roller and tear-off/peel-off bar if adhesive buildup begins to affect peel performance.



Caution • Do not use your left hand to assist in closing the Peel assembly. The top edge of the Peel roller/assembly could pinch your fingers.


If adhesive buildup affects peel-off performance, complete these steps:

1. Raise the media door.

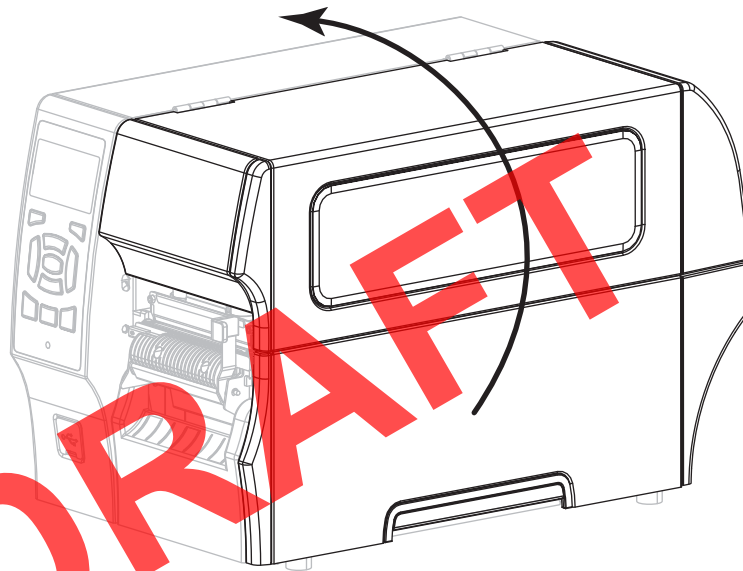


2. **Caution** • The printhead may be hot and could cause severe burns. Allow the printhead to cool.


Open the printhead assembly by rotating the printhead-open lever.

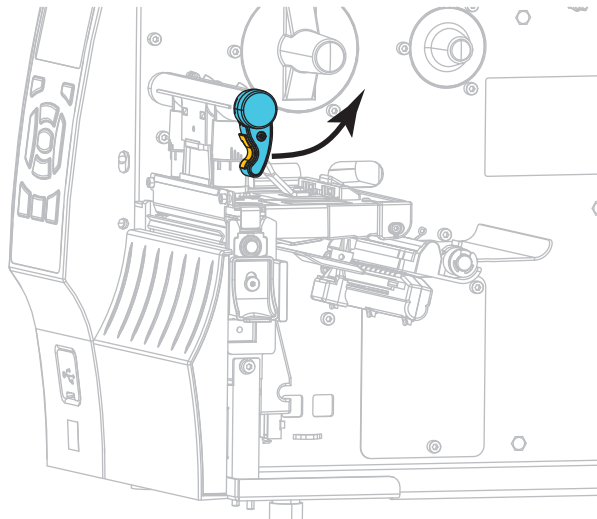

3. Push down the peel-off mechanism release lever to open the peel assembly.

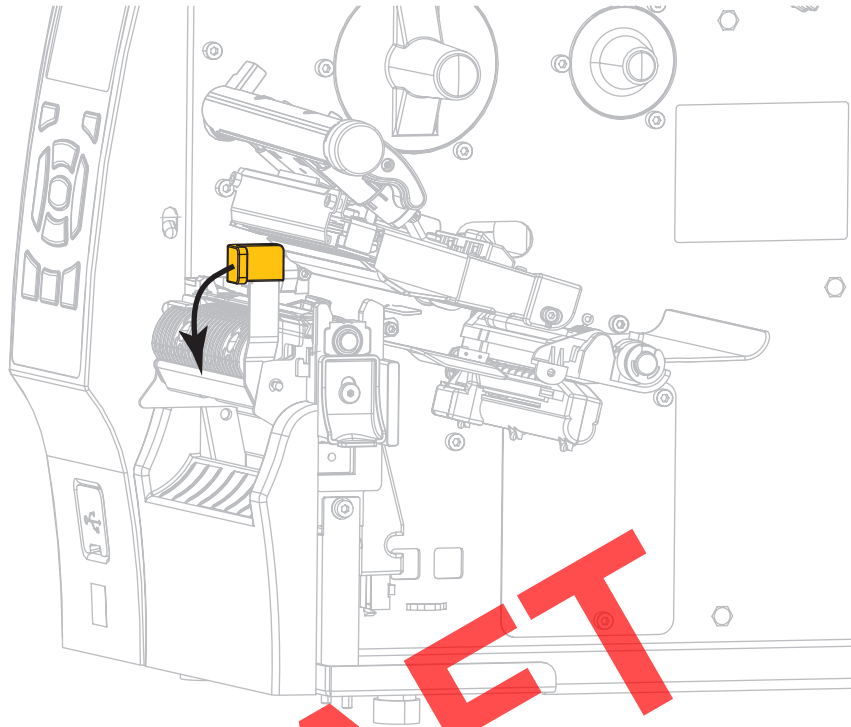

4. Remove any media liner to expose the pinch roller.
5. While manually rotating the pinch roller, clean it thoroughly with the swab from the Preventive Maintenance Kit (part number 47362). In place of the Preventive Maintenance Kit, you may use a clean swab dipped in 99.7% isopropyl alcohol. Allow the solvent to evaporate.

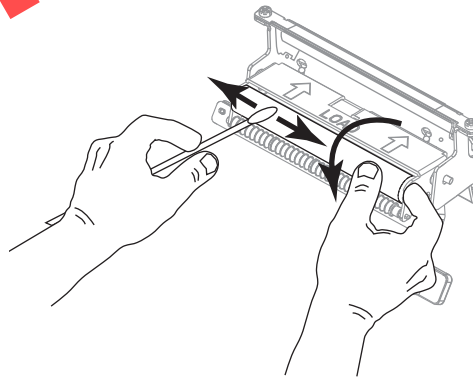

6. Use the swab to remove excess adhesive from the tear-off/peel-off bar. Allow the solvent to evaporate.




Important • Apply minimum force when cleaning the tear-off/peel-off bar. Excessive force can cause the tear-off/peel-off bar to bend, which could have a negative effect on peel performance.

7. Reload the media liner through the peel mechanism. For instructions, see [Final Steps for Peel-Off Mode \(with or without Liner Take-Up\)](#) on page 25.




8. **Caution** • Use the peel release lever and your right hand to close the peel assembly. Do not use your left hand to assist in closing. The top edge of the peel roller/assembly could pinch your fingers.


Close the peel assembly using the peel-off mechanism release lever.

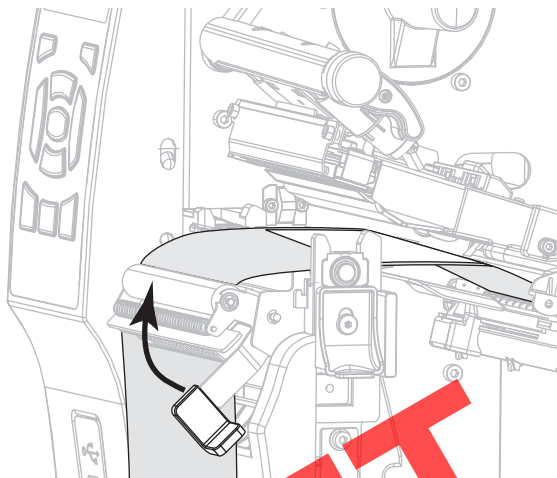

9. Rotate the printhead-open lever downward until it locks the printhead in place.

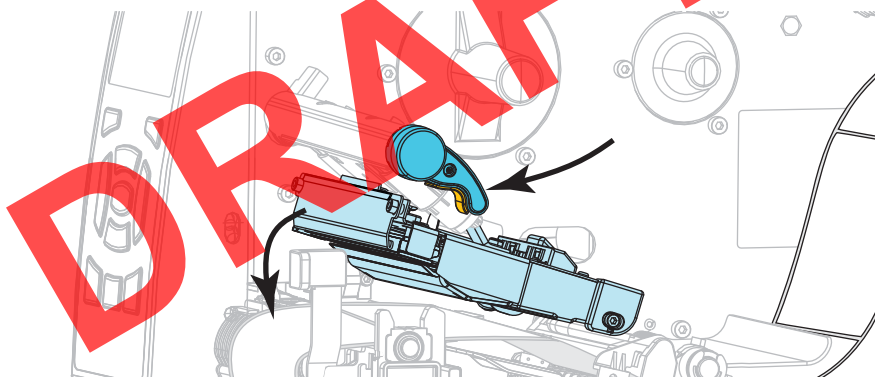

10. Close the media door.

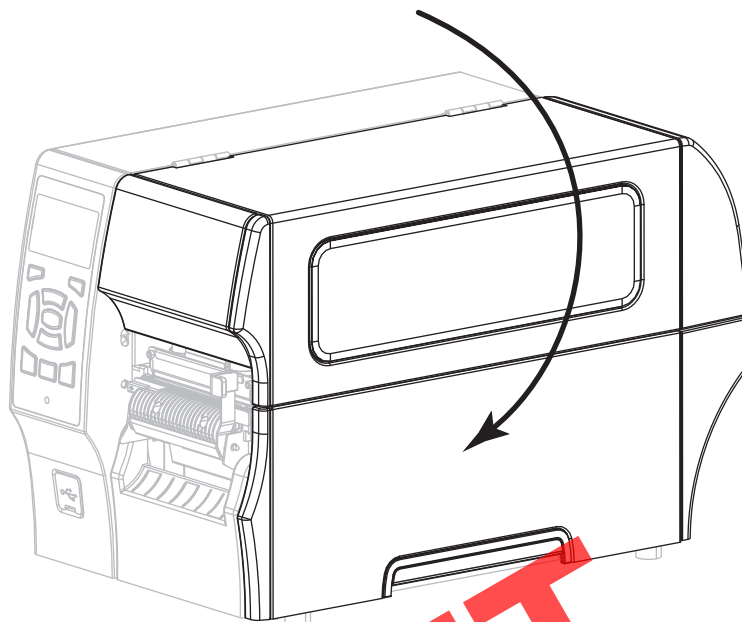

The printer is ready to operate.

11. Press PAUSE to exit pause mode and enable printing.

The printer may perform a label calibration or feed a label, depending on your settings.

DRAFT

Clean and Lubricate the Cutter Module

If the cutter is not cutting the labels cleanly or if it jams with labels, clean the cutter blades. After cleaning the blades, apply lubrication to them to help extend the life of your cutter module.


To clean the cutter module, complete these steps:




1. **Caution** • Turn off (O) the printer and disconnect it from the power source before performing the following procedure.

Turn off (O) the printer and disconnect the AC power cord.

2. Raise the media door.

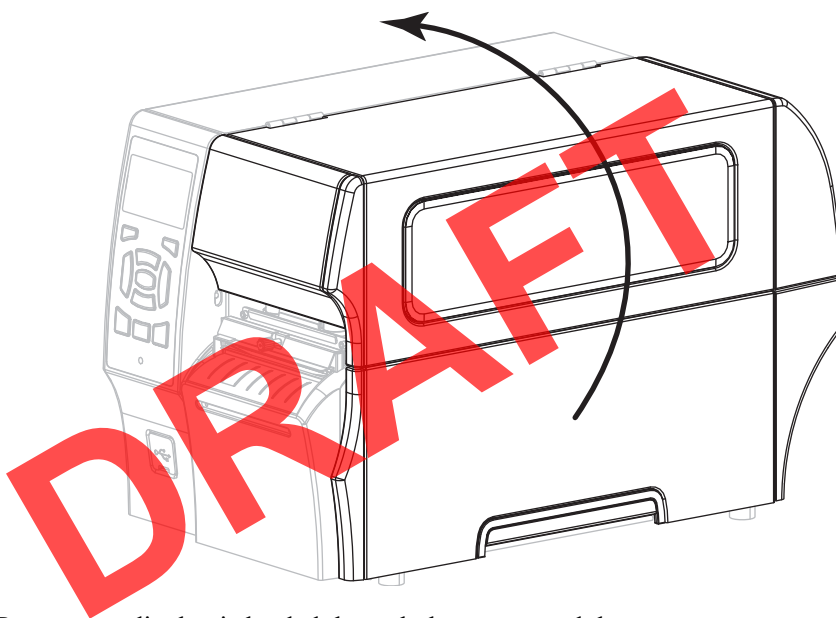


3. Remove media that is loaded through the cutter module.
4. Loosen and remove the thumbscrew and lock washer on the cutter shield.

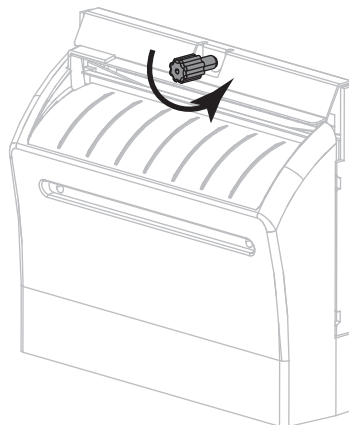




5. **Caution** • The cutter blade is sharp. Do not touch or rub the blade with your fingers.


Remove the cutter shield.

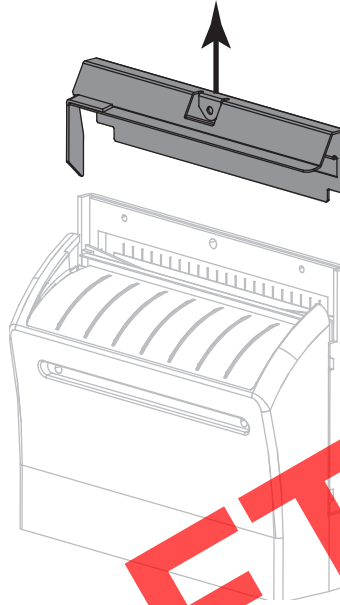

6. If necessary, rotate the cutter motor thumbscrew to fully expose the V-shaped cutter blade (1).

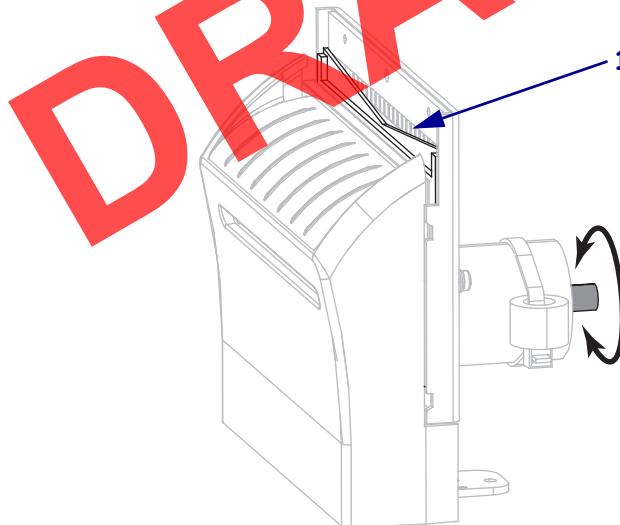


7. Using the swab from the Preventive Maintenance Kit (part number 47362), wipe along the upper cutting surface and the cutter blade. In place of the Preventive Maintenance Kit, you may use a clean swab dipped in 99.7% isopropyl alcohol. Allow the solvent to evaporate.

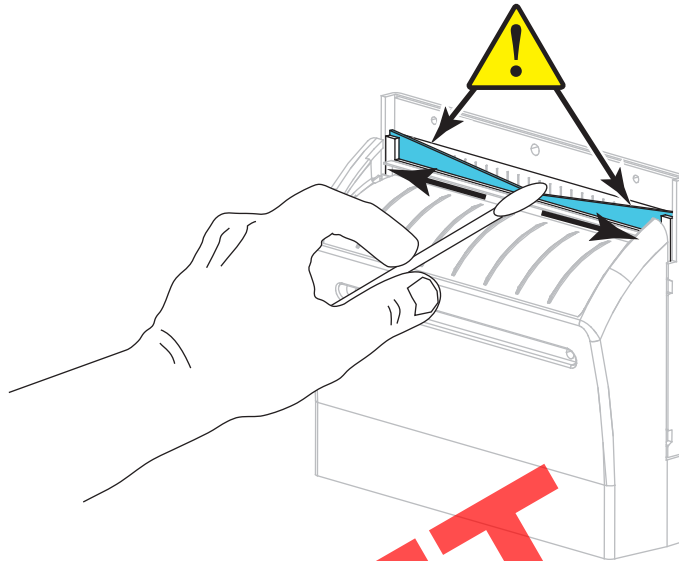

8. When the solvent has evaporated, soak a clean swab in a general-purpose, higher-viscosity silicone or PTFE oil lubricant.




9. Apply an even layer along all exposed surfaces of both cutter blades. Remove any excess oil so that none of it comes in contact with the printhead or platen roller.

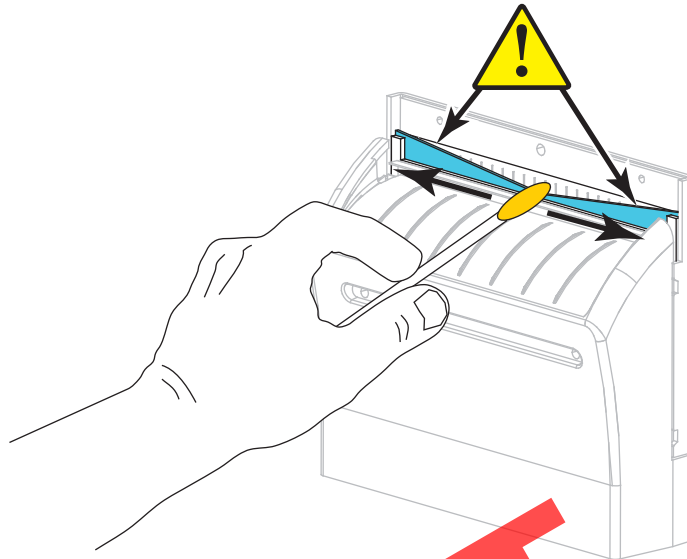


10. **Caution** • The cutter blade is sharp. For operator safety, replace the cutter shield.

Replace the cutter shield (1) and secure it with the thumbscrew and lock washer that you removed earlier (2).

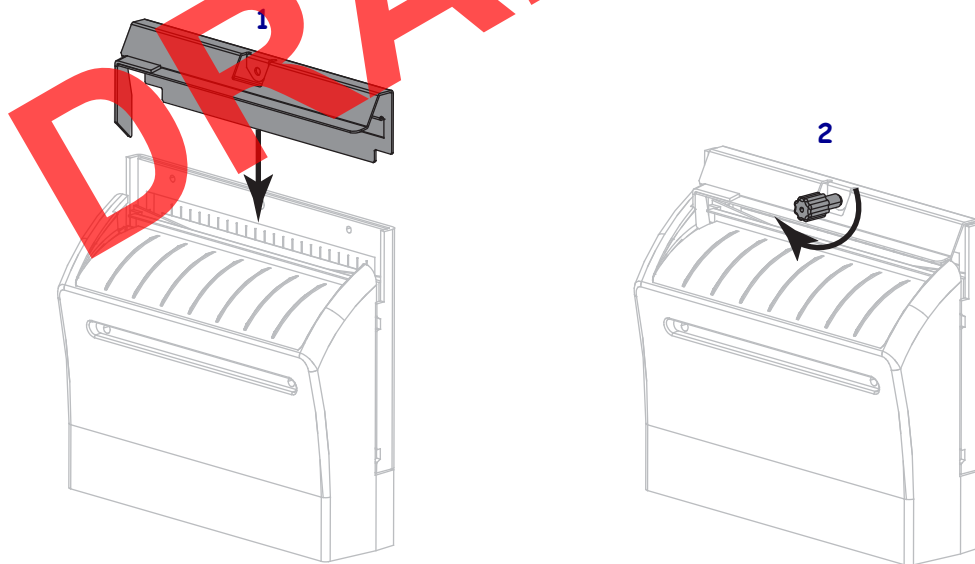

11. Close the media door.

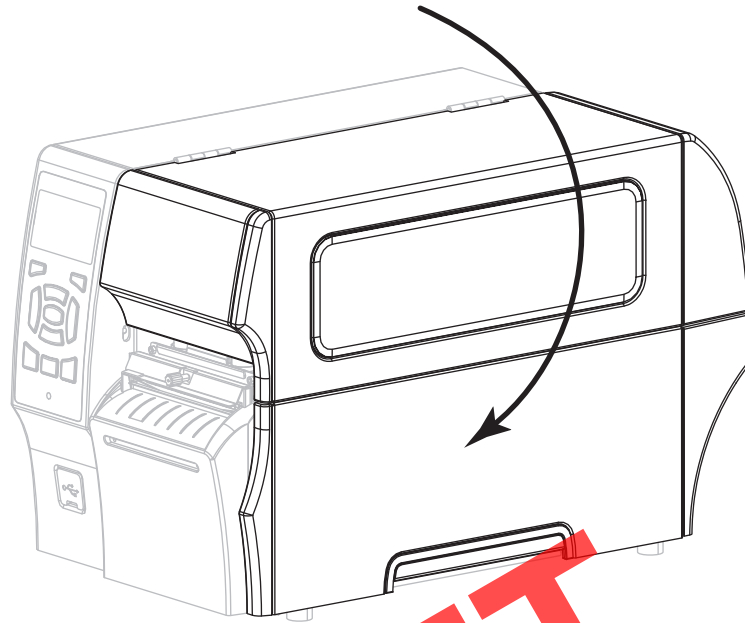

12. Plug the printer into its power source, and then turn on (I) the printer.
The cutter blade returns to its operating position.
13. If the cutter continues to perform unsatisfactorily, contact an authorized service technician.

DRAFT

Replacing Printer Components

Some printer components, such as the printhead and platen roller, may wear out over time and can be replaced easily. Regular cleaning may extend the life of some of these components. See [Table 4 on page 98](#) for the recommended cleaning intervals.

Ordering Replacement Parts

Zebra™ printers are designed to work only with genuine Zebra printheads, thus maximizing safety and print quality. Contact your authorized Zebra reseller for part ordering information.

Recycling Printer Components



The majority of this printer's components are recyclable. The printer's main logic board may include a battery that you should dispose of properly.

Do not dispose of any printer components in unsorted municipal waste. Please dispose of the battery according to your local regulations, and recycle the other printer components according to your local standards. For more information, see <http://www.zebra.com/environment>.

Storing the Printer

If you are not placing the printer into immediate operation, repackage it using the original packing materials. You may store the printer under the following conditions:

- Temperature: -40°F to 140°F (-40° to 60°C)
- Relative humidity: 5% to 85% non-condensing

Lubrication

No lubrication is needed for this printer.

Caution • Some commercially available lubricants will damage the finish and the mechanical parts if used on this printer.

DRAFT

Diagnostics and Troubleshooting

This section provides diagnostic tests and other information that may help you to optimize printing or to troubleshoot issues with your printer.



Go to www.zebra.com/zt600-info for access to videos and additional online information designed to assist you.


Contents

Judging Barcode Quality	118
Configuration Labels	120
PAUSE Self Test	121
Sensor Profile	122
Communication Diagnostics Mode	123
Load Defaults or Last Saved Values	124
Alert and Error States	125
Alerts and Error Messages	126
Indicator Lights	129
Troubleshooting	131
Printing or Print Quality Issues	131
Ribbon Issues	136
RFID Issues	138
Communications Issues	141
Miscellaneous Issues	142
Service the Printer	146
Ship the Printer	146

Judging Barcode Quality

Figure 3 shows how printer settings such as darkness and print speed can affect the quality of barcodes. Set the print darkness to the lowest setting that provides good print quality. The Print Quality Assistant in [Run the Print Wizard and Print a Test Label on page 49](#) can help you determine the best settings.

Figure 3 • Barcode Darkness Comparison

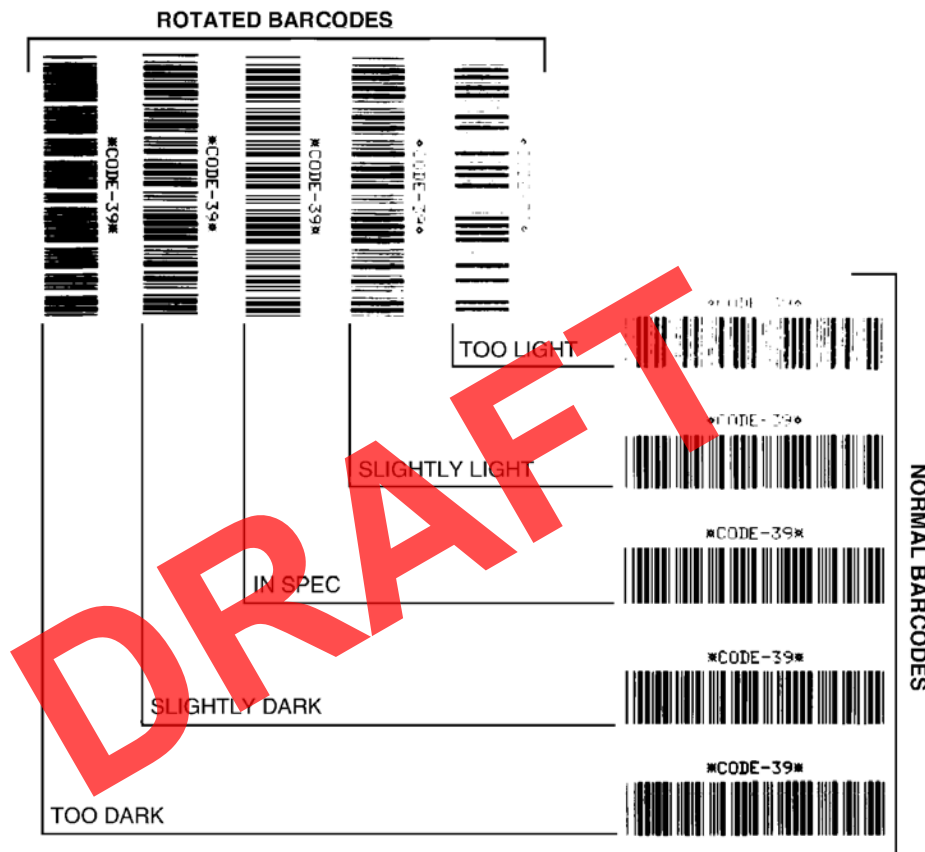

Too Dark Labels that are too dark are fairly obvious. They may be readable but not “in-spec.”

- The normal barcode bars increase in size.
- The openings in small alphanumeric characters may fill in with ink.
- Rotated barcode bars and spaces run together.

Slightly Dark Slightly dark labels are not as obvious.

- The normal barcode will be “in-spec.”
- Small character alpha numerics will be bold and could be slightly filled in.
- The rotated barcode spaces are small when compared to the “in-spec” code, possibly making the code unreadable.

“In-Spec” The “in-spec” barcode can only be confirmed by a verifier, but it should exhibit some visible characteristics.

- The normal barcode will have complete, even bars and clear, distinct spaces.
- The rotated barcode will have complete, even bars and clear, distinct spaces. Although it may not look as good as a slightly dark barcode, the barcode will be “in-spec.”
- In both normal and rotated styles, small alphanumeric characters look complete.

Slightly Light Slightly light labels are, in some cases, preferred to slightly dark ones for “in-spec” barcodes.

- Both normal and rotated barcodes will be in spec, but small alphanumeric characters may not be complete.

Too Light Labels that are too light are obvious.

- Both normal and rotated barcodes have incomplete bars and spaces.
- Small alphanumeric characters are unreadable.

DRAFT

Configuration Labels

Some of the most commonly used diagnostic items are the printer configuration label and the network configuration label. Sample labels are shown in Figure 4. Analyzing the information on these labels can help you to troubleshoot potential issues.

To print a printer configuration label, touch Menu > Settings > Print: System Settings.

To print a network configuration label, touch Menu > Networks > Print: Network Info.

Figure 4 • Sample Labels

Printer Configuration Label

PRINTER CONFIGURATION	
Zebra Technologies ZTC ZT620R-203dpi ZPL 76J162700886	
+30.0.....	DARKNESS
6.0 IPS.....	PRINT SPEED
-007.....	TEAR OFF
.....	PRINT MODE
CONTINUOUS.....	MEDIA TYPE
TRANSMISSIVE.....	SENSOR SELECT
DIRECT-THERMAL.....	PRINT METHOD
1344.....	PRINT WIDTH
2000.....	LABEL LENGTH
P1085892/00005 2.....	PRINT HEAD ID
15.01IN 380MM.....	MAXIMUM LENGTH
MAINT. OFF.....	EARLY WARNING
CONNECTED.....	USB COMM.
BIDIRECTIONAL.....	PARALLEL COMM.
RS232.....	SERIAL COMM.
9600.....	BAUD
8 BITS.....	DATA BITS
NONE.....	PARITY
XON/XOFF.....	HOST HANDSHAKE
NONE.....	PROTOCOL
NORMAL MODE.....	COMMUNICATIONS
<=> 7EH.....	CONTROL PREFIX
<=> SEH.....	FORMAT PREFIX
<=> 2CH.....	DELIMITER CHAR
ZPL II.....	ZPL MODE
INACTIVE.....	COMMAND OVERRIDE
FEED.....	MEDIA POWER UP
LENGTH.....	HEAD CLOSE
DEFAULT.....	BACKFEED
+000.....	LABEL TOP
+0000.....	LEFT MARGIN
OFF.....	APPLICATION PORT
ENABLED.....	ERROR ON PAUSE
DISABLED.....	START PRINT SIG
000.....	REPRINT MODE
090.....	WEB SENSOR
255.....	MEDIA SENSOR
027.....	TAKE LABEL
000.....	MARK SENSOR
000.....	MARK MED SENSOR
000.....	TRANS GAIN
000.....	TRANS BASE
000.....	TRANS LED
002.....	MARK GAIN
100.....	MARK LED
OPCSN001.....	MODES ENABLED
1344 8/MM FULL.....	RESOLUTION
4.0.....	LINK-OS VERSION
V80.20.03 <-.....	FIRMWARE
1.3.....	XML SCHEMA
6.6.0 22.89.....	HARDWARE ID
32768k.....	RAM
S24288k.....	ONBOARD FLASH
NONE.....	FORMAT CONVERT
MM/DD/YYYY 24HR.....	IDLE DISPLAY
05/11/17.....	RTC DATE
06:40.....	RTC TIME
ENABLED.....	ZBI
2.1.....	ZBI VERSION
READY.....	ZBI STATUS
TH166 MICRO.....	RFID READER
20.00.00.01.....	RFID HW VERSION
01.03.00.18.....	RFID FW VERSION
USA/CANADA.....	RFID REGION CODE
USA/CANADA.....	RFID COUNTRY CODE
RFID OK.....	RFID ERR STATUS
16.....	RFID READ PHR
16.....	RFID WRITE PHR
F0.....	PROG. POSITION
0.....	RFID VALID CTR
0.....	RFID VOID CTR
NONE.....	ADAPTIVE ANTENNA
A4.....	RFID ANTENNA
570 LABELS.....	NONRESET CNTR
570 LABELS.....	RESET CNTR1
570 LABELS.....	RESET CNTR2
2.798 IN.....	NONRESET CNTR
2.798 IN.....	RESET CNTR1
2.798 IN.....	RESET CNTR2
7.107 CM.....	NONRESET CNTR
7.107 CM.....	RESET CNTR1
7.107 CM.....	RESET CNTR2
001 WIRELESS.....	SLOT 1
*** EMPTY.....	SLOT 2
0.....	MASS STORAGE COUNT
0.....	HID COUNT
OFF.....	USB HOST LOCK OUT
FIRMWARE IN THIS PRINTER IS COPYRIGHTED	

Network Configuration Label

Network Configuration	
Zebra Technologies ZTC ZT620R-203dpi ZPL 76J162700886	
Wired.....	PRIMARY NETWORK
PrintServer.....	LOAD LAN FRONT?
INTERNAL WIRED.....	ACTIVE PRINTSRVR
Wired*	
ALL.....	IP PROTOCOL
192.168.000.017.....	IP ADDRESS
255.255.255.000.....	SUBNET
192.168.000.254.....	GATEWAY
000.000.000.000.....	WINS SERVER IP
YES.....	TIMEOUT CHECKING
300.....	TIMEOUT VALUE
000.....	ARP INTERVAL
9100.....	BASE RAW PORT
9200.....	JSON CONFIG PORT
Wireless	
ALL.....	IP PROTOCOL
000.000.000.000.....	IP ADDRESS
255.255.255.000.....	SUBNET
000.000.000.000.....	GATEWAY
000.000.000.000.....	WINS SERVER IP
YES.....	TIMEOUT CHECKING
300.....	TIMEOUT VALUE
000.....	ARP INTERVAL
9100.....	BASE RAW PORT
9200.....	JSON CONFIG PORT
INSERTED.....	CARD INSERTED
024H.....	CARD HFG ID
9134H.....	CARD PRODUCT ID
ac:3f:a4:82:05:9c.....	MAC ADDRESS
YES.....	DRIVER INSTALLED
INFRASTRUCTURE.....	OPERATING MODE
125.....	ESS ID
1.0.....	CURRENT TX RATE
OPEN.....	WEP TYPE
WPA PSK.....	WLAN SECURITY
1.....	WEP INDEX
000.....	POOR SIGNAL
LONG.....	PREAMBLE
NO.....	ASSOCIATED
ON.....	PULSE ENABLED
15.....	PULSE RATE
OFF.....	INTL MODE
USA/CANADA.....	REGION CODE
USA/CANADA.....	COUNTRY CODE
0x7FF.....	CHANNEL MASK
Bluetooth	
4.3.1p1.....	FIRMWARE
02/13/2015.....	DATE
on.....	DISCOVERABLE
3.0/4.0.....	RADIO VERSION
on.....	ENABLED
AC:3F:A4:82:05:9D.....	MAC ADDRESS
76J162700886.....	FRIENDLY NAME
no.....	CONNECTED
1.....	MIN SECURITY MODE
nc.....	CONN SECURITY MODE
supported.....	10S
FIRMWARE IN THIS PRINTER IS COPYRIGHTED	