

# OontZ

## *Angle 3 BudZ*

### Bluetooth Headphones

### **Quick Start Guide**

Designed and Engineered for  
Comfort and High Quality Audio by  
**CAMBRIDGE SOUNDWORKS.**


TheOontZ.com

# Table of Contents

## Pages

In the Package -----	1
Getting to know your OontZ Angle 3 BudZ -----	2
Charging the Battery -----	3
Turning On and Off -----	4
Pairing & Connecting to your Mobile Device -----	5-6
Play Controls -----	7
To Hear the Best Sound and Best Bass from your OontZ -----	8
Angle 3 BudZ Select the Best Fitting In-Ear OontZ Angle 3 BudZ	
Comfort Fit with Iso-Fit Cushions -----	9
Wearing your OontZ Angle 3 BudZ Under-Ear -----	10
Wearing your OontZ Angle 3 BudZ Over-Ear -----	11
Phone Call Controls -----	12
Troubleshooting & Customer Support -----	13-14
Product Safety & Precautions -----	15
FCC Warning -----	16-17

# In the Package

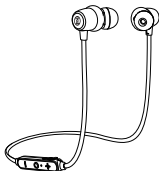


OontZ Angle 3 BudZ Headphones



Quick Start Guide



3 - pairs of in-ear earphones  
Large | Small | mini

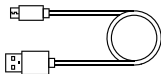


1 - USB Micro  
Charging Cable



iso-Fit Cushions

# Getting to know your OontZ Angle 3 BudZ

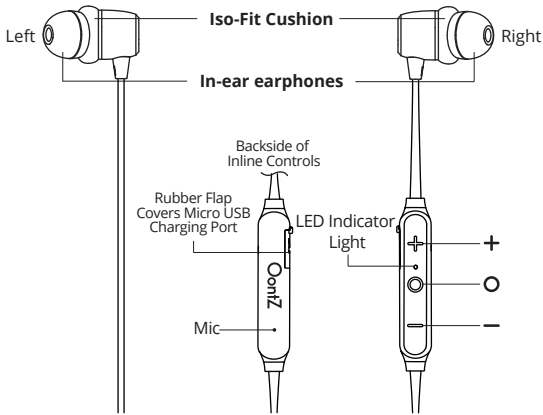

Note: When you wear the OontZ Angle 3 BudZ headset, note that the side with the control button is to the right.

# Charging the Battery


**Step 1:** Carefully lift the rubber flap that covers the Micro USB Charging Port and rotate the flap to the rear

**Step 2:** Insert the smaller end of the Micro USB Cable into the Micro USB Charging Port as shown.

**Step 3:** Insert the other end of the Micro USB cable into either a USB wall charger for a smartphone or a USB port on your laptop to charge the battery. The LED Indicator Light will come on.

## The LED Indicator Light

**Slowly flashing Red when charging**  
**Solid Red when fully charged**  
charge a low battery

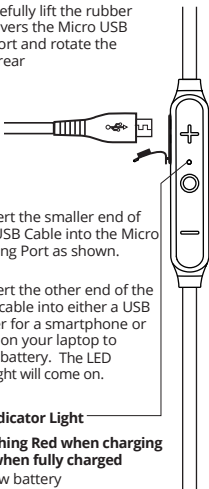

Your OontZ Angle 3 BudZ rechargeable battery will have a partial charge and be ready to play. For maximum playtime, fully charge the battery.

## Music Play Time

Up to 8 hours on a full charge, with volume at 60%. Louder volume will reduce play time.

## Automatic Turn Off

The OontZ Angle 3 BudZ will turn off 15 minutes after being disconnected from your mobile device.

## Charge indicator on iPhone

The vertical battery charge level will appear in the top right corner of your iPhone screen




## Low Charge Remaining Indicator

When the battery charge gets down to 20% there will be a voice prompt and the RED LED Light will flash in rapid succession.

## Charging Time

It will take about 2 to 3 hours to fully charge a low battery

# Turning On and Off

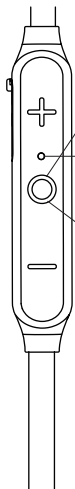

## **Turn ON**

Press and Hold Down  button for 2 Seconds  
Voice prompt: "Hello"

## **LED Indicator Light**

will turn on

## **Flashing Blue rapidly**

indicates OontZ Angle 3 BudZ is in pairing mode

## **Flashing Blue 3 times every 5 seconds**

indicates OontZ Angle 3 BudZ is connected to a mobile device and is ready to play

## **Turn OFF**

Press and Hold Down  button for 2 Seconds  
Voice prompt: "Goodbye"

## **LED Indicator Light**

flashes RED twice and turns off

**LED Indicator Light**

# Pairing & Connecting to your mobile device

- Your mobile device needs to be within 30 unobstructed feet of the OontZ Angle 3 BudZ
- Make sure your OontZ Angle 3 BudZ battery has a sufficient charge

## **Turn ON your OontZ Angle 3 BudZ** **The LED Indicator Light will turn on**

### **If the blue light is rapidly flashing**

the OontZ Angle 3 BudZ is ready to pair and connect.

### **If the blue light is flashing 3 times every 5 seconds**

the OontZ Angle 3 BudZ has automatically reconnected to the last mobile device it was connected to and is ready to play.

The OontZ Angle 3 BudZ will try to reconnect each time it is turned on.

**The OontZ Angle 3 BudZ can be connected to one mobile device at a time.** To pair and connect to a different mobile device, you need to disconnect the currently paired mobile device. To disconnect it:

**press and hold down the  $\oplus$  button and the  $\ominus$  button together for 3 seconds. Voice prompt: "Pairing"**

The blue light will begin flashing and the OontZ Angle 3 BudZ is ready to pair and connect.



# Pairing & Connecting to your Mobile Device (continued)

## **To pair and connect from an iPhone, iPad, or iPod:**

- Go to Settings > Bluetooth, check Bluetooth is on
- Select 'OontZ Angle 3 BudZ' when it appears under OTHER DEVICES
- The OontZ Angle 3 BudZ will connect in a few seconds
- The LED Light on your OontZ Angle 3 BudZ will flash BLUE 3 times every 5 seconds and you are ready to play


## **To pair and connect from a Smartphone or Tablet:**

- Go to Settings > Bluetooth, check Bluetooth is on
- Scan or Search and select 'OontZ Angle 3 BudZ' when it appears under AVAILABLE DEVICES
- The OontZ Angle 3 BudZ will connect in a few seconds
- The LED Light on your OontZ Angle 3 BudZ will flash BLUE 3 times every 5 seconds and you are ready to play

**Note: Your Smartphone or Tablet instructions may vary, please check your mobile device's manual for specific pairing instructions**



# Play Controls

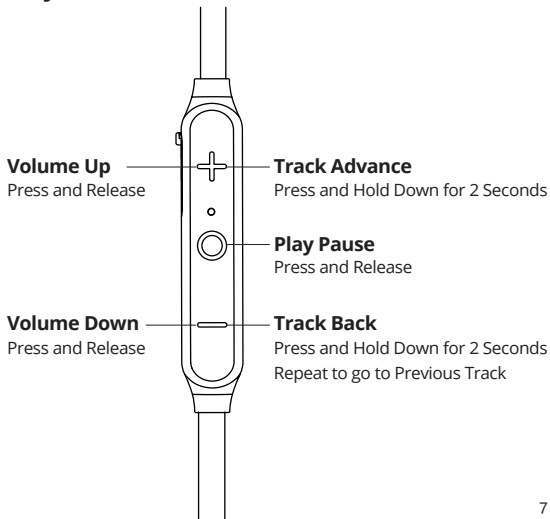

# To Hear the Best Sound and Best Bass from your OontZ Angle 3 BudZ Select the Best Fitting In-Ear OontZ Angle 3 BudZ

A comfortable snug fit of the In-Ear OontZ Angle 3 BudZ provides the highest quality listening experience with the OontZ Angle 3 BudZ. We suggest starting with the medium size In-Ear OontZ Angle 3 BudZ to learn if they are snug and comfortable. If they do not feel snug try the large In-Ear OontZ Angle 3 BudZ, and if the medium are too tight try the small In-Ear OontZ Angle 3 BudZ. The largest size In-Ear OontZ Angle 3 BudZ that are comfortable will provide the best overall sound experience.

Large | Small | Mini

Side View



MINI

SMALL


LARGE



Top View


# Comfort Fit with Iso-Fit Cushions

The Iso-Fit Cushions help provide a comfortable snug fit, perfect for listening during sports and physical activity.

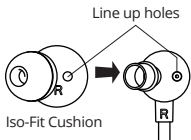

**Step 1:** With the In-Ear OontZ Angle 3 BudZ removed, slide the Iso-Fit Cushion over the shaft of the earbud with the smaller tube opening facing outwards from the earbud and the small holes lined up

Side view



**Step 2:** Slide the In-Ear OontZ Angle 3 BudZ onto the earbud shaft


Side view



**Step 3:** Your OontZ Angle 3 BudZ are now ready to insert into your ear


## Wearing your OontZ Angle 3 BudZ Under-Ear

Install the Right (R) Iso-Fit Cushion onto the Right (R) earbud, with the holes lined up as shown. Insert the Right earbud into your right ear canal. The Iso-Fit Cushion should fit comfortably and snugly in your ear, allowing for the best sound quality.

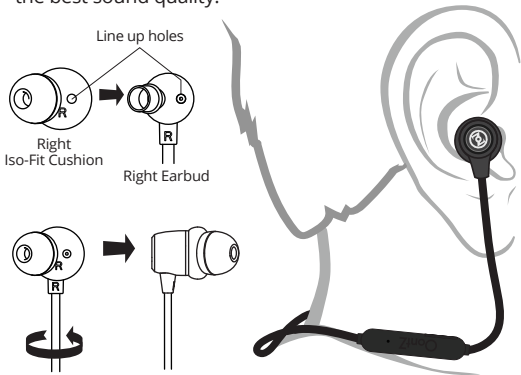


## Wearing your OontZ Angle 3 BudZ Over-Ear

For an even more secure fit during rigorous activity you can wear your OontZ Angle 3 BudZ Over-Ear, putting your Left earbud in your right ear and your Right earbud in your left ear. The inline controls will then be on your left side.

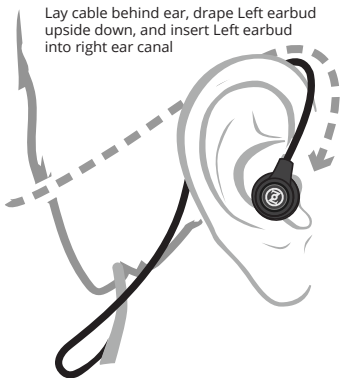

# Phone Call Controls

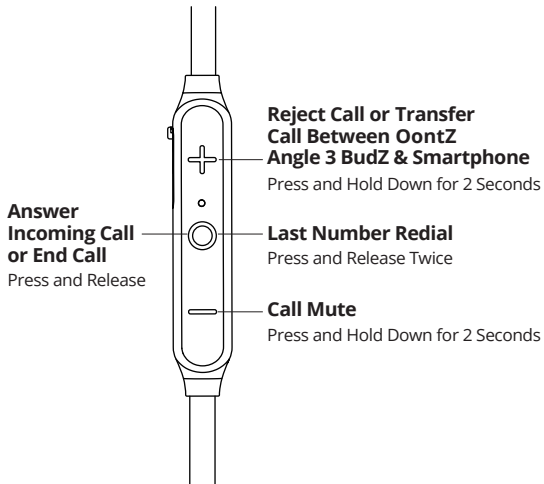


# Troubleshooting & Customer Support


For assistance with questions or any issue with your OontZ Angle 3 BudZ that is not answered in the troubleshooting tips below, please contact us by

---

## OontZ Angle 3 BudZ will not turn on

- The battery may have become fully drained. Charge the OontZ Angle 3 BudZ using a USB wall charger from a Smartphone/iPhone or tablet for at least 15 minutes, then press the  button to turn the OontZ Angle 3 BudZ on. Then continue charging the battery.
- 

## Cannot pair or connect the OontZ Angle 3 BudZ with my mobile device

- Your mobile device may be out of range (signal loss) and you will hear a double beep every 15 seconds. Move back within 30 unobstructed feet of the mobile device. The OontZ Angle 3 BudZ will reconnect, there will be a voice prompt “**connected**”. Click the  button to start playing again.
- Check that your OontZ Angle 3 BudZ has a sufficient battery charge, the headphones may not connect when the battery has a low charge. Connect the OontZ Angle 3 BudZ to a charging source and try again to pair and connect.
- Check the LED light to make sure it is flashing Blue rapidly. If it is solid blue the OontZ Angle 3 BudZ is already connected to another mobile device. The OontZ Angle 3 BudZ can be connected to one mobile device at a time. You need to disconnect the connected mobile device then you can connect to the next mobile device. Please see instructions on page 5.
- Your mobile device may have a temporary Bluetooth connection issue please try the following steps which can resolve this: (continued next page)

## **Cannot pair or connect the OontZ Angle 3 BudZ with my mobile device (continued) For iPhone, iPad, iPod**

- Turn off the OontZ Angle 3 BudZ, go to the Bluetooth device list on your iPhone, iPad or iPod and check if the OontZ Angle 3 BudZ is listed. If it listed press the icon next to the OontZ Angle 3 BudZ and then forget this device, twice. With the OontZ Angle 3 BudZ removed from the list or if it was not listed, do a hard reset on your iPhone, iPad or iPod by pressing and holding down the Home and sleep buttons at the same time for about 10 seconds until the Apple icon appears and it restarts. When it restarts turn on the OontZ Angle 3 BudZ and then try again to pair and connect.
- 

## **For Smartphones and Tablets**

- Turn off the OontZ Angle 3 BudZ, go to the Bluetooth device list on your Smartphone or Tablet and check if the OontZ Angle 3 BudZ is listed. If it listed press the icon next to the OontZ Angle 3 BudZ and then press Unpair this device. With the OontZ Angle 3 BudZ unpaired or if it was not listed, do a hard restart on your Smartphone or Tablet. When it restarts turn on the OontZ Angle 3 BudZ and then try again to pair and connect.
- 

## **No audio from your mobile device**

- Make sure the volume is up on your OontZ Angle 3 BudZ.
- Remove the OontZ Angle 3 BudZ from the Bluetooth device list on your mobile device, restart your mobile device, and then re-pair and connect to the OontZ Angle 3 BudZ.
- Make sure your mobile device is playing audio, not paused and volume is up.
- Your mobile device may be out of range, move closer within 30 unobstructed feet.
- Turn your OontZ Angle 3 BudZ off and back on.
- Some mobile device have a default volume when they connect to a new device, try turning up the volume on the OontZ Angle 3 BudZ and the mobile device after connecting.



## Poor sound quality from a mobile device

- Your mobile device may be out of range, move closer within 30 unobstructed feet.
  - If your iPhone, iPad, or iPod has an option to select stereo or Mono, select Stereo.
  - Try another track or music app.
  - Turn your OontZ Angle 3 BudZ off and back on.
  - Some mobile devices need to have their WIFI turned off to improve audio quality over Bluetooth.
  - It may be that you need to re-pair the OontZ Angle 3 BudZ with your mobile device. Remove it from your paired devices list, restart the mobile device and then follow the steps to re-pair the headphones.
- 

## OontZ Angle 3 BudZ won't fit or stay in place

- Try one size larger In-Ear OontZ Angle 3 BudZ.
- Make sure you have the Iso-Fit Cushions in place.
- Be sure the OontZ Angle 3 BudZ is being worn correctly by checking on each earbud for which side it should be worn on.

## Product Safety & Precautions

- 1 . Follow all instructions – All operating and use instructions should be followed.
- 2 . Do not use this apparatus near water while plugged in for charging, due to risk of electric shock.
- 3 . Protect the Micro USB charging cable from pinched particularly at the connectors.
- 4 . Unplug the Micro USB charging cable during lightning storms or when unused for long periods of time.

### PLEASE LISTEN RESPONSIBLY

Avoid listening at excessive volume levels or for prolonged periods.  
Do not use near traffic.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Wireless Bluetooth Headphones

Model No. : OontZ Angle 3 BudZ

Operating Voltage : 5V  $\approx$  1.0A

FCC ID:2AGA6-OONTZA3BZ