

UNIT/ FEATURES

NECK LOCK

Stays On!

HOUSING

Angled


CONTROL

Mic & Track

CUSHIONS

3 Sizes

RUBBERIZED COATING

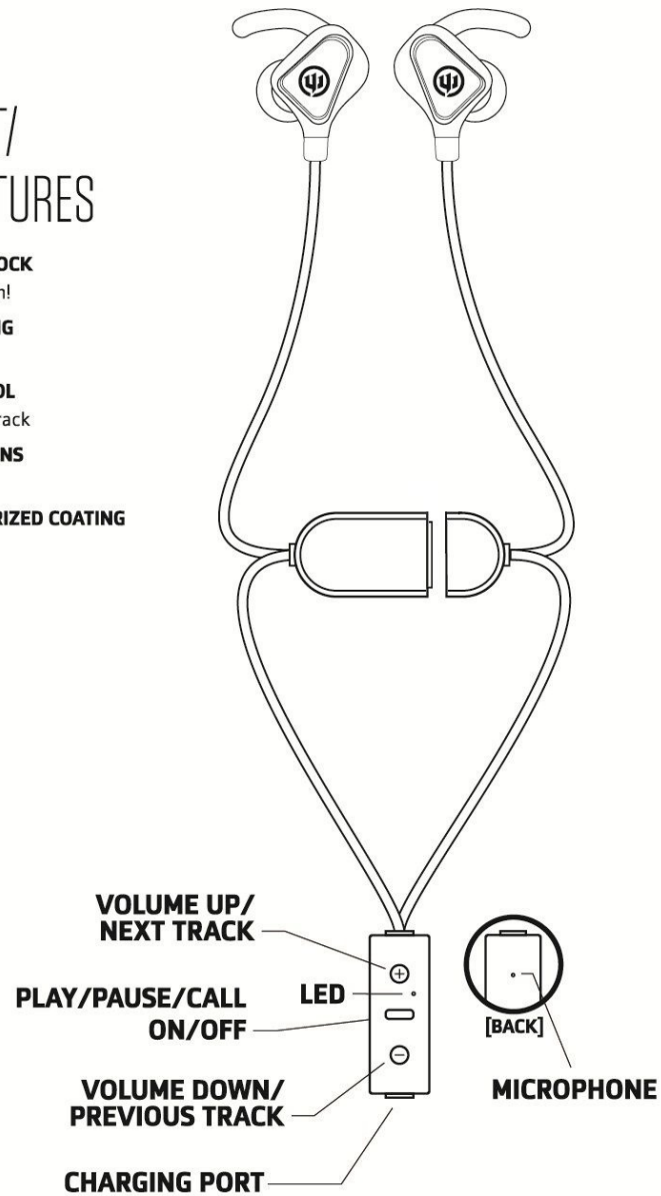

BLUETOOTH

VERSION

4.2

RANGE

32 Feet/10 Meters

BATTERY LIFE

4.5 Hours

CHARGE TIME

2 Hour

SPECS

DRIVER

10 mm Neodymium

SENSITIVITY

100 dB

FREQUENCY

20-20,000 Hz

IMPEDANCE

16 Ohms



Neck Lock



3 Cushions



Noise Isolation



Mic & Track Control



Hands Free



High Fidelity



Enhanced Bass



Angled Housing



WICKED AUDIO, INC.
875 W 325 N
Lindon, UT 84042

WICKEDAUDIO.COM



TROUBLESHOOTING

1 Product does not turn on:

- 1a - Hold down power button for 3-5 seconds until LED turns on
- 1b - Make sure battery is charged. Charge battery for at least 30 minutes and power on again

2 Your Bluetooth device is unable to search for/locate/pair with Wicked Audio Bluetooth product:

- 2a - Be sure your Bluetooth device has Bluetooth capabilities turned on/activated
- 2b - Be sure your Wicked Audio product is in pairing mode (LED will be flashing Red AND Blue)
- 2c - Delete/Forget/Unpair the Wicked Audio product from your Bluetooth list on your device or other nearby devices and search again
- 2d - If still unable to search for/locate/pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search again

3 Disconnected after your Bluetooth device successfully connected/paired with your Wicked Audio product:

- 3a - The Bluetooth signal has been blocked with an obstruction/exceeded Bluetooth range between your Bluetooth device and the Wicked Audio product
- 3b - Check to see if the battery is at low power, charge if needed

4 Unable to connect/pair your desired Bluetooth device with your Wicked Audio product after connecting your Wicked Audio product with multiple Bluetooth devices:

- 4a - Your Wicked Audio product will attempt to connect/pair with last Bluetooth device it paired with
- 4b - Turn off Bluetooth capabilities on other Bluetooth

TROUBLESHOOTING CONTINUED...

devices in your vicinity that were recently paired to your Wicked Audio product. This will allow your desired Bluetooth product to connect with your Wicked Audio product.

- 4c - If still unable to pair with Wicked Audio Bluetooth product, please restart your Bluetooth device and the Wicked Audio product and search again.

5 No sound when talking with someone on the phone using mic on Wicked Audio product

- 5a - Make sure the Wicked Audio product is successfully paired with your Bluetooth device
- 5b - Increase the volume of your Bluetooth device and/or Wicked Audio product

6 No sound when playing music

- 6a - Increase the volume of your Bluetooth device and/or Wicked Audio product
- 6b - Make sure the Wicked Audio is successfully paired with your Bluetooth device

7 Unable to charge

- 7a - Wicked Audio product will have a solid Red LED when charging and the LED will turn off when fully charged.
- 7b - Make sure the USB cable is connecting well with charger and the micro USB cable is connecting well with your Bluetooth device

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. .