loffee

TOUCH

Triple Mode Connection Mechanical Keyboard

Product name: **TOUCH 68 Triple Mode Connection Mechanical Keyboard**


Model: OE902, OE912 SHENZHEN LOFREE CULTURE CO., LTD


SPECIFICATIONS:

Number of Multimedia Keys: 12 Materials: ABS Body, PBT Keycaps Interface: Type-C Mode: 2.4G & Bluetooth & Wired


Device Name: Touch68@Lofree Dimensions:310mm*109mm*5L5mm

FEATURE DESCRIPTION:

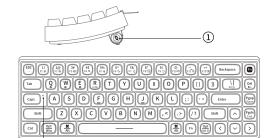

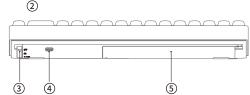

Shir ZXCVBNM<->/? Shir A

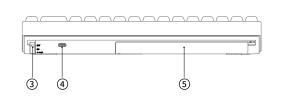

1 Battery Indicator Wired Mode

- the indicator light is steady white.
- Bluetooth Mode/2.4G Wireless USB mode.
- When the power is lower than 20%, the indicator light flashes slowly in red; When the power is lower than 3%, the indicator light flashes
- quickly then automatically turn off;

② Status indicator (white light) Caps Lock Indicator

Solid LED light = The uppercase mode is turned on; LED light off= The uppercase mode is turned off;

Bluetooth Pairing Indicator(white light)

- Flashing LED light = The device is in Bluetooth pairing mode; When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again;
- During each switch to a new device, the Pairing Indicator flashes quickly for 3 seconds, and then turns off again

•2.4G Wireless USB Pairing Indicator

- When the 2.4G receiver is started for pairing, the Pairing indicator flashes quickly for 3 seconds
- When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again

3 Status switch 2.4G/BT:

2.4G / Bluetooth mode / ON: Wired mode / OFF: Off

Type-C interface

(5) Battery cover




Detailed user guide


2.4G Wireless USB mode

Swipe to the right to remove the battery cover



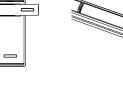


4 Insert the 2.4G receiver into 3 Install the battery cover the USB port of the computer

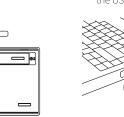


Note: MAC/IOS system devices do not support multimedia functions under 2.4G USB connection

5 Switch the status to 2.4G/BT gear


6 Press and hold Fn+R to start

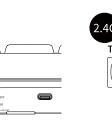

7 The status indicator flashes 8 This light turns on for 3 quickly for 3 seconds then seconds then turns off again paired successfully

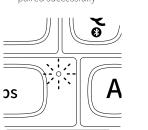

2.4G connection mode

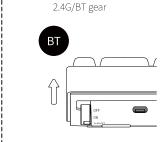

Bluetooth mode:

Switch the status to


3 Turn on the Bluetooth function of your device, search for "Touch68@Lofree" and connect



4 When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again

2 Long press Fn+Q/Fn+W/

Fn+E until the status

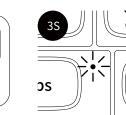

Wired mode Short press Fn+Q/ Fn+W/ Switch the status to Fn+E to switch Bluetooth the ON connected devices 2 connect the keyboard to computer with Type-C cable to complete the wired connection

System Switch

Fn+N in the upper right corner is the key to trigger the corresponding system function of windows Fn+M in the upper right corner is the key to trigger the corresponding system function of Mac

Multimedia and function keys

Fn+l in the upper right corner...= the

| function k | | corner the |
|----------------|-------|------------|
| Function sign | Мас | Windows |
| ♠ +Shift+ESC | `~ | `~ |
| Fn +1 | F1 | F1 |
| Fn +2 | F2 | F2 |
| Fn +3 | F3 | F3 |
| Fn +4 | F4 | F4 |
| 6 +5 | F5 | F5 |
| Fn +6 | F6 | F6 |
| fn +7 | F7 | F7 |
| Fn +8 | F8 | F8 |
| Fn +9 | F9 | F9 |
| fn +() | F10 | F10 |
| Fn + | F11 | F11 |
| Fn ++- | F12 | F12 |
| Fn +\ | PrtSc | PrtSc |
| ⋒ +Del | Ins | Ins |
| ₱ +Pgup | Home | Home |
| ⋒ +Pgdn | End | End |
| | | |

Fn Fn+1 in the Bottom left corner...= the 🛚 multimedia keys

| Muttime | aia sign | мас | vvindows |
|----------|------------------|---------------------|---------------------|
| FN+1! | \$ | Reduce brightness | Reduce brightness |
| FN+2@ | * | increase Brightness | increase Brightness |
| FN+3# | 60 | Multi Screen | Multi Screen |
| FN+4\$ | Q | Search | Search |
| FN+5% | Ψ | / | ON/Cortana |
| FN+6^ | C | | Sleep Mode/ON |
| FN+7& | ◁ | Previous Track | Previous Track |
| FN+8* | 00 | Play/Pause | Play/Pause |
| FN+9(| \triangleright | Next Track | Next Track |
| FN+0) | ⊲x | Mute | Mute |
| FN+ | ♦ | Volume Down | Volume Down |
| FN+=+ | (1)) | Volume Up | Volume Up |
| FN+Opt/C | itrl e | Menu Button | Menu Button |
| | | | |

Note: Multimedia key FN+5%/FN+6^: Some models of Mac system devices may not support the triggering of this multimedia key due to the problem of matching the connected device model and system version.

NAME AND CONTENT OF HAZARD-OUS SUBSTANCES IN PRODUCT:

| Harmful | Hazardous substances | | | | | |
|----------|----------------------|--|-------------|--|--|---|
| Elements | | | Caulillulli | | | Polybrominated Diphenyl Ethers (PBDE) |

- This table is prepared in accordance with the provisions of SJ/T
- The classification and marking of this product was performed in accordance with the EU directive 2011/65/EU and the revised
- O:Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit
- X:Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

ENVIRONMENTAL PROTECTION INSTRUCTIONS:

this product will not leak or change under normal use conditions fora period often years. Duringthesame period, the electronic components of this product witl not cause serious environmen-tal pollution orserious.damage to human health or property white the products are being used by the consumer.

According to the Chinese electronic industry standard SJ/T 11364-2014 and retated Chinese government regulations, this have an environmentally friendly use period mark, depending on the component and component manufacturer, the mark lifespan on the product and its components may vary. The expiration

date on the component takes precedence over any conflicted or different UFUP [abelson the product.

•If the battery is not replaced properly, there may be leakage or explosion and personal injury hazards.• Do not use the battery when there is leakage, discoloration, deformation, or any other

• Do not leave the battery in a discharged or unused state for a long time.

•Do not short-circuit the product •Battery life varies with usage. Used batteries should be disposed

of in accordance with local laws or thrown away in trash cans for recycling electronic devices. •If any liquid accidentally enters the product, please immediately disconnect the power supply and remove the product. Continue

to use the product may cause fire or electric shock. Please inspection and maintenance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. cations. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can

be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

responsible for compliance could void the user's authority to operate the equipment

LOFFEE

202-F8, F518 Idea Land, 1065 Bao Yuan Road, Shenzhen

Service Hotline: 4006002083 www.lofree.com.cn www.lofree.co ■ lofree.co lofreeco lofree.co