



**QUALCOMM Globalstar  
GSP-1600 Tri-Mode Phone  
User Guide**



This guide is based on the production version of the QUALCOMM Globalstar GSP-1600 Tri-Mode Phone. Software changes may have occurred after this printing.

QUALCOMM reserves the right to make changes in technical and product specifications without prior notice.

QUALCOMM Incorporated  
5775 Morehouse Drive, San Diego, CA 92121-1714  
Document Number 80-98153-1EN Rev. A  
Model Number CKABP0001

Copyright 1999 QUALCOMM® Incorporated  
All rights reserved

This technology was exported from the United States in accordance with Export Administration Regulations. Diversion contrary to U.S. law prohibited.

QUALCOMM® is a registered trademark of QUALCOMM Incorporated.  
Digital by QUALCOMM® is a registered trademark of QUALCOMM Incorporated.  
SMART KEY™ is a trademark of QUALCOMM Incorporated.  
Globalstar™ is a trademark of Loral Qualcomm Satellite Services, Inc.

Printed in the United States of America

## ***Cautions and Warnings***

---



### **Warning**

**Only use the batteries, antennas, and chargers provided by QUALCOMM. The use of any other type may be dangerous.**



### **Warning**

**Allow only authorized personnel to service the phone and its accessories. Unauthorized service can invalidate the warranty.**



### **Caution**

**Any changes or modifications to this equipment not expressly approved in this document could void your warranty and your authority to operate this equipment.**



### **Caution**

**Avoid exposing the phone and accessories to rain or other liquids. If the phone gets wet, turn the power off immediately and remove the battery pack. See Battery Care and Maintenance, page 53, for more information.**



### **Note**

When using the QUALCOMM Globalstar Tri-Mode Phone near a television or radio, the phone can cause interference. Regulatory agencies in your area, such as the United States Federal Communications Commission (FCC) or Canadian Industry Canada (IC), can require you to stop using the phone if such interference cannot be eliminated. If you need assistance, contact your satellite or cellular service provider.



## Contents

---

<b>Getting Started</b>	<b>1</b>
Understanding your phone	1
Contacting customer service	1
Solving problems	1
Understanding this guide	1
Preparing for satellite calls	2
Making satellite calls	3
Making cellular calls	4
Answering calls	4
Ending calls	4
Displaying your phone number	4
<b>Phone Basics</b>	<b>5</b>
Phone features and keypad	5
Display indicators	7
Security module	8
Antenna basics	8
Information key	8
<b>Calling Basics</b>	<b>9</b>
Turning the phone on	9
Turning the phone off	9
Standby mode	9
Power save mode	10
Entering numbers	10
Making emergency calls	11
Redialing a call	11
Muting a call	11
Possible service provider services	11
<b>Menu Basics</b>	<b>13</b>
Accessing main menu	14
Navigating and using menus	14
<b>Phone Book Menu</b>	<b>15</b>
Entering letters and other characters	15
Entering pauses	16
Saving entries	16
Finding entries	17
Editing entries	18
Erasing entries	18
Making entries secret	18
Viewing numbers	19
Prepending numbers	19
Sending tones	19
Speed dialing	20
One-touch dialing	20
<b>Call History Menu</b>	<b>21</b>
Accessing call history list	21
Viewing call history details	22

<b>Messages Menu</b>	<b>23</b>
Voice messages	23
Text messages	24
<b>Features Menu</b>	<b>27</b>
Key Guard	27
Scratchpad	27
<b>Call Info Menu</b>	<b>29</b>
Last Call	29
Home Calls	29
Roam Calls	29
Recent Calls	30
All Calls	30
Resetting call counters	30
<b>Security Menu</b>	<b>31</b>
Lock code	31
Locking the phone	31
Restricting the phone	32
Entering a new lock code	32
Entering priority numbers	32
Erasing call history list	33
Erasing phone book entries	33
Erasing SMS messages	33
Resetting preferences	34
Entering PIN	34
<b>Preferences Menu</b>	<b>35</b>
Sounds	35
Display	37
Alerts	41
Calling	42
<b>System Menu</b>	<b>45</b>
Status	45
Force System Reacquisition	46
Version	46
Service Provider Select	46
Service Provider	49
Territory	49
Manual Mode	49
Auto Mode	50
NAM Select	51
My Numbers	52
<b>Battery Care and Maintenance</b>	<b>53</b>
Battery	53
Battery care and charging	53
Battery chargers	54
Low battery	54
Battery removal	55
Battery replacement	55
<b>Safety Information</b>	<b>57</b>
Exposure to radio frequency signals	57
Antenna care	57
Phone operation	57

Driving .....	58
Electronic devices .....	58
Aircraft .....	59
Blasting areas .....	59
Potentially explosive atmospheres .....	59
For vehicles equipped with an air bag .....	59
<b>Accessories .....</b>	<b>61</b>
Battery .....	61
Leather case .....	61
AC wall charger .....	61
Universal travel charger .....	61
Cigarette lighter adapter .....	61
Data cable .....	61
Hands-free car kit .....	62
<b>Troubleshooting .....</b>	<b>63</b>





## Getting Started

It is *very* important that you read this section because your tri-mode phone is unique – it combines satellite technology and cellular technology in one phone. For more detailed information on usage, refer to the other sections in this guide. If you need further assistance, see Solving problems, page 1.

### Understanding your phone

Consider your phone as “two phones in one” because it requires operation in two distinct ways to make and receive two different types of calls:

- Satellite calls – Calls made via satellite. This is known as Globalstar satellite mode.
- Cellular calls – Calls made by cellular phone technology. There are two cellular modes: digital mode and analog mode.



#### Tip

The calling mode has probably been preset on your phone. To view or change the current setting, set your mode preference (see Auto Mode, page 50) so the mode is automatically selected when you turn your phone on (see Manual Mode, page 49).

### Contacting customer service







You may have different service providers for Globalstar satellite service and cellular service. Contact the appropriate service provider for customer service.

### Solving problems

If you have problems using your phone, see Troubleshooting, page 63. If you still have trouble, contact your satellite or cellular service provider.


### Understanding this guide

These conventions or representations are used in this guide:


Type of Action	Example	Action
Key Presses	Press  .	Press key briefly.
	Press and hold  .	Press key for more than one second.
Using SMART KEYS™	Press  <b>book</b> .	Press the SMART KEY  under the appropriate word on the screen.
Scrolling	Scroll to select “yes” or “no.”	Press either the volume buttons on the side of the phone or  and  .

## Preparing for satellite calls


- If the security module is not properly installed, you can only make calls to emergency numbers and you cannot receive calls. Your satellite service provider installs and maintains the security module (see Security module, page 8, for more information).
- Charge and properly install the battery. See Battery Care and Maintenance, page 53.
- Rotate the Globalstar satellite antenna located on the back of the phone (see Phone features and keypad, page 5). You **do not** need to push or pull the antenna because it automatically extends as you rotate it and automatically retracts when stored.

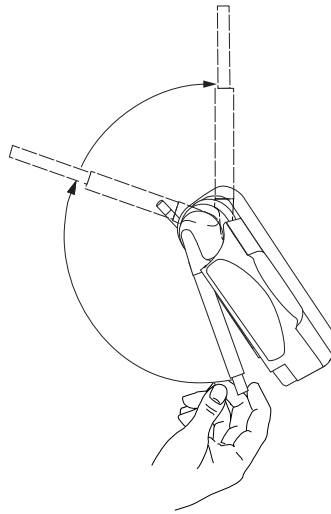

- Move the antenna to its optimal position (pointing straight up to the sky) until it sets into one of two positions. You cannot make or receive a satellite call with the Globalstar satellite antenna stored.

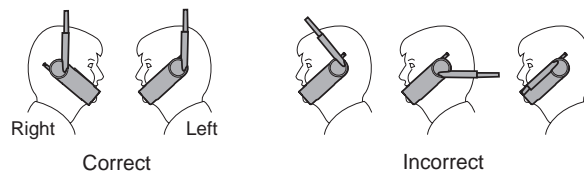

- Position yourself outdoors so that your view of the sky is clear to prevent dropped calls. For best performance, move away from tall obstacles such as buildings or trees. If you have a clear view of the sky, the satellites will have a clear view of you and the phone. The phone will *not* operate inside a building nor a vehicle unless you are using the car kit.

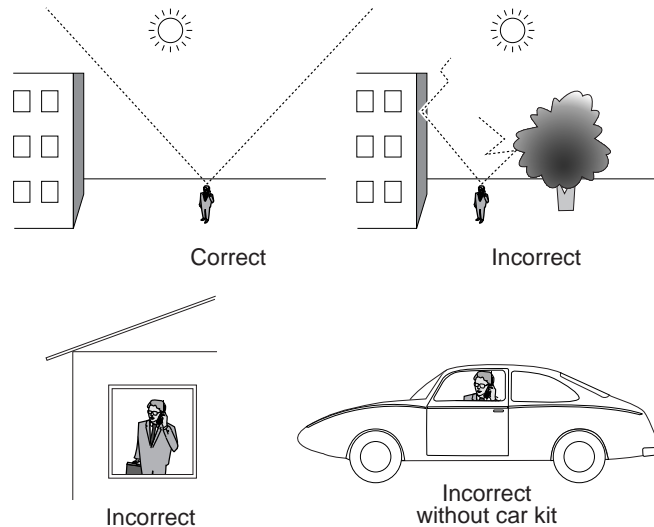

## Making satellite calls

1. Rotate the satellite antenna (see Preparing for satellite calls, page 2).
2. Press and hold **PWR** to turn your phone on.
3. If your phone is in cellular mode, select Globalstar satellite mode by pressing and holding **\* 1** to display the mode menu. Then press **abc 2** for Globalstar.
4. Enter the phone number that you want to call. To make international calls, see International dialing, page 11.




### Note

When using the keypad or viewing the screen in Globalstar satellite mode, keep the antenna pointing up to maintain service.

5. Press **SEND**. A message displays if the phone is locked, if the phone number is restricted, or if there is another problem.

## Making cellular calls

1. Press and hold **(Pwr)** to turn your phone on.
2. If your phone is in Globalstar satellite mode, select digital or analog mode by pressing and holding **(\*)** to display the mode menu. Then press either **(def 3)** for Digital or **(ghi 4)** for Analog.
3. Select the appropriate cellular NAM (see NAM Select, page 51).
4. Fully extend the cellular antenna.

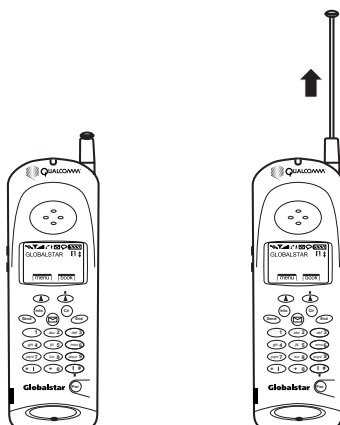

5. Enter the phone number that you want to call.
6. Press **(SEND)**. A message displays if the phone is locked, if the phone number is restricted, or if there is another problem.

## Answering calls

When you receive a call, the phone rings, the indicator light flashes, and "Incoming Call" flashes on the screen until you answer the call.

### To answer a call

Do one of the following:

- Press **(SEND)**.
- From standby mode, press any key except **(Pwr)** or **(END)** if Any-Key Answer is set to "on" (see Any-Key Answer, page 43).

## Ending calls

- Press **(END)**. The total time of the call displays.

## Displaying your phone number


- The currently registered phone number briefly displays when you turn your phone on or press **(Info)** from standby mode.
- To display all three phone numbers (NAMs), press **(▲)** **menu** and then press **(wxyz 9)** for My Numbers. (See My Numbers, page 52.)

## Phone Basics






Learn about these topics in this section:

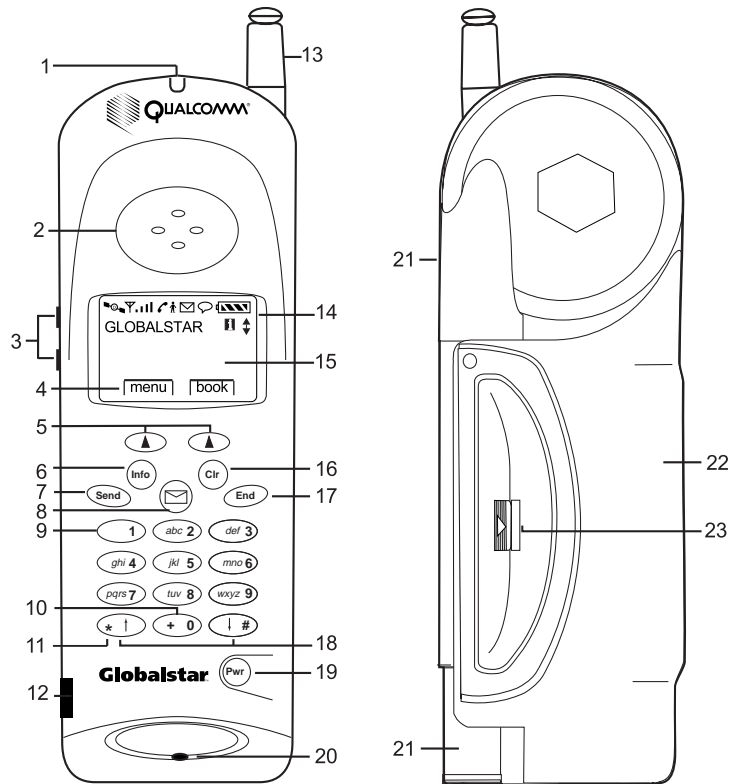- Phone features and keypad
- Display indicators
- Security module
- Antenna basics
- Information key

### Phone features and keypad




1. Light indicator – Flashes when turning phone on or when receiving incoming calls.
2. Earpiece
3. Volume buttons – Adjust volume levels. Scroll through the menu items if a scroll arrow displays. Move the cursor when editing alphabetic characters or digits.

4. SMART KEY options – Select the option on the screen by pressing the SMART KEY  below it.
5. SMART KEYS – Press the SMART KEY  to select the appropriate option on the screen.
6. Information key – Insert pauses and hyphens. Additional help is available if  displays on the screen (for example, when the phone registers and  displays, press  for service provider information and the current phone number).
7. Send key – Originate or answer a call. Also used for features such as call waiting.
8. Message key – Access text messages and voice mail notifications. See Messages Menu, page 23.
9. Punctuation key – Add punctuation or spaces when entering letters.
10. International dialing or plus (+) key – Make international calls (see International dialing, page 11).
11. Mode select – Press and hold to manually select Globalstar satellite, digital, analog, or auto mode (see Manual Mode, page 49).
12. Security module – Required to activate phone for Globalstar satellite service (see Security module, page 8).
13. Cellular antenna
14. Display indicators – Show phone and battery status (see Display indicators, page 7).
15. Screen
16. Clear key – Delete characters (see Entering numbers, page 10, and Entering letters and other characters, page 15). Return to previous screen.
17. End key – End a call. If not on a call, return to standby mode.
18. Scroll keys – Scroll through menu items if a scroll arrow displays on the screen. Move cursor.
19. Power key – Turn the phone on or off.
20. Microphone
21. Globalstar satellite antenna (see Preparing for satellite calls, page 2).
22. Battery
23. Battery release latch

## Display indicators

The indicators on the screen show the status of the phone and the battery charge level at a quick glance.

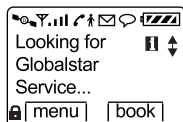

	Phone operating in Globalstar satellite mode
	Phone operating in digital mode
	Phone operating in analog mode if  or  do not display
	Signal strength ranging from a strong signal (four lines) to an extremely weak signal (one line)
	Call in progress
	No service available. If service is unavailable, the phone sounds a beep when you try to make a call.
	Roaming for service outside home area
	Text message received
	Voice mail notification received
	Battery charge. Ranges between four diagonal bars (full charge) to one bar (minimal charge) to no bars and blinking (no charge).
	Help available; press . For example, displays when the phone is registered and service provider information and the current phone number.
	Designates call privacy (cellular) or encryption (Globalstar)
	Designates the menu option currently selected
	Indicates that you can scroll between screens using the volume buttons or   and
	Indicates that the text message is locked
	Indicates that the text message is unlocked

## Security module

The security module activates your phone when in Globalstar satellite mode. It is located on the lower left side of the front of the phone. The security module that comes with your phone works only with that phone and is not interchangeable.



### Caution

**Do not remove the security module.**

When in Globalstar satellite mode, the security module must be properly installed to make or receive calls. If it is not properly installed, you can only make calls to emergency numbers. For more information, contact your satellite service provider, who installs and maintains the security module.

## Antenna basics


Phone performance depends on the strength of the signal it receives. As you fully extend the cellular antenna or rotate the Globalstar satellite antenna, the signal strength indicator shows the strength of the signal received in that particular antenna position. You cannot make or receive a satellite call with the Globalstar satellite antenna stored.


It is important to use the antennas properly for the best performance. Follow these guidelines for the Globalstar satellite and cellular antennas:

- Never hold the phone by the antenna.
- Do not use the phone if either antenna is damaged, unless you are using the phone with the car kit's antenna.

For more information on how to use the antennas, see Preparing for satellite calls, page 2, and Making cellular calls, page 4.

## Information key

The Info (Information) key  has several different functions:

- Provides help if **I** displays on the screen.
- When the phone registers and **I** displays on the screen, press  for service provider information and the current phone number.
- Displays your current phone number while on a call.
- Inserts pauses and hyphens when entering a phone number.



Learn about these topics in this section:

- Turning the phone on and off
- Standby and power save modes
- Entering numbers
- Making emergency calls, redialing, and muting
- Possible service provider services (international dialing, call waiting, three-way calling, and caller ID)

### Turning the phone on

1. Make sure that the battery is charged and properly installed (see Battery chargers, page 54, and Battery replacement, page 55).
2. Press and hold **(Pwr)** until the indicator light illuminates (about one second). The phone is now in standby mode (see Standby mode, page 9) and starts looking for service. The message that displays on the screen depends on the service mode selected (see Manual Mode, page 49).

### Turning the phone off

1. Press and hold **(Pwr)** until "Powering Off" displays.
2. Release **(Pwr)**.




#### Note

If you press **(Pwr)** for less than one second, the phone does not turn off.

### Standby mode

After you turn the phone on, it is in standby mode while it looks for and finds service. The following screens show the message that displays when looking for service depending on the service mode selected (see Manual Mode, page 49):



After your phone finds service, your banner, the date and time, and the appropriate icons display.




#### Note

The date and time may not be available in all modes of service.

## Power save mode

Power save mode maximizes the battery life. Your phone switches to power save mode after repeated attempts to find service. The following message displays when service is not found and your phone is in power save mode:

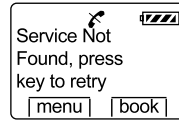

To return to standby mode, press any key. See Deep Sleep, page 44, for more information on setting power save durations.

## Entering numbers

You can enter up to 32 numbers and other characters (hyphens and pauses).



### Note

All 32 characters do not always display on certain screens and may be replaced by periods (...). To display the entire number, use the View # option in the Phone Book menu (see Finding entries, page 17) or the Call History menu (see Viewing call history details, page 22).

### To enter numbers

1. From standby mode, enter the numbers.
2. Do one of the following:
  - Press **SEND** to place the call.
  - Press **▲** **save** to save the number in the phone book.

### To edit numbers

- Move the cursor by pressing the volume buttons.



### Note

You cannot use **\* |** or **| #** to move the cursor when entering or editing numbers because these keys are used to enter # or \*.

### To delete numbers

- Press **Clr** to delete one previous character at a time.
- Position the cursor over a number (press the volume buttons), and press **Clr** to delete.
- Press and hold **Clr** to delete the entire entry.

## Making emergency calls

Locking or restricting the phone does not prevent you from making calls to emergency numbers. Contact your satellite or cellular service provider for emergency numbers.

### To make an emergency call

1. Enter the emergency number (for example, 911).
2. Press **SEND**.

## Redialing a call

### To redial the last outgoing number


- Press **SEND**.

## Muting a call

While you are on a call, you can mute the microphone so that the caller cannot hear you.

### To turn mute on

- Press **▲ mute**. The word “Mute” replaces the word “Time” on the screen until you end the call or turn mute off.

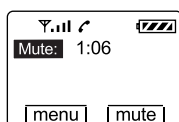

### To turn mute off

- Press **▲ mute**. The word “Time” replaces the word “Mute” on the screen.

## Possible service provider services

### International dialing

#### To make international calls in Globalstar satellite mode

1. Enter the international access code, the country code, and the phone number.  
*Shortcut:* Press and hold **+ 0** until a plus (+) displays on the screen, and then enter the country code and phone number.
2. Press **SEND**.

If international dialing is supported in your network, contact your satellite service provider for more information.

**Call waiting**

Call waiting lets you know that you are receiving an incoming call by sounding a beep. For instructions on how to use call waiting, contact your satellite or cellular service provider.

**Three-way calling**

Three-way calling allows you to talk to two callers the same time. For instructions on how to use three-way calling, contact your satellite or cellular service provider.


**Caller ID**


Caller ID displays an incoming call's phone number on the screen, if available. If the phone number of the caller matches one stored in your phone book, the name also displays with the number.

For more information on caller ID, contact your satellite or cellular service provider.

## Menu Basics

Learn how to access and navigate through the phone menus in this section.





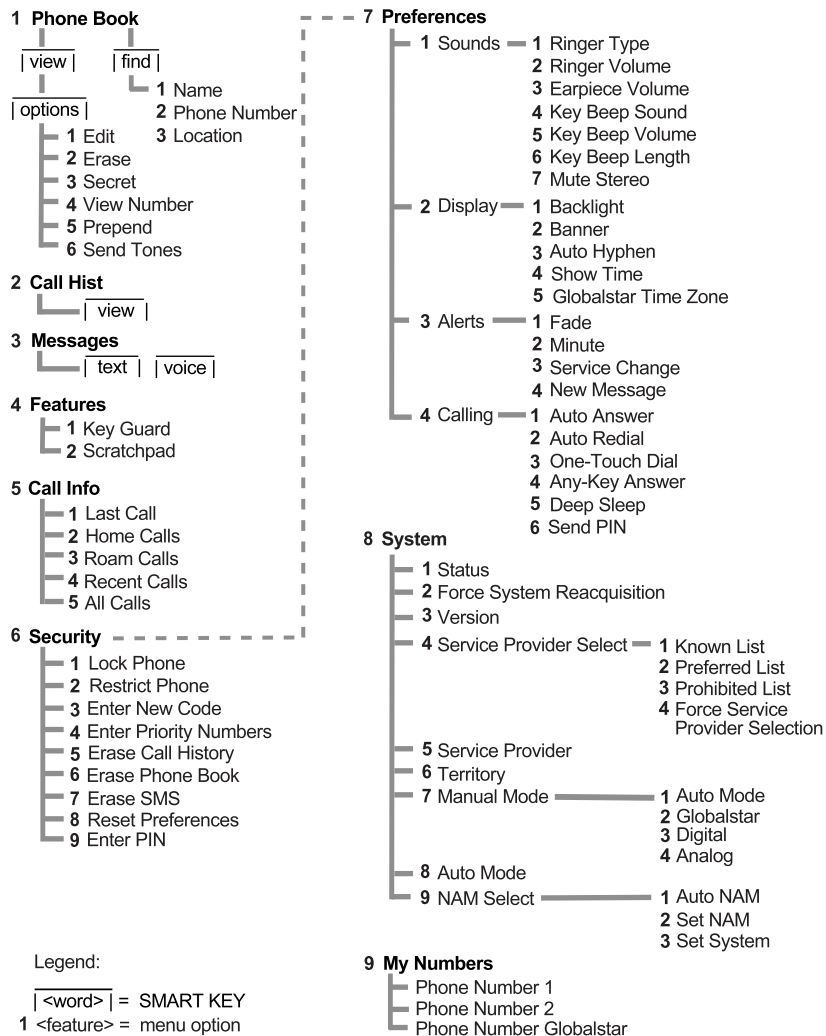







The phone menus are designed so that you can easily access and navigate through them. The following road map shows the various menus on the main menu, which is accessed by pressing  menu.



## Accessing main menu

1. Turn the phone on. The phone is now in standby mode (see Standby mode, page 9).
2. Press **▲** menu and the first three main menu items display. If scroll arrows display on the screen, you can scroll between screens to access additional menu options.

Each main menu item is explained in sequential order in separate sections of this guide.

   Main Menu 1 Phone Book 2 Call Hist 3 Messages		page 15 page 21 page 23
   Main Menu 4 Features 5 Call Info 6 Security		page 27 page 29 page 31
   Main Menu 7 Preference 8 System 9 My Numbers		page 35 page 45 page 52

## Navigating and using menus

### To navigate the menus

- To access additional menu items when a scroll arrow displays on the screen, press the scroll keys.
- To select a menu item, press the corresponding number.

### To save changes or a setting

- Press **▲** ok.

### To return to previous screen without saving changes

- Press **Clr**.


### To return to standby mode without saving changes (if *not* on a call)

- Press **END**.

### To return to standby mode without saving changes (if on a call)

- Press **Clr** repeatedly.

## Phone Book Menu

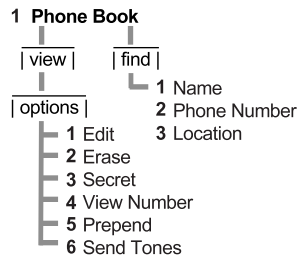

Learn about using the phone book, entering letters and other characters, entering pauses, speed dialing, and one-touch dialing in this section.

### Entering letters and other characters

#### To enter letters and other characters

1. Press a key repeatedly to display the letters in uppercase, then lowercase, and finally the number. For example, if you repeatedly press **def 3**, the following characters display:  
D E F d e f 3
2. Do one of the following:
  - Enter the next character if it is on a different key.
  - If the next character is on the same key, move the cursor forward by pressing **↓ #** or the down volume button.
3. Press **▲ ok** after you enter the name.

#### To edit letters and other characters

- Move the cursor by pressing **\* ↑** or **↓ #** or by pressing the volume buttons.

#### To delete letters and other characters

- Position the cursor over a letter or character, and press **Clr** to delete.
- Press **Clr** to delete previous letters or characters one at a time.
- Press and hold **Clr** to delete the entire entry.

#### To enter spaces


- Press **↓ #** or the down volume button.

#### To enter punctuation or spaces

- Press **1** repeatedly, and the punctuation or space displays in the following order:  
– <space> @ & ( ) : . ' # \* , 1

## Entering pauses

When using automated phone services, such as voice mail or online banking, you can use pauses when entering a series of numbers. You can also enter pauses manually, or you can save pauses in phone book entries. Each pause counts as one character. There are two types of pauses:

- **Hard Pause** – Stops until you press  **resume** to send the rest of the number sequence.
- **Timed Pause** – Stops for two seconds and then resumes automatically.








### Note

If Auto Hyphen is set to “on” and you manually enter pauses, Auto Hyphen is temporarily set to “off.”

### To enter pauses when entering numbers

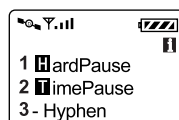1. Press  and the following displays on the screen:



2. Press  for Hard Pause or  for Timed Pause.  displays for hard pauses and  displays for timed pauses.
3. Continue entering numbers.


## Saving entries

The phone saves up to 99 entries. Each entry contains a name (up to 12 characters) and phone number (up to 32 numbers) stored in location numbers 1 through 99. See Entering numbers, page 10.

You can also save pauses in phone book entries when automated phone services, such as voice mail or online banking, require personal identification or account numbers. See Entering pauses, page 16.

### To save entries

1. Do one of the following:
  - Select a number from the scratchpad (see Scratchpad, page 27).
  - Select a number on the call history list.
  - Select a number on the screen, such as Caller ID.
  - Enter a phone number from standby mode.

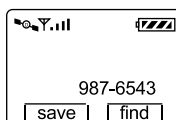



2. Press **▲** **save**.
3. Enter a name and press **▲** **ok**.
4. Enter a location number:
  - If the phone book is *not* full:
    - Press **▲** **ok** to automatically accept the next empty location.
    - Press **▲** **next** to scroll to an empty location.
    - Enter a location number of your choice.
    - Scroll to empty locations.
  - If the phone book is full, enter a location number that you want to reuse and replace with the new information. You will lose the old information.

## Finding entries

You can find entries by name, phone number, or location number. You can also quickly advance to groups of ten entries or scroll through each entry one at a time.

### To find an entry

1. From standby mode, press **▲** **book**.
2. Do one of the following:
  - To advance to groups of ten entries, enter 1 through 9. (For example, if you enter 6, location number 60 is selected. If 60 is empty, the previous filled location is selected.)
  - To find specific entries:
    - Press **▲** **find**.
    - Press **1** for Name, **abc 2** for Phone #, or **def 3** for Location.
    - Enter one or more characters.












### Note






Searches ignore differences between upper- and lowercase letters.

- Press **▲** **find** and, if necessary, scroll through the entries.
- Press **▲** **view** to see the entry.
- Do one of the following:
  - Press **SEND** to call the number.
  - Press **▲** **options** to edit, erase, make secret, view number, prepend (add), or send tones.

## Editing entries

1. From standby mode, press  **book**.
2. Find the entry and press  **view**.
3. Press  **options**.
4. Press  to Edit.
5. Press  to edit Name,  to edit Number, or  to edit Location.
6. Edit the name or phone number, or do one of the following to edit a location number:
  - Enter a new location number.
  - Press  **next** or use the scroll keys to scroll to a new location number.
7. Press  **ok**.

## Erasing entries

1. From standby mode, press  **book**.
2. Find the entry and press  **view**.
3. Press  **options**.
4. Press  to Erase.
5. Press  **ok**.

## Making entries secret






To prevent a phone number from displaying on the screen, you can make the entry "Secret."



### Note

When receiving an incoming call, caller ID prevents the name from displaying if the entry in your phone book is secret.

### To make an entry secret or nonsecret

1. From standby mode, press  **book**.
2. Find the entry you want to make secret.
3. Press  **view**.
4. Press  **options**.
5. Press  and scroll to select:
  - Yes – Makes the entry secret
  - No – Makes the entry nonsecret
6. Press  **ok**.

## Viewing numbers

You can view an entry's entire phone number. When viewing a number, you can also prepend (add) numbers at the beginning of a phone number and save those changes.

### To view numbers

1. From standby mode, press **book**.
2. Find the entry and press **view**.
3. Press **options**.
4. Press **4** for View #.
5. Do one of the following:
  - Press **ok** to return to the previous menu.
  - Press **END** to return to standby mode.

## Prepending numbers

You can permanently prepend (add) numbers, such as an area code or country code, at the beginning of a phone number in an existing phone book entry.

### To prepend (add) numbers

1. From standby mode, press **book**.
2. Find the entry and press **view**.
3. Press **options**.
4. Press **5** for Prepend. The phone number displays.
5. Enter the numbers.
6. Press **save**.

## Sending tones

You can send DTMF (dual tone multi-frequency) tones over the air when using automated phone services, such as voice mail or online banking. To send tones, you must be on a call. You can send tones by manually entering numbers or sending numbers stored in your phone book. You can also send tones for numbers entered in the scratchpad (see Scratchpad, page 27).







### Note

The length of the key beep, the sound you hear when pressing the keys, affects the DTMF tones. Check your key beep length before sending tones (see Key Beep Length, page 37).

### To send tones manually

- While on a call, enter the appropriate numbers. The tones associated with the numbers are immediately sent over the air.


#### To send tones saved in your phone book

1. While on a call, press  **book**.
2. Find an entry and press  **view**.
3. Press  **options**.
4. Press  for Send Tones. The tones associated with the numbers are immediately sent over the air.


### Speed dialing

You can speed dial a phone number if you know the location number of the phone book entry. You can speed dial any of the 99 location numbers unless the phone is restricted (see Restricting the phone, page 32). If you restrict the phone, only the first nine phone book locations are available for speed dial.




#### To speed dial a phone number

1. Enter the location number.
2. Press .

### One-touch dialing


If you set one-touch dial to “on,” you can dial any of the 99 location numbers without pressing . To set one-touch dial, see One-Touch Dial, page 43.

#### To one-touch dial a phone number

1. Set one-touch dial to “on” (see One-Touch Dial, page 43).
2. Press and hold the last digit of the location number. For example:
  - Press and hold  for location number 3.
  - Press  and then press and hold  for location number 32.

## Call History Menu

### 2 Call Hist

 view



You can access a call history list of the last ten incoming or outgoing satellite or cellular calls (numbered 0 to 9) and view details about each call type:


- **Called By** Incoming calls, if caller ID is available (see Caller ID, page 12)
- **Call To** Outgoing calls
- **Added** Scratchpad entries (see Scratchpad, page 27)
- **Missed** Unanswered incoming calls, if caller ID is available
- **Caller ID** Caller ID information received
- **Call Waiting** Call-waiting information received during a call






The most recent call is numbered 0 and displays at the top of the list and the oldest call at the bottom (separated by a dashed line). When the list is full, a new call takes the first position in the list and the oldest call is deleted. The list is saved after you turn the phone off.

Names display in the call history list if the caller's phone number is stored in the phone book. If more than one name matches a call back number, the entry with the lowest phone book location number displays.

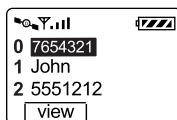
### Accessing call history list


1. From standby mode, press  **menu**.
2. Press  for Call Hist.
3. Press the scroll keys to access the last ten calls. For example:




4. Scroll down to select a call from the most recent to the oldest calls, or scroll up to select a call from the oldest to the most recent.
5. Do one of the following:
  - To call the number, press .
  - To save the number in your phone book, press  **view** and  **save** (see Saving entries, page 16).
  - To exit call history without calling or storing a number, press  or .

## Viewing call history details


1. Scroll to select a call on the list.
2. Press  **view**.





3. Press  **options** and select one of the following:
  - Date/Time – Display the date and time of the call.
  - Duration – Display the duration of the call.
  - Save – Save the number in your phone book.
  - View # – View the entire number.
  - Send – Make a call to the number.
  - Send Tones – Send DTMF tones while on a call. (For more information on DTMF tones, see Sending tones, page 19.)
  - Prepend – Add numbers, such as an area code or country code, at the beginning of the phone number and save it in your phone book.

## Messages Menu

### 3 Messages

 text | voice |

Learn about retrieving SMS (short message service) messages in this section. SMS includes both text and voice mail notification messages. Contact your satellite or cellular service providers for information regarding the availability of text and voice mail notifications.


You can retrieve text messages and voice mail notifications from satellite or cellular service provider voice mail systems. When the phone is turned on and you receive SMS messages, the phone alerts you by sounding a beep and displaying the text message indicator  or voice mail notification indicator  on the screen. These indicators display until you read all the messages.



When you read a message, new messages are accessed before old messages. If the message contains a call back number matching one in your phone book, the corresponding name displays in place of the number. If more than one name matches a call back number, the entry with the lowest phone book location number displays.

### Voice messages

If someone leaves you a voice mail message, your phone receives a voice mail notification and alerts you. You can then access the voice mail notification. (Service providers may provide different details about the message.) To hear the voice mail message, call your voice mail system.

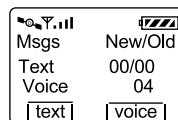

If you have one or more voice mail systems, the total number of voice mail messages received by all systems displays on the screen. For example, if you have two voice mail systems and you receive two voice mail messages from one system and two from the other system, the total number of voice mail notifications displays under "Old":



Msgs	New/Old
Text	00/00
Voice	04
 text	 voice

If new voice mail messages are received, the total number of voice mail notifications is updated.

#### To access voice mail notifications

1. From standby mode, press . The total number of voice mail messages received displays under "Old."
2. Press  **voice**. The voice mail notification displays either a call back number or a name if the call back number matches one in the phone book. If more than one name matches a call back number, the entry with the lowest phone book location number displays.

3. Do one of the following:
  - Press **next** to read the next voice mail notification.
  - Press **view** to display more detail, if available, which automatically scrolls on the screen and pauses so you can read it. Press a scroll key to manually scroll.

#### To call your voice mail system

1. Press .
2. Press **voice**.
3. Press **next** to find the voice mail notification you want.
4. Press **view**.
5. Press . The phone number for the voice mail system displays, if available. Go to Step 6. If it does not display, the message "No Voice Mail Number received" displays, and you must manually enter the voice mail phone number.
6. If necessary, prepend (add) digits before the voice mail phone number. For example, if you are out of the area of your voice mail phone number, prepend the area code or country code.
7. Press again.
8. Follow the voice mail system instructions to retrieve your messages.

#### To erase voice message notifications

1. Press .
2. Press **voice**.
3. Press **next** to find the voice mail notification you want.
4. Press **view**.
5. Press **eras** to erase the message.
6. Press **ok**.

## Text messages

Text messages can include call back numbers, messages, urgency stamps, time and date stamps, and possibly names if the call back number matches one in the phone book. The phone stores as many text messages as available memory allows. For more information on managing phone memory, see Storing text messages, page 25.

#### To access text messages

1. Press . The number of new and old text messages displays.
2. Press **text**. The newest unread messages display first followed by the newest read messages, if any. The number of messages under "Old" is the number of messages you accessed.



3. Do one of the following:

- Press **next** to read the next message.
- Press **view** to display more detail, if available, which automatically scrolls on the screen and pauses so you can read it. Press a scroll key to manually scroll.

**To call back numbers in text messages**

1. Press **envelope**.
2. Press **text**.
3. Press **next** to find the message you want.
4. Press **view**.
5. Press **SEND**. The call back number displays, if available.
6. If necessary, prepend (add) digits before the call back number. For example, if you are out of the area of the phone number, prepend the area code or country code.
7. Press **SEND** again.

**To erase text messages**

1. Press **envelope**.
2. Press **text**. A text message displays.
3. Press **view** to display more detail, if available, which automatically scrolls on the screen and pauses so that you can read it. Press a scroll key to manually scroll.
4. Scroll to the bottom of the message and press **opts**.
5. Press **1** for Erase.




**Note**

You can erase a text message even if it is locked.

6. Press **ok** to erase the message.

**Storing text messages**

Text messages are saved until you erase them or until the phone memory is full. If more than 75% of the phone's memory is full, a message displays the amount of memory used:




When the phone is out of memory, the oldest unlocked messages are automatically deleted as necessary to receive new messages.

To prevent messages from being deleted, you can lock them. However, if all messages are locked when a new message is received and the phone is out of memory, the new message is lost. The network may try to deliver it later.

#### To avoid running out of memory

- Erase locked or unlocked messages that you no longer need. When the phone is out of memory and all text messages are locked, it no longer accepts new messages and this message displays:



The network may try to deliver lost messages later.

#### Locking and unlocking text messages

To prevent messages from being automatically deleted if the phone is out of memory, you can lock them. You can manually erase a text message even if it is locked.

##### To lock or unlock text messages

1. Press .
2. Press **text**. The newest text message displays.
3. Press **view** to display more detail, if available, which automatically scrolls on the screen and pauses so that you can read it. Press a scroll key to manually scroll.
4. Scroll to the bottom of the message and press **opts**.
5. Press for Lock or for Unlock.

The lock indicator or the unlock indicator displays to the left of the SMART KEY options.

## Features Menu


### 4 Features

- 1 Key Guard
- 2 Scratchpad

### Key Guard

The key guard locks the phone keys to prevent accidental use. If you receive an incoming call when the key guard is on, you can still answer the call.

#### To turn the key guard on

- *Shortcut:* From standby mode, press and hold **END**. The lock indicator  and “KeyGuard On” displays.

#### To turn the key guard off

- Press **1** **abc 2** **def 3**.

### Scratchpad

You can enter numbers on the scratchpad to add to call history, save to your phone book, or send tones over the air for automated phone services, such as voice mail or banking online. To add to call history or save to your phone book, you can be on a call or in standby mode. To send tones, you must be on a call.

#### To access the scratchpad

1. From standby mode, press **▲** **menu**.
2. Press **ghi 4** for Features.
3. Press **abc 2** for Scratchpad.
4. Enter numbers.
5. Press **▲** **options**.
6. Press:
  - **1** to AddToHist; the number is added to call history.
  - **abc 2** to Save to your phone book (see Saving entries, page 16).
  - **def 3** to Send Tones; the tones are immediately sent over the air.



## Call Info Menu

- 5 Call Info
  - 1 Last Call
  - 2 Home Calls
  - 3 Roam Calls
  - 4 Recent Calls
  - 5 All Calls

The Call Info menu contains counters that allow you to track the number of calls and airtime for billing purposes.

### Last Call

Last Call displays the duration of the last call in minutes and seconds. If Call History is empty, "None" displays on the screen.

#### To display last call information

1. From standby mode, press **▲** menu.
2. Press **⓵** for Call Info.
3. Press **1** for Last Call.
4. Press **▲** ok.

### Home Calls

Home Calls displays the number and duration of all incoming and outgoing calls made in your home service area. You can reset this counter to zero (see Resetting call counters, page 30).

#### To display home calls information

1. From standby mode, press **▲** menu.
2. Press **⓵** for Call Info.
3. Press **2** for Home Calls.
4. Press **▲** ok.

### Roam Calls

Roam Calls displays the number and duration of roam calls. Roaming occurs when you move out of your home service area. You can reset this counter to zero (see Resetting call counters, page 30).

#### To display roam calls information

1. From standby mode, press **▲** menu.
2. Press **⓵** for Call Info.
3. Press **3** for Roam Calls.
4. Press **▲** ok.

## Recent Calls

Recent Calls displays the number and duration of calls made or received since resetting the counter. You can reset this counter to zero (see Resetting call counters, page 30).

### To display recent calls information

1. From standby mode, press menu.
2. Press for Call Info.
3. Press for RecentCall.
4. Press ok to return to standby mode.

## All Calls

All Calls displays the number and duration of all calls for the lifetime of your phone. You cannot reset this counter.

### To display all calls information

1. From standby mode, press menu.
2. Press for Call Info.
3. Press for All Calls.
4. Press ok.

## Resetting call counters

You can only reset the Home Calls, Roam Calls, and Recent Calls counters to zero. You can also undo the counter reset, but you must do it before you press ok, which confirms resetting the counter.

### To reset the counter to zero

1. Press zero.



#### Note

After you press ok, you cannot undo the counter reset.

2. Press ok.

### To undo the counter reset

- Press undo.

## Security Menu

### 6 Security

- 1 Lock Phone
- 2 Restrict Phone
- 3 Enter New Code
- 4 Enter Priority Numbers
- 5 Erase Call History
- 6 Erase Phone Book
- 7 Erase SMS
- 8 Reset Preferences
- 9 Enter PIN

### Lock code

When you access the Security menu for the first time, enter the lock code supplied by your satellite or cellular service provider.



#### Note

Change the lock code immediately after receiving the phone. See Entering a new lock code, page 32.

Subsequently, each time you access the Security menu, you are prompted for your new lock code. If you forget your lock code, contact your satellite or cellular service provider.

### Locking the phone

You can lock the phone so that you can only make calls to priority numbers and emergency numbers and receive calls. There are no shortcuts for dialing emergency numbers or priority numbers when your phone is locked. All other functions are locked. To unlock the phone, use the lock code, the same one that you use to access the Security menu.

#### To lock the phone

1. From standby mode, press menu.
2. Press for Security and enter your lock code.
3. Press for Lock Phone.
4. Scroll to select one of these options:
  - Never – The phone cannot be locked.
  - Now – Immediately locks the phone for one time only.
  - On Power Up – Locks the phone every time you turn the phone on.

#### To unlock the phone

1. Press unlock.
2. Enter your lock code to return to the main menu. (Use the same lock code used to access the Security menu.)

## Restricting the phone

When you restrict your phone, you can only make calls to emergency numbers, priority numbers, and phone book locations 1 to 9. You cannot make changes to the phone book when you restrict your phone.

### To restrict the phone

1. From standby mode, press **▲** **menu**.
2. Press **mno 6** for Security and enter your lock code.
3. Press **abc 2** for Restricted.
4. Scroll to select one of these options:
  - Yes – Make calls to emergency numbers, priority numbers, and phone book locations 1 to 9 only. There are no shortcuts for dialing emergency numbers or priority numbers unless you add them to your phone book.
  - No – Make calls to any number.

## Entering a new lock code

You can change the lock code used to access the Security menus and unlock your phone.

### To enter a new lock code

1. From standby mode, press **▲** **menu**.
2. Press **mno 6** for Security and enter your current lock code.
3. Press **def 3** for New Code.
4. Enter a new four-digit lock code.
5. Press **▲** **save**. The new lock code displays briefly on the screen.

## Entering priority numbers

You can call priority numbers when the phone is locked or restricted. You can store up to three priority numbers (up to 32 digits each).

### To enter a priority number

1. From standby mode, press **▲** **menu**.
2. Press **mno 6** for Security and enter your lock code.
3. Press **ghi 4** for Priority #.
4. Scroll to Priority#1, Priority#2, or Priority#3.
5. Press **▲** **edit**.
6. Enter the phone number.
7. Press **▲** **ok**.



## Erasing call history list

You can erase the entire call history list.

1. From standby mode, press **▲** **menu**.
2. Press **mno 6** for Security and enter your lock code.
3. Press **jkl 5** for Erase Call.
4. Press **▲** **ok**.
5. Press **▲** **ok** to erase the entire call history list, or press **END** if you do not want to erase it.

## Erasing phone book entries

You can erase all entries in the phone book.

1. From standby mode, press **▲** **menu**.
2. Press **mno 6** for Security and enter your lock code.
3. Press **mno 6** for Erase Book.
4. Press **▲** **ok**.
5. Press **▲** **ok** to erase all entries in the phone book, or press **END** if you do not want to erase them.

## Erasing SMS messages

You can erase all SMS (short message service) messages, which include all locked or unlocked text messages and all voice mail notification messages.






1. From standby mode, press **▲** **menu**.
2. Press **mno 6** for Security and enter your lock code.
3. Press **pqrs 7** for Erase SMS (short message service).
4. Press **▲** **ok**.
5. Press **▲** **ok** to erase all messages, or press **END** if you do not want to erase them.

## Resetting preferences

You can reset all preferences to the original settings (defaults) that were previously set by your satellite or cellular service provider. These preferences include those described in Preferences Menu, page 35, with these exceptions:

- The banner is *not* reset.
- The Service Provider Preferred and Prohibited Lists *are* deleted (see Service Provider Select, page 46).
- The lock code is *not* reset.
- The phone book, call history, or SMS messages are *not* erased.

### To reset preferences

1. From standby mode, press  **menu**.
2. Press  for Security and enter your lock code.
3. Press  for Reset Prefs.
4. Press  **ok**.
5. Press  **ok** when prompted to reset all preferences.




## Entering PIN

When making analog calls, your cellular service provider may support the use of a PIN (personal identification number) for verification before connecting your call. This feature allows you to enter your own PIN.

If you want to be prompted for your PIN before making analog calls, set Send PIN accordingly (see Send PIN, page 44). Contact your cellular service provider for more information.

Each PIN is associated with a different NAM (number assignment module), or phone number. When you enter a PIN, it becomes associated with the currently selected NAM, so be sure to select the appropriate NAM (see NAM Select, page 51).


### To enter your PIN

1. From standby mode, press  **menu**.
2. Press  for Security and enter your lock code.
3. Press  for Enter PIN.



#### Note

To enter a PIN for a different NAM, first select that NAM before entering your PIN.

4. Enter the four-digit PIN.
5. Press  **save**.

## Preferences Menu

- 7 Preferences**
- 1 Sounds**
    - 1 Ringer Type
    - 2 Ringer Volume
    - 3 Earpiece Volume
    - 4 Key Beep Sound
    - 5 Key Beep Volume
    - 6 Key Beep Length
    - 7 Mute Stereo
  - 2 Display**
    - 1 Backlight
    - 2 Banner
    - 3 Auto Hyphen
    - 4 Show Time
    - 5 Globalstar Time Zone
  - 3 Alerts**
    - 1 Fade
    - 2 Minute
    - 3 Service Change
    - 4 New Message
  - 4 Calling**
    - 1 Auto Answer
    - 2 Auto Redial
    - 3 One-Touch Dial
    - 4 Any-Key Answer
    - 5 Deep Sleep
    - 6 Send PIN

### Sounds

You can set ringer type, ringer volume, earpiece volume, key beep sound, key beep volume, key beep length, and mute stereo.

#### Ringer Type

You can change the ringer for incoming calls to one of eight different rings or songs.

##### To set the ringer type

1. From standby mode, press **▲** menu.
2. Press **pqrs 7** for Preferences.
3. Press **1** for Sounds.
4. Press **1** for Ringer Type.
5. Scroll to select the ringer type or song.
6. Press **▲** ok.

#### Ringer Volume

- Do one of the following from standby mode:
  - Press the volume buttons.
  - Press **▲** menu.
    - Press **pqrs 7** for Preferences.
    - Press **1** for Sounds.
    - Press **abc 2** for Ringer Vol.

- ❑ Scroll to select the volume level from 1 (lowest) to 9 (highest) or Silent to turn the ringer off. While in standby mode, “-Ringer Off-” displays in place of the date.
- ❑ Press **▲** **ok**.

#### To silence the ringer when receiving a call

- Press **END**.

### Earpiece Volume

You can adjust the earpiece volume to one that is comfortable for you. You can adjust the volume while on a call or from standby mode.

#### To adjust the earpiece volume

- While on a call, press the volume buttons.
- From standby mode:
  - a. Press **▲** **menu**.
  - b. Press **pqrs 7** for Preferences.
  - c. Press **1** for Sounds.
  - d. Press **def 3** for EarpiecVol.
  - e. Scroll to select the volume level from 1 (lowest) to 9 (highest).
  - f. Press **▲** **ok**.

### Key Beep Sound

You can set the key beep, the sound you hear when pressing the keys, to either a tone or a click.

#### To adjust the key beep sound

1. From standby mode, press **▲** **menu**.
2. Press **pqrs 7** for Preferences.
3. Press **1** for Sounds.
4. Press **ghi 4** for KeyBeepSound.
5. Scroll to select “tone” or “click.”
6. Press **▲** **ok**.

### Key Beep Volume

You can adjust the volume of the key beep, the sound you hear when pressing the keys.

#### To adjust the key beep volume

1. From standby mode, press **▲** **menu**.
2. Press **pqrs 7** for Preferences.
3. Press **1** for Sounds.
4. Press **jkl 5** for KeyBeepVol.
5. Scroll to select the volume level from 1 (lowest) to 9 (highest) or Silent to turn the key beep off.
6. Press **▲** **ok**.

## Key Beep Length

You can set the length of the key beep, the sound you hear when pressing the keys. The standard key beep is short and fixed in length. The custom key beep sounds as long as you press a key.

Some services or devices, such as answering machines, may require a custom key beep because you must press and hold a key to send a tone. Using the standard key beep setting is recommended.



### Note

The key beep length affects the DTMF tones used for sending tones over the network for automated phone services, such as voice mail or online banking. Select the appropriate key beep length before sending tones (see Sending tones, page 19).

### To set the key beep length

1. From standby mode, press **▲** menu.
2. Press **(pqrs 7)** for Preferences.
3. Press **(1)** for Sounds.
4. Press **(mno 6)** for KeyBeepLen.
5. Scroll to select one of the following:
  - Standard – Key beep is short and fixed in length.
  - Custom – Key beep sounds as long as you press a key.
6. Press **▲** ok.

## Mute Stereo

While using the car kit, you can set this feature to automatically mute the stereo in your vehicle so you cannot hear it. This occurs when you receive incoming calls or press **(SEND)** when making calls. Contact your service technician for more information on implementing this in your vehicle.

### To mute the stereo

1. From standby mode, press **▲** menu.
2. Press **(pqrs 7)** for Preferences.
3. Press **(1)** for Sounds.
4. Press **(pqrs 7)** for Mute Stereo.
5. Scroll to select “yes” or “no.”
6. Press **▲** ok.

## Display

You can set the backlight, edit the banner, display the time, set the auto hyphen feature, and set the Globalstar time zone.

## Backlight

You can set the screen and keypad backlighting to maximize battery life.

### To set the backlight

1. From standby mode, press **menu**.
2. Press for Preferences.
3. Press for Display.
4. Press for Backlight.
5. Scroll to select one of the following:
  - Always Off – The backlight is always off, which significantly *increases* battery life.
  - 7 Seconds – Turns the backlight off 7 seconds after the last key press.
  - 15 Seconds – Turns the backlight off 15 seconds after the last key press.
  - 30 Seconds – Turns the backlight off 30 seconds after the last key press.
  - Always On – The backlight is always on, which significantly *decreases* battery life.
6. Press **ok**.

### To turn the backlight on

- Press any key.

## Banner

You can enter a banner or personal greeting (up to 12 characters), such as a company name or a personal reminder. The banner displays when you turn the phone on.

### To edit the banner

1. From standby mode, press **menu**.
2. Press for Preferences.
3. Press for Display.
4. Press for Banner.
5. Press **edit**. See Entering numbers, page 10.
6. Press **ok** to confirm banner changes.
7. Do one of the following:
  - Press **ok** to return to standby mode.
  - Press **edit** to change the banner.

## Show Time

You can set the time format using this feature. Initially, while in Globalstar satellite mode, UTC (universal time coordinated) displays. While in digital or analog mode, local time displays where available. To change UTC time while in Globalstar satellite mode, see Globalstar Time Zone, page 40.

### To set the time format

1. From standby mode, press menu.
2. Press for Preferences.
3. Press for Display.
4. Press for Show Time.
5. Scroll to select one of the following:
  - 12 hour – Time displays in 12-hour format
  - 24 hour – Time displays in 24-hour format
  - UTC (universal time coordinated) – 24-hour time scale maintained by the Bureau International del l'Heure
  - Off – Time does not display
6. Press ok.

### Auto Hyphen

You can use this feature to automatically insert hyphens when you enter phone numbers. As the following example shows, hyphens are inserted automatically when numbers are entered:

# – ### – ### – ####

You can also manually enter hyphens (see Manual Hyphens, page 39).

### To set auto hyphen


1. From standby mode, press menu.
2. Press for Preferences.
3. Press for Display.
4. Press for AutoHyphen.
5. Scroll to select “yes” or “no.”
6. Press ok.

### Manual Hyphens

You can manually enter hyphens from standby mode or when editing phone numbers in the phone book. You can also set Auto Hyphen to “on” so that hyphens are automatically entered (see Auto Hyphen, page 39). Each hyphen counts as one character.

### To manually enter a hyphen

1. Press and the following displays on the screen:

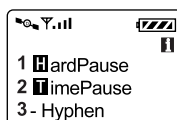

2. Press .

## Globalstar Time Zone






When in Globalstar satellite mode, this feature allows you to select the display of a different time zone instead of UTC (universal time coordinated) time. The time zone remains selected until you change it and is only valid for Globalstar satellite mode.

The time zones for selection include the following:

European	GMT	Greenwich Mean Time	same as UTC
	BST	British Summer Time	UTC + 1 hour
	IST	Irish Summer Time	UTC + 1 hour
	WET	Western Europe Time	same as UTC
	WEST	Western Europe Summer Time	UTC + 1 hour
	CET	Central Europe Time	UTC + 1 hour
	CEST	Central Europe Summer Time	UTC + 2 hours
	EET	Eastern Europe Time	UTC + 2 hours
	EEST	Eastern Europe Summer Time	UTC + 3 hours
	MSK	Moscow Time	UTC + 3 hours
	MSD	Moscow Summer Time	UTC + 4 hours
U.S. and Canada	AST	Atlantic Standard Time	UTC – 4 hours
	ADT	Atlantic Daylight Time	UTC – 3 hours
	EST	Eastern Standard Time	UTC – 5 hours
	EDT	Eastern Daylight Saving Time	UTC – 4 hours
	CST	Central Standard Time	UTC – 6 hours
	CDT	Central Daylight Saving Time	UTC – 5 hours
	MST	Mountain Standard Time	UTC – 5 hours
	MDT	Mountain Daylight Saving Time	UTC – 5 hours
	PST	Pacific Standard Time	UTC – 8 hours
	PDT	Pacific Daylight Saving Time	UTC – 7 hours
	HST	Hawaiian Standard Time	UTC – 10 hours
	AKST	Alaska Standard Time	UTC – 9 hours
	AKDT	Alaska Standard Daylight Saving Time	UTC – 8 hours



#### To select a different time zone

1. From standby mode, press  menu.
2. Press  for Preferences.
3. Press  for Display.
4. Press  for G\* TimeZone.
5. Scroll to select the appropriate time zone.
6. Press  ok.






### Alerts

For your convenience, you can set alerts that sound a tone.

#### Fade

The fade alert sounds a tone when any network drops a call.






##### To set the fade alert

1. From standby mode, press  menu.
2. Press  for Preferences.
3. Press  for Alerts.
4. Press  for Fade.
5. Scroll to select “on” or “off.”
6. Press  ok.

#### Minute

The minute alert sounds a tone ten seconds before the end of every minute.






##### To set the minute alert

1. From standby mode, press  menu.
2. Press  for Preferences.
3. Press  for Alerts.
4. Press  for Minute.
5. Scroll to select “on” or “off.”
6. Press  ok.

### Service Change

This alert sounds a tone and displays a message when the phone enters or leaves service.

##### To set the service change alert

1. From standby mode, press  menu.
2. Press  for Preferences.
3. Press  for Alerts.
4. Press  for Service.
5. Scroll to select “on” or “off.”
6. Press  ok.

## New Message

The new message alert sounds a tone when you receive a new text message or voice mail notification.

### To set the new message alert

1. From standby mode, press menu.
2. Press for Preferences.
3. Press for Alerts.
4. Press for New Message.
5. Scroll to select one of the following:
  - Off – Phone does not sound a beep when a new message is received
  - Once – Phone sounds one beep when a new message is received
  - Periodic – Phone sounds a beep periodically when a new message is received until you retrieve the message by pressing
6. Press ok.

## Calling

You can set the Calling features to automatically answer the phone or redial a busy number. You can also set one-touch dial, any-key answer, or deep sleep to “on.”

### Auto Answer

You can set the number of times the phone rings before it automatically answers a call.

### To set auto answer

1. From standby mode, press menu.
2. Press for Preferences.
3. Press for Calling.
4. Press for AutoAnswer.
5. Scroll to select one of the following:
  - Off – Phone does not automatically answer
  - After 1 ring – Phone automatically answers after 1 ring
  - After 2 rings – Phone automatically answers after 2 rings
  - Car kit only 1 ring – Phone automatically answers when installed in the car kit after 1 ring
  - Car kit only 2 rings – Phone automatically answers when installed in the car kit after 2 rings
6. Press ok. If you select an option other than “off,” the message “Auto Answer-” displays in place of the time while in standby mode.

## Auto Redial

You can use this feature to automatically redial a busy number. While the phone is in standby mode, the phone automatically redials at intervals you choose until the call connects or you press **END**. If the current service is changed for any reason, auto redial stops for that call.

### To set auto redial

1. From standby mode, press **▲** **menu**.
2. Press **(pqrs) 7** for Preferences.
3. Press **(ghi) 4** for Calling.
4. Press **(abc) 2** for Auto Redial.
5. Scroll to select one of the following:
  - Off – Do not automatically redial busy number
  - Every 10 seconds – Automatically redial busy number every 10 seconds
  - Every 30 seconds – Automatically redial busy number every 30 seconds
  - Every 60 seconds – Automatically redial busy number every 60 seconds
6. Press **▲** **ok**.

## One-Touch Dial

If you set one-touch dial to “on,” you can dial any of the 99 phone book location numbers without pressing **SEND**.

### To set one-touch dial

1. From standby mode, press **▲** **menu**.
2. Press **(pqrs) 7** for Preferences.
3. Press **(ghi) 4** for Calling.
4. Press **(def) 3** for One-Touch Dial.
5. Scroll to select “yes” or “no.”
6. Press **▲** **ok**.

See One-touch dialing, page 20, for more information.

## Any-Key Answer

With this feature, you can press any key to answer an incoming call while in standby mode, except **(Pwr)** or **END**. If this feature is not set to “yes,” press **SEND** to answer calls.

### To set any-key answer

1. From standby mode, press **▲** **menu**.
2. Press **(pqrs) 7** for Preferences.
3. Press **(ghi) 4** for Calling.
4. Press **(ghi) 4** for AnyKeyAnsw.
5. Scroll to select “yes” or “no.”
6. Press **▲** **ok**.

## Deep Sleep

When your phone is in power save mode, you can set the deep sleep duration to maximize battery life.

### To set deep sleep

1. From standby mode, press menu.
2. Press for Preferences.
3. Press for Calling.
4. Press for Deep Sleep.
5. Scroll to select one of the following:
  - 15 minutes – Sleep for 15 minutes (maximum power savings)
  - 10 minutes – Sleep for 10 minutes
  - 5 minutes – Sleep for 5 minutes
  - Off – Do not set deep sleep (minimum power savings)

### To exit deep sleep

- Press a key at any time.

## Send PIN

If your cellular service provider supports this feature, you can use a PIN (personal identification number) for verification before connecting analog calls.

To enter your own PIN, see Entering PIN, page 34. Contact your cellular service provider for more information.

Each PIN is associated with a different NAM (number assignment module), or phone number. When you enter a PIN, it becomes associated with the currently selected NAM, so be sure to select the appropriate NAM before setting Send PIN (see NAM Select, page 51).

### To set Send PIN

1. From standby mode, press menu.



#### Note

Be sure to select the appropriate NAM before setting Send PIN (see NAM Select, page 51).

2. Press for Preferences.
3. Press for Calling.
4. Press for Send PIN.
5. Scroll to select one of the following:
  - Never – Does not prompt you for or send a PIN
  - Prompt – Prompts you for a PIN after you enter the phone number
6. Press ok.

## System Menu

### 8 System

- 1 Status
- 2 Force System Reacquisition
- 3 Version
- 4 Service Provider Select
  - 1 Known List
  - 2 Preferred List
  - 3 Prohibited List
  - 4 Force Service Provider Selection
- 5 Service Provider
- 6 Territory
- 7 Manual Mode
  - 1 Auto Mode
  - 2 Globalstar
  - 3 Digital
  - 4 Analog
- 8 Auto Mode
- 9 NAM Select
  - 1 Auto NAM
  - 2 Set NAM
  - 3 Set System

### 9 My Numbers

- Phone Number 1
- Phone Number 2
- Phone Number Globalstar




System Menu

## Status

This feature provides status for the state of the phone's Globalstar satellite antenna, car kit, security module, battery, memory, lock, and self-test:

- ☺ Indicates a good condition or ready for use
- ☹ Indicates a faulty condition or not ready for use
- - Indicates not in use

### To access status information

1. From standby mode, press  menu.
2. Press  for System.
3. Press  for Status:
  - Antenna Up – If ☺ displays, the Globalstar satellite antenna is rotated properly. If the antenna is rotated and ☹ displays, contact your satellite service provider.
  - Car Kit – If ☺ displays, the car kit is operating properly. If ☹ displays, reconnect the phone in the cradle or contact the installation technician.
  - Battery – If ☺ displays, the battery is installed properly. If ☹ displays, remove and replace your battery or contact your satellite service provider.
  - Security – If ☺ displays, the valid security module is inserted properly. If ☹ displays, contact your satellite service provider.
  - Memory – If ☺ displays, there is enough available phone memory. If ☹ displays, delete text messages and voice mail notifications.
  - Unlocked – If ☺ displays, the satellite or cellular service provider has not locked your phone. If ☹ displays, contact your service provider.

- Self-test – If ☺ displays, the phone has made a successful self-test. If ☹ displays, contact your satellite or cellular service provider.

4. Press **Clr** or **END**.

## Force System Reacquisition

With this feature, the phone disconnects and attempts to acquire Globalstar satellite, digital, or analog service, depending on your mode selection (see Manual Mode, page 49, or Auto Mode, page 50).

### To force the phone to reacquire service

1. From standby mode, press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **abc 2** for ReAcquire.
4. Press **▲** **ok** to initiate system acquisition.

## Version

This feature displays the version number of the software installed on your phone.

### To display the software version number

1. From standby mode, press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **def 3** for Version.
4. Scroll to read the information.
5. Press **Clr** or **END**.

## Service Provider Select

This feature allows you to select satellite service providers and force service provider selection. Three lists are used to select satellite service providers:

- Known List – Shows all of the known satellite service providers that you can add to the Preferred or Prohibited Lists.
- Preferred List – Shows your preferred order of priority for satellite service providers. Always shows the home satellite service provider highlighted first on the screen. The number to the left of the satellite service provider name identifies the order of priority.
- Prohibited List – Shows the satellite service providers in alphabetical order that you choose *not* to use. You cannot add the home satellite service provider to this list.



### Note

If you place a satellite service provider on the Prohibited List, you cannot place it on the Preferred List until you remove that service provider from the Prohibited List. You cannot add or delete your home service provider from any list.

When you look at the Known List, satellite service providers you have placed on other lists display as follows:

- Satellite service providers placed on the Preferred List are highlighted.
- Satellite service providers placed on the Prohibited List are crossed out.
- Satellite service providers placed on both the Preferred and Prohibited Lists are highlighted and crossed out.

### Registering phone

Registration means your phone is looking for service and obtains service after network approval. If the service change alert is set to “on,” the alert sounds a tone and displays a menu when the phone enters or leaves service. (See Service Change, page 41.) After your phone is registered and an **i** displays on the screen, press **(info)** for service provider information and the current phone number.

Changes made to the Preferred or Prohibited Lists do not take effect until the phone is registered again with the network. To register the phone, do one of the following:

- Turn the phone on and off
- Force system reacquisition (see Force System Reacquisition, page 46)
- Force service provider selection (see Force Service Provider Selection, page 49)

If you add the currently registered satellite service provider to the Prohibited List, the phone will automatically reregister.

### Viewing lists

#### To view the Known, Preferred, or Prohibited Lists

1. From standby mode, press **(▲)** menu.
2. Press **(tuv 8)** for System.
3. Press **(ghi 4)** for SP (service provider) Select.
4. Press **(1)** for Known List, **(abc 2)** for Prefr List, or **(def 3)** for Prohb List.
5. Press **(▲) view** to display the satellite service provider's MCC (mobile country code) and MNC (mobile network code).
  - If the satellite service provider is on the Preferred List, the preferred location number displays (Pref Loc).
  - If the satellite service provider is on the Prohibited List, “yes” displays (Prohib).
  - If the satellite service provider is on both the Preferred and the Prohibited Lists, the preferred location number and “yes” displays.
6. Press **(▲) ok**.

## Adding to lists

### To add to the Preferred or Prohibited Lists

1. From standby mode, press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **ghi 4** for SP (service provider) Select.
4. Press **1** for Known List.
5. Scroll to select a satellite service provider.
6. Press **▲** **edit**.
7. Press **1** for Preferred or **abc 2** for Prohibited.
8. Press **▲** **ok**.
9. Reregister your phone (see Registering phone, page 47).

### Editing lists

#### To edit (reorder or delete) from the Preferred List

1. From standby mode, press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **ghi 4** for SP (service provider) Select.
4. Press **abc 2** for Prefr List.
5. Scroll to select a satellite service provider.
6. Press **▲** **edit**.
7. Do one of the following:
  - Press **1** for Reorder, scroll to move the selected satellite service provider to a new position, and press **▲** **ok**.
  - Press **abc 2** for Delete, and press **▲** **ok** to delete the selected satellite service provider from the list.
8. Press **▲** **ok**.
9. Reregister your phone (see Registering phone, page 47).

#### Erasing from Prohibited List

1. From standby mode, press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **ghi 4** for SP (service provider) Select.
4. Press **def 3** for Prohb List.
5. Scroll to select a satellite service provider.
6. Press **▲** **erase**.
7. Press **▲** **ok**.
8. Reregister your phone (see Registering phone, page 47).



## Force Service Provider Selection

This feature forces the phone to register with a service provider in the following order of priority:

1. The phone attempts to register with your home satellite service provider.
2. The phone attempts to register with service providers on the Preferred List.
3. The phone attempts to register with service providers on the Known List.

### To force service provider selection

1. From standby mode, press **▲** menu.
2. Press **tuv 8** for System.
3. Press **ghi 4** for SP (service provider) Select.
4. Press **ghi 4** for Force SPS (service provider selection).
5. Press **▲** ok.

## Service Provider

### To display the current service provider's name

1. From standby mode, press **▲** menu.
2. Press **tuv 8** for System.
3. Press **jkl 5** for SrvcPrvder.
4. Press **Clr** or **END**.

## Territory

This feature displays the current Globalstar service provider's MCC (mobile country code) and MNC (mobile network code).

### To display the territory information

1. From standby mode, press **▲** menu.
2. Press **tuv 8** for System.
3. Press **mno 6** for Territory.
4. Press **Clr** or **END**.

## Manual Mode

The phone operates in Globalstar satellite, digital, or analog mode. You can manually select one of these modes or select auto mode by using this feature. Auto mode means that the phone automatically selects a mode based on your auto mode setting (see Auto Mode, page 50).

The mode you select remains selected until you turn the phone off. If one of the modes is unavailable, it will not display on the screen.

### To manually select a mode

1. *Shortcut:* From standby mode, press and hold **\* 1**. The following displays:



2. Press:
  - **1** to select Auto Mode. The message “Initiate Automatic System Acquisition” displays.
  - **abc 2** for Globalstar satellite mode. The message “Initiate Globalstar System Acquisition” displays.
  - **def 3** for Digital mode. The message “Initiate Digital System Acquisition” displays.
  - **ghi 4** for Analog mode. The message “Initiate Analog System Acquisition” displays.

### Auto Mode

You can set each phone number (or NAM) to automatically acquire service for one or more modes in the order of priority that you specify:

- Cell only – Acquire cellular service only. For cellular service (cell only), you choose between digital or analog using the Cell Pref menu.
- Gstar only – Acquire Globalstar satellite service only.
- Cell Pref – Attempt to acquire cellular service first and Globalstar satellite service last.
- Gstar Pref – Attempt to acquire Globalstar satellite service first and cellular service last.

### To set auto mode

1. Select the appropriate NAM (see NAM Select, page 51).
2. From standby mode, press **▲** **menu**.
3. Press **tuv 8** for System.
4. Press **tuv 8** for Auto Mode
5. Scroll to select one of the following:
  - Gstar Only – Acquire Globalstar satellite service only. Press **▲** **ok**, and the phone returns to standby mode.
  - Cell Only – Acquire cellular service only. Press **▲** **ok**, and the Cell Pref menu displays. Go to Step 6.
  - Cell Pref – Acquire cellular service first and Globalstar last. Press **▲** **ok**, and the Cell Pref menu displays. Go to Step 6.
  - Gstar Pref – Acquire Globalstar satellite service first and either digital or analog mode last. Press **▲** **ok**, and the Cell Pref menu displays. Go to Step 6.

6. If the Cell Pref menu displays, scroll to select one of the following:
  - Analg Only – Prefer analog service only
  - Digtl Only – Prefer digital service only
  - Digtl Pref – Prefer digital service over analog
  - Analg Pref – Prefer analog service over digital
7. Press **▲** **ok**.

## NAM Select

The phone allows one Globalstar NAM (number assignment module), or phone number, and two different cellular NAMs. The NAMs are entered into the phone by your service providers. (See My Numbers, page 52, to display the NAMs entered.)

Before making or receiving calls, you must activate a NAM, but only one can be active at a time. With this feature, you can access these options:

- Auto NAM – Automatically switches NAMs, if appropriate, during system searches to look for home area service.
- Set NAM – Manually sets the NAM.
- Set System – Sets your system preference for each NAM. Set System only affects cellular service. It does not affect Globalstar service.

### To set Auto NAM

1. From standby mode, press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **wxyz 9** for NAM Select.
4. Press **1** for Auto NAM.
5. Scroll to select “yes” or “no.”
6. Press **▲** **ok**.

### To set the NAM

1. From standby mode with Auto NAM set to “no,” press **▲** **menu**.
2. Press **tuv 8** for System.
3. Press **wxyz 9** for NAM Select.
4. Press **abc 2** for Set NAM.
5. Scroll to select the NAM.
6. Press **▲** **ok**.

### To set the system



1. Select the appropriate NAM (see NAM Select, page 51).
2. From standby mode, press **▲** **menu**.
3. Press **tuv 8** for System.
4. Press **wxyz 9** for NAM Select.
5. Press **def 3** for Set System.

6. Scroll to select one of the following:
  - Automatic – Use home system, but if not found use another system
  - No Roaming – Use only the home system
  - A only – Use cellular “A” system only
  - B only – Use cellular “B” system only

## My Numbers

You can display your three phone numbers (NAMs). (The NAMs are entered by your service provider.)

### To display your three phone numbers


1. From standby mode, press  menu
2. Press  for My Numbers.
3. Scroll to select one of the following:
  - PhoneNo 1 – Displays cellular phone number
  - PhoneNo 2 – Displays cellular phone number
  - PhoneNo G\* – Displays Globalstar satellite phone number

## Battery Care and Maintenance

Learn about battery care, battery charging, and battery removal and replacement in this section.

### Battery

The phone comes with a rechargeable battery that is located on the back of the phone:

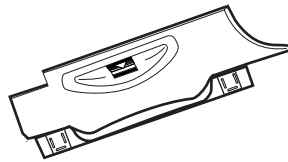

The following is typical battery performance:

Service Mode	Talk Time	Standby Time
Globalstar satellite	3.5 hours	9 hours
Digital	4.5 hours	72 hours
Analog	2.5 hours	14 hours

### Battery care and charging

The battery charge level indicator is shown at the top right of the screen and ranges between four diagonal bars (full charge) to one bar (minimal charge) to no bars and blinking (no charge):



Charge the battery immediately after purchasing the phone to maximize the talk and standby times. The battery does not need to be completely drained before you recharge it. See Low battery, page 54, for more information.

Follow these guidelines for batteries:

- Only use QUALCOMM batteries and chargers designed for your phone. Do not use any other battery or charger. You cannot overcharge QUALCOMM batteries with QUALCOMM chargers.
- To maximize battery life, set the backlight option to “off” (see Backlight, page 38).


- To prevent damage, do not charge the battery in temperatures less than +32 °F (0 °C) or greater than +104 °F (+40 °C). Do not use the battery in temperatures less than –4 °F (–20 °C) or greater than +140 °F (+60 °C).
- Do not use the battery charger in direct sunlight or in places with excessive humidity, such as a bathroom.
- Keep the metal contacts at the top end of the battery clean.
- Never dispose of the battery in a fire.
- Do not try to disassemble or short circuit the battery.
- Recharge the battery if the phone has not been used for several months.
- Do not store batteries in places where temperatures are below –22 °F (–30 °C) or above +140 °F (+60 °C).

## Battery chargers

Charge the batteries with the AC wall charger, universal travel charger, or cigarette lighter adapter (see Accessories, page 61). The battery does not need to be completely drained before you recharge it.

The universal travel charger allows you to charge the battery while it is attached to the phone whether the phone is turned on or off. You can also charge another battery at the same time.

After you connect the phone to one of the chargers, check the charging status:

- If the battery is charging, a message displays and the bars on the battery indicator  flash in sequence.
- When charging is complete, a message displays on the screen.

The typical charge time to 90% charge level for the universal travel charger, cigarette lighter adapter, and AC wall charger is 2-1/2 hours.

## Low battery


The phone alerts you when the battery is low:

- The battery indicator flashes.
- The phone beeps three times (if you are on a call, the phone continues to beep every minute).
- The message “Low Battery! Recharge Battery Soon” displays on the screen.

If the battery level gets too low, the phone turns off and loses any function in progress. Before turning off, the phone alerts you with five beeps and the message “Low Battery, Turning Off Phone Now” displays on the screen.



## Battery removal

1. Turn the power off to avoid losing data.
2. Press and hold the battery release latch in the direction of the arrow to release it from the phone.

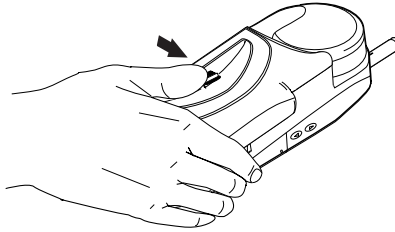

## Battery replacement

1. If a battery is already installed, turn the power off to prevent losing data and then remove the battery.
2. Insert the new replacement battery by lining up the positioning tabs (see arrows) and rotating it into place.
3. Press down on the battery until it locks.

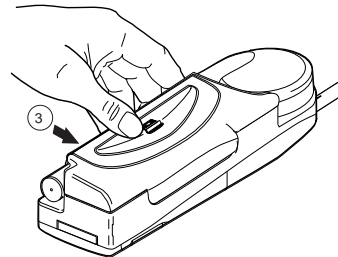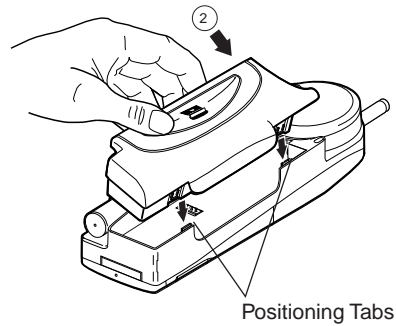





## ***Safety Information***

---

Learn the safety information for wireless handheld phones in this section.

### **Exposure to radio frequency signals**

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992)<sup>1</sup>
- NCRP Report 86 (1986)<sup>2</sup>
- ICNIRP (1996)<sup>3</sup>

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### **Antenna care**

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### **Phone operation**

**Normal POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

**TIPS ON EFFICIENT OPERATION:** For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

- 
1. American National Standards Institute
  2. National Council on Radiation Protection and Measurements
  3. International Commission on Non-Ionizing Radiation Protection

## **Driving**

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions so require.

## **Electronic devices**

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

### **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

### **Other medical devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted facilities**

Turn your phone OFF in any facility where posted notices so require.

## **Aircraft**

FCC regulations prohibit using your phone while in the air.

Switch OFF your phone before boarding an aircraft.

## **Blasting areas**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## **Potentially explosive atmospheres**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## **For vehicles equipped with an air bag**

An air bag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.



## Accessories

---

The optional accessories described in this section are available from your satellite or cellular service provider.



### **Caution**

**Allow only authorized personnel to service the accessories.  
Unauthorized service can invalidate the warranty.**

### **Battery**

An extra battery allows you to have a charged battery available at all times.

### **Leather case**

A leather case with a wrist strap protects your phone and provides carrying convenience.

### **AC wall charger**

The North American and European version AC wall chargers supply power to the phone and fast charge the battery while it is attached to the phone. Both chargers operate at 110V and 220V.

### **Universal travel charger**

The universal travel charger allows you to charge a battery attached to the phone. At the same time, you can charge a battery detached from the phone and installed in the universal travel charger. Three optional plugs are available to adapt the universal travel charger for use in different countries.

### **Cigarette lighter adapter**

The cigarette lighter adapter supports both U.S. and European vehicles. (For U.S. vehicles, simply remove the sleeve from the adapter.)

Plug the adapter into your vehicle's cigarette lighter to supply power to the phone (with or without the battery attached). You can also fast charge the battery at the same time.

### **Data cable**

A five-foot data cable allows you to connect your phone directly to IBM PC-compatible computers (RS-232 compatible serial port).

## Hands-free car kit

With the QUALCOMM Globalstar Hands-Free Car Kit, you can adapt your phone for hands-free operation in your vehicle. For more information, see the *QUALCOMM Globalstar GCK-1400 Hands-Free Car Kit Installation/User Guide*.









### **Caution**

**Allow only authorized personnel to install or service the car kit. Faulty installation or service can be dangerous and can invalidate the warranty.**






## Troubleshooting

If you have a problem with your phone that you cannot solve by following these troubleshooting tips, contact your satellite or cellular service provider. (You may have different service providers for Globalstar satellite service and cellular service.)

Problem	Solution
Turning the phone on	<ul style="list-style-type: none"> <li>■ Hold  for more than one second.</li> <li>■ Check the battery installation.</li> <li>■ Recharge or replace the battery.</li> </ul>
Charging the battery	<ul style="list-style-type: none"> <li>■ Install only QUALCOMM batteries.</li> <li>■ Check that the battery contacts are clean and dry.</li> <li>■ Check the charger connection.</li> <li>■ Check the battery temperature. If it is too warm, allow it to cool before recharging it.</li> <li>■ Replace the battery if it is several years old.</li> </ul>
Battery draining quickly	<ul style="list-style-type: none"> <li>■ Check that your Globalstar satellite antenna is pointing straight up and has a clear view of the sky to conserve battery life.</li> <li>■ Set the backlight option to "off" (see Backlight, page 38).</li> <li>■ Replace the battery if it is several years old.</li> <li>■ Check the battery temperature. If temperatures are too warm or too cold, battery life is decreased.</li> </ul>

Problem	Solution
Making calls	<ul style="list-style-type: none"> <li>■ Rotate or fully extend the appropriate antenna.</li> <li>■ In Globalstar satellite mode, be sure the satellite antenna has a clear view of the sky.</li> <li>■ Check that you selected the correct service mode:  <i>Globalstar:</i> Press and hold  to display the mode menu, and press  for Globalstar.  <i>Cellular:</i> Press and hold  to display the mode menu, and press  for Digital or  for Analog.</li> <li>■ Remove all service providers from the Prohibited List (see Erasing from Prohibited List, page 48).</li> <li>■ If “Service Not Found” displays, check the auto preference and mode selection settings (see Auto Mode, page 50, and Manual Mode, page 49).</li> <li>■ Check the signal strength indicator.</li> <li>■ Check that the security module is properly installed. If the security module was removed, turn the phone off and on.</li> <li>■ If “Calling is Restricted” displays, check the Restrict Phone setting under the Security menu.</li> </ul>



Problem	Solution
Receiving calls	<ul style="list-style-type: none"> <li>■ Check that the phone is turned on.</li> <li>■ Check that the ringer is loud enough.</li> <li>■ Rotate or fully extend the appropriate antenna.</li> <li>■ In Globalstar satellite mode, be sure that the satellite antenna has a clear view of the sky.</li> <li>■ Check that you selected the correct service mode:  <i>Globalstar:</i> Press and hold  to display the mode menu, and press  for Globalstar.  <i>Cellular:</i> Press and hold  to display the mode menu, and press  for Digital or  for Analog.</li> <li>■ Remove all service providers from the Prohibited List (see Erasing from Prohibited List, page 48).</li> <li>■ Check the signal strength indicator.</li> <li>■ Check that the security module is properly installed. If the security module was removed, turn the phone off and on.</li> </ul>
Losing calls	<ul style="list-style-type: none"> <li>■ In Globalstar satellite mode, be sure that your satellite antenna is pointing straight up when placed next to your head and when using the keypad or viewing the screen.</li> <li>■ In Globalstar satellite mode, be sure that the satellite antenna has a clear view of the sky.</li> <li>■ Rotate or fully extend the appropriate antenna.</li> <li>■ Check the signal strength indicator.</li> </ul>
Remembering your lock code or PIN (personal identification number)	<ul style="list-style-type: none"> <li>■ Contact your satellite or cellular service provider for the lock code for the Security menu or phone lock feature.</li> <li>■ Contact your cellular service provider for the PIN used to make analog calls.</li> </ul>



## A

- AC wall charger 61
- accessories 61
- air bag safety 59
- alerts 41
  - fade 41
  - minute 41
  - new message 42
  - service change 41
- all calls 30
- analog mode indicator 7
- answering calls 4
- antenna 8
  - cellular 4
  - safety 57
  - satellite 2, 3
- any-key answer 43
- auto answer 42
- auto hyphen 39
  - pauses 16
- auto mode 49, 50
- auto NAM 51
- auto redial 43

## B

- backlight, settings 38
- banner 38
- battery
  - charge indicator 53
  - charge time 54
  - charger indicator 7
  - chargers 54
  - charging 53
  - decrease life 38
  - guidelines 53
  - increase life 38
  - low charge 54
  - removal 55
  - replacement 55
  - typical performance 53

## C

- call history
  - accessing 21
  - call types 21
  - erasing 33
  - viewing details 22
- call in progress indicator 7

- call info menu 29
  - all calls 30
  - home calls 29
  - last call 29
  - recent calls 30
  - roam calls 29
- call waiting 12
- caller ID 12
- calls
  - emergency 11
  - making cellular calls 4
  - making satellite calls 3
  - redialing 11
- cellular antenna 8
  - extending 4
- cellular mode 1, 4, 49, 50
- charger
  - universal travel 61
  - wall 61
- charging battery 53, 54
- check mark indicator 7
- cigarette lighter adapter 61
- clear key 14
  - defined 6
- counter
  - resetting 30
  - undo resetting 30

## D

- data cable, PC 61
- deep sleep 44
- deleting
  - letters 15
  - numbers 10
- digital mode indicator 7
- displaying phone number 4
- driving safety 58
- DTMF tones 19, 22

## E

- earpiece volume 36
- editing
  - banner 38
  - letters 15
  - numbers 10
  - phone book entries 18
- electronic devices 58
- emergency calls 11

- end key 14
  - defined 6
- ending calls 4
- entering
  - hyphens 39
  - letters 15
  - numbers 10
  - pauses 16
  - priority numbers 32
  - punctuation 15
  - spaces 15
- erasing
  - all phone book entries 33
  - all SMS messages 33
  - call history list 33
  - phone book entries 18
- F**
  - fade alert 41
  - features menu 27
    - key guard 27
    - scratchpad 27
  - finding phone book entries 17
  - force service provider selection 49
- G**
  - Globalstar satellite mode 1, 3, 49, 50
  - Globalstar time zone 40, 41
- H**
  - hands-free car kit 62
  - hard pauses 16
  - hearing aids 58
  - home calls 29
  - hyphens
    - entering automatically 39
    - entering manually 39
- I**
  - indicator
    - analog mode 7
    - battery charge 7
    - call in progress 7
    - check mark 7
    - digital mode 7
    - light, defined 5
    - locked message 7
    - no service 7
    - roaming 7
    - satellite mode 7
    - scroll arrows 7
    - signal strength 7
    - text message 7
    - unlocked message 7
    - voice message 7
  - information key 6, 8
  - international dialing 11
- K**
  - key beep length 37
  - key beep sound 36
  - key beep volume 36
  - key guard 27
  - key presses 1
  - keypad 5
  - known list 46, 47
- L**
  - last call 29
  - lists
    - known 46
    - preferred 46
    - prohibited 46
  - lock code, about 31
  - lock code, changing 32
  - locked message indicator 7
  - locking messages 25, 26
  - locking phone 31
- M**
  - main menu 14
  - manual mode 49, 50
  - medical devices 58
  - memory 25, 26
    - text message 25
  - menu
    - call history 21
    - call info 29
    - features 27
    - messages 23
    - my numbers 52
    - phone book 15
    - preferences 35
    - security 31
    - system 45
  - messages 23
    - call back numbers 25
    - calling voice mail system 24
    - erasing text 25
    - locking 25, 26
    - storing 25
    - text 24
    - unlocking 26
    - voice mail notifications 23
  - messages menu 23

- minute alert 41
- mode
  - cellular 1, 4, 49, 50
  - power save 10
  - satellite 1, 3, 4, 49, 50
  - standby 9
- mute phone 11
- mute stereo 37
- my numbers 52
- N**
- NAM Select
  - setting auto NAM 51
  - setting NAM 51
  - setting system 51
- navigating menus 14
- new message alert 42
- no service indicator 7
- numbers
  - deleting 10
  - editing 10
  - entering 10
- O**
- one-touch dial
  - setting 43
  - using 20
- one-touch dialing
  - setting 43
- P**
- pacemakers 58
- pauses 16
  - entering 16
- PC data cable 61
- phone book
  - editing entries 18
  - erasing all entries 33
  - erasing entries 18
  - finding entries 17
  - nonsecret entries 18
  - saving entries 16
  - secret entries 18
  - viewing numbers 19
- phone book menu 15
- phone lock 31
- phone number, displaying 4
- PIN
  - entering 34
  - sending 44
- plus key dialing 11
- power save mode 10

- preferences menu 35
  - alerts 41
  - calling 42
  - display 37
  - sounds 35
- preferred list 46
  - adding 48
  - deleting 48
  - editing 48
  - reordering 48
  - viewing 47
- prepend 19
- priority numbers 32
- prohibited list 46
  - adding 48
  - erasing 48
  - viewing 47
- R**
- radio frequency 57
- recent calls 30
- redialing calls 11
- registering phone 47
- removing battery 55
- reordering preferred list 48
- replacing battery 55
- resetting call counters 30
- resetting preferences 34
- restricting phone 32
- ringer silencing 36
- ringer type 35
- ringer volume 35
- roam calls 29
- roaming indicator 7
- S**
- safety
  - air bags 59
  - aircraft 59
  - antenna 57
  - blasting areas 59
  - driving 58
  - electronic devices 58
  - explosive atmospheres 59
  - hearing aids 58
  - hospitals 58
  - medical devices 58
  - pacemakers 58
  - radio frequency 57
- satellite antenna 2, 3, 8
- satellite calls
  - making 3

- preparing for 2
- satellite mode 1, 3, 4, 49, 50
- satellite mode indicator 7
- saving menu changes 14
- scratchpad 27
- scroll arrows 7
- scroll keys 1, 6
- secret entries 18
- security menu 31
  - enter PIN 34
  - erase call history 33
  - erase phone book 33
  - erase SMS messages 33
  - lock phone 31
  - new code 32
  - priority numbers 32
  - resetting preferences 34
  - restricted 32
  - unlock phone 31
- security module 2, 8
- sending PIN 44
- sending tones 19
  - call history 22
  - manually 19
  - phone book 20
  - scratchpad 27
- service alert 41
- service provider
  - accessing information 49
  - force selection 49
  - select 46
- show time 38, 39
- signal strength indicator 7
- silence ringer 36
- SMART KEYS 1, 6
- SMS messages
  - about 23
  - erasing entries 33
- software version 46
- sound 35
- speed dialing 20
- standby mode 9
- standby time 53
- status 45
- stereo muting 37
- system menu 45
  - auto mode 50
  - force system reacquisition 46
  - manual mode 49, 50
  - NAM select 51
  - service provider 49

- service provider select 46
- status 45
- territory 49
- version 46

## T

- talk time 53
- territory 49
- text message indicator 7
- three-way calling 12
- time zone, Globalstar 40, 41
- time, showing 38, 39
- timed pauses 16
- tones
  - DTMF 19
  - sending 19
  - sending by phone book 20
  - sending manually 19
- turning phone on 9

## U

- undo counter 30
- universal travel charger 61
- unlocked message indicator 7
- unlocking messages 26
- unlocking phone 31

## V

- version 46
- voice mail 24
- voice mail notifications 23
- voice message indicator 7
- voice messages 23
- volume buttons 5

## W

- wall charger 61