

Game Controller Super Converters

Magic stick
X1-RD

PS3/PS4 <=> Xbox One Controller Adapter

透過 USB 介面連接 Xbox One 或 PC 主機。



PS3/PS4 有線手把以及相關的其它裝置，接上 USB 後都即可使用，連接無線 PS3/PS4 手把並註冊完成後(看到手把亮燈)，拔除無線 PS3/PS4 手把 USB 線即可進行無線手把操控。


step.1

將 Game Controller Super Converters 連接到 Xbox One 主機的USB連接埠。


step.2

無線 PS3/PS4 手把透過 USB 線與 Game Controller Super Converters 連接後，待**手把 Player 指示燈任一燈號亮起**(或確認手把能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。

Game Controller Super Converter

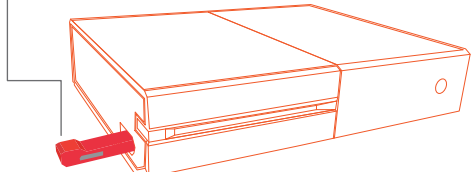

PS 按鍵

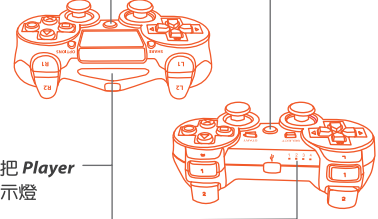

step.3


拔除無線 PS3/PS4 手把 USB 線後，即可進行無線手把操控。

step.4

註冊完成後，當手把休眠或關閉時，只需按壓手把上的**PS按鍵**即可立即連線，則不再需要重新使用USB連線進行註冊。

- 每個 Super Converter 一次僅能對應一支 PS3/PS4 手把進行控制。
- 無線 PS3/PS4 手把可直接與 Super Converter 連線，若發現無法與 Super Converter 連線時，請重新註冊。
- Win7 以上系統請安裝微軟 Xbox One 驅動程式即可使用，Win7 以下系統不支援。
- PS4 的產品在進行和Super Converter 註冊的步驟中，拔除 USB 線之後必須等待 3~5 秒後再按下 PS 鍵才能順利進行連線。

可自動判斷 PS3/PS4 手把與方向盤功能，不需要(撥動開關)設定，自動對應 Xbox One 按鍵功能。按鍵功能定義方式如下：

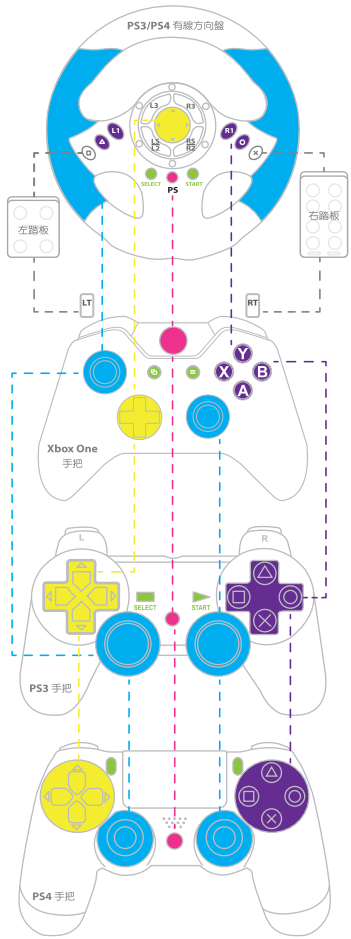

Game Controller Super Converters

Magic stick
X1-RD

PS3/PS4 <=> Xbox One Controller Adapter

透過 USB 接口連接 Xbox One 或 PC 主机。



PS3/PS4 有線手柄以及相关的其它装置，接上 USB 後都即可使用，连接无线 PS3/PS4 手柄并注册完成後(看到手柄亮灯)，拔除无线 PS3/PS4 手柄 USB 线即可进行无线手柄操控。


step.1

将 Game Controller Super Converters 连接到 Xbox One 主机的 USB 连接埠。


step.2

无线 PS3/PS4 手柄透过 USB 线与 Game Controller Super Converters 连接後，待**手柄 Player 指示灯任一灯号亮起**(或确认手柄能用有线操控的方式对应主机功能)，即表示与 Game Controller Super Converters 注册完成。

Game Controller Super Converter

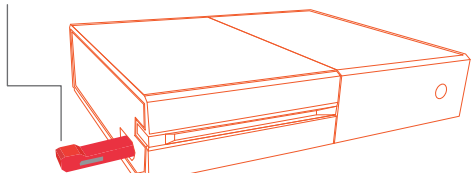

PS 按鍵

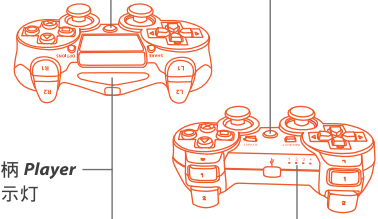

step.3


拔除无线 PS3/PS4 手柄 USB 线後，即可进行无线手柄操控。

step.4

注册完成後，当手柄休眠或关闭时，只需按压手柄上的**PS按鍵**即可立即连线，则不再需要重新使用USB连接线进行注册。

- 每个 Super Converter 一次仅能对应一支 PS3/PS4 手柄进行控制。
- 无线 PS3/PS4 手柄可直接与 Super Converter 联机，若发现无法与 Super Converter 联机时，请重新注册。
- Win7 以上系统请安装微软 Xbox One 驱动程式即可使用，Win7 以下系统不支持。
- PS4 的产品在进行和Super Converter 注册的步骤中，拔除 USB 线之後必须等待 3~5 秒後再按下 PS 鍵才能顺利进行连线。

可自动判断 PS3/PS4 手柄与方向盘功能，不需要(拨动开关)设定，自动对应 Xbox One 按鍵功能。按鍵功能定义方式如下：

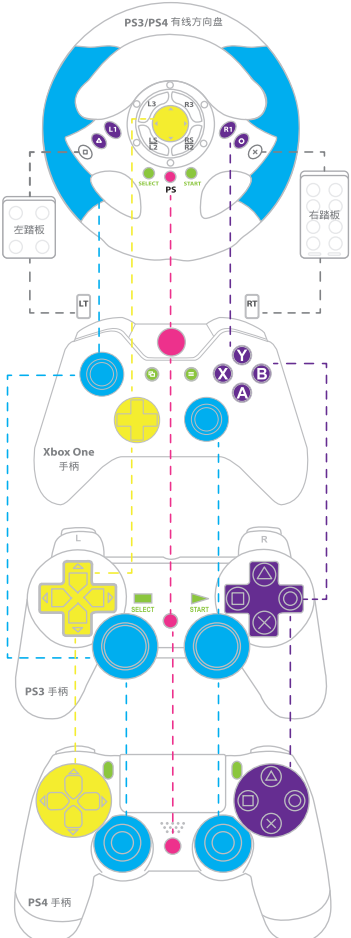

Xbox One 手柄	PS4 手柄/有线方向盘	PS3 手柄	PS3 有线方向盘
DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
A	X	X	O
B	O	O	△
X	□	□	L1
Y	△	△	R1
Menu	OPTIONS	Start	Start
View	SHARE	Select	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	--
Rx	Rx	Rx	--
Ry	Ry	Ry	--
LB	L1	L1	L2
RB	R1	R1	R2
LT	L2	L2	□
RT	R2	R2	X
L3	L3	L3	L3
R3	R3	R3	R3
Xbox Key	PS Key	PS Key	PS Key

Turbo 使用设定步骤：

step.1

将 PS3/PS4 系列的手柄按住 PS 键 + SELECT/SHARE 键进入设定模式。



step.2

按住 SELECT/SHARE 键不放，再选择想要连发的键，可选择一個或是多個按鍵。



step.3

按下 START/OPTIONS 键後，设置完毕。



step.4

按下 PS 键，退出模式。



清除全部 Turbo 使用设定步骤：

step.1

将PS3/PS4 系列的手柄按住 PS 键 + SELECT/SHARE 键进入设定模式。



step.2

再同时按下 SELECT/SHARE 键 + START/OPTIONS 键，即可将设定全部清除。



step.3

按下 PS 键，退出模式。




更多詳細操作請上官网查詢 www.brookaccessory.com

Remap Key/Custom Buttons 使用设定步骤：


step.1

将 PS3/PS4 系列的手柄按住 PS 键 + START/OPTIONS 键进入设定模式。

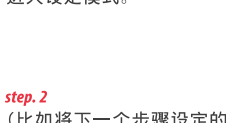

step.2

(比如将下一个步骤设定的功能变成 O 键使用) 按下 O 键。

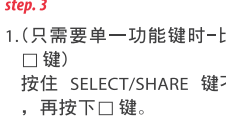

step.3

1.(只需要单一功能键时-比如 □ 键) 按住 SELECT/SHARE 键不放，再按下 □ 键。



step.4

按下 START/OPTIONS 键後，设置完毕。



更多詳細操作請上官网查詢 www.brookaccessory.com

清除全部Remap Key/Custom Buttons 使用设定步骤：


step.1

将 PS3/PS4 系列的手柄按住 PS 键 + START/OPTIONS 键进入设定模式。




step.2

再同时按下 SELECT/SHARE 键 + START/OPTIONS 键，即可将设定全部清除。

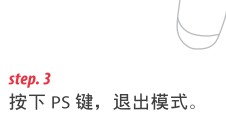

step.3

按下 PS 键，退出模式。

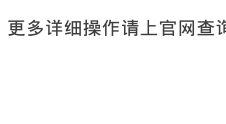

更多詳細操作請上官网查詢 www.brookaccessory.com


更多詳細操作請上官网查詢 www.brookaccessory.com



Game Controller Super Converters


Magic stick
X1-RD

PS3/PS4 ↔ Xbox One Controller Adapter

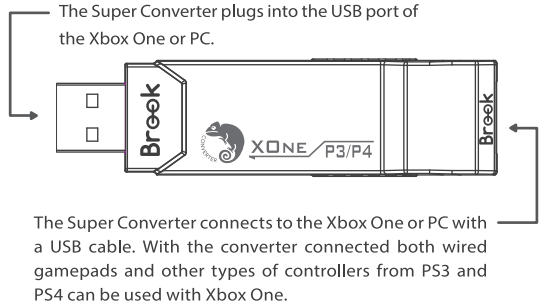

step. 1
Connect the Super Converter to the USB port of the Xbox One.


step. 2
For first time use the PS3/PS4 controller is connected with a USB cable to the Super Converter. Registration of the controller and mapping of buttons start automatically and finish when **the port indicator light of the controller turns on** or when pushing a button triggers a response on the screen.

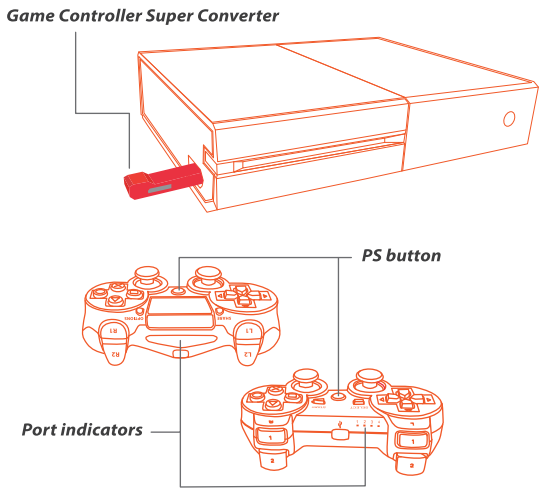

step. 3
Disconnect the USB cable and the controller is ready for playing.

step. 4
Please note that this process only needs to be completed once. After the first-time registration and use, simply press the **PS button** when the console is hibernating or shut down to have it automatically connect to the Super Converter; there is no need to re-register the controller using the USB cable.

- Each Super Converter can handle one PS3/PS4 game controller at a time.
- Wireless PS3/PS4 controllers connect to the Super Converter automatically. If they don't connect, please try to do step 1-3 over again.
- To use the Super Converter with a PC running on Windows 7 please install the original Xbox One driver from Microsoft (this also supports PS3/PS4). Older operating systems are not supported.
- After registering a PS4 controller and unplugging the USB cable: Please wait 3-5 seconds before pressing the PS button to ensure that the connection to wireless is smooth.

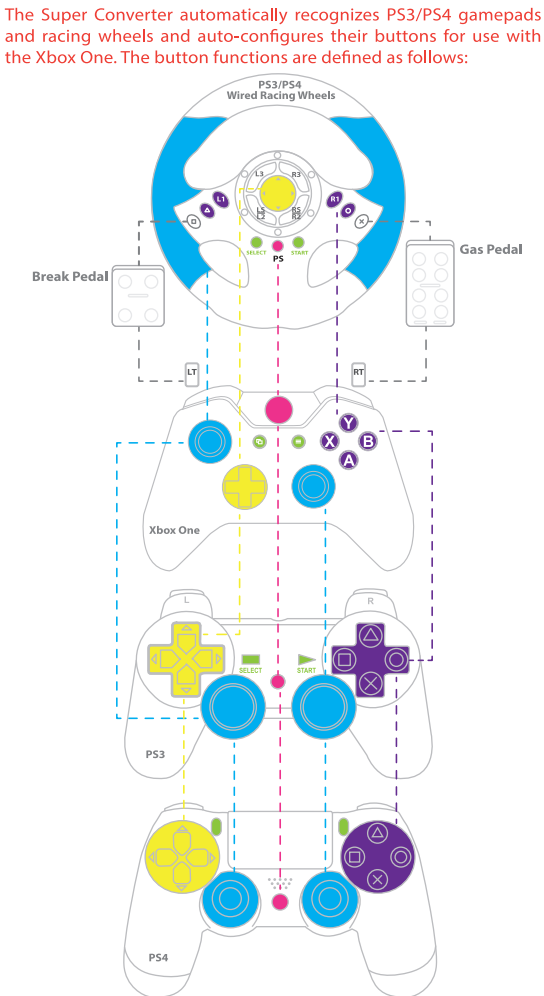


Xbox One Gamepad	PS4 Gamepad / Wired Racing Wheel	PS3 Gamepad	PS3 Wired Racing Wheel
DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
A	X	X	O
B	O	O	△
X	□	□	L1
Y	△	△	R1
Menu	OPTIONS	Start	Start
View	SHARE	Select	Select
Lx	Lx	Lx	Lx
Ly	Ly	Ly	--
Rx	Rx	Rx	--
Ry	Ry	Ry	--
LB	L1	L1	L2
RB	R1	R1	R2
LT	L2	L2	□
RT	R2	R2	X
L3	L3	L3	L3
R3	R3	R3	R3
Xbox Key	PS Key	PS Key	PS Key

Procedure for assigning a Turbo button

step. 1
Press the PS and SELECT/SHARE buttons at the same time to enter the settings mode.



step. 2
Press the SELECT/SHARE button and the button you want to assign as the Turbo button at the same time. The Turbo function can be assigned to several buttons if desired.

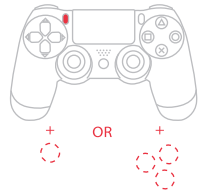

step. 3
Press the START/OPTIONS button to complete the setting.



step. 4
Press the PS button to exit the settings mode.



Procedure for clearing a Turbo button assignment

step. 1
Press the PS and SELECT/SHARE buttons at the same time to enter the settings mode.



step. 2
Press the SELECT/SHARE and START/OPTIONS buttons at the same time to clear the setting.



step. 3
Press the PS button to exit the settings mode.



For more details please visit our official website at www.brookaccessory.com

Procedure for customizing buttons

Ex: You now press □ to jump, △ to spin and X to run. You want to remap the buttons so you can press ○ to jump (step 3.1) or ○ to jump, spin and run at the same time (step 3.2).

step. 1
Press the PS and START/OPTIONS buttons at the same time to enter the settings mode.



step. 2
Press the button you want to use in the future (○).



step. 3

3.1 If you want the new button (○) to correspond to a single function (jump):
Press and hold BACK while pressing the old button for this function (□).



3.2 If you want the new button (○) to trigger a multiple function response (jump, spin and run at the same time):
Press and hold BACK while pressing the old buttons for these functions one at a time (□, △ and X).



step. 4
Press the START/OPTIONS button to complete the settings.



step. 5
Press the PS button to exit the settings mode.



Procedure for resetting all customizing buttons

step. 1
Press the PS and START/OPTIONS buttons at the same time to enter the settings mode.



step. 2
Press the SELECT/SHARE and START/OPTIONS buttons at the same time to clear the current setting.



step. 3
Press the PS button to exit the settings mode.



FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.