
ESS2

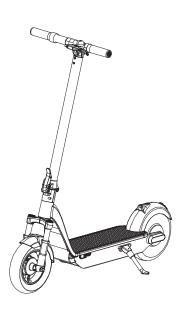




Thank you for purchasing

Thank you for purchasing Macwheel Electric Scooter. It is a sports and recreational vehicle with style.

Contents


1. Package Contents · · · · · · · · · · · · · · · · · · ·	02
2. Product Overview	03
3. Assembly and Set-Up	04
4. Charge Your Scooter	0
5. How To Ride	0
6. Safety Instructions	0
7. Folding and Carrying	1:
8. Daily Care and Maintenance	1
9. Specifications ·	10
10. Trademark and Legal statement	1
11. Certifications	18

1 Package Contents

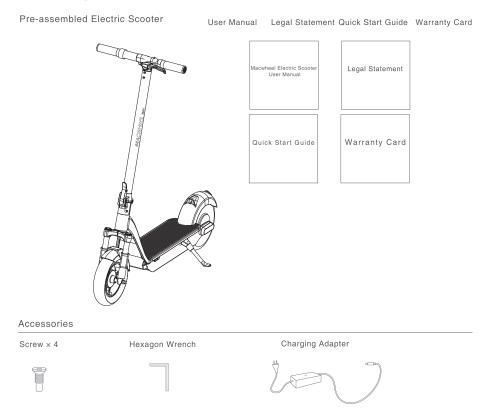

Carefully check package contents, if anything is missing or damaged, please contact online customer service for support. 02

2 Product Overview

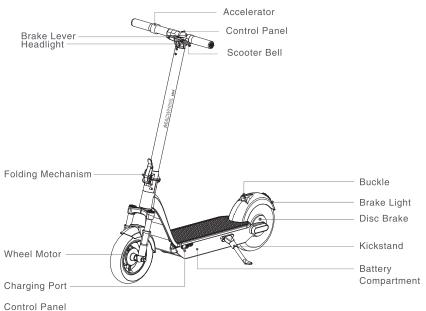



Battery level display

The power level is indicated by five power lights on the control panel. As power is consumed, the lights will change from solid to flashing, and finally turn off from up to down. When the bottom power light flashes, it indicates low power. Please recharge soon for further use. After running out of power, all lights will turn off, and the scooter will coast until it comes to a complete stop.

Power button Press and hold the power button for 2s to turn on/off the scooter. Press the power button once to turn on/off the front light.


Quick press the power button twice to change the gear station. Long press the power button for 5s to enter into the cruise control mode.

03

04

3 Assembly and Set-Up


and put the kickstand down 1. Fasten the handlebar stem on the headset,

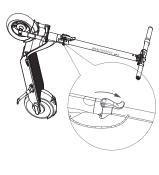

3. Tighten the screws onto both sides of the stem with the hexagon wrench




2. Attach the handlebar to the stem

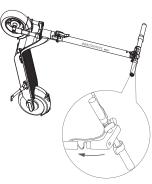

4. After the assembly, press the power button to check if it's working properly



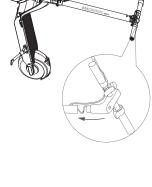

5 How To Ride



falls and injuries when you learn to ride the scooter Wear helmets and knee pads in case of

4 Charge Your Scooter



Lift up the rubber flap





charging port


adapter into the completed, put back the rubber flap When charging is




1. Turn on the scooter, and check the power indicator




2. Step on the deck with one foot, and slowly kicks off the other on the ground

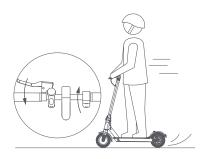

4 Release the accelerator and the kinetic energy recovery system (KERS) initiates automatically to brake slowly; And squeeze the brake lever for a sudden brake

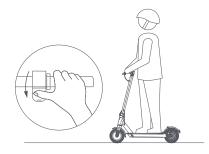

 When the scooter starts to coast, put both feet on the deck and press the accelerator (the accelerator initiates once the coasting speed exceeds 3.1 mph)

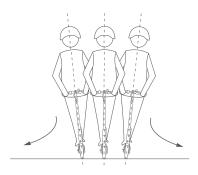

5 Tilt your body to the steering direction as you turn, and slowly turn the handlebar

6 Safety Instructions

Watch out for safety risks



<u></u> Do

Do not ride in the rain



Keep your speed between 3.1-6.2 mph when you ride through speed bumps, elevator door sills, bumpy roads or other uneven surfaces. Slightly bend your knee to better adjust mentioned surfaces



 \triangle

Look out for doors, elevators and other overhead obstacles



 \triangle

Do not accelerate when you go downhill


07

06






Do not press the accelerator when you're walking alongside the scooter

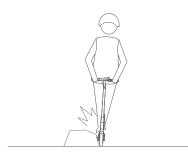

Always steer clear of obstacles

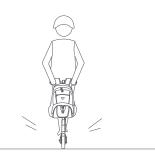


no not hang bags or other heavy stuff on the handlebar



Keep both feet on the deck all time.

Do not try following dangerous actions

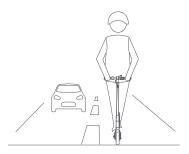




Do not ride in traffic lanes or residential areas where vehicles and pedestrians are both allowed






Do not ride in a ponding that is higher than 0.78 inches

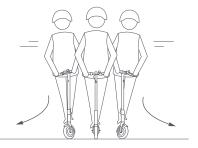



Do not turn the handlebar violently during high-speed riding

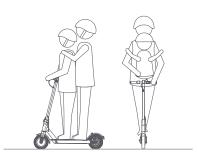

Do not ride with anyone else, including children

08 09