

102*70mm
70g 双胶纸

408 mm

280 mm

OPENFREE User Manual


Pairing

1. Follow Regulations: Turn off the device in areas where wireless devices are prohibited.
2. Maintain Distance: Keep at least 15cm away from implanted medical devices (e.g., pacemakers).
3. Volume Control: Set an appropriate volume to avoid hearing damage.
4. Temperature Range: Use the device and accessories between 5°C and 35°C. Extreme temperatures may cause malfunction.
5. Storage: Store in a well-ventilated, cool place away from direct sunlight (e.g., not on car dashboards or windowsills).
6. Keep Away from Children: This device is not a toy. Use under adult supervision and store out of children's reach to avoid damage or choking hazards.
7. Avoid Distractions: Do not use while driving, operating machinery, or performing tasks requiring full attention.
8. Avoid Thunderstorms: Do not use during thunderstorms to prevent malfunction or electric shock risks.
9. Avoid Heat and Impact: Keep away from heat sources or open flames; avoid strong impacts or vibrations.
10. Cleaning: Use a dry soft cloth for cleaning. Do not use harsh chemicals or heating tools (e.g., hair dryers, microwaves).
11. No Unauthorized Repairs: Do not disassemble or modify the device.
12. Use Approved Chargers: Only use approved or compatible chargers to prevent faults, fire, or explosion risks.



Resetting

1. Place the earbuds in the charging case with the case lid open. Press and hold the reset button on the charging case for 5 seconds until the indicator light on the case pulses white three times, indicating a successful reset.
2. After the reset, close and reopen the charging case to automatically enter pairing mode.



Charging

1. Place the earbuds in the charging case and close the lid to charge.
2. Use a USB-C cable to charge the charging case.



* Battery status: ○ White light >70%; ● Green light 30% - 70%; ● Orange light <30%; ● Change light pulsing <10%.
* Charging: White light pulsing: Charging completed: White light off.

Touch Control (Customizable in the app)

| Action | Left Earbud (L) | Right Earbud (R) |
|-----------------|-----------------|------------------|
| Previous Track | *** | / |
| Next Track | / | *** |
| Play / Pause | ** | ** |
| Answer Call | * | * |
| End Call | * | * |
| Reject Call | ** | ** |
| Volume Down | * | / |
| Volume Up | / | * |
| Voice Assistant | ==== | ==== |
| Game Mode | ***** | ***** |

Safety Precautions

1. Follow Regulations: Turn off the device in areas where wireless devices are prohibited.
2. Maintain Distance: Keep at least 15cm away from implanted medical devices (e.g., pacemakers).
3. Volume Control: Set an appropriate volume to avoid hearing damage.
4. Temperature Range: Use the device and accessories between 5°C and 35°C. Extreme temperatures may cause malfunction.
5. Storage: Store in a well-ventilated, cool place away from direct sunlight (e.g., not on car dashboards or windowsills).
6. Keep Away from Children: This device is not a toy. Use under adult supervision and store out of children's reach to avoid damage or choking hazards.
7. Avoid Distractions: Do not use while driving, operating machinery, or performing tasks requiring full attention.
8. Avoid Thunderstorms: Do not use during thunderstorms to prevent malfunction or electric shock risks.
9. Avoid Heat and Impact: Keep away from heat sources or open flames; avoid strong impacts or vibrations.
10. Cleaning: Use a dry soft cloth for cleaning. Do not use harsh chemicals or heating tools (e.g., hair dryers, microwaves).
11. No Unauthorized Repairs: Do not disassemble or modify the device.
12. Use Approved Chargers: Only use approved or compatible chargers to prevent faults, fire, or explosion risks.

Warranty (In case of discrepancies, national laws and regulations take precedence)

1. We offer a 1-year (i.e. 365 days) warranty coverage for our products (excluding carry cases, ear tips and other accessories). Warranty period starts from the date of purchase.
 2. Our Warranty covers any factory defects that might affect the proper functionality. It does not cover any man-made damage due to human error, negligence and etcetera.
 3. Once we have confirmed that your item is defective due to manufacturing issues, we will arrange for a replacement, partial refund or a full refund upon return (if applicable).
 4. Before proceeding in our warranty policy, please provide the order number and state the issue clearly.
- * The warranty does not cover the following situations:
1. Expired Warranty: The warranty period has ended or the product's validity cannot be verified.
 2. No Proof of Purchase: Absence of a valid purchase receipt (order screenshot or invoice).
 3. Improper Use: Damage caused by not following the user manual's instructions for use, maintenance, or care.
 4. Accidental Damage: Damage due to product drops or water immersion.
 5. Unauthorized Repairs: Damage resulting from unauthorized disassembly or modifications.
 6. External Factors: Damage caused by unavoidable events (e.g., fire, earthquake, lightning).
 7. Normal Wear and Tear: Scratches and other damage due to natural wear.

* FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general Rf exposure requirement. The device can be used in portable exposure condition without restriction.


Statement

We provide customer service only for products purchased directly from Rose Technics or Rose Technics authorized distributors. If you have purchased from a different seller, please contact them for any exchange or refund request.

Thank you for purchasing authentic Rose Technics products. For any assistance, please contact us freely.


Bluetooth ペアリング

1. 充電ケースを初めて開け、イヤホンを取り出すと自動的にペアリングモードに入ります。
2. イヤホンとペアリングするデバイスの Bluetooth スイッチをオンにし、[ROSE OpenFree] というイヤホン名を検索してペアリングしてください。

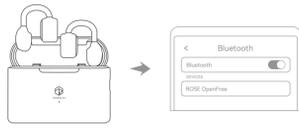

工場出荷時設定に戻す

1. イヤホンと充電ケースに入れ、充電ケースの蓋を開いた状態で、充電ケースのリセットボタンを5秒押し続けます。充電ケースのインジケータライトが3回点滅すると、工場出荷時の設定に戻ります。
2. 工場出荷時設定に戻した後、充電ケースの蓋を閉じ、再度開けると自動的にペアリングモードに入ります。

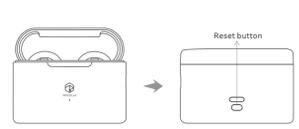

充電

1. イヤホンと充電ケースに入れ、充電ケースの蓋を開いた状態で充電してください。
2. USB-C充電ケーブルを使用して充電してください。



* ○白色の点灯 >70%; ●緑色の点灯 30%-70%; ●オレンジ色の点灯 <30%; ●オレンジ色の点滅 <10%.
* 充電中は白色の点滅、充電完了後は白色の点灯が消えます。

タッチ機能 (カスタムタッチはアプリで設定可能)

| 機能 | 左イヤホン(L) | 右イヤホン(R) |
|----------|----------|----------|
| 前の曲 | *** | / |
| 次の曲 | / | *** |
| 再生一時停止 | ** | ** |
| 通話を受ける | * | * |
| 通話を終了する | * | * |
| 拒否 | ** | ** |
| 音量を下げる | * | / |
| 音量を上げる | / | * |
| 音声アシスタント | ==== | ==== |
| ゲームモード | ***** | ***** |

安全情報

1. 禁止されている場所でのワイヤレス機器の使用は、規定に従ってデバイスを閉じてください。
2. このデバイスを使用する際は、植え込み型医療機器（ペースメーカーなど）とは少なくとも15センチの距離を保ってください。
3. 適切な音量を設定し、聴力を損傷しないようにしてください。
4. デバイスおよびアクセサリは5°Cから35°Cの範囲内で使用してください。過度に高いまたは低い温度はデバイスの故障を引き起こす可能性があります。
5. デバイスおよびアクセサリは湿度が良く、涼しい場所に保管し、直射日光を避けてください。車のダッシュボードの上や窓辺など。
6. このデバイスはおもちゃではありません。子供は大人の監督のもとで使用する必要があります。デバイスおよびアクセサリは子供の手の届かない場所に保管し、意図しない損傷や事故による窒息などの危険を回避してください。
7. 車の運転、機械操作、または注意を集中する必要がある他の作業中にデバイスをしないでください。
8. 雷のある天候下でのデバイスの使用は避け、デバイスの故障や感電の危険を回避してください。

安全情報

9. デバイスを電源や露出した火元付近に近づけないでください。強い衝撃や振動を避けてください。
10. 強力な化学製品や洗剤を使用してデバイスを清掃しないでください。乾いた柔らかい布で拭くだけで大丈夫です。デバイスを乾燥させるためにヘアドライヤーや電子レンジなどの加熱ツールを使用しないでください。
11. デバイスを勝手に分解したり改造したりしないでください。
12. 指定されていないまたは互換性のない充電アダプターを使用すると、故障、発火、爆発などの危険があります。

アフターサービス

以下、国家の法律に違反する場合、国家の法律を優先します。

1. 当社の製品には、購入日から1年（すなわち365日）の保証期間が適用されます（ケース、イヤホン、その他のアクセサリは除く）。保証期間は購入日から開始します。
2. 当社の保証は、適切な機能に影響を及ぼす可能性がある工場の欠陥をカバーします。人為的なエラーや過失などによる人為的な損傷はカバーされません。
3. 製造上の問題による不良を確認した場合、交換、一部返金、または全額返金の手配を行います（該当する場合）。

* 以下のいずれかに該当する場合、保証の対象外となります

1. 保証期間を超過した場合、または製品が保証期間内であることを証明できない場合。
2. 有効な購入証明書（注文のスクリーンショットまたは請求書）がない場合。
3. 説明書の指示に従って使用、保守、お手入れをしていない場合による損傷。
4. 製品の落下や水没による損傷。
5. 自己解体や改造など人為的な原因による損傷。
6. 火災、地震、雷撃などの不可抗力による損傷。
7. 自然劣化による損傷などによる損傷。



DOWNLOAD ROSELINK



280 mm

OPENFREE 使用说明书

安全信息

在使用和操作设备前，请阅读并遵守下面的注意事项，避免出现危险或非法的情况。

提示

1. 在禁止使用无线设备的场所，请遵守该场所的规定，并关闭设备。
2. 在使用本设备时，请与植入式医疗设备（如起搏器等）保持至少15厘米的距离。
3. 当您使用设备收听音乐或通话时，建议使用音乐或通话所需的较小音量，以免损伤听力；长时间接触高音量可能会分散注意力，从而导致事故。
4. 请在温度5°C~35°C范围内使用及存放设备，当环境温度过高或过低时，可能会引起设备故障。
5. 请勿将设备及配件放置在儿童接触不到的地方，儿童可能在无意中损坏本设备及其配件，或吞下小零件导致窒息或其他危险。
6. 本设备并非玩具，儿童应在成人监护下使用设备。

蓝牙配对

1. 首次打开充电盒，取出耳机，自动进入配对状态。
2. 耳机恢复出厂设置后，首次开机耳机将进入配对状态。
3. 打开与耳机配对设备的蓝牙开关，搜索耳机名称并选择配对连接。



恢复出厂设置

1. 将耳机放入充电盒中，保持充电盒开盖状态，长按充电盒复位键5s，充电盒白光闪烁3次，即恢复出厂出厂设置。
2. 恢复出厂设置完成后，关闭充电盒盖，重新打开进入配对模式。



充电

1. 将耳机放入充电盒后，合上充电盒盖进行充电。
2. 使用USB-C充电线为充电盒充电。



* 电量指示：○白灯亮70%以上；●绿灯亮30%-70%；●红灯亮30%以下；●红灯快速闪烁（1s为周期）10%以下。
* 充电中白光闪烁；充电完成后白光熄灭。

功能使用

您可以通过手机下载“ROSELINK”APP，自定义耳机的操作功能；
或在应用商店搜索“ROSELINK”APP或者扫描左侧二维码下载安装。

产品中有毒物质的名称及含量

| 部件名称 | 有毒物质或元素 | | | | | |
|-------|---------|-------|-------|-------------|-----------|-------------|
| | 铅(Pb) | 汞(Hg) | 镉(Cd) | 六价铬(Cr(VI)) | 多溴联苯(PBB) | 多溴二苯醚(PBDE) |
| 金属零件 | X | O | O | O | O | O |
| 电池 | X | O | O | O | O | O |
| 塑料零件 | O | O | O | O | O | O |
| 橡胶 | X | O | O | O | O | O |
| 电源线组件 | X | O | O | O | O | O |

本表格依据RoHS 11364-01标准制定。
O: 表示有害物质含量符合RoHS材料中的含量限制GB/T 26572规定的限量要求以下。
X: 表示有害物质含量超过RoHS材料中的含量限制GB/T 26572规定的限量要求，且目前业界没有成熟的替代方案，符合欧盟RoHS豁免清单豁免要求。

本产品的“电子电气产品有害物质限制使用标志”为10年，其标识如左图所示。本产品及其组件上的使用期限标识可能有所不同，组件上的使用期限标识优先于产品上任何与之相冲突的不同的环保使用期限标识。

触控功能

| 功能 | 左耳机(L) | 右耳机(R) |
|-------|--------|--------|
| 上一曲 | *** | / |
| 下一曲 | / | *** |
| 播放/暂停 | ** | ** |
| 接听 | * | * |
| 拒接 | ** | ** |
| 音量调低 | * | / |
| 音量调高 | / | * |
| 语音助手 | ==== | ==== |
| 游戏模式 | ***** | ***** |

警告

1. 请遵守所在国家或区域的相关规定，请勿在驾驶、操作机器或从事需要外界声音的工作时使用设备。
2. 请勿在露天天气下使用设备，雷暴可能导致设备不能正常工作或电击危险。
3. 请勿将设备放置在阳光直射的地方，如汽车仪表盘或窗台。
4. 请勿将设备靠近热源或易燃物。
5. 请勿使用酒精、汽油、丙酮、二甲苯、有机溶剂等对设备进行干燥处理。
6. 请勿擅自拆卸或改装设备及其配件，否则该设备及配件将不在本公司保修范围之内；设备发生故障时，请联系服务中心；电池只能由服务中心更换。
7. 请勿使设备及其配件受到强烈的冲击或震动。
8. 使用未经认证或不兼容的充电器、充电器，可能引发故障、火灾、爆炸或其他危险。
9. 清洁、维护设备前请停止使用设备；请勿使用腐蚀性化学品、清洗剂或洗涤剂清洁设备；请使用清水、干燥的软布擦拭设备。

OPENFREE 使用说明书

触控功能 (自定义触控可以在APP中设置)

| 功能 | 左耳机(L) | 右耳机(R) |
|-------|--------|--------|
| 上一曲 | *** | / |
| 下一曲 | / | *** |
| 播放/暂停 | ** | ** |
| 接听 | * | * |
| 拒接 | ** | ** |
| 音量调低 | * | / |
| 音量调高 | / | * |
| 语音助手 | ==== | ==== |
| 游戏模式 | ***** | ***** |

安全信息

1. 在禁止使用无线设备的场所，请遵守规定限制使用。
2. 在使用本设备时，请与植入式医疗设备（如起搏器等）保持至少15厘米的距离。
3. 请设置合适的音量大小，避免听力损伤。
4. 请在5°C~35°C范围内使用及存放设备，避免过高的环境温度可能引起设备故障。
5. 请勿将设备及配件放置在儿童接触不到的地方，儿童可能在无意中损坏本设备及其配件，或吞下小零件导致窒息或其他危险。
6. 本设备并非玩具，儿童应在成人监护下使用；将设备及配件存放在儿童接触不到的地方，避免意外损坏、或误吞导致窒息等危险。
7. 请勿在露天天气下使用设备，雷暴可能导致设备不能正常工作或电击危险。
8. 请勿将设备靠近热源或易燃物。
9. 请勿使用酒精、汽油、丙酮、二甲苯、有机溶剂等对设备进行干燥处理。
10. 请勿使用腐蚀性化学品或清洗剂清洁设备，使用干燥的软布擦拭即可；请勿使用加热工具对设备进行干燥或改装。
11. 勿擅自拆卸或改装设备。
12. 使用未经认证或不兼容的充电器，可能导致故障、起火、爆炸等危险。

售后服务

以下若有与国家法律法规不符之处，以国家法律法规为准。

1. 我们为我们的产品提供为期1年（即365天）的保修服务（不包括携带盒、耳塞和其他配件）。保修期从购买日期开始计算。

2. 我们的保修范围包括可能影响正常功能的任何工厂缺陷，不包括任何由于人为损坏、疏忽等造成的人为损坏。

3. 一旦我们确认您的物品制造问题而并非有缺陷，我们将把您的物品免费更换、部分退款或全额退款（如果适用）。

* 符合下列情况之一者不在保修范围内：

1. 超过保修期。
2. 无效的购买凭证（订单截图或发票）。
3. 未按说明书的要求使用、维护、保管而造成损坏。
4. 在使用过程中因液体泼洒或水浸而造成损坏。
5. 因擅自拆卸、改装等人为原因而造成损坏。
6. 由于不可抗力因素（火灾、地震、雷击等）而造成损坏。
7. 产品自然磨损造成的损坏等。



下载 ROSELINK

