

WIRELESS MICROPHONE PACKAGE





ご使用の前に
Before Use
Avant l'utilisation

お買い上げいただきありがとうございます。

【警告】 電気製品は、安全のための注意事項を守らないと、火災や人身事故の原因となることがあります。
この取扱説明書と、この製品の重要な注意事項と製品の取り扱いの要を十分に読取ってください。この取扱説明書およびお買いのうえ、製品を安全にお使いください。お読みになった後は、いつでも見られるところに必ず保管してください。

UWP-D21/D22/D26
UTX-B40/M40/P40
URX-P40

© 2019 Sony Corporation Printed in Korea

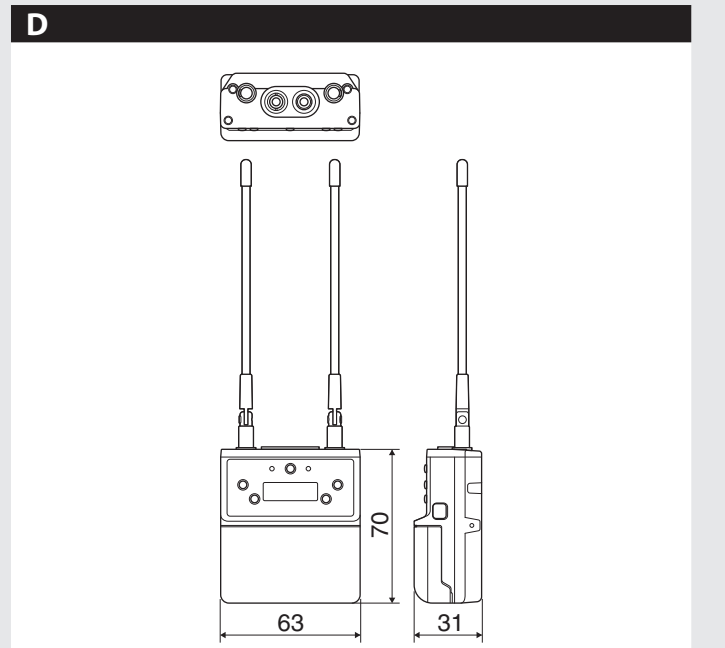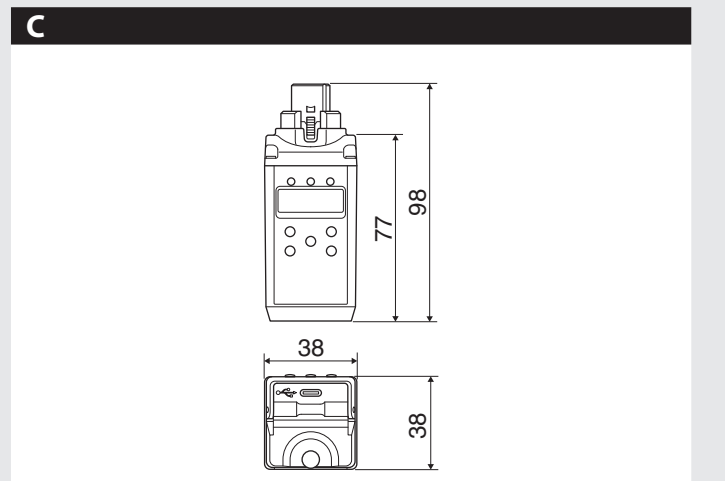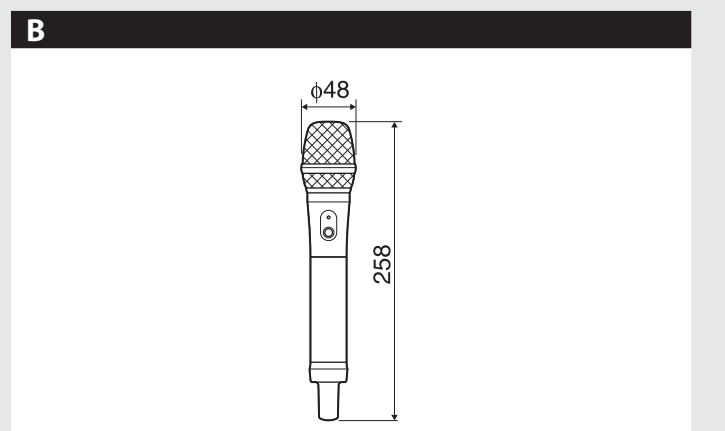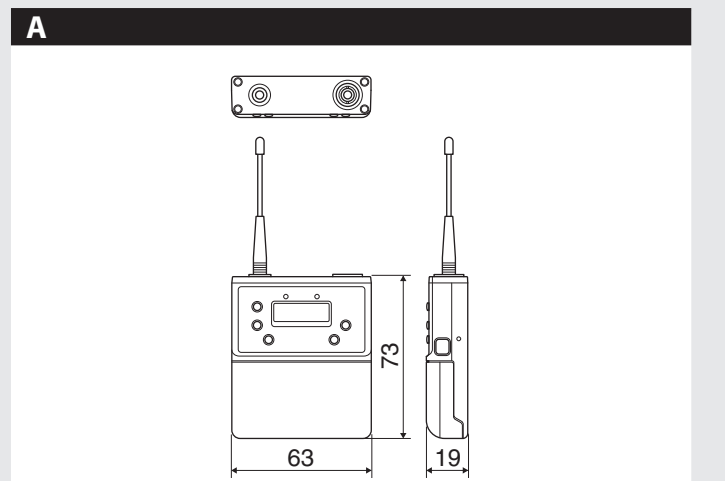

日本語

安全のために

この取扱説明書に安全に配慮して設計されています。しかし、電気製品はまた故障したり、火災や感電などにより死亡や大けがとな人事故につながる可能性があります。
●安全のための注意事項
●故障したり破損したるを直す、ソニーのサービス窓口にご相談。

警告表示の意味
この取扱説明書および製品では、次のような表示を行っています。表示の記号をよく理解し、これら本を熟読してください。

【警告】
この表示の注意事項を守らないと、**火災や感電**などにより**死亡や大けが**とな人事故につながる可能性があります。

【注意】
この表示の注意事項を守らないと、**火災や感電**などにより**死亡や大けが**とな人事故につながる可能性があります。

注意を促す記号

火災 感電 注意

行為を禁止する記号

禁止 分解禁止 禁止の禁止

行為を示す記号

注意

【警告】 下記の注意を守らないと、**火災や感電**により**死亡や大けが**につながる可能性があります。

設定操作時にアンテナに目を近づけずさない
ディスプレイ側で設定操作をするときに目を近づけずと、アンテナの目を見ない、けがにつながる可能性があります。

【禁止】
電源のON/OFF時には**アンテナ**を触らないでください。

【注意】
突然大きな音で、耳を傷めることがあります。とくにヘッドホンで聴くときには、ご注意ください。ボリュームは徐々に上げましょう。

USBケーブルは突きたるまで差し込む

真・曲々に突きたるまで差し込まないと、火災や感電の原因となります。

【注意】
ぬれた手でUSBケーブルにさわらないでください。

ぬれた手で電源プラグを抜き差しすると、感電の原因となることがあります。

【注意】
下記の注意を守らないと、**けが**をしたり**周辺**の**物品に損害**を与えることがあります。

【禁止】
内部に水や粉塵が入らないでください。

水や粉塵が入ると火災の原因となることがあります。また、水や粉塵が入ると、すぐに電源を切ると、バッテリーまたは外部電源ケーブルの接続ケーブルを抜いて、お買い上げ店またはソニーの業務用商品相談窓口にご相談ください。

【注意】
油煙、蒸気、湿気、ほこりの多い場所では設置・使用しない

上記のような場所やこの取扱説明書の使用条件以外の環境で設置・使用すると、火災や感電の原因となることがあります。

【注意】
電源のON/OFF時には、接続した機器の入力を切る

電源のON/OFF時には大きな雑音が発生し、接続した機器あるいはスピーカーなどに損害を与えることがあります。

【注意】
受信待機時には、接続した機器の入力を切る

受信待機時やRFレベルが小さくなったときは、大きな雑音が発生し、接続した機器あるいはスピーカーなどに損害を与えることがあります。

【注意】
外装を外さない、改造しない

外装を外したり、改造したりすると、感電やけがの原因となることがあります。

【注意】
機器や部品を正しく取り付ける

シェーパードアダプターをカムコネクターなどに取り付けるときは、取扱説明書をよく読んでから、確実に取り付けてください。取り付け方を誤ると本機が壊れ、けがの原因となることがあります。

【注意】
異常や不具合と思ったらUSBケーブルを本体から抜く

本機のUSB Type-CポートとUSBケーブルのUSBコネクターとマイクロUSBコネクターはほりがたまっていないか、定期的に点検する

【注意】
接続部に直接熱したり、指を差し込んだりしない

【禁止】
USBの定格電圧を超えた電源供給機器を接続しない

【禁止】
電池についての安全上のご注意

ここでは、本機で使用可能な乾電池についての注意事項を記載しています。

【警告】
電池の取り扱いにあたっては、必ずお読みください。

火災の原因となる。ショートさせたり、分解、加熱しない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

火の油に近づけない。火の油に近づけない。火の油に近づけない。

機器を周辺機器に接続するために使用されるすべてのインターフェースケーブルは、EMC規格に適合し、電磁妨害による誤動作を防ぐためにシールドタイプのケーブルを使用してください。ケーブルが供給される場合は、必ずこの目的のために使用してください。

CD-ROMマニュアルの使いかた

Adobe Readerがインストールされたコンピュータで、取扱説明書を閲覧できます。Adobe Readerは、Adobeのウェブサイトから無料でダウンロードできます。

1. CD-ROMに収録されているindex.htmlファイルを開く。

2. 開いた取扱説明書を選択してクリックする。

◆CD-ROMが破損または紛失した場合は、お買い上げ店またはソニーのサービス窓口で購入できます。

主な仕様

仕様が大幅に異なる、改良のため予告なく変更する場合がありますがご了承ください。

送信機 (UTX-B40/M40/P40)

送信機共通

高出力方式 水素電池1.5V x 2本 (乾電池)

高出力方式 800.125 MHz ~ 809.750 MHz

RF出力レベル 10 mW/2 mW (選別可)

基本周波数帯域 50u/s

基本周波数帯域 0.9 MHz (1 kHz入出力)

ひずみ率 0.09 % (1 kHz入出力)

0.09 % (1 kHz入出力)

102 dB (GAIN MODEをAUTO/GAINに設定時、最大)

102 dB (GAIN MODEをNORMALに設定時、最大)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

0.035 dB (100 Hz)

English
Before operating the unit, please read this manual thoroughly and retain it for future reference.

The U90 model can only be used in the USA.

The use of U90 transmitters requires a license and is subject to restrictions on frequency selection and channel spacing.

For the UTX-B40/M40/P40 Transmitters

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery, you must obey the law in the relative area or country.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery or the product, you must obey the law in the corresponding area or country. Do not dispose of the battery or the product in a fire or a hot oven, or mechanically crush or cut the battery. It may explode or cause a fire. Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not place the battery in a high temperature place, such as under direct sunlight or near fire. It may ignite, explode, or cause a fire. Do not immerse or wet the battery in water or seawater. This may cause an electric shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery or the product, you must obey the law in the relative area or country. Do not dispose of the battery or the product in a fire or a hot oven, or mechanically crush or cut the battery. It may explode or cause a fire. Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not place the battery in a high temperature place, such as under direct sunlight or near fire. It may ignite, explode, or cause a fire. Do not immerse or wet the battery in water or seawater. This may cause an electric shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery or the product, you must obey the law in the relative area or country. Do not dispose of the battery or the product in a fire or a hot oven, or mechanically crush or cut the battery. It may explode or cause a fire. Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not place the battery in a high temperature place, such as under direct sunlight or near fire. It may ignite, explode, or cause a fire. Do not immerse or wet the battery in water or seawater. This may cause an electric shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery or the product, you must obey the law in the relative area or country. Do not dispose of the battery or the product in a fire or a hot oven, or mechanically crush or cut the battery. It may explode or cause a fire. Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not place the battery in a high temperature place, such as under direct sunlight or near fire. It may ignite, explode, or cause a fire. Do not immerse or wet the battery in water or seawater. This may cause an electric shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery or the product, you must obey the law in the relative area or country. Do not dispose of the battery or the product in a fire or a hot oven, or mechanically crush or cut the battery. It may explode or cause a fire. Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not place the battery in a high temperature place, such as under direct sunlight or near fire. It may ignite, explode, or cause a fire. Do not immerse or wet the battery in water or seawater. This may cause an electric shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

When you dispose of the battery or the product, you must obey the law in the relative area or country. Do not dispose of the battery or the product in a fire or a hot oven, or mechanically crush or cut the battery. It may explode or cause a fire. Do not subject the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Do not place the battery in a high temperature place, such as under direct sunlight or near fire. It may ignite, explode, or cause a fire. Do not immerse or wet the battery in water or seawater. This may cause an electric shock.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

