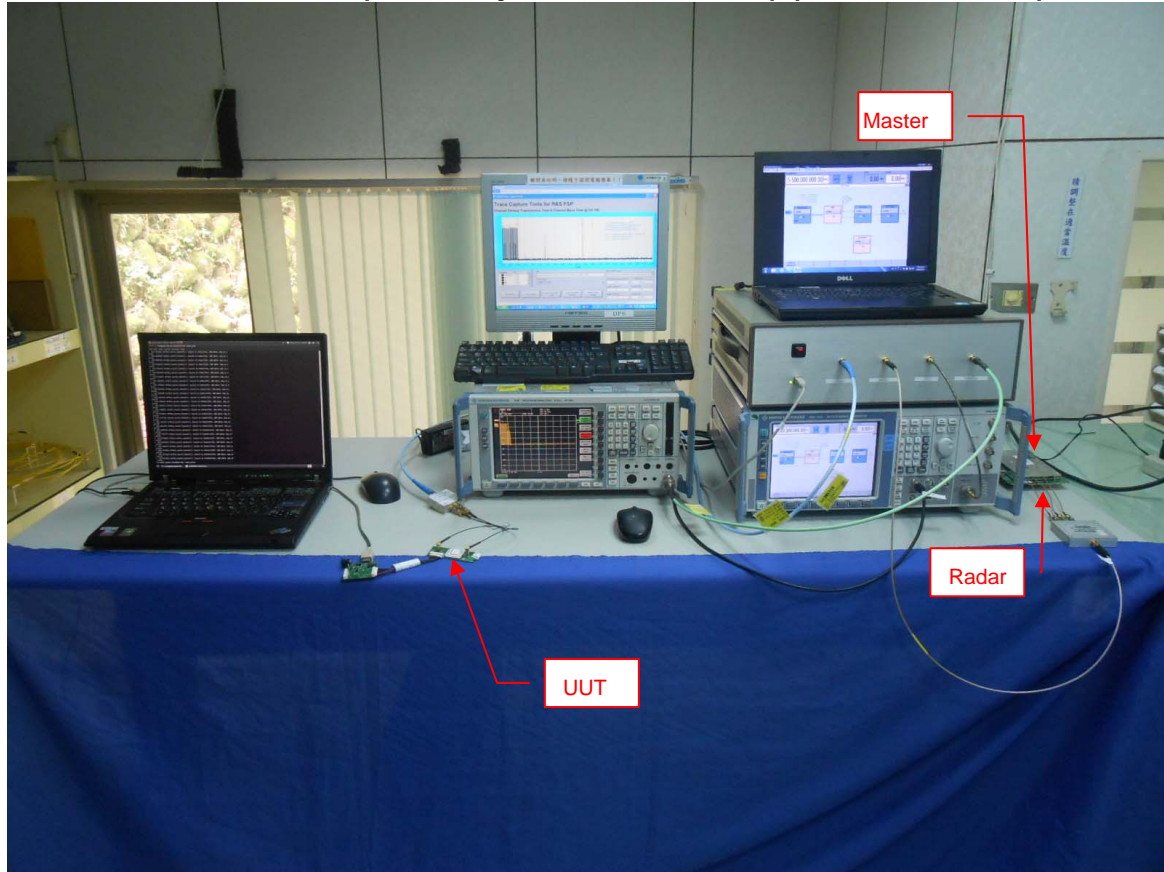# PHOTOGRAPHS OF THE TEST CONFIGURATION

Set UUT as Slave mode (Radar injected into Master) (For Slave Mode)

Set UUT as Slave mode (Radar injected into Master) (For TDLS Mode)