


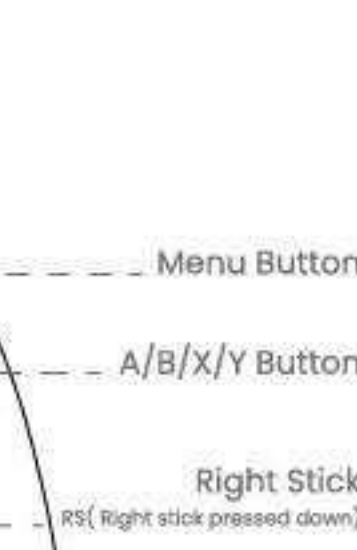

[E-manual]
https://www.gamesir.hk/pages/manuals-gamesir-g8+

PACKAGING CONTENTS

G8+ Controller *1 Small Thumbstick *1 Heightened Thumbstick *1 Round Thumbstick *1
1m Type-C Cable *1 User Manual *1 Thank You & After-sale Service Card *1
Gamesir Sticker *1 Certification *1

COMPATIBILITY

- Android 8.0 or later versions
- Switch
- iOS 13 or later versions

DEVICE LAYOUT



POWER ON/POWER OFF

- Hold for 1 second to power on.
- Hold for 5 seconds to power off.
- 3.Stretch out the controller, and it will automatically turn on.
- 4.Naturally, the controller will power off when collapsed. However, in G-Touch mode, it will remain powered on.

CONNECTION STATE

Connection State	Home Indicator	Description
Pairing Status	Blink Rapidly	When in Pairing Status, the controller can only be paired with a device through the Bluetooth function.
Connected	Solid	Device connected
Reconnection Status	Blink Slowly	When in Reconnection Status, the controller can only be connected to the last paired device on the last mode. Press and hold the Pairing Button for 2 seconds, it can be forcibly change to Pairing Status.

MODE DESCRIPTION


Mode	Home Indicator	Connection Method	Compatible Platform
Android	Yellow		Android 8.0 or later versions
DS4	Blue		Android/iOS
Switch	Red		Switch/iOS
G-Touch	Cyan		GameSir App

*In working status, press corresponding key combination to switch to the desired mode.
*After successfully connecting to iOS in DS4 mode, the default color changes to light orange.

CONNECT TO THE ANDROID DEVICE THROUGH BLUETOOTH

- 1.With the controller power off, hold + to power on, and the Home Indicator will blink yellow rapidly.
- 2.Open the Bluetooth list on your phone, select "Gamesir-G8+", and click it to connect.
- 3.A solid yellow Home Indicator signifies a successful connection.

*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

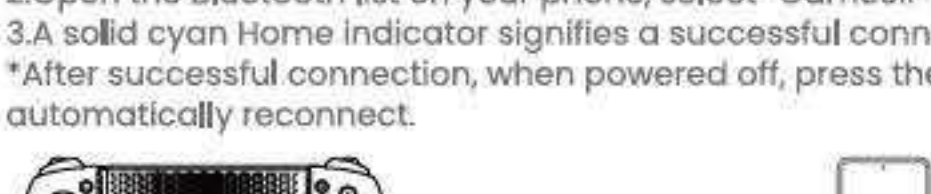

CONNECT TO THE iOS DEVICE THROUGH BLUETOOTH

- 1.With the controller power off, hold + to power on, and the Home Indicator will blink blue rapidly.
- 2.Open the Bluetooth list on your phone, select "DUOLSHOK 4 Wireless Controller", and click it to connect.
- 3.A solid yellow Home Indicator signifies a successful connection. You can change the color of the Home indicator under this mode in "Settings-General-Game Controllers" on your phone. When holding down the M button, it will be blue.

*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.



PLAY MAPPING GAMES ON ANDROID VIA BLUETOOTH CONNECTION IN G-TOUCH MODE

- 1.With the controller power off, hold + to power on, and the Home Indicator will blink cyan rapidly.
- 2.Open the Bluetooth list on your phone, select "Gamesir-G8+", and click it to connect.
- 3.A solid cyan Home Indicator signifies a successful connection.


*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.



CONNECT TO SWITCH THROUGH BLUETOOTH


- 1.Go to Switch's Home Menu, select "Controllers" -> "Change Grip/Order" to enter the pairing interface.
- 2.With the controller power off, hold + to power on, and the Home Indicator will blink red rapidly.
- 3.A solid red Home Indicator signifies a successful connection.

*After successful connection, when powered off, press the Home button briefly to power on and automatically reconnect.

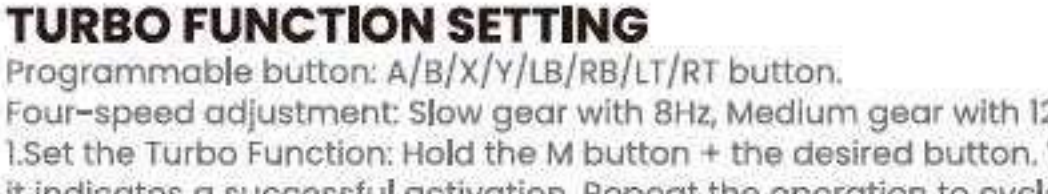


CONNECT TO A DEVICE THROUGH WIRED CONNECTION

- 1.Use the provided Type-C cable to complete the connection and it will automatically recognize the device.
- 2.After connecting to the device, the controller will automatically switch to the corresponding mode, then it can be used normally. Press and hold + , the controller will change between Xbox/Switch/DS4 modes in consequence.
- *For Switch device: After connecting to the Switch with cable, please open the "Settings-Controllers & Sensors-Pro Controller wired communication".
- *Supported in Receiver and Wired mode only.

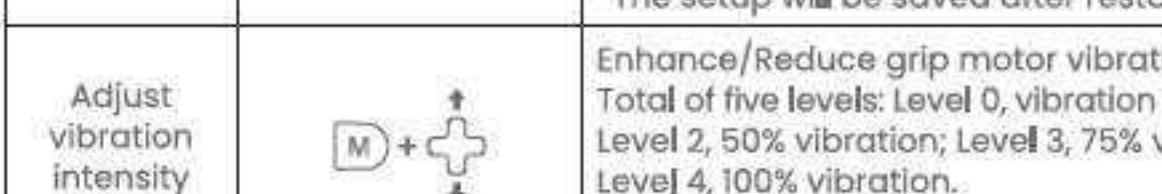

BACK BUTTON SETTING

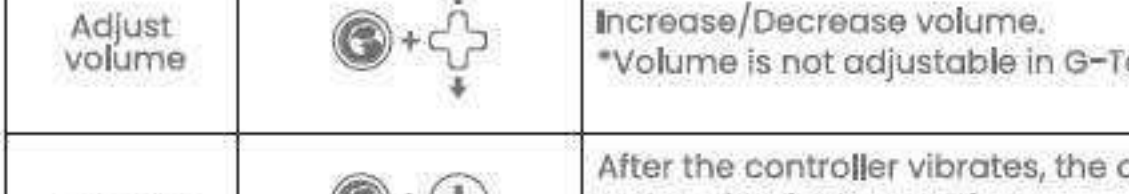

- 1.Set the L4/R4 button value: Hold the M+L4/R4 buttons simultaneously until the Mode/Home Indicator blinks white slowly. Then press the button(a single button or key combo) you want to map, then press the L4/R4 button. When the Mode/Home Indicator return to the corresponding mode light, the L4/R4 button value is set. In the key combo setting, the interval time for each button will be triggered according to the operation time set during programming.
- 2.Cancel the L4/R4 button value: Hold the M+L4/R4 buttons simultaneously until the Mode/Home Indicator blinks white slowly, then press the L4/R4 button. When the Mode Indicator return to the corresponding mode light, the L4/R4 button value is canceled.

*It can be set to trigger a single key or multiple buttons for L4/R4 (up to a maximum of 16 button values triggered).

*After 10 seconds of inactivity when setting, the controller will automatically exit the setting mode and the operation will not be saved.

TURBO FUNCTION SETTING

- 1.Programmable button: A/B/X/Y/LB/RB/LT/RT button.
- 2.Four-speed adjustment: Slow gear with 8Hz, Medium gear with 12Hz, Fast gear with 20Hz, Off.
- 3.Set the Turbo Function: Hold the M button + the desired button. When the Home Indicator flashes, it indicates a successful activation. Repeat the operation to cycle through the gears.
- 2.Clear Turbo Function: Double-click the M button to clear all Turbo setting. The Home light flashes green twice to indicate a successful operation.

KEY COMBINATION

Function	Operation	Description
Interchange key value	Hold for 2 seconds	Interchange the face button layout and the key value. *Interchange the A/B, X/Y key value. *The setup will be saved after restart.
Switch Trigger mode	Hold for 2 seconds	Enable/Disable hair trigger. *After enabling the Hair trigger mode, when pressing the LT/RT button, the Home Indicator will stay solid white. *The setup will be saved after restart.
Adjust vibration intensity		Enhance/Reduce grip motor vibration intensity. Total of five levels: Level 0, vibration off; Level 1, 25% vibration; Level 2, 50% vibration; Level 3, 75% vibration (default); Level 4, 100% vibration. *The setup will still be saved after restart.
Adjust volume		Increase/Decrease volume. *Volume is not adjustable in G-Touch and DS4 mode.
Function reset	Hold for 3 seconds	After the controller vibrates, the controller functions will be restored to factory settings. *After clearing the function settings, you will need to reconfigure the settings.

CHARGING

- 1.Only the right battery charges when the controller is in the stretched state.
- 2.Both left and right batteries charge when the controller is folded.

*The controller does not automatically power off when folded during charging.
*In charging mode, the Mode Indicator breathes to indicate the current battery level.

A/B, X/Y BUTTON POSITIONS CAN BE SWAPPED

- 1.Remove the top cover. On the left side of A/B/X/Y keys, there is a reserved groove. Align your fingertips with the groove and gently pull the A/B/X/Y keycap out from the left groove.
- 2.With the removed keycap, position the A/B/X/Y label facing upwards. Align it with the corresponding platform's label position and put it in, then the installation is completed.
- *There are two layouts available: Xbox button layout (Up: Y, Left: X, Down: A, Right: B); Switch button layout (Up: X, Left: Y, Down: B, Right: A).
- *The default layout is the Xbox button layout.

STICKS & TRIGGERS CALIBRATION

- 1.Connect your phone to the controller. Hold the + + buttons for 2s until the Home Indicator and Mode Indicator blink white slowly, indicating that the calibration mode is entered.

2.In calibration mode, follow below steps to complete calibration:
a) Rotate the sticks at their maximum angles 3 times and let them return to the initial position naturally.
b) Press the triggers to their maximum travel 3 times and let them return to their initial position naturally.
3. Press to complete and exit the calibration mode.

*Calibration should be kept at a constant speed and gently operated to avoid errors while collecting data.

*If the sticks and triggers can be used normally, please do not calibrate.

GYROSCOPE CALIBRATION

Place the controller horizontally on a flat surface, then hold + buttons. The Home Indicator will rapidly flash red and blue until it returns to the mode indicator, indicating that the calibration is completed.

DOWNLOAD GAMESIR APP VIA GAMESIR.HK OR SCAN THE QR CODE

On the right. Use Gamesir App for firmware upgrade, stick & trigger zones adjustment, vibration intensity adjustment, button testing, etc.



[電子マニュアル]
https://www.gamesir.hk/pages/manuals-gamesir-g8+

パッケージ内容

G8 + コントローラー *1 小さなサムスティック *1 高くなつたサムスティック *1 丸いサムスティック *1
1m Type-C ケーブル *1 ユーザーマニュアル *1 感謝および販売後のサービスに関するカード *1
Gamesir ステッカー *1 証明書 *1

互換性

- Android 8.0 バージョン以降
- Switch
- iOS 13 バージョン以降

デバイスのレイアウト



電源オン/電源オフ

- 1.長押し を長押しして電源をオンにします。
- 2.5秒間 を長押しして電源をオフにします。
- 3.コントローラを広げると、自動的にオンになります。
- 4.折たたいたら、コントローラーの電源はオフになります。ただし、G-Touchモードでは、電源はオンのまま維持されます。

接続状態です

接続状態です	ホームインジケータ	説明
ペアリング状態	ゆっくりな点滅	ペアリング状態にある時、コントローラーは Bluetooth 機能を通してのみデバイスとペアリングすることができます。
接続済み	点灯	接続は接続されています。
再接続状態	速い点滅	再接続状態にある時、コントローラーは最後のモードで最後にペアリングしたデバイスとのみ接続できます。 2秒間ペアリングボタンを長押ししてください。ペアリングモードに強制切替えられます。

モード説明

モード	ホームインジケータ	接続方法	互換性ありのプラットフォーム
Android	黄		Android 8.0 バージョン以降
DS4	青		Android / iOS
Switch	赤		Switch / iOS
G-Touch	青緑		GameSir アプリ


*動作している状態で、該当するキーの組み合わせを押し、好きなモードに切替えてください。
*DS4 モードで iOS に接続できたら、デフォルトの色が薄いオレンジに変わります。

ANDROID デバイスを BLUETOOTH を通して接続

- 1.コントローラーが電源オフの状態で、 + を長押しして電源をオンにすると、ホームインジケータが素早く黄色に点滅します。
- 2.電話の Bluetooth リストを開き、"Gamesir-G8+" を選択して、クリックして接続します。
- 3.ホームインジケータが黄色に点灯することによって、接続に成功したことが示されます。
- *接続が成功した後は、電源をオフにした時に軽くホームボタンを押し、電源をオンにすると、自動的に再接続します。

iOS デバイスを BLUETOOTH を通して接続

- 1.コントローラーが電源オフの状態で、 + を長押しして電源をオンにすると、ホームインジケータが素早く青色に点滅します。
- 2.電話の Bluetooth リストを開き、DUOLSHOK 4 ワイヤレスコントローラーを選択して、クリックして接続します。
- 3.ホームインジケータが青色に点灯することによって、接続に成功したことが示されます。
- *接続が成功した後は、電源をオフにした時に軽くホームボタンを押し、電源をオンにすると、自動的に再接続します。

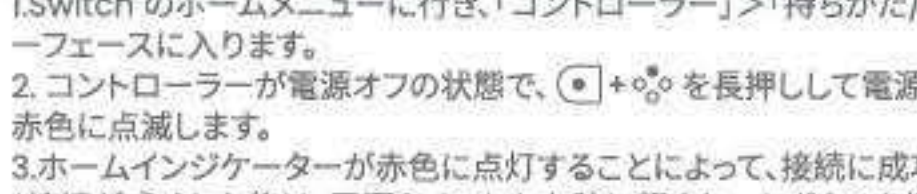


BLUETOOTH で接続された ANDROID で G-TOUCH モードでマッピングゲームをプレイ

- 1.コントローラーが電源オフの状態で、 + を長押しして電源をオンにすると、ホームインジケータが素早く青緑色に点滅します。
- 2.電話の Bluetooth リストを開き、"Gamesir-G8+_G" を選択して、クリックして接続します。
- 3.ホームインジケータが青緑色に点灯することによって、接続に成功したことが示されます。
- *接続が成功した後は、電源をオフにした時に軽くホームボタンを押し、電源をオンにすると、自動的に再接続します。


BLUETOOTH を通して SWITCH に接続する

- 1.Switch のホームメニューに行き、「コントローラー」->「持ちかた/順番を変える」を選択して、ペアリングのインターフェースに入ります。
- 2.コントローラーが電源オフの状態で、 + を長押しして電源をオンにすると、ホームインジケータが素早く赤色に点滅します。
- 3.ホームインジケータが赤色に点灯することによって、接続に成功したことが示されます。
- *接続が成功した後は、電源をオフにした時に軽くホームボタンを押し、電源をオンにすると、自動的に再接続します。

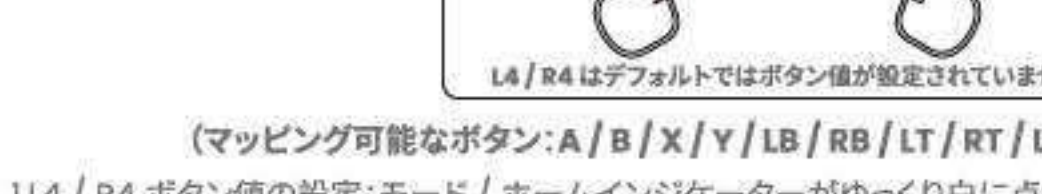

デバイスに有線接続

- 1.同梱されている Type-C ケーブルを使って接続を完了させると、自動的にデバイスが認識されます。
- 2.デバイスに接続した後は、コントローラーが自動的に対応するモードに切り替わり、通常通り使用できるようになります。
- *A/B/X/Y を長押しすると、コントローラーが Xbox / Switch / DS4 モードの間で順番に切り替わります。
- *Switch デバイスの場合、ケーブルを使って Switch に接続したら、「設定」->「コントローラーとセンサー」->「Pro コントローラー」の有線接続を聞いてください。
- *レシーバーおよび有線モードのみ対応。

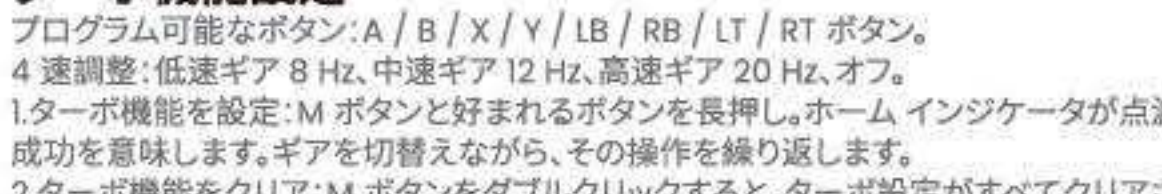

戻るボタンの設定

- 1.L4 / R4 ボタンの設定: モード / ホームインジケータがゆっくり白に点滅するまで、M + L4 / R4 ボタンを同時に長押しします。マッピングしたいボタン (Dパッド) のボタンまたは複数のキーの組み合わせを押し、L4 / R4 ボタンを押します。モード / ホームインジケータが該当するモードライトに点滅し、L4 / R4 ボタンの値が設定されます。複数のキーの組み合わせを設定する場合、プログラミングの時に設定された動作時間に沿って各キーの間隔時間が始まります。

2.14 / R4 ボタン 2つのキャンセル: モード / ホームインジケータがゆっくり白に点滅するまで、M + L4 / R4 ボタンを同時に長押しします。L4 / R4 ボタンを押します。モードインジケータが該当するモードライトに点滅した時、L4 / R4 ボタンの値がキャンセルされます。

*14 / R4 に対して、ひとりのキーまたは複数のキー (最大 16 のボタン値) を設定することができます。

*設定時に放置状態で 10 秒が経過すると、コントローラーは自動的に設定モードから退出し、行った操作も保存されません。

ターボ機能設定

- 1.プログラム可能なボタン: A / B / X / Y / LB / RB / LT / RT ボタン。
- 4.速調整: 低速ギア 8 Hz、中速ギア 12 Hz、高速ギア 20 Hz、オフ。

1.ターボ機能を設定: M ボタンと好まれるボタンを長押し。ホームインジケータが点滅している時、これは有効化の成功を意味します。ギアを切り替えながら、その操作を繰り返します。

2.ターボ機能をクリア: M ボタンをダブルクリックすると、ターボ設定がすべてクリアされます。ホームライトが 2 回緑に点滅して、操作の成功が示されます。

キーの組み合わせ

機能	操作	説明
ボタンの値を 入替え	を 2 秒間長押しします	面ボタンのレイアウトとキーの値を交換します。 *A / B, X / Y ボタンの値を入替えます。 *設定はリスタートした後も保存されます。
モードを切り 替え	を 2 秒間長押しします	設定トリガーを有効 / 無効にします。 "設定トリガーモード"が有効化された後、LT / RT ボタンを押す時にホームインジケータが白に点灯します。 *設定はリスタートした後も保存されます。
振動度を調整		グリップモーターの振動度を上げ / 低下させます。 合計 5 レベル: レベル 0、振動オフ、レベル 1、振動 25%、レベル 2、振動 50%、レベル 3、振動 75% (デフォルト)、レベル 4、振動 100%。 *設定はリスタートした後も保存されます。
音量を調節		音量を上/下させます。 *音量は G-Touch および DS4 モードでは調整できません。
機能リセット	を 3 秒間長押しします	コントローラーが振動した後、コントローラー機能が向上設定にリセットされます。 *機能設定をクリアした後、設定を再度決定する必要があります。

充電

- 1.コントローラーが拡張された状態の時は、右の電池しか充電されません。
- 2.コントローラーがたたまれた状態であれば、左右の電池が充電されます。
- *モードモードでは充電中にたんだでも自動的に電源オフになります。
- *充電モードで、モードインジケータが現在の電池残量を示します。

A / B, X / Y ボタン配置が入替え可能

- 1.A/B/X/Y キーキャップはマグネットを使ったデザインで、ボタンのレイアウトを好みに合わせて入替えることが可能です。
- 1.トップカバーを取り除きます。A / B / X / Y キーキャップの左側面にわずかな凹みがあります。その凹みに指でつかると、左の凹みから慎重に A / B / X / Y キーキャップを引き抜きます。
- 2.キーキャップを取り除いたら、A / B / X / Y ラベルを上向きに配置します。
- 3.該当のプラットフォームのラベル配置と一致させて押し込みば取り付きます。
- *可能なレイアウトは 2 つ: Xbox ボタンレイアウト (上: Y, 左: X, 下: A, 右: B)、Switch ボタンレイアウト (上: X, 左: Y, 下: B, 右: A)。
- *デフォルトレイアウトは Xbox ボタンレイアウトです。

スティック&トリガーの補正

- 1.電話をコントローラーに接続します。ホームインジケータとモードインジケータがゆっくり白に点滅し、補正モードに入ったことが示されます。モードインジケータがゆっくり白に点滅し、補正モードに入ります。

2.スティックを最大角度まで 3 回転させ、自然に初期位置に戻させます。

3.トリガーを一番深いところまで 3 回押し、自然に初期位置に戻させます。

4.トリガーを押しながら、補正モードを閉じます。

*補正は、データ収集中にエラーが含まないよう、一貫したスピードと丁寧な操作で行われる必要があります。

*スティックとトリガーは、普通に使用できる場合は補正しないで行います。

ジャイロスコープの補正

コントローラーを平らな表面に水平に置き、 + ボタンを長押しします。モードインジケーションに戻るまでライトが素早く赤と青に点滅し、補正が完了したことが示されます。

GAMESIR アプリを通したカスタマイズ

電話で gamesir.hk から Gamesir アプリをダウンロードすると、右にある QR コードをスキャンしてください。ファームウェアのアップグレード、スティックとトリガーのゾーン調整、振動度の強弱調整、ボタンのテストなどに Gamesir アプリを使用することができます。



PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact Gamesir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)
Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

FC FCC STATEMENT
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chienken Run Network Technology Co., Ltd. declares that this Gamesir G8+ Controller is in compliance with Directive 2014/53/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.

Just in Game

[CUSTOMER SERVICE]
www.gamesir.hk/pages/ask-for-help



Just in Game

[CUSTOMER SERVICE]
www.gamesir.hk/pages/ask-for-help



IC Caution.
CAN RSS-Gen/CNR-Gen.
- English: This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
According to § 15.247(e)(i) and § 1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission's guidelines.
According to KDB 447498 (2)(a)(i)