


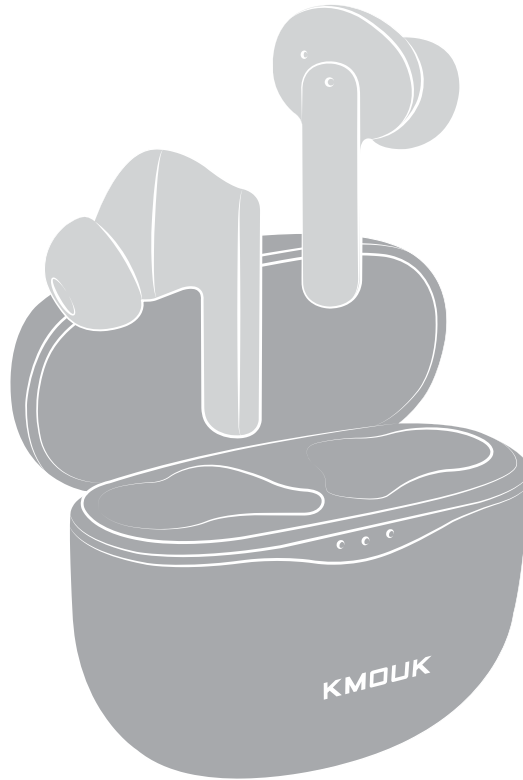

KMOUK KM-HTW008 User Manual

ANC True Wireless Earbuds

English 01-20

日本語..... 21-41

Contents

Important Safety Instructions.....	01
Package Contents	02
Product Diagram	03
Charging	04
Powering On/Off.....	06
Wearing	06
How to Use	07
Active Noise Cancelling.....	13
How to Clean	13
Troubleshooting.....	14
Specifications.....	17
Compliance.....	18
Customer Service.....	20

Important Safety Instructions


Please read this user manual carefully and keep it for future reference.

- This product contains small parts that may be a choking hazard. Not suitable for children under age 3.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not put near any heat sources such as radiators, heat registers, and stoves.
- Only use attachments/accessories specified by the manufacturer.
- Do not make unauthorized alterations to the product.
- Always ask professional technicians or authorized personnel for repair.
- Set the earbuds to the low volume before you put them on, then increase the volume gradually as per your preference.
- Do not wear earbuds with high volume for a long time to avoid damaging your hearing.


Package Contents




ANC True Wireless Earbuds

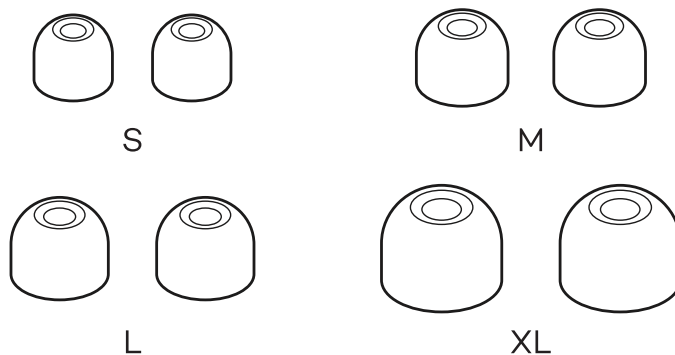

4 Pairs of Eartips (S, M, L, XL)

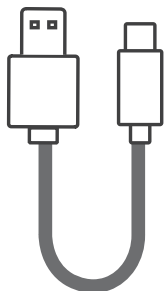

USB-C Charging Cable

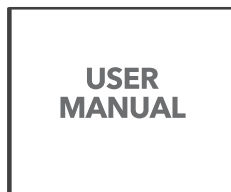


User Manual



Quick Instruction Guide

Product Diagram

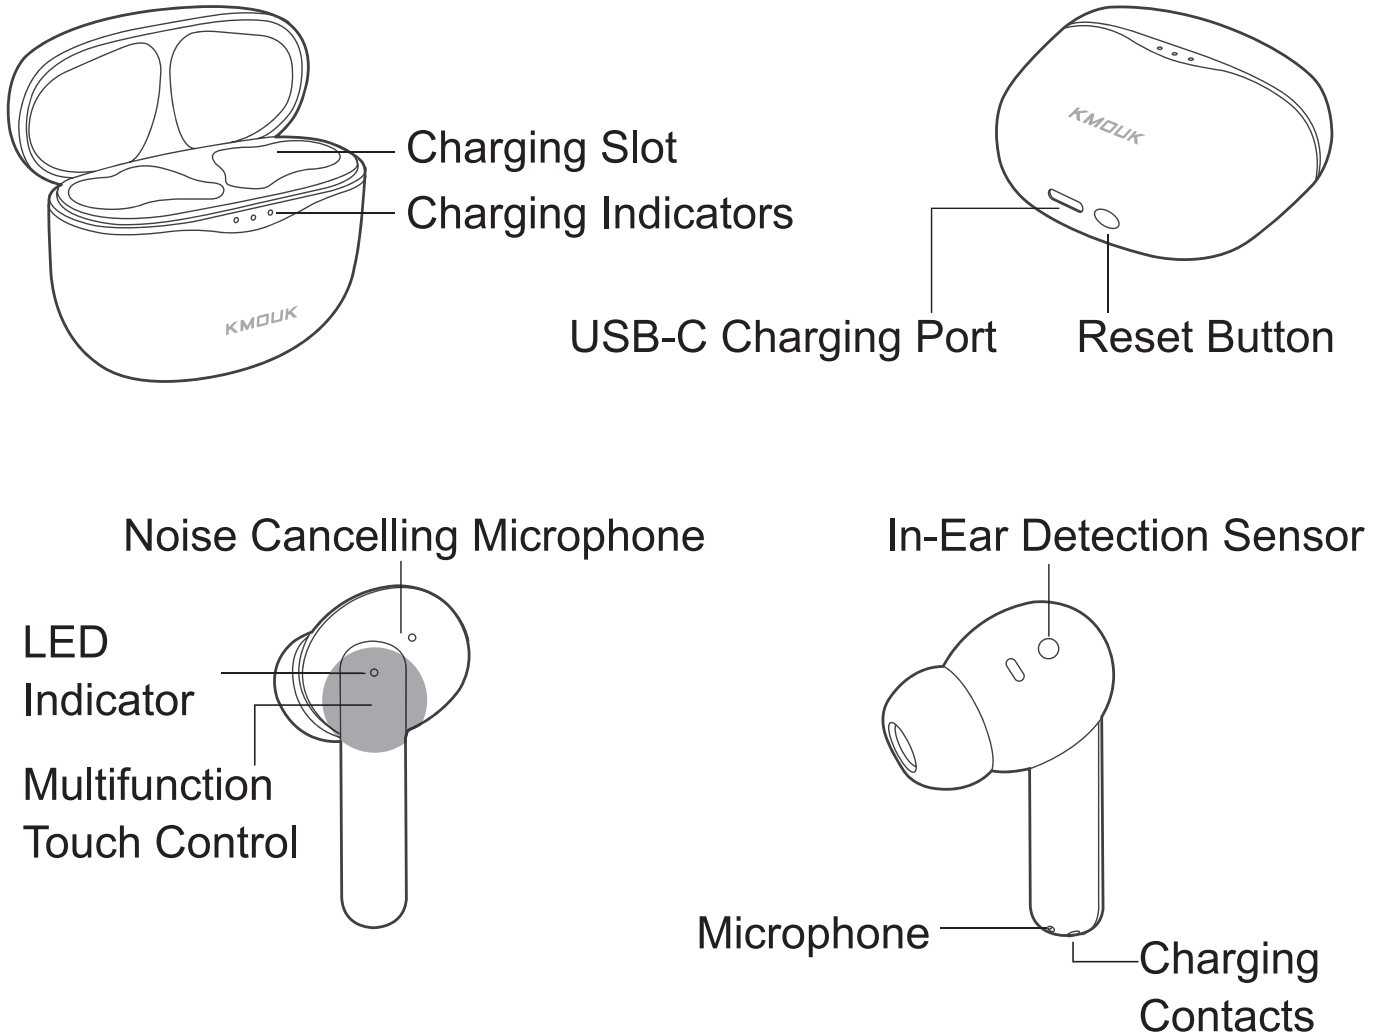


Charging

Fully charge both the earbuds and charging case before the first-time use. Charge the earbuds every 3 months when not using them for a long time.


Charging the earbuds

- Place the earbuds in the charging case
- Close the case, and the earbuds will start charging automatically.
- Once closing the case, the LED indicators shows the battery level of the charging case.
- After 5 seconds, the first and the third LED indicators on the case will light up, which confirms that the earbuds are being charged. As you can see in the fotos below:

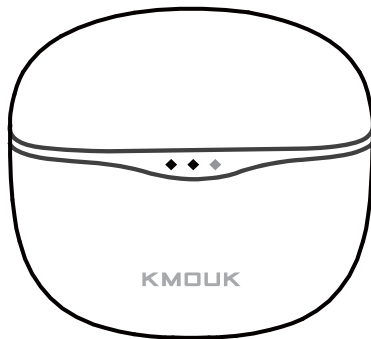

Charging case battery level

5s later ➡

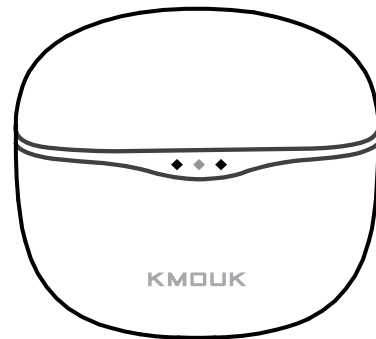


Earbuds are being charged

NOTE: The first and the third LED indicators will light out when the earbuds are being fully charged.

Charging the charging case

- Connect the charging case to the power supply by using a USB-C charging cable.
- Once fully charged, 3 LED indicator on the charging case will light up.
- The LED indicators on the charging case indicate the charging status:

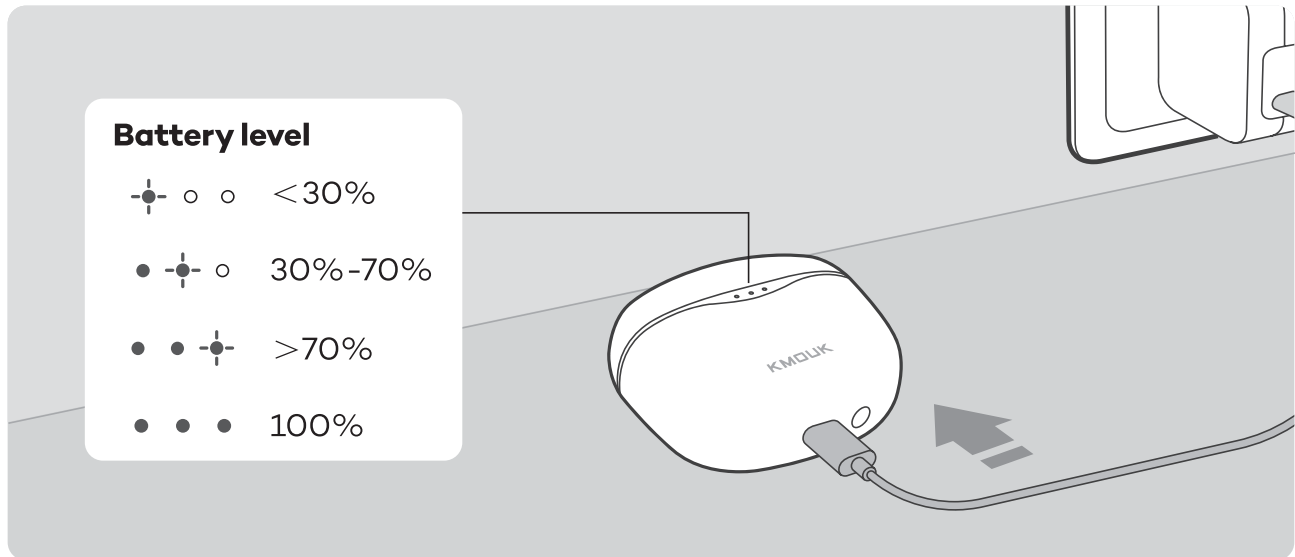

Powering On/Off

- Open the charging case, and the earbuds will power on automatically.

- To power off, put the earbuds into the charging case and close it.


Note: The earbuds will power off automatically if no device connected more than 10 minutes.

Wearing

- Choose the Liquid Silicone Eartips that fit your ears best.
- Identify the left and right earbuds, then insert the earbuds into the inner canal of your ears and turn gently until you find the most comfortable position.

SETTING UP YOUR EARBUDS


Wearing

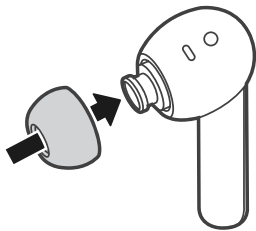

1



2

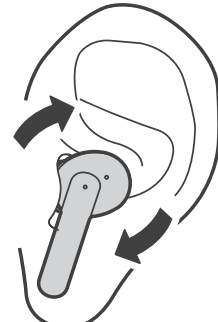

3

How to Use



- Place the two device to be connected close to each other and turn off other Bluetooth devices.
- The maximum effective Bluetooth range may vary with the environmental circumstances. Obstacles (walls, fences, etc.) between the two devices may shorten the effective range.

Bluetooth Pairing

- Open the charging case, the earbuds will automatically enter the Bluetooth pairing mode .The LED indicator on earbuds will flash quickly.
- Turn on Bluetooth of your device, select "KMOUK KM-HTW008" from the device list to connect.

Note: If the left and right headphones are not paired successfully and only one side works, you can fix it as follows:

- Open the charging case and leave the earbuds inside.
- Press and hold the button at the bottom of the charging case for 15s.
- All LEDs indicators flash 3 times, which means TWS pairing successfully.

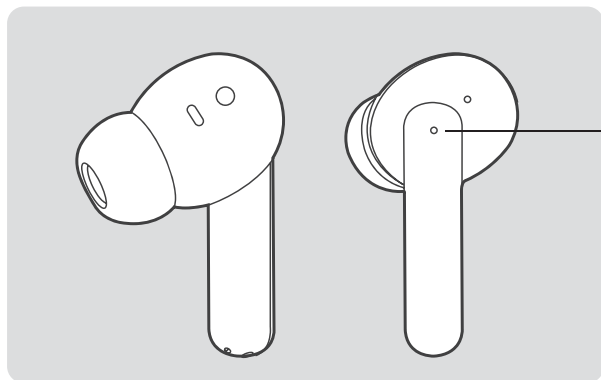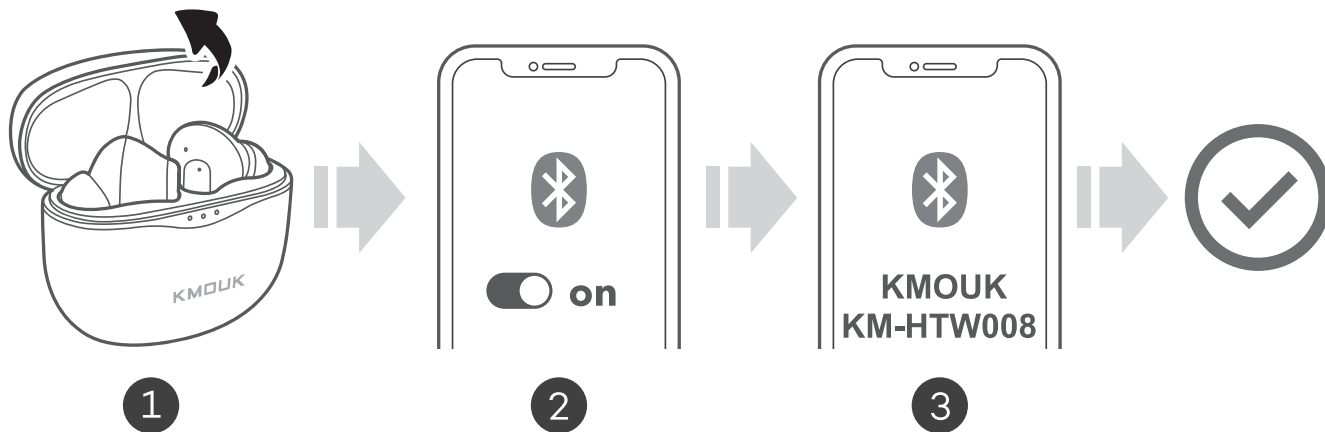

LED Indicator (Earbuds)

Blinking White
Pairing

Stop Blinking
Connected



Each time you power on your KMOUK HTW008 earbuds, they will automatically connect to your last successfully connected device if available within the bluetooth range.

Pairing with another device

When the earbuds fail to automatically pair with a new bluetooth device, you can manually pair as instructed below without clearing pairing history.

- Place the two earbuds back in the charging case and leave the case open.
- Press and hold the button on the charging case button for 3 seconds until the LED indicators on the charging case will flash white to enter the pairing mode.
- Turn on Bluetooth of your device, select "KMOUK KM-HTW008" from the device list to connect.

Restore factory settings

- The earbuds can restore the factory setting no matter it is connected or not.
- Open the charging case with earbuds placed in. Press and hold the button on the charging case for 10 seconds until the earphone LED and the charging case LED indicators flash 3 times at the same time. The restore factory setting is completed.

Note:

After a factory reset, the pairing record will be removed and you will need to pair the device again.

1



Remove “KM-HTW008” from the Bluetooth device list.

2




Place the earbuds back into the charging case and keep the cover open.

3



Press and hold the Reset Button 10 seconds until the indicators on the earbuds and the case flash white three times.

4

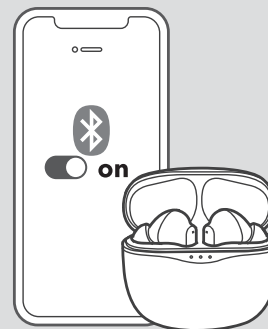

Re-pair with your device as instructed.

Note:

If the earbuds still fail to connect with your device or earbuds have no response, follow the steps below to initiate the device.

- Take out the earbuds from the charging case.
- Press and hold the touch control on both earbuds for 20 seconds.
- After initiating, your earbuds will power on with the LED indicators flash white continuously and are ready to pair.

Controls

Function	Operation	Voice Prompt
Answer a call	Single tap for either earbud	Android Phone: Incoming call iPhone : phone ringtone
Hang up a call	Press the right earbuds and hold for 2s	
Reject a call		Call rejected
Volume-	Single tap for left	
Volume+	Single tap for right	
Play/Pause	Tap twice right earbud or Take out either earbud from ear.	

Previous track	Triple tap for left earbud	
Next track	Triple tap for right earbud	
Activate voice assistant	Press the right earbud and hold for 3s	Du
Power on		Power on
Power off		Power off
Go into pairing mode		Pairing
Connected		Connected
Fail to connect		Disconnected
Earbuds battery is low		Battery low
ANC On	When two earbuds are put into the ear at the same time, they will automatically enter "ANC On" Mode	
ANC mode	Double tap left earbud	ANC ON-->Ambient Mode-->ANC OFF
Anti -wind mode	Long press left earbud for 2s	Anti -wind mode

Active Noise Cancelling

When in Binaural mode, ANC mode is turned on automatically after putting on both earbuds. Double-tap left earbud to switch ANC mode by ANC ON-->Ambient Mode-->ANC OFF.

Anti-wind mode

Long press left earbud for 2s to turn on Anti-wind mode, press and hold the left earbud for 2s again to turn off Anti-wind mode and return to the previous ANC mode.

How to Clean

Gently wipe off the dirt with a soft, dry cloth or cotton swab.

Note: Maintain the Earphones diligently to prevent dirt and prevent the earphones from being wet, then put it in the charging case to charge, causing the Earphones to fail to charge or unilaterally not to work.

Troubleshooting

1. Cannot find the earbuds in the Bluetooth list.

- Deactivate the Bluetooth function of previously paired device or remove the earbuds from the Bluetooth list and connect again.
- Place the device to be connected close to the earbuds.

2. Cannot connect with your device.

- Place the earbuds and your device close to each other. Move both devices away from other Bluetooth devices, microwaves, wireless routers, and other electronics .
- Make sure the Bluetooth function is activated before pairing.
- Remove the earbuds from the Bluetooth list and connect again.
- Reset the earbuds and pair again (see "Resetting Your Earbuds").

3. Intermittent Bluetooth connection.

- Move the device closer to the earbuds.
- Remove the earbuds from the Bluetooth list and connect again.
- Turn off other Bluetooth devices to decrease the interference.

4. Cannot use a single earbud.

- Make sure both earbuds are paired with your device first.

- Then follow the steps to pair the single (left or right) earbud with your device.

5.No sound from one earbud.

- Make sure the earbuds are within range of each other.
- Make sure the in-ear detect and sensors are not blocked.
- Place both earbuds back in the charging case and then take them out.

6.Poor sound quality

- Clear any debris from the earbud nozzles.
- Place both devices close to each other or remove the obstacles between them.
- Try with a different audio source.

7.Microphone does not receive sound

- Check whether the microphone is blocked or covered.
- Make sure the microphone is not muted on your phone.
- Remove the earbuds from the Bluetooth list and connect again.

8.Cannot hear own voice while on a phone call

- Check whether the microphone is blocked or covered.

9. Cannot hear caller while on a phone call

- Set the volume to a higher level

10. Earbuds do not turn on

- Battery low. Place both earbuds back into the charging case to charge.

11. Failed to charge the Earbuds

- Place both earbuds in the charging case properly until they magnetically snap into place.
- Make sure the charging case is fully charged.

12. Earbuds do not respond to touch control

- Make sure you are touching the correct touch control area.
- Make sure you put on the earbuds properly.
- Make sure your fingers are dry.
- Reset the earbuds and pair again (see "Resetting Your Earbuds").

Specification

Bluetooth Version	5.2
Operating Distance	32.8ft
Driver	9.6mm
Frequency Response	20Hz~20KHz
Impedance	160 $\pm$ 15%
Sensitivity	96dB
Input	5V 1A
Playtime	ANC OFF: 30h, ANC ON: 23h
Charge Time	1.5h
Weight	40g
Audio Codec Format	SBC、ACC
Waterproof	IPX8

Compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Recycling

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Customer Service

12-month Warranty Period

Within one year from the date of purchase, we will repair or replace the product for free if it does not work properly due to the quality of the product itself.

Contact Us

Mail: support@kmouk.com

Manufacturer Name: Shenzhen Subject Technology Co., Ltd.

Address: 1004, Building11, phase II, Tianan Yungu Industrial Park,
Gangtou Community, Bantian Street, Longgang District, Shenzhen,
China



FCC ID:2A2VUKM-HTW008



204-B00512



Made in china

目次

重要な安全上の注意.....	22
内容物	23
各部名称.....	24
充電方法.....	25
電源オン/オフ.....	27
着用方法.....	27
使用方法	28
アクティブノイズキャンセリング.....	34
お手入れ方法	34
トラブルシューティング.....	35
製品仕様.....	38
法令遵守.....	39
カスタマーサービス.....	41

重要な安全上の注意


この取扱説明書をよくお読みの上、大切に保管してください。

- 本製品には窒息の恐れがある小さな部品が含まれております。3歳未満のお子様の手の届かない場所で保管してください。
- 本製品には磁性体が含まれています。植え込み型医療機器への影響の有無については、医師にご相談ください。
- 火災や感電の危険性を減らすために、本製品を雨や湿気にさらさないでください。
- 暖房器具やストーブなどの熱源の近くに置かないでください。
- 必ずメーカーが指定したアタッチメントやアクセサリーのみを使用してください。
- 本製品を無断で改造や修理しないでください。
- 修理は必ず専門の技術者または認定された人に依頼してください。
- イヤホンを装着する前に音量を小さく設定し、その後、好みに応じて徐々に音量を上げてください。
- 大きな音量で長時間続けて聞くと、聴力に悪い影響を与えることがあります。
- 安全のため、運転中やその他の危険を伴う可能性のある活動中には、イヤホンを使用しないでください。同時に、イヤホンの使用に関する法律に従ってください。


内容物



ワイヤレスイヤホン

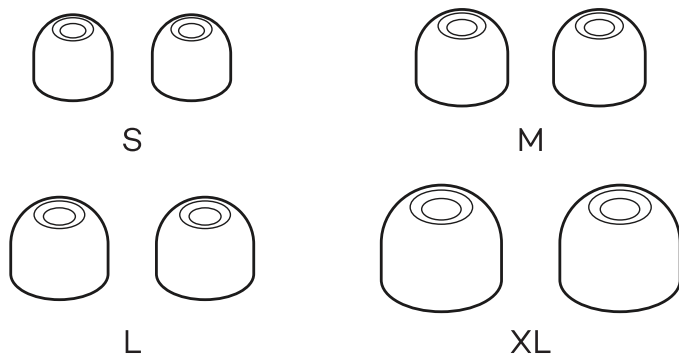

イヤークピース x 4 (S、M、L、XL)

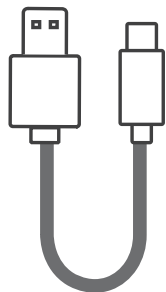

USB-C 充電ケーブル






取扱説明書



クイックガイドカード

各部名称

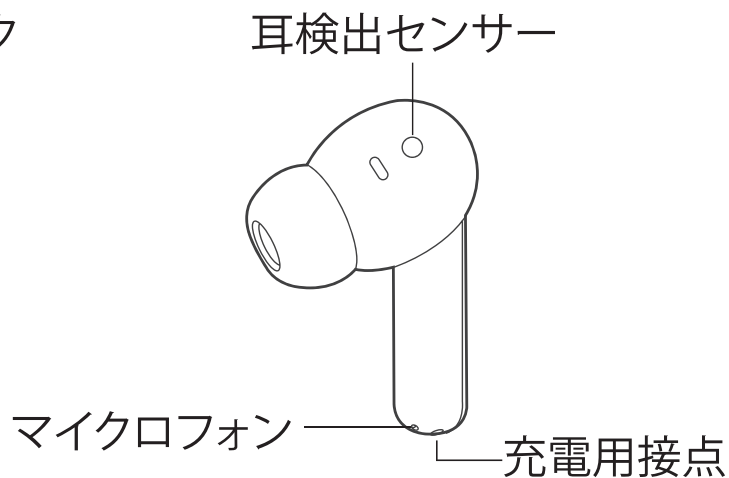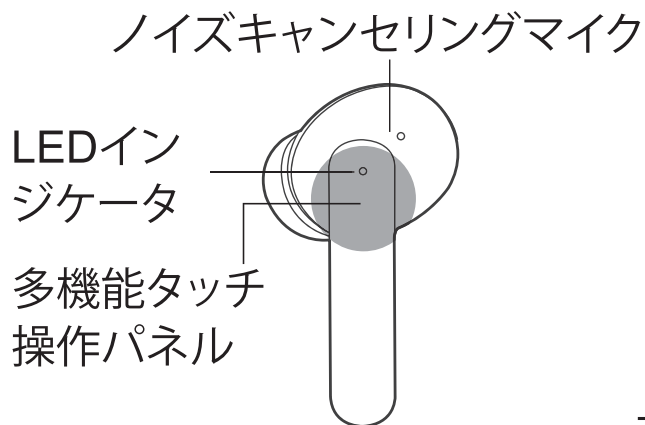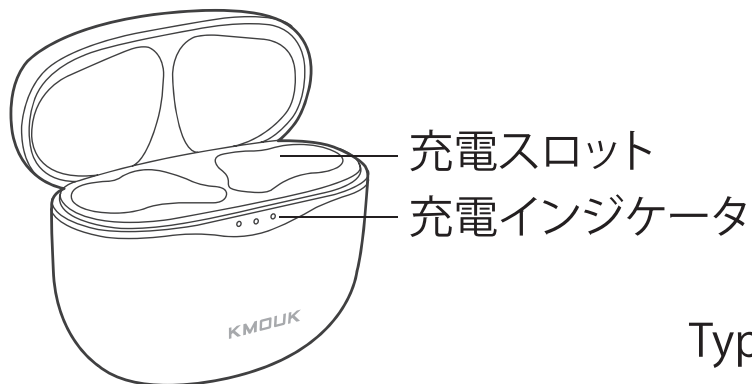


充電方法

- ・最初に使用する前に、イヤホンと充電ケースの両方を完全に充電してください。
- ・長期間使用しない場合は、3ヵ月ごとに充電してください。


手順：

- 1.イヤホンを充電ケースに入れます。
- 2.充電ケースの蓋を閉めると、イヤホンが自動的に充電を開始します。
- 3.ケースを閉じると、LEDインジケーターが充電ケースの電池残量を示します。5秒後に、ケースの1番目と3番目のLEDインジケーターが点灯し、イヤホンが充電されていることを確認できます。以下の写真をご覧ください。

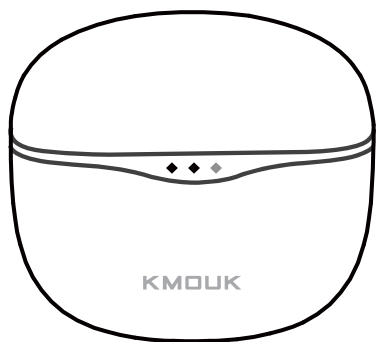

充電ケースの電池残量

5秒後 ➡

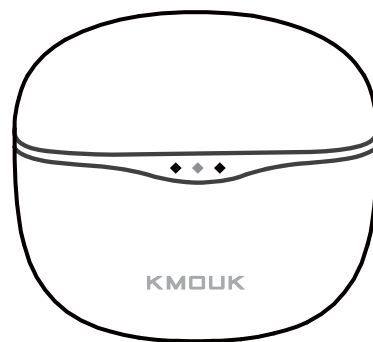


イヤホンが充電されている

ご注意:イヤホンが完全に充電されると、1番目と3番目の**LED**インジケータが消灯します。

充電ケースを充電する

- USB-C充電ケーブルを使って、充電ケースを電源に接続します。
- 充電が完了すると、充電ケースのバッテリーインジケータの3つのLEDライトがすべて点灯します。
- 充電ケースのLEDインジケータは、充電状態を示します。

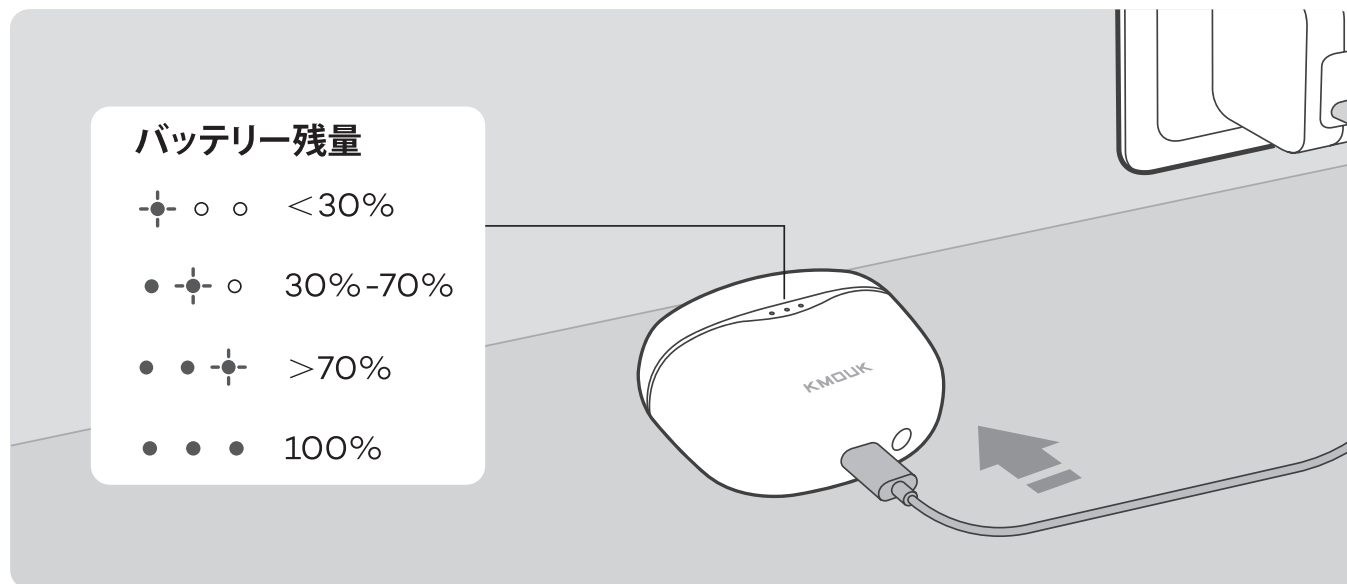

電源オン/オフ


- 充電ケースの蓋を開けると、イヤホンの電源が自動的にオンにします。
- 電源を切るには、イヤホンを充電ケースに入れて閉じます。

ご注意:10分以上デバイスが接続されていないと、イヤホンは自動的に電源が切れます。

着用方法

- 耳に最もフィットするイヤーピースをお選びください。
- 左右のイヤホンを識別してから、耳の内腔に挿入し、最も快適な位置を見つけるまで優しくて調節してください。

着用

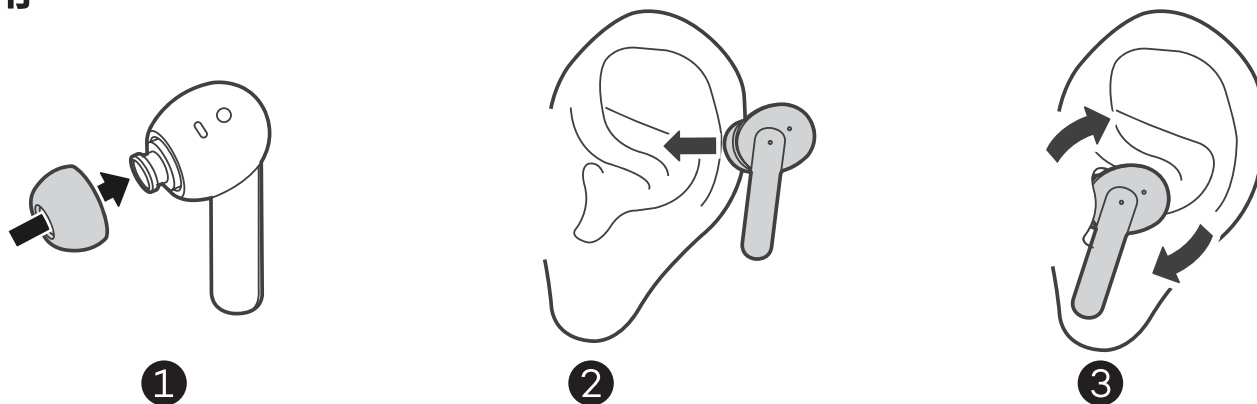

使用方法



- 接続する2つのデバイスを近くに置き、もう一方のBluetooth機器の電源を切ります。
- Bluetoothの最大有効距離は、環境条件によって異なる場合があります。2台の機器の間に障害物（壁やフェンスなど）があると、有効距離が短くなることがあります。

Bluetoothペアリング

- 充電ケースを開けると、イヤホンは自動的にBluetoothのペアリングモードに入ります。イヤホンのLEDインジケータが素早く点滅します。
- お使いのデバイスのBluetoothをオンにし、デバイスリストから「KMOUK KM-HTW008」を選択して接続します。

ご注意：左右のイヤホンが正常にペアリングされず、片方だけが動作している場合は、以下のように修正することができます。

- イヤホンを充電ケースに入れ、蓋を開けた状態にしてください。
- 充電ケースの底部にあるボタンを15秒間押し続けてください。
- 全てのLEDインジケータが速く3回点滅すると、TWSのペアリングが成功します。

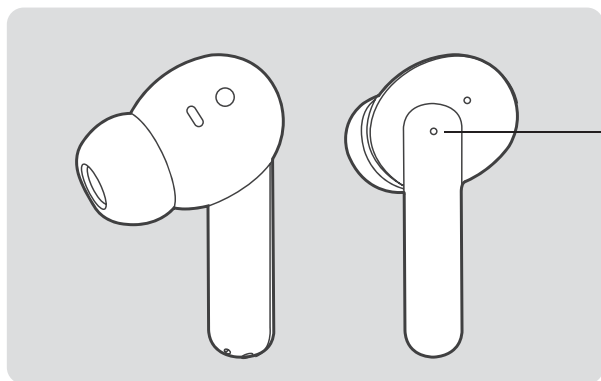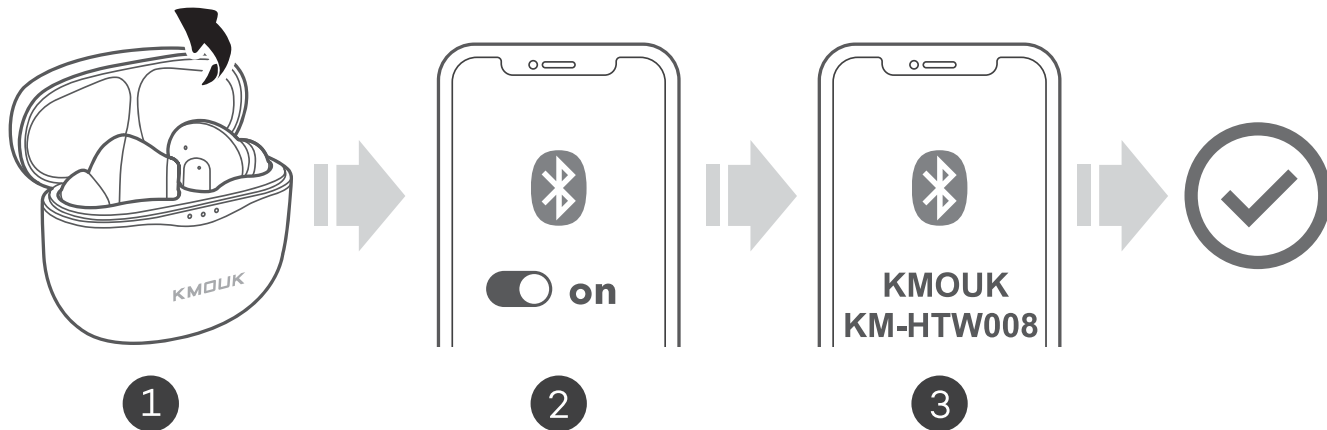

LEDインジケーター (イヤホン)

白ライトの点滅
ペアリング

点滅停止
Bluetooth接続



KMOUK HTW008の電源を入れるたびに、最後に接続に成功したデバイスがBluetoothの範囲内にあれば、自動的に接続されます。

新しいデバイスとのペアリング

新しいデバイスとイヤホンが自動的にペアリングできない場合は、以下の手順でペアリング履歴を消去せずに手動でペアリングすることができます。

- 両方のイヤホンを充電ケースに戻し、ケースを開けておきます。
- 充電ケース底のリセットボタンを、ケースの**LED**が白く点滅するまで**3秒間長押し**すると、ペアリングモードになります。
- お使いのデバイスのBluetoothをオンにし、デバイスリストから「KMOUK KM-HTW008」を選択して接続します。

工場出荷時の設定に戻す

- KMOUK HTW008 イヤホンは、接続していてもいなくても、工場出荷時の設定に戻すことができます。イヤホンを入れた状態で、充電ケースを開きます。
- イヤホンのLEDと充電ケースのLEDインジケータが同時に3回点滅するまで、充電ケース底のリセットボタンを10秒間長押しします。出荷時設定の復元が完了します。

ご注意:工場出荷時にリセットすると、ペアリング記録が削除されますので、再度ペアリングを行う必要があります。

1




Bluetoothデバイスリストから
「KM-HTW008」を削除します。

2




イヤホンを充電ケースに戻し、カバー
を開けておきます。

3

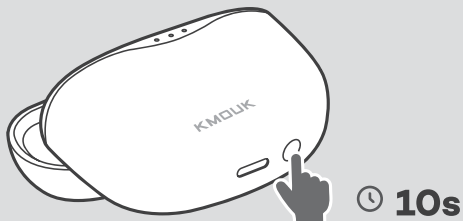

イヤホンとケースのインジケータが3
回白く点滅するまで、リセットボタンを
10秒間長押しします。

4

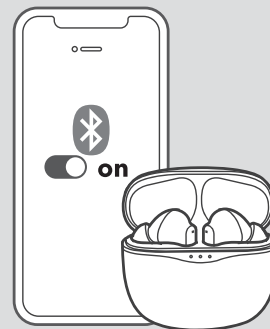

指示に従ってデバイスとペアリングし
てください。

それでもデバイスとの接続に失敗したり、イヤホンが反応しない場合
は、以下の手順でデバイスを初期化してください。

1. 充電ケースからイヤホンを取り出します。

2. 両方のイヤホンのタッチエリアを20秒間長押しします。
 3. 初期化後、イヤホンの電源が入り、LEDインジケータが連続して白く点滅し、ペアリングの準備が整います。
- 左右のイヤホンが正常にペアリングされず、片方だけが動作している場合は、以下のように修正することができます。
- ・イヤホンを充電ケースに入れ、蓋を開けた状態にしてください。
 - ・充電ケースの底部にあるボタンを15秒間押し続けてください。
 - ・全てのLEDインジケータが速く3回点滅すると、TWSのペアリングが成功します。

操作・機能

機能	操作方法	提示音
電話を受ける	任意のイヤホンをタップ	Android: Incoming call iPhone: 電話着信音
電話を切る	右のイヤホンを2秒間長押し	
通話拒否		Call rejected
音量下げ	左のイヤホンをタップ	
音量上げ	右のイヤホンをタップ	

再生/停止	右のイヤホンを2回タップ / どちらかのイヤホンを耳から外す。	
曲戻し	左のイヤホンを3回タップ	
曲送り	右のイヤホンを3回タップ	
音声アシスタント	右のイヤホンを3秒間長押し	Du
電源オン		Power on
電源オフ		Power off
ペアリングモード		Pairing
Bluetooth接続		Connected
Bluetooth切断		Disconnected
電力不足		Battery low
ANCオン	2つのイヤホンを同時に耳に入れると、自動的に「ANC オン」モードになる	
ANCモード切替	左のイヤホンを2回タップ	ANC ON-->Ambient Mode-->ANC OFF
Anti-wind モード	左のイヤホンを2秒間長押し	Anti -wind mode

アクティブノイズキャンセリング

両耳モードでは、両耳のイヤホンを装着すると自動的にANCモードがオンになります。左のイヤホンを2回タップすると、ANC オン-->Ambient モード-->ANC オフでANCモードが切り替わります。

ご注意:片方イヤホンを使用する場合、ANC機能はありません。

Anti-windモード

左のイヤホンを2秒間長押しするとAnti-windモードがオンになり、再度左のイヤホンを2秒間長押しするとAnti-windモードがオフになり、元のANCモードに戻ります。

お手入れ方法

柔らかくて乾いた布や綿棒などを使って、そっと汚れを拭き取ってください。

ご注意:充電ケースやイヤホンには水や異物を入れないでください。

トラブルシューティング

1. Bluetoothリスト一覧で「KMOUK HTW008」が見つからない
最近ペアリングしたデバイスのBluetooth機能を解除にします。または、Bluetoothリストから「KMOUK HTW008」を解除してから、もう一度接続してください。

- 接続するデバイスをイヤホンの近くに置いてください。

2. お使いのデバイスと接続できない

- イヤホンとお使いのデバイスを近づけてください。他のBluetoothデバイス、電子レンジ、無線ルーター、その他の電子機器からイヤホンとお使いのデバイスを離してください。

- ペアリングをする前に、Bluetooth機能が有効になっていることを確認してください。

- イヤホンをBluetoothリストから削除し、再度接続してください。

- イヤホンをリセットして再度ペアリングします（「イヤホンをリセットする」をご参照ください）。

3. Bluetoothの接続が不安定な場合

- 接続するデバイスをイヤホンの近くに置いてください。

- イヤホンをBluetoothリストから削除し、再度接続してください。

- 干渉を減らすために他のBluetoothデバイスの電源を切ってください。
- 4.片方のイヤホンだけでは使用できない
- まず両方のイヤホンがお使いのデバイスとペアリングされていることを確認してください。
 - その後、手順に従って片方(左または右)のイヤホンをお使いのデバイスとペアリングしてください。
- 5.片方のイヤホンから音が出ない
- イヤホンがお互いの範囲内にあることを確認してください。
 - 耳の中の検出器やセンサーがブロックされていないことを確認してください。
 - 両方のイヤホンを充電ケースに戻してから、取り出してみてください。
- 6.音質が悪い
- イヤーピースに付着したゴミを取り除いてください。
 - 両方のデバイスを近づけるか、間の障害物を取り除いてください。
 - 別のオーディオソースで試してみてください。
- 7.マイクから音が聞こえない
- マイクが塞がれていないか、覆われていないかを確認してください。
 - 携帯電話でマイクがミュートになっていないか確認してください。

- Bluetoothリストからイヤホンを削除し、再度接続してください。
- 8.通話中に自分の声が聞こえない
- マイクが塞がれていないか、カバーされていないか確認してください。
- 9.通話中に相手の声が聞こえない
- 音量を上げてみてください。
- 10.イヤホンがオンにできない
- 電池の残量が少なくなっています。両方のイヤホンを充電ケースに戻して充電してください。
- 11.イヤホンに充電できない
- 両方のイヤホンを、マグネットでカチッと音がするまで充電ケースに正しく入れてください。
 - 充電ケースが完全に充電されていることを確認してください。
- 12.タッチ操作してもイヤホンが反応しない
- 正しいタッチコントロールエリアに触れていることを確認してください。
 - イヤホンを正しく装着していることを確認してください。
 - 指が乾いていることを確認してください。
 - イヤホンをリセットして、再度ペアリングしてください(「イヤホンをリセットする」をご参照ください)。

製品仕様

Bluetoothバージョン	5.2
動作距離	10m
ドライバーユニット	9.6mm
周波数応答	20Hz~20KHz
インピーダンス	160±15%
感度	96dB
入力	5V 1A
連続再生時間	ANC OFF: 30h, ANC ON: 23h
充電時間	1.5h
重量	40g
対応コーデック	SBC、AAC
防水レベル	IPX8

法令遵守

ご注意:本製品は電波法に基づく特定無線設備の技術基準適応証明等に関する規則、および電気通信事業法に基づく端末機器の技術基準適応認定等に関する規則を順守しており、その証として「技適マーク」が本製品の下に表示されております。

これらの制限は、住宅での設置において有害な干渉から合理的に保護することを目的としています。本製品は、無線周波数エネルギーを生成し、また放射する可能性があるため、取扱説明書に従って設置および使用しない場合、無線通信に有害な干渉を引き起こす可能性があります。しかし、特定の設置場所で干渉が起こらないことを保証するものではありません。本製品がラジオやテレビの受信に有害な干渉を起こした場合（これは本製品の電源を切ったり入れたりすることで確認できます）、以下のような1つまたは複数の方法で干渉を修正することをお勧めします。

- 受信アンテナの向きを変えたり、場所を変えたりしてください。
- 機器と受信機の間隔を広くしてください。

- 本製品を受信機が接続されている回路とは異なる回路のコンセントに接続してください。
 - 本製品が故障した場合は、販売店または修理業者にご連絡ください。本製品は、制御されていない環境において規定されたFCC/ICの放射線被曝リミットに準拠しています。
- 操作は以下の2つの条件に従うものとします。
- (1)本製品は有害な干渉を起こしてはなりません。
 - (2)本製品は、望ましくない動作を引き起こす可能性のある干渉を含め、受信したすべての干渉を受け入れなければなりません。

リサイクル

無秩序な廃棄による環境や人体への悪影響を防ぐため、責任を持ってリサイクルし、資源の持続可能な再利用を推進してください。使用済みのデバイスを返却するには、返品・回収システムを利用するか、製品を購入した小売店に連絡してください。この製品を環境的に安全なリサイクルのために引き取ることができます。

カスタマーサービス

12ヶ月間の保証期間

ご購入日から1年以内に、製品自体の品質により正常に動作しない場合は、無料で交換いたします。

お問い合わせ先

メール: support@kmouk.com

製造元:

会社名: Shenzhen Subject Technology Co., Ltd.

住所: 1004, Building 11, phase II, Tianan Yungu Industrial Park,
Gangtou Community, Bantian Street, Longgang District, Shenzhen,
China



FCC ID: 2A2VUKM-HTW008



204-B00512



製造国: 中国



KMOUK

Make different sounds



www.KMOUK.com



support@kmouk.com