



Parent Guide


This guide contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

Need help? Visit: leapfrog.com/support/leapfrogepic
Vous avez besoin d'aide ? Visitez le site : leapfrog.fr/support/leapfrogepic

Get Started

- 1 Power Up** LeapFrog Epic™ tablet with the AC adapter/adaptor. Save time: set up while charging.
- 2 Set Up** Wi-Fi by following onscreen prompts. It's the easiest way to access the App Center/Centre.
- 3 Register** your device by creating a LeapFrog parent account. It's super quick and easy!
- 4 Download** your included apps. Wi-Fi, parent account and device set up required to access all included apps.
- 5 Create & Play!** You're all set for an awesome experience that's truly EPIC!

Features

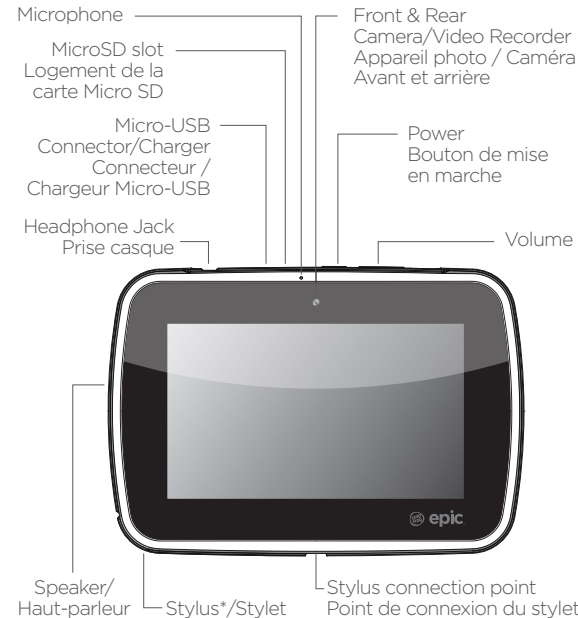

*Use the included grey stylus cord to attach Stylus to bottom of tablet.
Utilisez la cordelette incluse pour attacher le stylet au bas de la tablette.

Parent Settings

Control your child's play with these interactive LeapFrog Epic™ features:

- **Wireless settings** — Control connection setup and access to online experiences.
- **Child profile** — Easily manage permissions and profile information or add a new profile.
- **Peer-to-peer settings** — Control how your child plays with other children when two wireless LeapFrog Epic tablets are in close proximity to one another via local ad hoc Wi-Fi network. (See Local Communications below for more information.)
- **App Center/Centre** — Parents can purchase digital content directly from the tablet with a Parent Account password. Control your child's access to the App Center/Centre, where they can watch trailers and create a wish list. Parents can choose whether children may view pricing and buy buttons.
- **App Manager** — Control your child's access to included and downloaded apps.
- **Time Controls** — Manage the amount of time your child spends on the tablet by total time, hours of the day and by app category.
- **LeapSearch™ Controls** — Manage the web pages and websites your child explores in the LeapSearch Parent Portal.
- **Tablet Settings** — Manage settings like language, time, date and more.

Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial setup. Parent Settings can be accessed from the Sign In screen by pressing the Parent Settings icon to log in with your parent lock. Alternatively, you can log in via the Parent Settings icon on the upper right hand corner of the child's Home Screen.

Forgetting or resetting your Parent Lock

If you have forgotten your 4-digit parent lock code you can look it up in the leapfrog.com Parent Account you created during device setup and registration. If you need to reset your parent lock, you can do it from the device or reference the FAQ section at leapfrog.com/support/leapfrogepic for more information.

Operating Instructions

WARNING: Please read all the Important Safety Instructions prior to using the LEAPFROG™ tablet. Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the LEAPFROG tablet or other property.

WARNING: Please read all safety instructions for any accessories or other products before using with the LEAPFROG tablet. LeapFrog is not responsible for the operation of third-party accessories or their compliance with safety and regulatory standards.

Wi-Fi connection support. If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available at leapfrog.com/support.

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it OFF. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source. Do not re-connect to the AC outlet if wet or damaged.

Handle with care. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals. Use the included bumper to help minimize damage from typical use and drops.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) to 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Battery Charging

The LEAPFROG™ tablet is equipped with a rechargeable lithium-polymer battery. It will require about 5 hours of charging using the included AC power adapter/adaptor prior to use. The tablet may also be charged via USB connection; however, this charging method will take much longer.

If the battery is charging when the device is off, a battery meter icon will light up on the dark screen. When the battery meter icon is full, the battery is fully charged. If it is charging when the device is on, the battery meter at the top of the screen will show the charging status and the charge level.

Charge the device in a well-ventilated area only. While charging the device do not cover it with anything such as a blanket, pillow or your child's body. Never allow your child to sleep with or on the device while it is charging. For power or battery issues, please contact LeapFrog Consumer Support.

Cleaning. Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Using connectors and ports. Never force a USB or other connector into a port on the device. If the connector does not fit into the port, double check the connector and port to ensure they match up and are positioned correctly, and make sure nothing is obstructing the port.

Environmental phenomena. The LEAPFROG tablet may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power OFF and then back ON. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by turning the power OFF and then back ON.

Static electricity and headphones. In certain dry environments, static electricity can build up in headphones and cause a small quick static discharge when plugging the headphones into a device. To avoid this static discharge from occurring, do not use in extremely dry environments or touch a grounded unpainted metal object to discharge static electricity before connecting the headphones to the device.

Do not connect to the AC wall outlet if wet or damaged.

Important Safety Instructions

WARNING: The AC Adapter or USB cords could be a strangulation hazard. Not for children under 3 years.

CAUTION: Routinely check this tablet for proper and safe condition. If there is any damage or broken parts, such as a fractured or cracked screen (display), immediately remove the tablet from use.

CAUTION: DO NOT GET WET. Do not use the tablet and its accessories in the rain, near sinks or in other wet or highly humid locations. Ensure food or liquid is not spilled on the tablet or its accessories.

CAUTION: Do not attempt to dry the LEAPFROG™ tablet or its accessories with an external heat source, such as a microwave or hair dryer.

CAUTION: Do not store or carry the tablet and its accessories along with flammable or explosive materials, liquids or gases. Do not expose to fire, explosion, or other hazard.

CAUTION: DO NOT REPAIR OR MODIFY. The LEAPFROG™ tablet does not contain any user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc. If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use and contact LeapFrog Consumer Services.

CAUTION: Never use the tablet while riding a bicycle or operating mechanical games or machinery.

WARNING: It is rare but possible for seizures to be triggered by light flashes or patterns. Play/watch in a well-lit room and take 10 to 15 minute breaks every hour.

PROTECT YOUR EYESIGHT. Use the tablet in a well-lit room; take a 20-second break every 20 minutes and look at something far away; take 10 to 15 minute breaks every hour; and do not hold the screen too close to your eyes. If you experience any vision problems, such as blurred vision or eye pain, stop using the tablet and have your eyes checked.

PROTECT YOUR HEARING. Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set

the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

PROTECT YOUR BODY. ERGONOMIC CONSIDERATIONS: When using a tablet device, it is possible that repetition of certain motions or remaining in certain positions over for long periods of time may cause discomfort in the hands, neck, shoulders, or other parts of the body. Reduce risk of discomfort and repetitive motion injuries by using the tablet in a comfortable position and taking a 10 to 15 minute break every hour. If you experience any injury or ongoing discomfort, stop use and see a physician.

CAUTION: Keep the device at least 6" (15cm) away from pacemakers and other similar medical devices that may be sensitive to devices that contain magnets and emit electromagnetic fields.

Battery and AC Adapter/Adaptor

WARNING: A minimum separation distance of 0 cm must be maintained between the user's body and the device, including the antenna during body-worn operation to comply with the RF exposure requirements in Europe.

WARNING: The lithium rechargeable battery cannot be removed from the product. For your safety, never try to remove the battery. For power or battery issues, please contact LeapFrog Consumer Services.

CAUTION: The battery is only to be charged by adults or children 8+ years of age under the full supervision of an adult.

CAUTION: Use only the AC adapter/adaptor provided with the product.

WARNING: Not suitable for children under 3 years. Misuse of transformer (AC Adapter/ adaptor) can cause electric shock. (Note: The word "transformer" is sometimes substituted for the word "adapter.") Use only the included AC power adapter/adaptor.

• Connection of the transformer to the wall outlet should be performed only by an adult or child 8+ years of age.

• The transformer is not intended to be used as a toy, and the use of the transformer shall be under the full supervision of parents.

• As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.

• The power adapter/adaptor may become warm during normal use. Always allow adequate ventilation and use care when handling the power adapter/adaptor.

• Charge the device in a well-ventilated area only. While charging the

device do not cover it with anything such as a blanket, pillow or your child's body. Never allow your child to sleep with or on the device while it is charging.

• Do not prolong body contact with USB/AC cables while connected to a computer or AC outlet to avoid injury. Do not sit or sleep on cables while in use.

• Do not connect or disconnect with wet hands.

• The transformer should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts. If any such conditions are present, the transformer must not be used. Dispose of a damaged or faulty transformer in accordance with your local electrical product recycling regulations.

• The USB charging unit varies by country or region.

AC Adapter/Adaptor Electrical Ratings: Input: - 120VAC, 60Hz (for US); - 230VAC, 50Hz (for UK or EU); - 240VAC, 50Hz (for AS/NZL) Output: --- DC5V, 1.5A, 7.5VA

Regulatory Information

FCC Compliance Statement: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog could void the EMC and wireless compliance and void the user's authority to operate the equipment. This product demonstrated EMC compliance using compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

Certification and Compliance		
U.S. Models: 31576, 31577		FCC ID: HFS-UYT
Canada Models: 31576, 31577	IC: 1787B-UYT	CAN ICES-3(B)/NMB-3(B)
E.U.	 	

FCC Caution: This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

USB Cable: The USB cable provided with this product complies with FCC and other regulatory emission limits. If using a USB cable other than the one provided, a shielded cable must be used in order not to exceed FCC and other regulatory emissions limits.

Wireless/Wi-Fi Use Regulations: Under certain regulations, it may be necessary to turn off your wireless/Wi-Fi connection in locations or situations when it may cause interference or danger, such as on an airplane.

Exposure to Radio Frequency Energy: The LEAPFROG™ tablet contains a radio transmitter and receiver that sends and receives radio frequency (RF) energy through its internal antenna. The rate at which RF energy is absorbed by the human body is referred to as the specific absorption rate (SAR). The LEAPFROG tablet complies with SAR absorption requirements for Wi-Fi operation established by the Federal Communications Commission (FCC), Industry Canada (IC), and European Community (EC). This tablet has a FCC ID number: HFS-UYT [Model Number: 31576, 31577] and the specific SAR levels for this tablet can be found at the following FCC website: fcc.gov/oet/ea/

Industry Canada Licence-Exempt RSS Standard(s)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Industry Canada Compliance: This Class B digital apparatus complies with Canadian ICES-003. The IC term stands for "Industry Canada" followed by the certification number and all the "IC:1787B-UYT" signifies is that the equipment meet the Radio Standard Specification RSS-210. The IC certification number is located on the back of the enclosure. CAN ICES-3(B)/NMB-3(B)

European Community Compliance Statement The equipment complies with the RF Exposure Requirement 1999/519/EC, Council Recommendation of 12 July 1999 on the limitation of exposure of the general public to electromagnetic fields (0–300 GHz). This wireless device complies with the R&TTE Directive.

European Community Declaration of Conformity LeapFrog Enterprises, Inc., hereby declares that this Wi-Fi device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Recycling: For information on how this product might be recycled in the United States, visit leapfrog.com/recycle. For recycling in the United Kingdom, visit leapfrog.co.uk/recycle

Warranty: Please visit our website at leapfrog.com/legal for full details of the warranty provided in your country.

Local Communications

Peer-to-peer gameplay uses limited communication features to permit direct connections between two wireless LEAPFROG™ tablets that are in close proximity to one another, using a local Wi-Fi ad hoc network. Your child is not playing on the Internet. Instead, peer-to-peer enabled LEAPFROG tablets use local Wi-Fi connections like an antenna—allowing play between LEAPFROG tablets that are near each other (for example, within 100 feet/approx. 30 metres unobstructed or less, depending on the strength of the local network—obstructions such as walls can significantly reduce the operating range). Both users must own copies of the same game in order to play together. Some peer-to-peer games allow users to share information with and receive information from the other player. The peer-to-peer feature can be activated or disabled using the Parent Settings screen on the tablet.

Intellectual Property License Information

General Public License: Certain software included in this product contains copyrighted software that is licensed under the General Public License (GPL). A copy of that license is included at leapfrog.com/en-us/legal/open-source.html. Anyone may obtain from us the complete corresponding source code for the software covered by the GPL for a period of three years after our last shipment of this product by contacting LeapFrog customer service at support@leapfrog.com. Please write "GPL source code for [name of device]" in the subject line of your email. We reserve the right to charge a reasonable fee to cover the costs of shipping and the physical media on which the source code is loaded.

Other Licenses: Copies of other third-party open source licenses are available at <http://www.leapfrog.com/en-us/legal/open-source.html>.

TM & © 2015 LeapFrog Enterprises, Inc. All rights reserved.
LeapFrog Enterprises, Inc., 6401 Hollis Street, Suite 100 Emeryville, CA 94608. (800) 701-LEAP (5327)

leapfrog.com

Consumer Support Visit our Consumer Support websites 24 hours a day:

U.S.: leapfrog.com/support

Canada: leapfrog.ca/support

U.K.: leapfrog.co.uk/support

Australia (distributor): funtastic.com.au or info@funtastic.com.au

Recommended for children ages 3-9 years/Convient aux enfants de 3 à 9 ans.

LeapFrog Epic Model(s) / Modèle: 31576, 31577

Item number: 31576, 31577 Part Number / N° de pièce : 605-12267-A

Mode d'emploi

⚠️ AVERTISSEMENT : Veuillez lire toutes les instructions de sécurité importantes avant d'utiliser la tablette LEAPFROG™. La non observation de ces instructions de sécurité peut entraîner un incendie, un choc électrique ou des blessures corporelles ou des dommages de la tablette LEAPFROG ou autre propriété.

⚠️ AVERTISSEMENT : Veuillez lire toutes les instructions de sécurité pour les accessoires ou autres produits avant d'utiliser la tablette LEAPFROG. LeapFrog n'est pas responsable du fonctionnement des accessoires tiers ou de leur conformité avec les normes de sécurité et de réglementation.

Assistance pour la connexion Wi-Fi. Si vous avez des problèmes avec la connectivité Wi-Fi, des suggestions de dépannage sont disponibles sur leapfrog.com/support

Utilisez uniquement en intérieur, dans des lieux secs. N'utilisez pas le produit près d'un évier ou d'un autre endroit humide. Faites attention de ne pas renverser de liquide ou de nourriture sur ce produit car cela peut empêcher son fonctionnement et il ne sera pas réparable. Dans le cas où l'appareil est mouillé, débranchez tous les câbles et mettez-le hors tension sur OFF. Laissez-le sécher complètement avant de le réutiliser. N'essayez pas de le sécher avec un sèche-cheveux ou une autre source de chaleur. Ne le rebranchez pas sur une prise électrique s'il est mouillé ou endommagé.

Manipulez avec soin. Pour éviter les blessures ou des dommages de l'appareil ou d'une autre propriété, évitez de faire tomber l'appareil. Ne jamais démonter l'appareil, l'écraser, le percer, le mettre dans un four à micro-ondes, l'incinérer, y insérer des produits étrangers, le peindre, l'immerger ou l'exposer à de l'eau ou d'autres liquides. Lavez-vous les mains avant de manipuler l'appareil si elles ont été en contact avec des crèmes solaires ou d'autres produits chimiques. Utilisez le pare-choc pour aider à minimiser les dommages dus à l'utilisation courante et aux chutes.

Évitez une exposition prolongée à des températures extrêmes et à lumière directe du soleil. Utilisez l'appareil dans des endroits où les températures sont comprises entre 5°C et 38°C. Ne laissez pas le produit dans votre voiture car la température dans une voiture en stationnement peut dépasser la température limite de stockage. Une exposition à des températures extrêmes peut entraîner une réduction de la durée de vie de la batterie ou un arrêt momentané de l'appareil.

le chargement, ne couvrez pas l'appareil avec une couverture, un coussin et ne laissez pas votre enfant s'appuyer dessus. Ne laissez jamais votre enfant dormir avec l'appareil ou sur l'appareil, lorsqu'il est en charge.

- Ne prolongez pas le contact corporel avec les câbles USB/AC lorsque l'appareil est connecté à un ordinateur ou une prise AC pour éviter des blessures. Ne vous asseyez pas ou ne dormez pas sur les câbles, en cours d'utilisation.
- Ne branchez pas ou ne débranchez pas avec les mains mouillées.
- Le transformateur doit être examiné régulièrement pour détecter les conditions pouvant causer un risque d'incendie, de choc électrique, ou de blessures corporelles ou dommages des câbles, prises, lames, boîtier ou autres parties. Si l'une de ces conditions existe, le transformateur ne doit pas être utilisé. Mettez le transformateur endommagé ou défectueux au rebut conformément aux réglementations locales de recyclage des appareils électriques.
- L'unité de chargement USB varie selon le pays ou la région.

Caractéristiques électriques de l'adaptateur AC

Entrée : ~ 120VAC, 60Hz (pour USA) ; ~ 230VAC, 50Hz (pour R-U ou UE) ; ~ 240VAC, 50Hz (pour AUS/NZL) Sortie : DC5V, 1.5A, 7.5VA

Informations réglementaires :

Réglementations sur l'utilisation sans fil/Wi-Fi

Dans certaines réglementations, il peut être nécessaire de désactiver votre connexion sans fil/Wi-Fi dans des endroits ou des situations où elle peut causer un brouillage ou un danger, comme par exemple, à bord d'un avion.

Exposition à une énergie de radiofréquence La tablette LEAPFROG™ contient un émetteur-récepteur radio qui envoie et reçoit une énergie de radiofréquence (RF) via son antenne interne.

Le taux auquel l'énergie RF est absorbée par le corps humain est désigné le débit d'absorption spécifique (SAR). La tablette LEAPFROG est conforme aux exigences d'absorption SAR pour l'exploitation Wi-Fi établie par la Commission fédérale des communications (FCC), Industrie Canada (IC) et la Communauté européenne (CE). Cette tablette a un numéro ID FCC : HFS-UYT [numéro de modèle : 31576, 31577] et les niveaux SAR spécifiques pour cette tablette peuvent être consultés sur le site web FCC suivant : fcc.gov/oet/ea/

Câble USB : Le câble USB fourni avec cet appareil est conforme à FCC et aux autres limites d'émission réglementaires. Si un câble USB autre que celui fourni est utilisé, il doit être gainé afin de ne pas excéder les limites FCC et autres limites d'émissions réglementaires.

CNR des appareils exempts de licence Industrie Canada Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1. l'appareil ne doit pas produire de brouillage, et 2. l'utilisateur

**Chargement de batterie **

• La tablette LEAPFROG™ est pourvue d'une batterie lithium-polymère rechargeable. Elle nécessite environ 5 heures de chargement en utilisant l'adaptateur d'alimentation AC inclus avant l'utilisation. La tablette peut aussi être chargée via une connexion USB ; toutefois, cette méthode prend beaucoup plus de temps. Pour tout problème d'alimentation ou de batterie, veuillez contacter le service consommateurs de LeapFrog.

• Si la batterie est en charge lorsque l'appareil est hors tension, une icône de niveau de la batterie s'allume sur l'écran noir. Lorsque l'icône du niveau de la batterie est plein, la batterie est complètement chargée. Si elle est en charge lorsque l'appareil est sous tension, le niveau de batterie en haut de l'écran indique le statut de chargement et le niveau de charge.

• Chargez l'appareil uniquement dans un endroit bien ventilé. Durant le chargement, ne couvrez pas l'appareil avec une couverture, un coussin ou encore ne laissez pas votre enfant s'appuyer dessus. Ne laissez jamais votre enfant dormir avec l'appareil ou sur l'appareil lorsqu'il est en charge.

Nettoyage. Débranchez tous les câbles avant le nettoyage. Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de détergent ou d'autres produits chimiques. Ne trempez jamais l'appareil dans l'eau. Laissez-le sécher complètement avant la réutilisation.

Utilisation des connecteurs et des ports. Ne forcez jamais une clé USB ou autre connecteur dans un port de l'appareil. Si le connecteur ne peut pas être introduit dans le port, vérifiez le connecteur et le port pour s'assurer qu'ils correspondent et sont positionnés correctement et que le port n'est pas obstrué par un objet étranger.

Phénomènes environnementaux. La tablette LEAPFROG™ peut fonctionner de manière incorrecte si elle est soumise à un brouillage de radiofréquence. Elle doit revenir à un fonctionnement normal lorsque le brouillage cesse. Sinon, il peut être nécessaire d'éteindre (OFF) puis de rallumer (ON) la tablette. Dans un cas improbable de décharge électrostatique, l'appareil peut fonctionner de manière incorrecte et perdre de la mémoire; auquel cas, l'utilisateur doit réinitialiser l'appareil en l'éteignant (OFF) puis le rallumant (ON).

Électricité statique et écouteurs. Dans certains environnements secs, de l'électricité statique peut s'accumuler dans les écouteurs et causer une faible décharge statique rapide lorsque les écouteurs sont branchés sur l'appareil.

Pour éviter cette décharge statique, n'utilisez pas l'appareil dans des environnements extrêmement secs ou touchez un objet métallique non peint relié à la terre pour décharger l'électricité statique avant de brancher les écouteurs sur l'appareil.

Ne connectez pas l'appareil à un ordinateur ou sur une prise murale AC s'il est mouillé ou endommagé.

de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Conformité à Industrie Canada Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada. Le terme IC signifie « Industrie Canada » et est suivi du numéro de certification « IC: 1787B-UYT » ce qui signifie que l'équipement répond aux spécifications de la norme Radio RSS-210. Le numéro de certification IC est situé à l'arrière de l'enceinte. CAN ICES-3(B)/NMB-3(B)

Déclaration de conformité de la Communauté Européenne L'appareil est conforme aux exigences en matière d'exposition aux radiofréquences 1999/519/CE, Recommandation du Conseil du 12 juillet 1999 relative à la limitation de l'exposition du public aux champs électromagnétiques (de 0 Hz à 300 GHz). Cet appareil sans fil est conforme à la Directive R&TTE.

Déclaration de conformité de la Communauté Européenne

LeapFrog Enterprises, Inc. déclare que ce produit Wi-Fi est conforme aux règles essentielles requises et autres provisions de la Directive 1999/5/CE.

Garantie : Veuillez visiter notre site web leapfrog.com/legal pour des détails complets de la garantie proposée dans votre pays.

Déclaration de conformité FCC : Cet appareil est conforme à l'article 15 de la FCC (Federal Communications Commission). Son utilisation est soumise aux deux conditions suivantes : 1) Cet appareil ne doit pas causer d'interférences nuisibles. 2) Cet appareil doit tolérer toutes les interférences reçues, y compris les interférences pouvant entraîner un fonctionnement indésirable.

Remarque : Cet équipement a été testé et jugé conforme aux limites de Classe B pour un équipement numérique en vertu de l'article 15 de la réglementation de la FCC. Ces limites ont été instaurées pour fournir une protection raisonnable contre toute interférence nuisible avec les communications radios. Comme ce jouet génère, emploie et peut émettre de l'énergie de fréquence radio, il peut, en cas d'installation ou d'utilisation non conforme au manuel d'instructions, générer des interférences nuisibles aux communications radio. Il est cependant impossible de garantir qu'aucune interférence ne se produira dans une installation particulière. Si ce jouet devait causer des interférences à la réception radio ou télévisée (vous pouvez vérifier cela en l'éteignant puis en le remettant sous tension et en écoutant s'il y a des interférences), une des mesures suivantes peut être utile :

- Réorientez ou déplacez l'antenne réceptrice.
- Augmentez la distance entre le jouet et la radio ou la télévision.
- Consultez le revendeur ou demandez l'aide d'un technicien radio/TV, expérimenté.

Remarque : Des changements ou des modifications de cet appareil qui ne sont pas expressément approuvés par LeapFrog peuvent annuler la conformité EMC et du réseau sans fil et annuler le droit de l'utilisateur à utiliser l'appareil. Cet appareil a démontré une conformité EMC en utilisant des périphériques et des câbles gainés conformes entre les composants du système. Il est important d'utiliser des périphériques et des câbles gainés conformes pour réduire la possibilité de produire un brouillage aux appareils de radio, télévision et autres équipements électroniques.

Instructions importantes de sécurité

⚠️ AVERTISSEMENT : L'adaptateur AC et le câble USB présentent un risque de strangulation. Ne convient pas aux enfants de moins de 3 ans.

⚠️ ATTENTION : Vérifiez régulièrement que la tablette fonctionne de manière correcte et sûre. S'il y a des pièces endommagées ou cassées, par exemple, un écran fracturé ou fissuré (affichage), cessez immédiatement d'utiliser la tablette.

⚠️ ATTENTION : NE PAS MOUILLER. N'utilisez pas la tablette et ses accessoires sous la pluie, près d'un évier ou dans d'autres endroits humides. Faites attention de ne pas renverser de liquides ou de la nourriture sur la tablette ou ses accessoires.

⚠️ ATTENTION : N'essayez pas de sécher la tablette LEAPFROG™ ou ses accessoires avec une source de chaleur externe, telle qu'un micro-ondes ou un sèche-cheveux.

⚠️ ATTENTION : Ne rangez pas ou ne transportez pas la tablette et ses accessoires avec des matières, liquides ou gaz inflammables ou explosifs. N'exposez pas la tablette à un risque d'incendie, d'explosion ou autre danger.

⚠️ ATTENTION : NE PAS RÉPARER OU MODIFIER. La tablette LEAPFROG™ ne contient aucune pièce qui peut être réparée par l'utilisateur. L'entretien doit seulement être effectué par LeapFrog Enterprises, Inc. Si l'appareil a été en contact avec des liquides, percé ou s'il a subi un impact grave ou une chute, cessez immédiatement de l'utiliser et contactez l'assistance clients LeapFrog.

⚠️ ATTENTION : N'utilisez jamais la tablette en faisant du vélo ou en étant sur une machine ou un jeu mécanique.

⚠️ AVERTISSEMENT : Cela est rare mais il existe un risque possible de crises déclenchées par des flashes lumineux. Utilisez l'appareil dans une pièce bien éclairée et faites des pauses de 10 à 15 minutes toutes les heures.

⚠️ PROTÉGEZ LA VUE : Utilisez la tablette dans une pièce bien éclairée ; faites une pause de 20 secondes toutes les 20 minutes et regardez au loin ; faites une pause de 10 à 15 minutes toutes les heures ; ne tenez pas l'écran trop près des yeux. Si vous avez des problèmes de vision, à savoir, une vue brouillée ou des douleurs à l'œil, cessez d'utiliser la tablette et consultez un ophtalmologiste.

⚠️ PROTÉGEZ L'OUÏE : Une exposition à long terme à des volumes sonores élevés, peut entraîner une perte permanente de l'ouïe. Lorsque vous utilisez un casque ou des écouteurs, il est recommandé de régler le son à un niveau bas et d'écouter pendant de courtes périodes. Réglez le volume dans un environnement calme ; baissez le volume si vous ne pouvez pas entendre les gens parler à côté de vous. Limitez le temps d'écoute à 90 minutes, suivi d'une période de calme. Plus le volume est fort, plus

vous ouïe risque d'être affectée rapidement. Si vous avez une sensation de bourdonnement ou de bruit sourd dans les oreilles, cessez l'écoute et faites contrôler votre ouïe.

⚠️ PROTÉGEZ LE CORPS - CONSIDÉRATIONS ERGONOMIQUES : Lorsque vous utilisez une tablette, il est possible que la répétition de certains gestes ou le fait de maintenir une certaine position pendant une longue période de temps peut entraîner une sensation d'inconfort dans les mains, le cou, les épaules ou d'autres parties du corps. Vous pouvez réduire cette sensation d'inconfort et les lésions causées par les gestes répétitifs en utilisant la tablette dans une position confortable et en faisant des pauses de 10 à 15 minutes toutes les heures. Si vous éprouvez une sensation d'inconfort prolongée, cessez l'utilisation et consultez un médecin.

⚠️ ATTENTION : Maintenez l'appareil à une distance d'au moins 15 cm d'un stimulateur cardiaque et autres appareils médicaux similaires qui peuvent être sensibles aux consoles qui contiennent des aimants et émettent des champs électromagnétiques.

Batterie et adaptateur AC

⚠️ AVERTISSEMENT : Conformément aux normes européennes sur l'exposition aux fréquences radio, une séparation minimale de 0 cm doit être maintenue entre la tablette et l'utilisateur, antenne comprise, quand l'utilisateur porte la tablette.

⚠️ AVERTISSEMENT : La batterie au lithium rechargeable ne peut pas être retirée du produit. Pour votre sécurité, n'essayez jamais de retirer la batterie. Pour tout problème d'alimentation ou de batterie, veuillez contacter le service clientèle LeapFrog.

⚠️ ATTENTION : La batterie doit seulement être chargée par des adultes ou des enfants de plus de 8 ans sous l'entière surveillance d'un adulte.

⚠️ ATTENTION : Utilisez seulement l'adaptateur AC fourni avec le produit.

⚠️ AVERTISSEMENT : Ne convient pas à des enfants de moins de 3 ans. L'utilisation incorrecte du transformateur (adaptateur AC) peut entraîner un choc électrique. (Remarque : Le terme « transformateur » est parfois utilisé pour désigner l'adaptateur).

- Le branchement du transformateur sur la prise murale doit seulement être effectué par un adulte ou un enfant de plus de 8 ans.
- Le transformateur n'est pas un jouet et ne doit pas être utilisé comme tel. Son utilisation doit être surveillée par les parents.
- Comme pour tout appareil électrique, des précautions doivent être observées durant la manipulation et l'utilisation pour éviter un choc électrique.
- L'adaptateur d'alimentation peut chauffer durant une utilisation normale. Veillez toujours à maintenir une ventilation adéquate et manipulez l'adaptateur d'alimentation avec précaution.
- Chargez l'appareil uniquement dans un endroit bien ventilé. Durant

LEAPFROG CONFIDENTIAL & PROPRIETARY

	☐ Package	☒ Parent Guide	☐ Other	Fold: N/A	Bleed: .125"
	File: 31576_Narnia_PG_RevA.indd				
	Art#: 810-25122-A		Part#: 605-12267-A		Dieline#: N/A
Flat: 13.75"w x 10"h			Trim: 13.5" w x 9.5"h		Finished: 3.375"w x 4.75"h folded
Fonts: GillSans-BoldCondensed, GillSans-Condensed, WhitneyCondensed-Semibold, WhitneyCondensed-Medium, Univers-LightUltraCondensed, Gotham Black, Gotham Bold, Gotham Book, Gotham Light			K		d5
File Size: 100%		Output Size: 100%		Date: 22MAY15 AD: KL DS:	

Notes: Die line is FPO. Please refer to Agile /BOM for current version.
Please refer to Agile DO C-160 for Parent Guide Fold Schematic and /or paper subst rate for non-packaging items.

History: d1: KL initial Layout 17APR15
D2: KL WEBCENTER EDITS 23APR15
D3: 27APR15 KL Webcenter Edits
D4: Webcenter Edits 28APR15
Collect for output 29APR15 KL
D5: Edits 22MAY15 KL