


SMART TEMP


by **CellAllure**[®]

Instructions / Instrucciones
English / Español

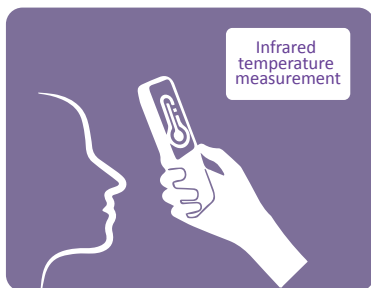




1




- home screen

2



- Long press temperature button for 2-3s

3



- Place the probe in front of forehead 2~5cm
- Press  button for 2~3s

4



- Display temperature

Tip: The phone will vibrate when result exceeds 37°C.

Contents


Keys and components of the phone	3	Clock	8
Insert the SIM card / Memory card	4	Music	8
Basic Information	4	Internet	8
Brief Introduction.....	4	Bookmarks	9
Safety Notice.....	4	Calendar.....	9
Cleaning and Maintaining	5	E-mail	9
Before Using	5	Video.....	9
SIM	5	Note	9
Phone Unlock.....	5	FM Radio	9
SIM Unlock	5	File Manager	9
Function menu Introduction	6	Settings	9
Contacts	6	Personalization.....	10
Call log	6	Privacy&Security.....	10
Messages	7	Storage	10
Camera.....	7	Device	11
Games	7	Google App	11
Utilities.....	7	SIM Application Toolkit	11
Todo	8	Shortcut menu	11
Gallery.....	8	Thermometer.....	11



Warning


**Do not to use the
phone while its charging
in high voltage**

Keys and components of the phone

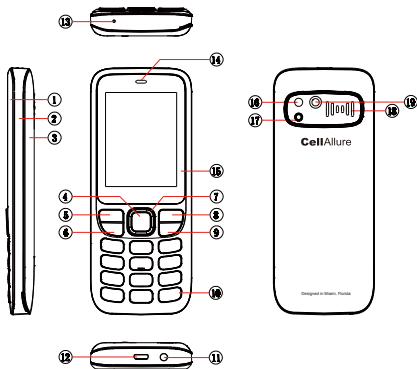

- | | | | |
|----|----------------------------|----|----------------|
| 1 | Front housing | 11 | Earphone port |
| 2 | Back housing | 12 | Micro USB port |
| 3 | Battery cover | 13 | Microphone |
| 4 | OK key | 14 | Receiver |
| 5 | Left function key | 15 | Screen |
| 6 | Answering key | 16 | Rear camera |
| 7 | Scroll key | 17 | LED light |
| 8 | Right function key | 18 | Speaker |
| 9 | Hang up & power on/off key | 19 | Light sense |
| 10 | The number key | | |

Insert the SIM card / Memory card

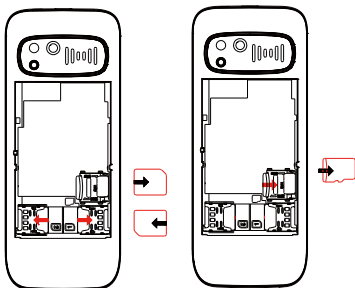

Basic Information

Brief Introduction

Thank you for choosing mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation.

supports two SIM cards function. In addition to basic call functions, but also to provide you with phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card), calculator, calendar etc. A variety of practical features to facilitate your work and leisure activities, in addition, interface with personalized mobile phone design, its perfect functionality to meet your needs.

Our Company reserves without any prior notice the contents of this manual under the right to make changes.

Safety Notice

If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to disable the SIM. This will allow you to take phone calls from other economic loss arising. To make you more secure use of mobile

phones, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Cleaning and Maintaining

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain. Use a soft, dry cloth to clean the phone, battery and charger. Dirt outlet will lead to poor contact, power-down, which does not charge, regular cleaning.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provide by the network provider.

Warning: Be sure to remove the SIM phone off before. There is absolutely prohibited in the case of an external power supply connected to insert or remove the SIM, or SIM card and mobile phone may be damaged.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protected. Use this function, you must enter the phone lock password so that you can unlock the phone into the normal use state.

Enter the phone lock password, press the LSK to confirm. For example, if the phone lock password is set to 1234, then the following input: 1234.

SIM Unlock

In order to prevent illegal use of your SIM with PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use. Enter the PIN password, press the LSK to confirm. For example, if the PIN is set to 1234, then the following input: 1234. If there consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

Contacts

You can use the Contacts to store records, can store the following: name and phone number. In the Contacts list, select a record, to make a call when you press the dial keys. Select a record in the Contacts, you can do the following:

- Edit contacts** Can edit and save record.
- Call** Make a call to the number..
- Send message** Send text message to this number.
- Send email** Send email to this number.
- Share** Share contacts to devices like Bluetooth.
- Delete contacts** Delete the record.
- Move contacts** You can move contacts from SIM to phone/SIM and from phone to SIM.
- Copy contacts** You can copy contacts from SIM to phone/SIM and from phone to SIM.
- Search** You can enter the contact search interface.
- Settings** You can set the storage location, sorting method, import contact, export contact and other operations.

- Preferred storage** Select SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, the phonebook list will only show SIM1 records .
- Set speed dial contacts** Open speed dial. If you long press number keys on the dialing interface, you can call up.
- Set ICE contacts** Add five contacts for making 'In Case of Emergency' calls.
- Create group** You can create contact group with the name you want.
- Block contacts** You can block mobile number or contacts which you don't want to contact.
- Import contacts** You can import contacts from memory card or Gmail or Outlook(Need connect to data network or WiFi).
- Export contacts** You can export contacts to memory card or BT device(Need connect to BT device).

Call log

All calls

Enter the all call menu, will display the all calls list. Please refer to missed calls for details. press the Options key:

- **Call Information**
- **Send message**
- **Edit Call log**

Missed calls

Enter the missed calls menu, will display the missed calls list. Select missed call records, Please refer to All calls for details.

Dialed calls

Enter the dialed calls menu to display the current record of outgoing phone list of phone numbers. press the Options key:

- Call Information
- Send Message
- Create new contact
- Add to existing contact
- Edit Call log

Received calls

Enter the received calls menu to display the current record has been received mobile phone number list. Please refer to Dialed calls for details.

Messages

Make sure that the information in writing before the message center number is set correctly. Access to an information menu, you can edit the SMS message.

New

Edit SMS message contents.

Option

- Delete thread
- Create new contact
- Add to an existing contact
- Select thread
- Search
- Settings

Camera

The phone includes high-definition camera, you can take pictures anytime, anywhere, and to save the photos to your phone or memory card.

State in the preview, press the "Options" key you can do this to conduct a more detailed set of parameters.

Flash: Auto or On and Off.

Resolution: low or Standard and High

Self Timer: Off/3seconds/5seconds/10seconds.

Grid: Off or On.

Gallery: Go to Gallery.

Modes: Photo mode or Video mode,you can also switch between two mode by press Right/Left key at preview screen.

Games

You can find very interesting games in it.(Gems/Birdy/2048/Guardians/Whack a Mole)

Utilities

Calculator

Calculator supports four arithmetic operations such as "+", "-", "x" and "/", and it

also displays the calculation list.

Todo

You can record what you're going to do.

Recorder

In the sound recorder interface press "option", you can send (send the Audio files via Bluetooth), Rename and delete, Save as ringtone, Save to music library, Select Multiple etc. Enter Settings to Set Recording Rate.

New record Start a new record. If you press Done, you can save it. If you press pause and continue to record.

Unit Converter

Unit Converter makes it easier for you to convert many units.

Support list

- length (distance), area, weight (mass), volume (volume), speed, Temperature.

Gallery

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the RSK to enter to "Options" to choose the pictures to do the Delete, Share, Select Multiple, File Info, Lock, Set as Wallpaper, change Storage and check Image information operations. View pictures, by pressing on the left and right navigation buttons to switch pictures.

Clock

Alarm Select and edit an alarm clock: You can set the setting of alarm on / off, Time, Repeat and Alarm tone. You can choose to set to repeat: Once, Everyday, Custom.

Timer You can use the timer to record the duration of an activity by countdown. You can set "Time", "Start", "delete", "stop", "increase" etc.

Stopwatch You can record the duration of an activity with a stopwatch. You can carry out such operations as "Start", "Stop", "Continue", "Record" and "Clear", etc.

Music

You can play local music in the memory card/phone memory..

Internet

With good connection of the network, you can log-in and access to internet browser through this device.

Note: If you can't browse websites, please check whether the network connection or the Browser settings is right.

Search Internet

On Browser page, you can input some website, touch "Go" browser.

Bookmarks

On Browser page, touch Top Sites Bar, select bookmarks which you collect before, and then you can browser the web's content.

History

On the browser page, click the History Bar, click on the page you browsed before, and then you can browse the content of the page.

Calendar

Enter calendar the screen will show a calendar month with the current date marked. Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly. Press the right soft key "Options" option to display the calendar menu.

E-mail

You can receive email, edit and send email to the person you want to send.

Video

You can view and play videos that exist on mobile phones and memory cards. You can also share, delete, select and so on.

Note

You can record something you want to record.

FM Radio

FM interface, press the OK key to turn on / off FM, Press the up and down keys to switch channels. Press the left soft key "Options" can show FM options menu, the contents as follow:

Volume: Press up key and down key to adjust the FM playing volume.

Add to favorites: You can collect the channels you find in your favorites.

Switch to speaker: You can turn the radio into a loudspeaker

File Manager

Into the File manager menu, the menu display Internal and SD Card. Root directory, select "Internal", press the RSK to enter "Options" can be as follows:

-**Copy** Files can be copied to other paths.

-**Select** items You can choose to delete or copy multiple files and folders.

-**Search** You can search faster to find the files you need.

-**Refresh** Memory can be refreshed.

-**Details** Details of files or folders can be queried.

Settings

Network&Connectivity

-**Airplane Mode** Flight mode can be turned on or off.

-**Mobile network&Data** The network and data of SIM card for mobile phone

can be set up.

- WiFi** WiFi can be set and connected.
- Bluetooth** Bluetooth can be set and connected.
- Geolocation** GPS can be turned on or off.
- SIM Manager** You can choose which SIM card to use for default calls or text messages, you can set the SIM card PIN code.
- Calling** You can set up call waiting, call Forwarding, call Barring, fixed dialing Numbers, etc.
- Internet Sharing** Mobile network can be set as a hotspot for other devices.
- Wireless Emergency** You can choose items that require alerts and WEA Ringtone.
- Cell broadcast message** You can set Cell broadcast message setting.

Personalization

- Sound** You can set the volume, ringtone, key tone, etc.
- Display** You can set the Wallpaper, Brightness, Screen Timeout, Auto Keypad Lock, etc.
- Search** You can set the Search Engine, Search Suggestions, etc.
- Notice** You can choose a realistic App notification for the lock screen interface.
- Date&Time** You can set the time, time zone, display format of your area, etc.
- Language** Mobile system language can be set to the language you need.
- Input methods** Mobile input methods can be set to the input methods you need.

Privacy&Security

- Screen Lock** You can set the lock screen password to protect your privacy.
- App Permissions** App permissions that can change mobile phones
- Do Not Track** When you turn on Do Not Track, your phone tells every website and app (as well as advertisers and other content providers) that you do not want your behavior tracked.
- Browsing Privacy** Can clear your browser history and other privacy.
- About KaiOS**

Storage

- Clean Up Storage** You can choose to clear the data of mobile App.
- USB Storage** Enabling USB storage allows another computer or device connected using USB to access files on this phone.
- Default Media Location**
- Media** You can view media files internally and externally Use space.
- Application Data** You can view the space used by App.
- System** You can view the space used by System.

Device

-Device Information You can view the phone model, software version, hardware version, battery power and other information. You can also restore factory settings from this menu.

-Accessibility Accessibility can be set up, about display, sound, Hearing Aid Compatibility(HAC) etc.

Account

-KaiOS Account Keep your information safe with a KaiOS account. If you ever lose your phone your KaiOS account will allow you to remotely lock or wipe all the data on your phone.

-Anti-Theft

Google App

Assistant/Maps/YouTube/Google Duo/WhatsApp and Facebook applications are built into the mobile phone for you to use to bring you a better experience.

In addition, the news / kaiweather / astrolo / QR Reader / Memory Cleaner / SMS menu application makes it more convenient for you to use.

Store

You can download the application you need in the store and install and uninstall it.

SIM Application Toolkit

It contains a series of interactive instructions between mobile phone and SIM card. SIM card can run small applications in the card to interact with mobile phone and users, so as to realize value-added services for you.

Shortcut menu

The home interface can call up the shortcut menu by pressing the key. Clicking on the menu icon can turn on the flashlight, adjust the brightness of the screen, switch the flight mode, switch the data flow of WiFi and SIM cards, and Bluetooth. Select the volume icon and press the left and right buttons to adjust the volume of the mobile phone.

Thermometer

Enter the thermometer, align the temperature sensor on the top of the phone with your forehead or palm, and click Start to test your body temperature. Long press the temperature key on the idle interface to quickly enter the temperature measurement interface.

WARNING:

Factory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

SPECIFICATIONS

CPU/PCB solution:	MTK6572
Display:	2.4"
SIM card support:	Dual SIM
Memory:	512MB
Storage:	4GB
GSM:	850/900/1800/1900MHz
WCDMA:	850/1700/1900MHz
Wi-Fi:	Yes
Rear camera:	0.3MP
Bluetooth:	Yes
GPS:	Yes
SD card support:	Up to 32GB
Charger:	Telephone 3.7V Input: 100-240V 50/60 Hz, 0.15A Output: DC 5.0V ca 500mA
USB:	Micro USB
Audio jack:	3.5mm jack
Battery capacity (mAh):	1700mAh Li-ion battery
Supplied accessories:	1 Handset, 1 True wireless mini BT earbuds, 1 Battery, 1 Charger, 1 User manual, 1 Warranty card.
OS:	KAI OS
Other:	FM radio, Flashlight.

Images used are for illustration purposes only and may differ from actual product. Restrictions Apply.

Thank you for your purchase of the CellAllure® SMART TEMP phone.

FCC Warning

Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.0cm from the body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Contents


Teclas y componentes del teléfono	Galería	22
.....17	Reloj	22
Insertar la tarjeta SIM / Tarjeta de memoria	Música	22
.....18	Internet	22
Información Básica	Marcadores	22
.....18	Calendario	23
Introducción rápida	Correo electrónico.....	23
.....18	Video	23
Limpieza y Mantenimiento.....	Notas	23
.....19	Radio FM	23
Antes de usar	Administrador de archivos	23
.....19	Configuración	23
Tarjeta SIM	Personalización.....	24
.....19	Privacidad y Seguridad	24
Desbloqueo del teléfono	Almacenamiento	24
.....19	Dispositivo	25
Desbloqueo por SIM.....	Aplicaciones Google	25
.....19	Kit de herramientas de aplicación	
Introducción al funcionamiento del menú	SIM	25
.....20	Atajos de menú	25
Contactos	Termómetro	25
.....20		
Registro de llamada		
.....20		
Mensajes		
.....21		
Cámara		
.....21		
Juegos.....		
.....21		
Utilidades		
.....21		
Tareas		
.....22		



Warning

**Do not to use the
phone while its charging
in high voltage**


Teclas y componentes del teléfono

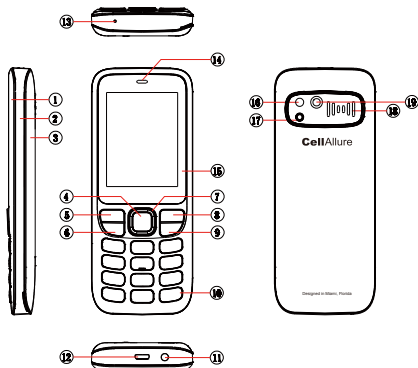

- 1 Carcasa delantera
- 2 Carcasa trasera
- 3 Tapa de la batería
- 4 Tecla OK
- 5 Tecla de función izquierda
- 6 Tecla de respuesta
- 7 Tecla de desplazamiento
- 8 Tecla de función derecha
- 9 Tecla de colgar, encender/apagar
- 10 Tecla numérica

- 11 Puerto para auriculares
- 12 Puerto Micro USB
- 13 Micrófono
- 14 Receptor
- 15 Pantalla
- 16 Cámara trasera
- 17 Luz LED
- 18 Altavoz
- 19 Sensor de luz

Insertar la tarjeta SIM / Tarjeta de memoria

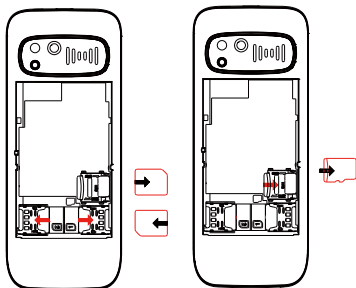

Información básica

Introducción rápida

Gracias por elegir este teléfono móvil. Puede leer el manual, una lectura completa del uso de teléfonos móviles y disfrutar de su perfecta funcionalidad y forma simple de operación, admite la función de dos tarjetas SIM. Además de las funciones de llamada básicas, pero también para proporcionarle directorio telefónico, tonos de llamada personalizados, alarma, cámara, visor de imágenes, grabadora de video, reproductor de video, reproductor de audio, FM, una tarjeta de memoria (Micro SD), calculadora, calendario etc. Una variedad de funciones prácticas para facilitar sus actividades laborales y de ocio, además, interfaz con diseño de teléfono móvil personalizado, su funcionalidad perfecta para satisfacer sus necesidades.

Nuestra Compañía se reserva sin previo aviso el contenido de este manual bajo el derecho a realizar cambios.

Aviso de seguridad

Si pierde o le roban su teléfono, notifique inmediatamente al sector de telecomunicaciones, o proveedor de servicios, para desactivar la SIM. Esto le permitirá recibir llamadas telefónicas de otras pérdidas económicas que surjan.

Para hacer un uso más seguro de los teléfonos móviles, tome medidas de precaución, como:

- Configure la contraseña del PIN de la tarjeta SIM del teléfono móvil, la contraseña del PIN para evitar que otros usuarios no autoricen el uso de su SIM.

Limpieza y Mantenimiento

No utilice el baño donde haya mucha humedad, celular, batería y cargador, el mismo también debe evitar la lluvia. Utilice un paño suave y seco para limpiar el teléfono, la batería y el cargador. La salida de suciedad provocará un contacto deficiente, apagado, que no se carga, limpieza regular.

Antes de usar

Tarjeta SIM

Antes de usar su teléfono, debe insertar una tarjeta SIM (Módulo de identidad del suscriptor) válida. Tarjeta SIM proporcionada por el proveedor de red.

Advertencia: asegúrese de quitar el teléfono SIM antes. Está absolutamente prohibido en el caso de una fuente de alimentación externa conectada para insertar o quitar la SIM, o la tarjeta SIM y el teléfono móvil pueden resultar dañados.

Desbloqueo del teléfono

Para evitar el uso ilegal, su teléfono puede configurar la contraseña de bloqueo del teléfono protegida. Use esta función, debe ingresar la contraseña de bloqueo del teléfono para que pueda desbloquear el teléfono en el estado de uso normal.

Ingrese la contraseña de bloqueo del teléfono, presione la TSI para confirmar. Por ejemplo, si la contraseña de bloqueo del teléfono está configurada en 1234, entonces la siguiente entrada: 1234.

Desbloqueo por SIM

Para evitar el uso ilegal de su SIM con protección de cifrado de contraseña PIN (Número de identificación personal). Utilice esta función, si ha configurado la protección con contraseña de PIN, cada vez que debe ingresar la contraseña de PIN en el momento del arranque, para que pueda desbloquear la tarjeta SIM y el teléfono para un uso normal. Ingrese la contraseña PIN, presione la LSK para confirmar. Por ejemplo, si el PIN está configurado en 1234, entonces la siguiente entrada: 1234. Si hay un error consecutivo, su SIM se bloqueará en la red, el teléfono le pedirá la contraseña PUK.

Introducción al funcionamiento del menú

Contactos

Puede utilizar los contactos para almacenar registros, puede almacenar lo siguiente: nombre y número de teléfono. En la lista de contactos, seleccione un registro, para hacer una llamada cuando presione las teclas de marcación. Seleccione un registro en los contactos, puede hacer lo siguiente:

- Editar contactos Puede editar y guardar registros.
- Llamada Realiza una llamada al número.
- Enviar mensaje Envía un mensaje de texto a este número.
- Enviar correo electrónico Enviar correo electrónico a este número.
- Compartir Comparte contactos con dispositivos como Bluetooth.
- Eliminar contactos Elimina el registro.
- Mover contactos Puede mover contactos de SIM a teléfono / SIM y de teléfono a SIM.
- Copia de contactos Puede copiar contactos de la SIM al teléfono / SIM y del teléfono a la SIM.
- Búsqueda Puede ingresar a la interfaz de búsqueda de contactos.
- Configuraciones Puede configurar la ubicación de almacenamiento, el método de clasificación, el contacto de importación, el contacto de exportación y otras operaciones.

-Almacenamiento preferido Seleccione SIM1, SIM2, Teléfono y Todo para cambiar, y la lista de la agenda cambiará en consecuencia, como seleccione SIM1, la lista de la agenda solo mostrará los registros de la SIM1.

-Establecer contactos de marcación rápida Abrir marcación rápida. Si mantiene presionadas las teclas numéricas en la interfaz de marcación, puede llamar.

-Establecer contactos ICE Agregue cinco contactos para hacer llamadas "En caso de emergencia".

-Crear grupo Puedes crear un grupo de contactos con el nombre que quieras.

-Bloquear contactos Puede bloquear números móviles o contactos que no desee contactar.

-Importar contactos Puede importar contactos desde la tarjeta de memoria o Gmail o Outlook (necesita conectarse a la red de datos o WiFi).

-Exportar contactos Puede exportar contactos a la tarjeta de memoria o dispositivo BT (necesita conectarse al dispositivo BT).

Registro de llamadas

Todas las llamadas

Ingrese al menú de todas las llamadas, se mostrará la lista de todas las llamadas.

Para obtener más detalles, consulte las llamadas perdidas. Presione la tecla

Opciones:

- Información de llamada
- Enviar mensaje
- Editar registro de llamadas perdidas

Ingrese al menú de llamadas perdidas, mostrará la lista de llamadas perdidas.

Seleccione los registros de llamadas perdidas. Consulte Todas las llamadas para obtener más detalles.

Llamadas realizadas

Ingresa al menú de llamadas realizadas para mostrar el registro actual de la lista de teléfonos salientes de números de teléfono. Presione la tecla Opciones:

- Información de llamada
- Enviar mensaje
- Crear nuevo contacto
- Agregar a un contacto existente
- Editar registro de llamadas recibidas

Ingresa al menú de llamadas recibidas para mostrar el registro actual que se ha recibido la lista de números de teléfono móvil. Consulte llamadas realizadas para obtener más detalles..

Mensajes

Asegúrese de que la información por escrito antes del número del centro de mensajes esté configurada correctamente. Accede a un menú de información, puedes editar el mensaje SMS.

Nuevo

Edite el contenido de los mensajes SMS.

Opción

- Eliminar hilo
- Crear nuevo contacto
- Añadir a un contacto existente
- Seleccionar hilo
- Buscar
- Configuraciones

Cámara

El teléfono incluye una cámara de alta definición, puede tomar fotografías en cualquier momento y en cualquier lugar, y guardar las fotografías en su teléfono o tarjeta de memoria.

Estado en la vista previa, presione la tecla "Opciones" puede hacer esto para realizar un conjunto de parámetros más detallado.

Flash: Automático o Encendido y Apagado.

Resolución: baja o estándar y alta

Temporizador automático: 0 ff / 3 segundos / 5 segundos / 10 segundos.

Cuadrícula: 0 ff o Encendido.

Galería: vaya a Galería.

Modos: modo de foto o modo de video, también puede cambiar entre dos modos presionando la tecla Derecha / Izquierda en la pantalla de vista previa.

Juegos

Puedes encontrar juegos muy interesantes en él (Gems / Birdy / 2048 / Guardians / Whack a Mole)

Utilidades

Calculadora

La calculadora admite cuatro operaciones aritméticas como "+", "-", "x" y "/", y también muestra la lista de cálculos.

Tareas

Puedes grabar lo que vas a hacer. Grabadora

En la interfaz de la grabadora de sonido, presione "opción", puede enviar (enviar los archivos de audio a través de Bluetooth), cambiar el nombre y eliminar, guardar como tono de llamada, guardar en la biblioteca de música, Selest Multiple, etc. Ingrese la configuración para establecer la velocidad de grabación. Nuevo registro Iniciar un nuevo registro. Si presiona Listo, puede guardarlo. Si presiona pausa y continúa grabando.

Convertidor de unidades

Unit Converter facilita la conversión de muchas unidades. Lista de soporte - longitud (distancia), área, peso (masa), volumen (volume), velocidad, temperatura.

Galería

Seleccione un submenú de álbum, puede ver fácilmente almacenado en la lista de imágenes del álbum de la cámara y presione RSK para ingresar a "Opciones" para elegir las imágenes para eliminar, compartir, seleccionar varios, información de archivo, bloquear, establecer como Fondo de pantalla, cambio de almacenamiento y verificación de operaciones de información de imagen. Vea imágenes, presionando los botones de navegación izquierdo y derecho para cambiar de imagen.

Reloj

Alarma Seleccione y edite un reloj de alarma: puede establecer la configuración de activación / desactivación de alarma, hora, repetición y tono de alarma.

Puede elegir configurar la repetición: Una vez, Todos los días, Personalizado.

Temporizador Puede utilizar el temporizador para registrar la duración de una actividad mediante una cuenta atrás. Puede configurar "Hora", "Iniciar", "eliminar", "detener", "aumentar", etc.

Cronómetro Puede registrar la duración de una actividad con un cronómetro. Puede realizar operaciones como "Iniciar", "Detener", "Continuar", "Grabar" y "Borrar", etc.

Música

Puede reproducir música local en la tarjeta de memoria / memoria del teléfono.

Internet

Con una buena conexión de la red, puede iniciar sesión y acceder al navegador de Internet a través de este dispositivo.

Nota: Si no puede navegar por sitios web, verifique si la conexión de red o la configuración del navegador son correctas.

Buscar en Internet En la página del navegador, puede ingresar algún sitio web, toque "Ir" al navegador.

Marcadores

En la página del navegador, toque la barra de sitios principales, seleccione los marcadores que haya recopilado antes y, a continuación, podrá navegar por el

contenido de la web.

Historial

En la página del navegador, haga clic en la barra de historial, haga clic en la página que navegó antes y luego podrá examinar el contenido de la página.

Calendario

Ingresa al calendario, la pantalla mostrará un mes calendario con la fecha actual marcada. Presione las teclas de navegación hacia arriba, abajo, izquierda y derecha para cambiar la fecha; la información del calendario en la pantalla se actualizará en consecuencia. Presione la opción "Opciones" de la tecla suave derecha para mostrar el menú del calendario.

Correo Electrónico

Puede recibir correos electrónicos, editarlos y enviarlos a la persona que desea enviar.

Video

Puede ver y reproducir videos que existen en teléfonos móviles y tarjetas de memoria. También puede compartir, eliminar, seleccionar, etc.

Notas

Puede grabar algo que desee grabar.

Radio FM

Interfaz FM, presione la tecla OK para encender / apagar ff FM, presione las teclas arriba y abajo para cambiar de canal. Presione la tecla suave izquierda "Opciones" para mostrar el menú de opciones de FM, el contenido de la siguiente manera:

Volumen: presione la tecla arriba y abajo para ajustar el volumen de reproducción de FM.

Agregar a favoritos: puede recopilar los canales que encuentre en sus favoritos.

Cambiar a altavoz: puede convertir la radio en un altavoz

Administrador de archivos

En el menú Administrador de archivos, el menú muestra Tarjeta interna y SD. Raíz

directorio, seleccione "Interno", presione RSK para ingresar "Opciones" puede ser de la siguiente manera:

-**Copiar archivos** se pueden copiar a otras rutas.

-**Seleccionar elementos** Puede elegir eliminar o copiar varios archivos y carpetas.

-**Buscar** Puede buscar más rápido para encontrar los archivos que necesita.

-**Refresh Memory** se puede actualizar.

-**Detalles** Se pueden consultar detalles de archivos o carpetas.

Configuración

Red y conectividad

- Modo de avión** El modo de vuelo se puede activar o desactivar.
- Red móvil y datos** La red y datos de la tarjeta SIM para teléfono móvil se pueden configurar.
- WiFi** WiFi se puede configurar y conectar.
- Bluetooth** Bluetooth se puede configurar y conectar.
- El GPS** de geolocalización se puede encender o apagar.
- SIM Manager** Puede elegir qué tarjeta SIM usar para llamadas o mensajes de texto predeterminados, puede configurar el código PIN de la tarjeta SIM.
- Llamadas** Puede configurar llamada en espera, desvío de llamadas, restricción de llamadas, marcación fija
Números, etc.
- La red móvil** para compartir Internet se puede configurar como un punto de acceso para otros dispositivos.
- Emergencia inalámbrica** Puede elegir elementos que requieran alertas y WEA Tono de llamada.
- Mensaje de difusión celular** Puede establecer la configuración del mensaje de difusión celular.

Personalización

- Sonido** Puede configurar el volumen, tono de llamada, tono de tecla, etc.
- Pantalla** Puede configurar el fondo de pantalla, el brillo, el tiempo de espera de la pantalla, el bloqueo automático del teclado, etc.
- Buscar** Puede configurar el motor de búsqueda, sugerencias de búsqueda, etc.
- Aviso** Puede elegir una notificación de aplicación realista para la interfaz de la pantalla de bloqueo.
- Fecha y hora** Puede configurar la hora, la zona horaria, el formato de visualización de su área, etc.
- Idioma** El idioma del sistema se puede configurar en el idioma que necesita.
- Métodos de entrada** Los métodos de entrada móviles se pueden configurar según los métodos de entrada que necesite.

Privacidad y Seguridad

- Bloqueo de pantalla** Puede configurar la contraseña de la pantalla de bloqueo para proteger su privacidad.
- Permisos de aplicaciones** Permisos de aplicaciones que pueden cambiar teléfonos móviles
- No rastrear** Cuando activa No rastrear, su teléfono le dice a todos los sitios web y aplicaciones (así como a los anunciantes y otros proveedores de contenido) que no desea que se rastree su comportamiento.
- Privacidad de navegación** Puede borrar el historial de su navegador y otra privacidad.
- Acerca de KaiOS**

Almacenamiento

- Limpiar el almacenamiento** Puede elegir borrar los datos de la aplicación móvil.
- Almacenamiento USB** Habilitar el almacenamiento USB permite otra computadora o dispositivo conectado mediante USB para acceder a archivos en

este teléfono.

-Ubicación de medios predeterminada

-Medios Puede ver archivos multimedia interna y externamente. Utilizar espacio.

-Datos de la aplicación Puede ver el espacio utilizado por la aplicación.

-Sistema Puede ver el espacio utilizado por Sistema.

Dispositivo

-Información del dispositivo Puede ver el modelo del teléfono, la versión del software, la versión del hardware, la carga de la batería y otra información.

También puede restaurar la configuración de fábrica desde este menú.

-Accesibilidad Se puede configurar la accesibilidad sobre la pantalla, el sonido, la compatibilidad con audífonos (HAC), etc.

Cuenta

-Cuenta KaiOS Mantenga su información segura con una cuenta KaiOS. Si alguna vez pierde su teléfono, su cuenta de KaiOS le permitirá bloquear o borrar de forma remota todos los datos de su teléfono.

-Anti-robo

Aplicaciones de Google

Las aplicaciones Asistente / Mapas / YouTube / Google Duo / WhatsApp y Facebook están integradas en el teléfono móvil para que las use para brindarle una mejor experiencia.

Además, la aplicación de menú news / kaiweather / astrolo / QR Reader / Memory Cleaner / SMS hace que su uso sea más conveniente.

Tienda

Puede descargar la aplicación que necesita en la tienda e instalarla y desinstalarla.

Kit de herramientas de aplicación SIM

Contiene una serie de instrucciones interactivas entre el teléfono móvil y la tarjeta SIM. La tarjeta SIM puede ejecutar pequeñas aplicaciones en la tarjeta para interactuar con el teléfono móvil y los usuarios, a fin de realizar servicios de valor agregado para usted.

Atajos del menú

La interfaz de inicio puede abrir el menú contextual presionando la tecla. Al hacer clic en el ícono del menú se puede encender la luz del flash, ajustar el brillo de la pantalla, cambiar el modo de vuelo, cambiar el flujo de datos de las tarjetas WiFi y SIM y Bluetooth. Seleccione el icono de volumen y presione los botones izquierdo y derecho para ajustar el volumen del teléfono móvil.

Termómetro

Ingrese el termómetro, alinee el sensor de temperatura en la parte superior del teléfono con su frente o palma, y haga clic en Iniciar para probar la temperatura de su cuerpo.

Mantenga presionada la tecla de temperatura en la interfaz inactiva para ingresar rápidamente a la interfaz de medición de temperatura.

ADVERTENCIA:

La Restauración de Ajustes de Fábrica borrará toda tu información, así como la configuración del sistema y las aplicaciones descargadas. Por favor utiliza ésta función cuidadosamente.

ESPECIFICACIONES

CPU/Procesador:	MTK6572
Pantalla:	2.4"
SIM Card compatible:	Dual SIM
Memoria:	512 MB
Almacenamiento	4 GB
GSM:	850/900/1800/1900 MHz
WCDMA:	850/1700/1900 MHz
Wi-Fi:	Sí
Cámara Trasera:	0.3 MP
Bluetooth:	Sí
GPS:	Yes
Tarjeta SD compatible:	Hasta 32 GB
Cargador:	Teléfono 3.7 V Input: 100-240V 50/60 Hz, 0.15A Output: DC 5.0V ca 500 mA
USB:	Micro USB
Conector de Audio:	Conector 3.5 mm
Capacidad de Batería (mAh):	Batería de Li-ion1400 mAh
Accesorios incluidos:	1 Teléfono, 1 Verdaderos mini auriculares inalámbricos BT, 1 Batería, 1 Cargador, 1 Manual de Usuario, 1 Tarjeta de Garantía
Sistema Operativo:	Kai OS
Otros:	Radio FM, Linterna

La operación de este equipo está sujeta a las siguientes dos condiciones:

- 1.Es posible que este equipo o dispositivo no cause interferencia perjudicial.
- 2.Este equipo o dispositivo debe aceptar cualquier interferencia. Incluyendo la que pueda causar su operación no deseada.

Las imágenes utilizadas son solo para fines ilustrativos y pueden diferir del producto real. Se aplican restricciones.

Gracias por la compra de un celular CellAllure® SMART TEMP.

Advertencia FCC

Información de tasa de absorción específica (SAR)
Pruebas SAR se llevan a cabo utilizando posiciones de operación estándar aceptado por la FCC con el teléfono transmitiendo en su El nivel de potencia más alto certificado en todas las frecuencias probadas bandas, aunque el SAR se determina en el más alto nivel de potencia certificado, el nivel de SAR real del teléfono mientras opera puede estar muy por debajo del valor máximo, en general, cuanto más cerca esté de una estación base inalámbrica antena, cuanto menor sea la potencia de salida. Antes de una nueva El modelo de teléfono está disponible para la venta al público, debe ser probado y certificado a la FCC que no exceder el límite de exposición establecido por la FCC, Las pruebas para cada teléfono se realizan en posiciones y ubicaciones (por ejemplo, en la oreja y usadas en el cuerpo) como requerido por la FCC. Para la operación en el cuerpo, este teléfono móvil ha sido probado y cumple con las pautas de exposición a RF de la FCC cuando se usa con un accesorio designado para este producto o cuando se usa con un accesorio que contiene sin metal y eso posiciona el teléfono un mínimo de 1.0cm del cuerpo. Este dispositivo cumple con la parte 15 de las Reglas de la FCC. La operación está sujeta a las siguientes dos condiciones:

- (1) Este dispositivo no puede causar interferencias perjudiciales y
- (2) este dispositivo debe aceptar cualquier interferencia recibida, incluida la interferencia que puede causar

operación obstaculizada. Cualquier cambio o modificación no expresamente aprobada por la parte responsable del cumplimiento podría anular la autoridad del usuario para operar el equipo.

Nota: Este equipo ha sido probado y encontrado cumplir con los límites para un dispositivo Clase B digital de conformidad con la parte 15 de las Reglas de la FCC. Estos límites son diseñados para proporcionar protección razonable contra interferencia perjudicial en una instalación residencial. Este el equipo genera usos y puede irradiar radio energía de frecuencia y, si no se instala y utiliza en de acuerdo con las instrucciones, puede causar daños interferencia a las comunicaciones de radio. Sin embargo, hay no hay garantía de que no se produzcan interferencias en un Instalación particular. Si este equipo causa interferencia perjudicial para la recepción de radio o televisión, que se puede determinar apagando el equipo y en adelante, se alienta al usuario a intentar corregir la interferencia por una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumente la separación entre el equipo y receptor.
- Conecte el equipo a una toma de corriente en un circuito diferente de aquel al que está conectado el receptor.
- Consulte al distribuidor o una radio / TV con experiencia Técnico de ayuda.

SMART TEMP

by **CellAllure**[®]

www.cellallure.com



CellAllure
CellAllureMX




CellAllure



CellAllure
CellAllureMX



CellAllure

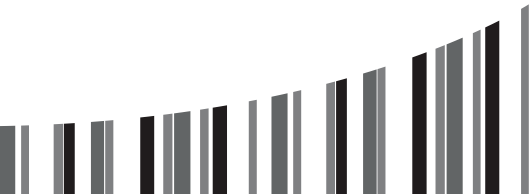

FCC compliance statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Changes or modifications to this product not authorized by GNJ Manufacturing Inc. could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

SAR Statement:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Smart Temp (FCC ID: 2AAE9CAPHG64) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that

do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.