

Buffalo Pro U6 Projector

CONTENTS

YABER Lifetime Professional Support	02
TIPS	02
PACKAGE LIS	03
PROJECTOR SPECIFICATIONS	03
PROJECTOR OVERVIEW	04
REMOTE CONTOL	06
INSTALLATION	07
1.Installation Method	07
2.Install on the Ceiling	08
STARTING PROJECTORR	09
IMAGEADJUSTMENT	09
1.Focus Adjustment	09
2.Digital 4D Keystone Correction	10
SETTING UP THE PROJECTOR	10
1.Select The Input Signal Source	10
2.USB Disk Input Mode	11
3.WiFi Setting	13
3.1.iOS Cast(for iOS Devices)	14
3.2.Miracast(for Android Devices)	15
4.Bluetooth Setting	16
5.Projector Image Setting	16
5.1.Projection Mode	16
5.2.Keystone Advanced & 4-PointKeystone	17
5.3.Digital Zoom	19
6.System Update	19
7.Other Setting	20
8.About	21
SIGNAL LINES CONNECTION	21
1.Connect USB Disk	21
2.Connect the Devicesvia the HDMI ports	21
3.Connect to the DVD Player	22
4.Connect to the Soundbar/Speaker	22
SAFE SHUTDOWN	22
WARRANTY	22
TROUBLESHOOTING	23
FCC STATEMENT	24
FCC Radiation Exposure Statement	24
WARRANTY AND SERVICE	24

YABER Lifetime Professional Support

Dear customer,

Thank you very much for supporting YABER!

Please read this manual thoroughly before using the projector. If you have any issues, email your order number and the problem to aftersales@yabertech.com. We will provide a fast solution in 24 hours.

Actually, many problems can be easily solved by setting, such as no signal, no sound, bluetooth connection failed, WiFi connection failed, dark spots, choppy animation etc. We promise all the projectors have been 100% carefully checked and packaged before shipping.

If you have any questions, could you please contact us so that the problem can be solved. And give us an opportunity to improve. We guarantee we will provide you a satisfactory solution.

Thanks for your understanding!
YABER Service Team

TIPS:

1. Do not place projector in too warm or too cold room, because the high temperature or low temperature will shorten lifespan of the device. The working environment would be 5°C~35°C better.
2. If there are black spots on the projection screen, please don't worry, please contact aftersales@yabertech.com via email, we can send you a video about how to remove the dust.
3. The ventilation is equipped for the projector to work stably. Don't cover the vent with cloth, blanket or other things. Don't insert anything into the slit of the projector, or it may produce a short circuit or an electric shock to your device and cause damage.
4. The projector shall be strictly protected from strong impact, extrusion and vibration. Do not try to move and on strong impact, extrusion and vibration. Do not try to move and the internal circuit faults.
5. Lens, as the core component of the projector, is directly related to the picture definition and effect. The excessive dust thereon will affect image quality. The dirty lens shall be wiped with soft cotton cloth for the glass lens surface. Hard cloth or abrasives shall not be used.


PACKAGE LIST

YABER Pro U6 Projector*1	Remote Control*1	Power Cord*1
HDMI Cable*1	3-in-1 AV Cable	Lens Cover*1
Cleaning Cloth*1	User Manual*1	


PROJECTOR SPECIFICATIONS

Model No. Buffalo Pro U6			
Native Resolution	1920*1080P	Keystone Correction	Manual Vertical & Horizontal
Display Technology	LCD	Light Source	LED
Color Game	16.7M Full	Aspect Ratio	4:3/16:9
Recommended Projection Distance	8.8-10.8ft	Minimum Projection Distance	5.5ft
Power Voltage	AC100-240V	Projector Weight	4.7lb
Picture File	JPG/JPEG/ BMP/PNG	Interfaces	HDMI*2/USB*2/3.5mm Headphone jack/AV
Projection Method	Front/Rear on Desk, Front/ Rear on Ceiling		
Video File	3GP/AVI/FLV/MP4/MPG/VOB/TS/M2TS/DAT/MKV		
Audio File	MP3/APE/AAC/FLAC/OGG/WAV/WMA/MID/DTS/M4A		

PROJECTOR OVERVIEW

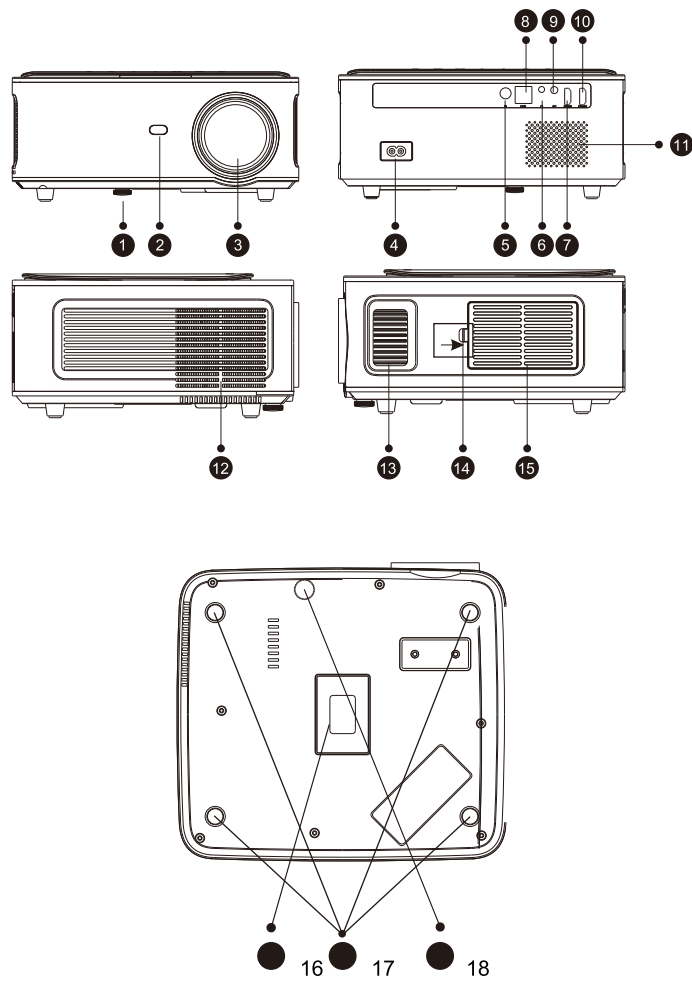


1/18	Height Adjustment Screw	Adjust the height of the projector
2/5	IR Window	Infrared signal receiver
3	Projector lens	Optical coated glass lens
4	Power Cord Port	Power Cord Port
6	Headphone Jack	3.5mm Headphone Output
7/10	HDMI Ports	HDMI 1 input / HDMI 2 input
8	USB Ports	USB 1 port / USB 2 port
9	AV Por	Audio input
11	Speakers	Speakers stereo 5w
12	Vents	Prevent the projector from overheating
13	Focus Ring	Adjust the focus ring to get the clearest image
14	Detachable Dust Filter Switch	Push the switch from the right to open the detachable dust filter
15	Detachable Dust Filter	Clean the dust (if the screen has a black spot)
16	Bottom label	Nameplate on the bottom of the projector
17	Rubber Pads	Protective pads/remove to install ceiling mount

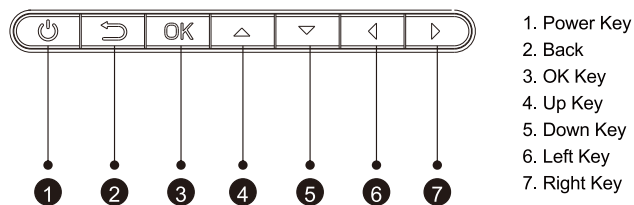

1	Power	Turn on/off the power
2	Back	Return to the previous menu
3	OK	Confirm the option
4/5/6/7	Arrow Keys	Used to adjust the parameter of the projector in the menu mode

REMOTE CONTOL

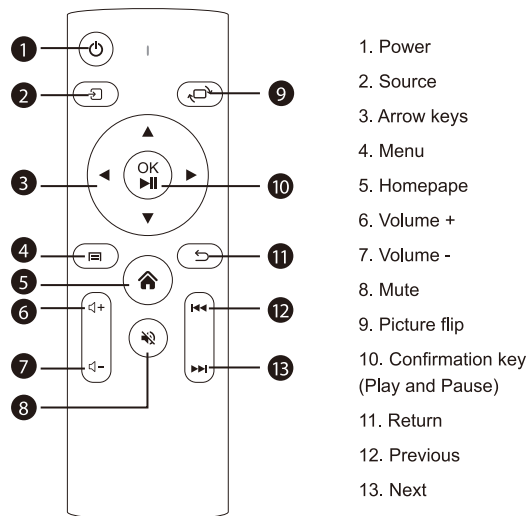

1		Turn on/off the power
2		Select the input signal source
3		Used to adjust the parameter of the projector in the menu mode
4		Press once: Back to the menu interface Press twice in succession: select 16:9/4:3 projection
5		screen ratio
6		Enter the home page
7		Volume up
8		Volume down
9		Close the sound
10		Picture flips
11		Confirm the option/Play or pause the video
12		Return to the previous menu
13		Switch to the previous video


Note:

- 1).Install 2 pieces of AAA batteries into the remote before using it. Do not combine new batteries with old ones in remote controller, which can cause operation failure due to insufficient power supply.
- 2).When using the remote controller, please make sure that the signal transmitter of the remote controller aims at infrared signal receiver of the projector.
- 3).If you are not using the remote controller for an extended period, please take out batteries to prevent batteries leakage.

INSTALLATION

1.Installation Method

The projector can be hanged on the ceiling with special hanger frame, and placed on the stable desk to project the image according to the operating environment and requirements. In addition, the projector can be installed with following methods:

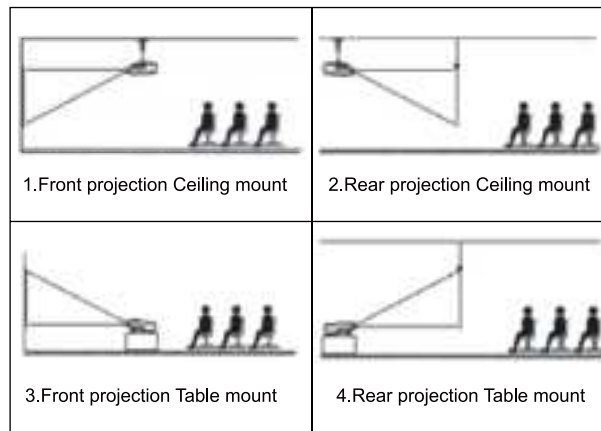

Keep the projector at a height where its lens is axial symmetry to the screen. If this is not possible, use the keystone correction function to adjust the projection image.


If you want to get a free projection screen, please contact us via aftersales@yabertech.com

Aspect Ratio: 16:9	
Distance (ft.)	Screen Size
5.50	50"
7.80	70"
10.8	100"
13.0	120"
16.4	150"

The recommended projection distance is about 10.8ft, the shortest projection distance is 5.5ft.

The image size depends on the distance between projector and screen, there may be 3% deviation among above listed data. Different settings cause various distances.

2. Install on the Ceiling

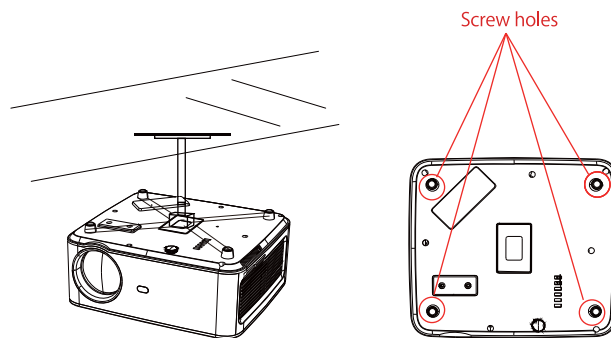

- A. Please purchase an universal projector ceiling mount;
- B. Remove the four rubber pads on the bottom of the projector, you will see the screw holes and use the M5*11mm screws for installing the ceiling, and then install it.

STARTING PROJECTOR


- 1) Press the power key on the remote or projector, the indicator light will turn blue;
- 2) Adjust the focus ring on the left side of the projector to get the best image performance; (If it is still blurry, please try to adjust the projection distance.)
- 3) Use the 4D keystone function of the projector to get a rectangle projection screen;
- 4) Connect the external device (Smart phone, iPad, Amazon Fire TV, TV box, DVD player, Computer, etc.) in the corresponding interfaces of the projector, please be sure to select the corresponding source. If you do not select the correct source, the projector will not be able to detect the signal;.
- 5) Select the " ⚙️ " menu, enter the [Other Setting], then you can select the option [Language Setting] to set your preferred language.

IMAGE ADJUSTMENT

When using the projector for the first time, it normally displays an unclear image. This is due to the lens being out of focus or the incorrect trapezoid setting.

Please follow the below steps to correct:

1. Focus Adjustment

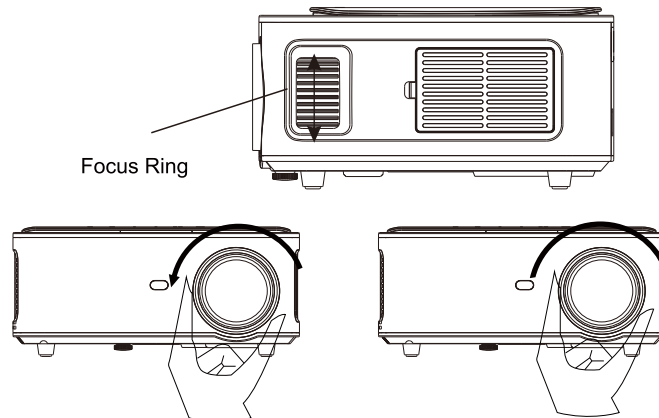



Rotate the focus ring or lens slowly. At the same time, check the focus point carefully. The best focus point for the lens would be where the image most clear.


Note: If it is still blurry, please try to adjust the projection distance.

2.Digital 4D Keystone Correction.

Use the digital 4d keystone correction of the projector to change the image to be rectangle(vertical and horizontal). Detail please refer the page 16 of this manual.

SETTING UP THE PROJECTOR

The projector's home page is as follow.

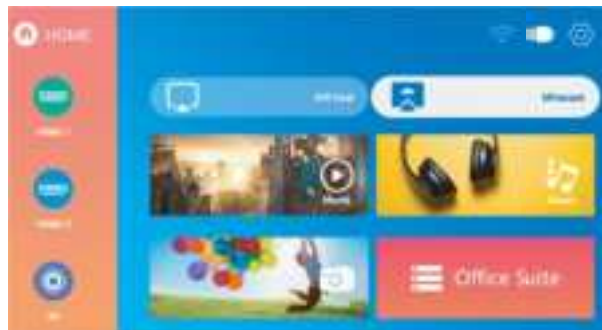

1.Select The Input Signal Sourcei

Select the desired input signal source (HDMI1/HDMI2/AV) on the home-page

2.USB Disk Input Mode

2.1.Play Movie/Music/Photo/Office Suite in the USB Disk Input Mode

- 1).Input the USB Disk, select [USB] on the homepage and enter;
- 2).Select the option [Movie/Music/Photo/Office Suite]
- 3).Select the desired file (or folder to enter the subfolder) in the USB disk, then press the [OK] button to play it.



2.2.Play Interface




Menu	Function
	Select play mode (directory play/single cycle/directory loop)
	Switch to the previous video
	Fast Backward,rewinds the video back quickly while playing it. The rewinding speed ranges from 2X to 32X
	Play or pause the current videot
	Fast Forward, pushes the video to move forward quickly while playing it. The forward speed ranges from 2X to 16X
	Switch to the next video
	Select all playlists in the current folder
	TV Setting






Menu	Content	Mode	Function
Picture Mode	User/Standard/Vivid/Soft	Brightness	Modify the picture parameters in the range 0-100
		Contrast	
		Saturation	
		Sharpness	
Sound Mode	User/Standard/News/Music/Sport	120Hz	Modify the sound parameters in the range 0-100
		500Hz	
		1.5KHz	
		5KHz	
		10KHz	

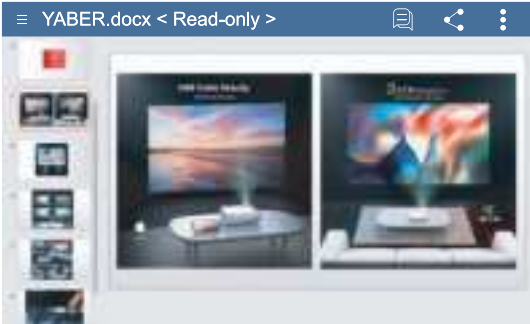2.3.Office Suite Play Interface



By pressing the button on the remote to enter the menus.

(Note: the Office version may be automatically updated, then the updated functions may change. Due to copyright, some functions are temporarily unavailable. Please refer to the actual version.)

Menu	Content	Function
	Invalid key, please ignore.	/
	Invalid key, please ignore.	/
	Export to PDF	Export to PDF
	Protect	/
	Start slide show	From the current slide
	Advance slides	/
	Cast Presentation	/
	Go to Slide	Quickly select the desired page
	Zoom	Fit/Fit width/Actual size
	Properties	View the properties of file
	Help	Help instructions

3.WiFi Setting


Wireless Connection

Warming Tips:


- ①The fluency of screen mirroring with wireless connection will be affected by the network environment. A bandwidth of 100Mbit or more is recommended when using screen mirroring.
- ②Make sure your mobile device is close to the projector when using wireless connection. A distance within 1 meter is recommended.
- ③Some mobile devices may not support screen mirroring due to the compatibility.
- ④Any questions, please feel free to email YABER via aftersales@yabertech.com .

3.1.iOS Cast (for iOS Devices)

1.Go to home page -- Select the [] menu -- Select the [WiFi Setting] menu -- Open the WiFi function -- Select your home WiFi from the list -- Connect the Pro U6 projector to your home WiFi.

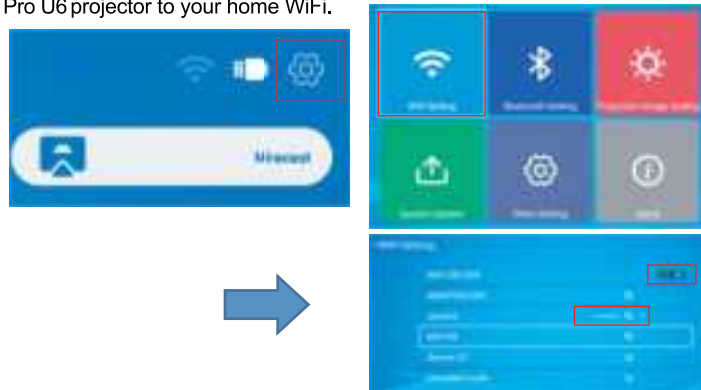

2.Back to home page -- Select [iOS Cast] menu -- Press the OK button to enter the [iOS Cast] menu.

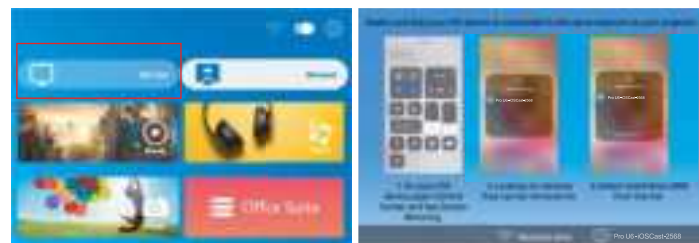


3.Select the [Settings] menu on your iOS device -- Turn on the [Wi-Fi] function -- Connect your iOS device to the same home network as the projector.


4.Open the [Control Center] on your iOS device -- Select the [Screen Mirroring] function -- Select and connect the iOS Cast receiver named [Pro U6-iOSCast-xxxx] -- your iOS device screen will be displayed on the projection screen after 3 seconds.

3.2.Miracast (for Android Devices)

1.Go to home page -- Select the [Miracast] menu -- Press the OK button to enter the [Miracast Setting] Menu.

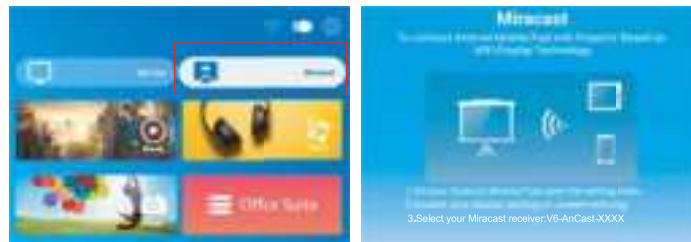

2.Select the [Settings] menu on your Android device -- Select the [Screen mirroring] function -- Select your Miracast receiver named [**Pro U6-AnCast-X** XXX] – your Android device screen will be displayed on the projection screen after 3 seconds.

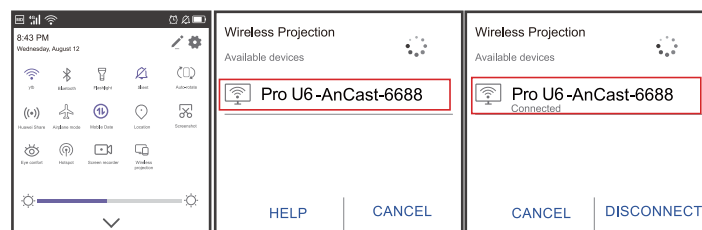


3.On your Android device, tap [Settings] -[WLAN Display] -Turn [Wi-Fi] ON, Connect your home WiFi.

Note:

- 1.Different brands of Android phones have different operations for select Screen Mirroring Display, please refer to your phone's manual. [Multiscreen/Wireless display/WLAN display/Screen mirroring/Wireless projection/Smart view etc.]
- 2.Not all Android phones support this function. Please make sure it is supported before use.

4. Bluetooth Setting

Go to home page -- Select the [] menu -- Select the [Bluetooth Setting] Option -- Open the Bluetooth function and your Bluetooth device -- Scan the Bluetooth devices nearby automatically -- Choose the Bluetooth device desired -- it will be paired and connected automatically.




Note:

1. The Pro U6 projector is compatible with the Bluetooth headsets, Bluetooth speakers and AirPods, but not the Bluetooth keyboards or Bluetooth phones.
2. If you have any question, please feel free to email YABER via:
aftersales@yabertech.com

5. Projector Image Setting

5.1. Projection Mode




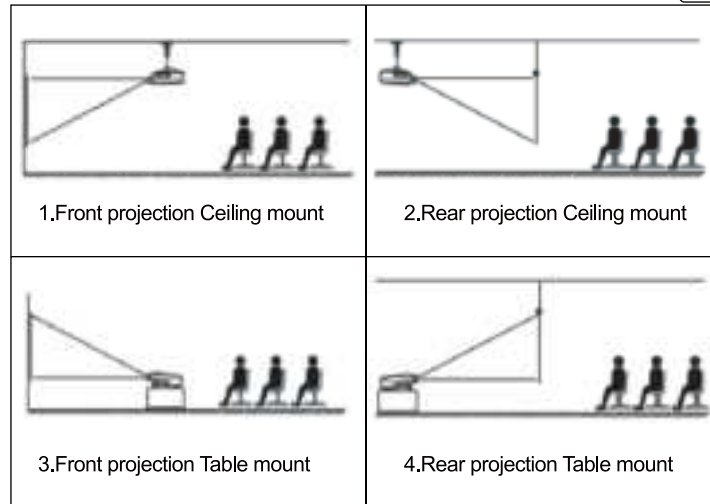

5.2. Keystone Advanced & 4-Point Keystone

5.2.1. Vertical Keystone Correction

Step 1: Select the [Front] option in the [Keystone Advanced] menu, then press the button to enter the [Manual Keystone] menu.

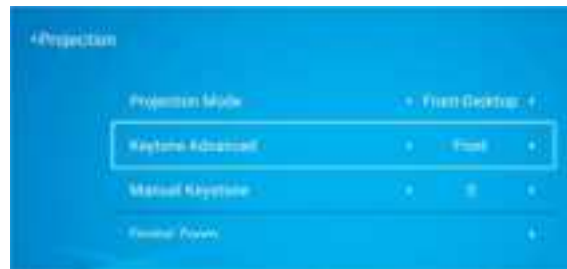

Step 2: If the projection image shows as (1), press the button on the remote or projector to increase the vertical parameter (-50~0), until to achieve the projection image (2).

Step 3: If the projection image shows as (3), then press the button on the remote or projector, and decrease the vertical parameter (0~50), until to achieve the projection image (4).



5.2.2.Horizontal & Vertical Keystone Correction

When the projection screen is not rectangular, it can be adjusted by 4-point keystone correction.


Step 1: Select the [Side] option in the [Keystone Advanced] menu;


Step 2: Press the button to select the [4-Point Keystone] menu, then press the [OK] button to enter the submenu.



Step 3: Keep pressing the OK button on the remote control or projector to select the point .


Step 4: Press the arrow keys on the remote or projector to adjust the horizontal or vertical parameters, until the projection screen becomes the desired rectangle.

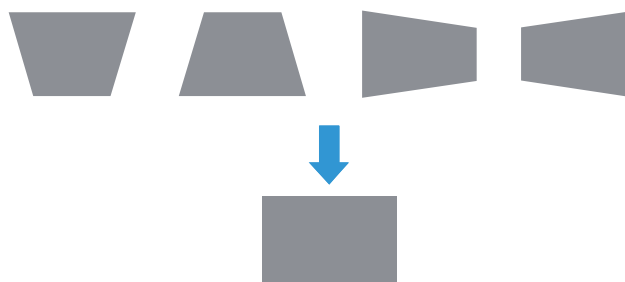

OK Pick point : Keep pressing the OK button on the remote control or projector, until the positioning icon  appears at the point desired, then release the button immediately.


Adjustment : Press the arrow keys on the remote control or projector to adjust the horizontal or vertical parameters.


Back : Press the key on the remote control to back to home page.

Reset : Press the  keys on the remote control to restore the original parameters.


5.3.Digital Zoom

Step 1: Select the [Digital Zoom] option and press the OK button to enter the submenu.

Step 2: By pressing the  button on the remote or projector, you can reduce the height and width of projection size up to 50%.

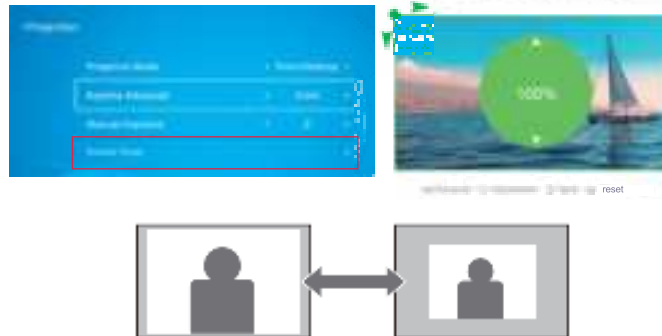

6.System Update

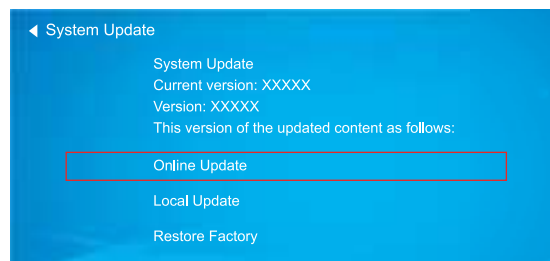

Menu	Function
Online Update	Online update
Local Update	Local update
Restore Factory	Restore user operation application configuration and system setting


7. Other Setting



Menu	Function
Power On Option	Direct/Standby
Language Setting	Set up the language
Scheduled Shutdown	10min/20min/30min/60min/120min

About the Direct/Standby Power On Option

Direct Mode: When the projector is powered on, the projector will be automatically turned on.


Standby Mode: When the projector is powered on, you need to press the  button on the remote or projector to turn on the projector.

8.About

Menu	Content
System Version	V1.0.0.0.2020-08-27
MAC Addressr	Ac:5d:5c:c5:d9:83

SIGNAL LINES CONNECTION

YABER **Pro U6** projector has 6 interfaces, HDMI ports*2/USB ports*2/3.5mm headphone output/AV output. Please select the correct connecting port to connect your device (PC, Phone, DVD Player, Sound bar, USB, PS4 etc.)

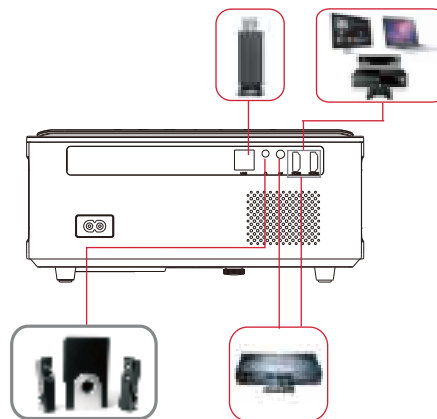

1.Connect USB Disk

- 1) Insert the U disk into either of the two usb input ports;
- 2) You can directly enter the start-up screen on the home page, select the option [Movie/Music/Photo/Office Suite]
- 3) Select the desired file (or folder to enter the subfolder) in the USB disk, then press the [OK] button to play it.


2.Connect the Devices via the HDMI ports

- 1) Connect your TV stick or laptop to any HDMI port of the projector;
- 2) Enter the home page to select the corresponding HDMI1 or HDMI2 as the signal source.

3. Connect to the DVD Player

Use the 3-in -1 AV cable in the package

- 1) Turn on your DVD player and the projector;
- 2) Connect the colorful female connectors to your DVD player's RCA cable with the 3-in-1 AV cable in the package;
- 3) Connect the black connector to the AV port of the projector, enter the home page to select [AV] as the signal source.




Or connect to the DVD Player with the HDMI cable in the package.




4. Connect to the Sound bar/Speaker

If your speaker has AUX port, please use your 3.5mm audio cable connect the projector and your speaker as the picture shows, enter the home page to select [AV] as the signal source.



SAFE SHUTDOWN

1. Press the  button on the projector or remote.
2. Unplug the power cord of the projector.
3. Cover the lens and store the projector in a cool and dry place.

WARRANTY

Thank you so much for your purchase and support! We provide 3-year warranty for **Pro U6** projector. If you have any questions, please feel free to contact us via aftersales@yabertech.com

TROUBLESHOOTING

Problems listed below might occur during the operation of your projector.
Please refer to the possible factors which might cause the issue to do troubleshooting.

1. When turning on the power switch, the indicator light does not work.

- 1) The power might not be connected well.
- 2) Check the over-heat protection system.

2. The remote control does not communicate with the projector.

- 1) The power switch at the back of the projector is turned on or off?
- 2) The remote control's batteries are depleted?
- 3) Something obstructing the signal between the remote and IR
- 4) Strong light on IR directly.

3. No image on the screen.

- 1) Is the channel set-up correct?
- 2) Is there an input signal ?
- 3) Is the input cable plugged well ?
- 4) Under PC mode, is the refresh rate > 75KHz ?

4. Blue screen,no picture,no sound.

Input cables connected right?

5. Picture right, no sound.

- 1) Input cables connected right?
- 2) Volume at min or on Mute.

6. Can't play the movies.

- 1) The format of the video is right?
- 2) Files are broken?
- 3) Device is broken?

7. There is picture, no sound?

The decode system doesn't match.

8. Can't find devices when connected with hard drive or flash drive.

Check if the device is broken.

9. Auto-off after working for a while.

- 1) The projector ventilation is blocked.
- 2) The voltage is not stable.
- 3) The over-heat protection system.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

WARRANTY AND SERVICE

Should this unit be operated under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, this will render WARRANTY VOID. The product you buy may sometimes differ slightly from illustration.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



- 2) ¿Las pilas del mando a distancia están agotadas?
- 3) Algo que obstruye la señal entre el control remoto e IR.
- 4) Luz fuerte en IR directamente.

3. No hay imagen en la pantalla.

- 1) ¿Es correcta la configuración del canal?

- 2) ¿Hay señal de entrada?

- 3) ¿Está bien conectado el cable de entrada?

- 4) En el modo PC, ¿la frecuencia de actualización es > 75 KHz?

4. Pantalla azul, sin imagen, sin sonido.

- ¿Está conectado correctamente el cable de entrada?

5. Imagen correcta, sin sonido.

- 1) ¿Está conectado correctamente el cable de entrada?

- 2) Determine si el volumen está al mínimo o en silencio.

- 3) El sistema de decodificación no coincide.

6. No puedo reproducir películas.

- 1) ¿El formato del video es correcto?

- 2) ¿Los archivos están rotos?

- 3) ¿El dispositivo está roto?

7. No puedo encontrar dispositivos cuando están conectados con un disco duro o una unidad flash.

Compruebe si el dispositivo está roto.


8. Apagado automático después de trabajar durante un período de tiempo.

- 1) La ventilación del proyector está bloqueada.


- 2) El voltaje no es estable.

- 3) El sistema de protección contra sobrecalentamiento.

4. Conecte la Barra de Sonido / Altavoz
Si su altavoz tiene un puerto AUX, utilice su cable de audio de 3,5 mm para conectar el proyector y el altavoz como muestra la imagen, ingrese a la página de inicio para seleccionar [AV] como fuente de señal.



APAGADO SEGURO

1. Presione el botón  del proyector o del control remoto.
2. Desenchufe el cable de alimentación del proyector.
3. Cubra la lente y guarde el proyector en un lugar fresco y seco.

GARANTIA

¡Muchas gracias por su compra y apoyo! Ofrecemos una garantía de 3 años para el proyector **Pro U6**. Si tiene alguna pregunta, no dude en contactarnos a través de: affersales@yabertech.com

Preguntas Frecuentes

Los problemas enumerados a continuación pueden ocurrir durante el funcionamiento de su proyector. Consulte los posibles factores que pueden causar el problema para solucionar el problema.

1. Al encender el interruptor de encendido, la luz indicadora no funciona..

- 1) Es posible que la alimentación no esté bien conectada.
- 2) Verifique el sistema de protección contra sobrecalentamiento.

2. El control remoto no puede controlar el proyector.

- 1) ¿El interruptor de encendido en la parte posterior del proyector está encendido o apagado?

1. Conecte el Disco USB


- 1) Inserte el disco U en cualquiera de los dos puertos de entrada USB;
- 2) Puede ingresar directamente a la pantalla de inicio en la página de inicio, seleccione la opción [Película / Música / Foto / Office Suite].
- 3) Seleccione el archivo deseado (o carpeta para ingresar a la subcarpeta) en el disco USB, luego presione el botón [OK] para reproducirlo.

2. Conecte los Dispositivos a través de los puertos HDMI


- 1) Conecte su TV stick o computadora portátil a cualquier puerto HDMI del proyector;
- 2) Ingrese a la página de inicio para seleccionar el HDMI1 o HDMI2 correspondiente como fuente de señal.

3. Conecte al reproductor de DVD

- Utilice el cable AV 3-en-1 en el paquete
- 1) Encienda su reproductor de DVD y el proyector;
- 2) Conecte los conectores hembra de colores al cable RCA de su reproductor de DVD con el cable AV 3 en 1 incluido en el paquete;
- 3) Conecte el conector negro al puerto AV del proyector, ingrese a la página de inicio para seleccionar [AV] como fuente de señal.



O conéctelo al Reproductor de DVD con el cable HDMI incluido en el paquete.

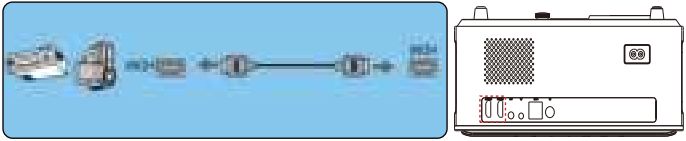


8.Acerca de

Menü	Contenido
Version del Sistema	V1.0.0.0.2020-08-27
Dirección MAC	Ac:5d:5c:c5:d9:83


Conectarse con Otros Dispositivos

El YABER Pro U6 proyector tiene 6 interfaces, puertos HDMI * 2 / puertos USB * 2 / salida de auriculares de 3,5 mm / Salida AV. Seleccione el puerto de conexión correcto para conectar su dispositivo (PC, Teléfono, Reproductor de DVD, Barra de Sonido, USB, PS4, etc.)

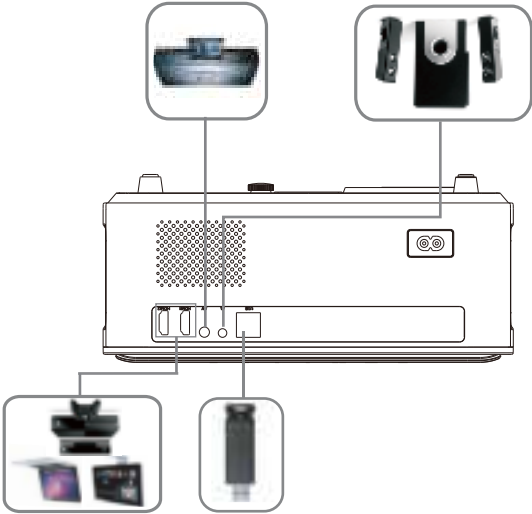


Menu	Función
Actualización en línea	Actualización en línea
Actualización local	Actualización local
Restaurar fábrica	Restaurar la configuración de la aplicación de operación del usuario y la configuración del sistema




7.Otras Ajuste

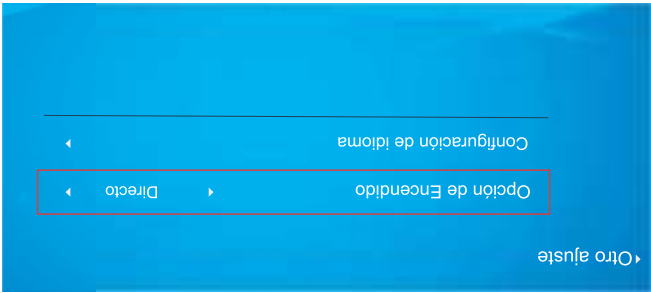

Menu	Función
Directo / En espera	Directo / En espera
Configuración de idioma	Configurar el idioma
Apagado programado	10min/20min/30min/60min/120min


Acerca de la Opción de Encendido Directo / en Espera

Modo Directo: Cuando el proyector está encendido, el proyector se encend-
rá automáticamente.
Modo de Espera: Cuando el proyector está encendido, debe presionar el botón  en el control remoto o el proyector para encender el proyector.

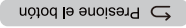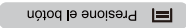
-  ajuste: Presione las teclas de flecha del control remoto o del proyector para ajustar los parámetros horizontales o verticales.
-  Presione el botón: en el control remoto para regresar a la página de inicio.
-  Presione el botón: del mando a distancia para restaurar los parámetros originales.

5.3.Digital Zoom

- Paso 1: Seleccione la opción [Digital Zoom] y presione el botón OK para ingresar al submenú.
- Paso 2: Al presionar el botón del control remoto o del proyector, puede reducir la altura y el ancho del tamaño de proyección hasta en un 50%.

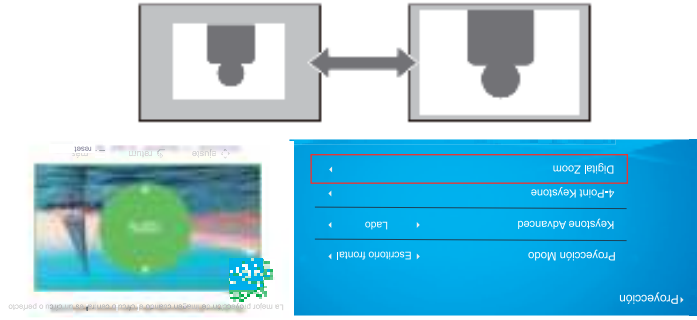

6. Actualización del Sistema

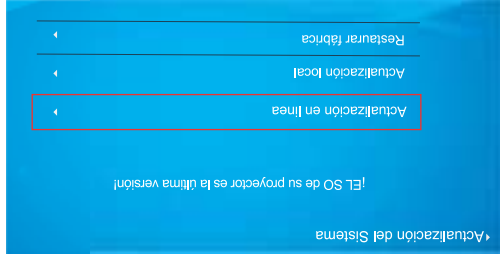


5.2.2. Corrección Trapezoidal Horizontal y Vertical

Cuando la pantalla de proyección no es rectangular, se puede ajustar mediante la corrección trapezoidal de 4 puntos.

Paso 1: Seleccione la opción [Lateral] en el menú [Keystone Advanced]; Paso 2: Presione el botón para seleccionar el menú [4-Point Keystone], luego presione la parte inferior [OK] para ingresar al submenú.



Paso 3: Siga presionando el botón OK en el Control Remoto o proyector para seleccionar el punto.
Paso 4: Presione arrow keys en el control remoto o proyector para ajustar los parámetros horizontales o verticales, hasta que la pantalla de proyección se convierta en el rectángulo deseado.

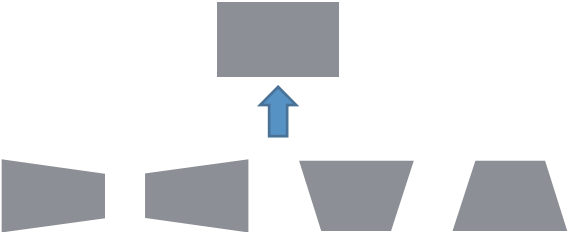


OK seleccionar puntos : Continúe presionando el botón OK en el control remoto o proyector, hasta que el icono de posición aparezca en el punto deseado, luego suelte el botón inmediatamente.

5.2. Keystone Avanzado & Keystone de 4 Puntos


5.2.1. Corrección Trapezoidal Vertical

Paso 1: Seleccione la opción [Frente] en el menú [Keystone Advanced], luego presione el botón para ingresar al menú [Keystone Manual].

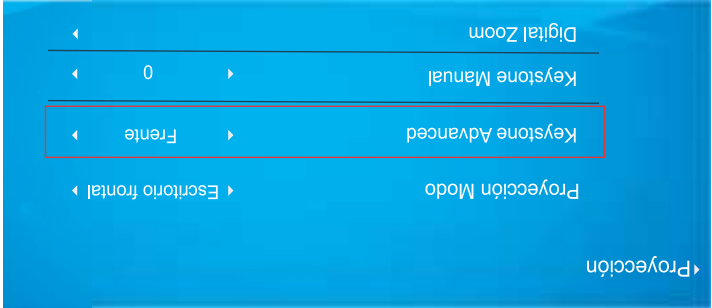

Paso 2: Si la imagen de proyección se muestra como (1), presione el botón en el control remoto o proyector para aumentar el parámetro vertical (-50 ~ 0), hasta lograr la imagen de proyección (2).



Paso 3: Si la imagen de proyección se muestra como (3), presione el botón en el control remoto o el proyector y disminuya el parámetro vertical (0 ~ 50), hasta lograr la imagen de proyección (4).

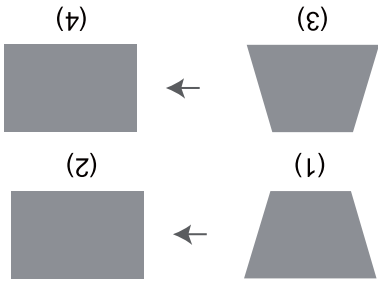

2.Si tiene alguna pregunta, no dude en enviar un correo electrónico a affersales@yabertech.com

5.Configuración de Imagen del Proyector

5.1.Modos de Proyección

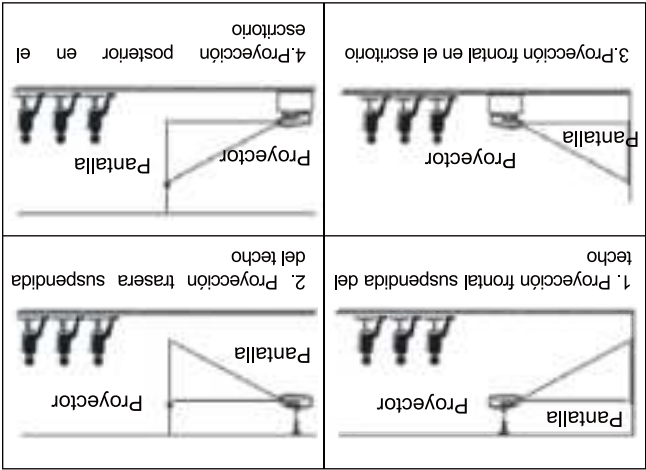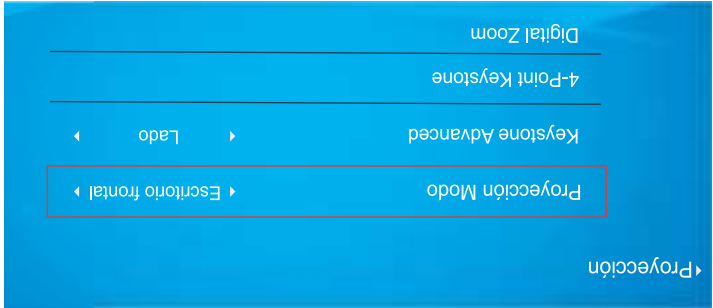

Nota:

1. Las diferentes marcas de teléfonos Android tienen diferentes operaciones para seleccionar.
Pantalla duplicada de pantalla, consulte el manual de su teléfono. [Pantalla múltiple / Pantalla inalámbrica / Pantalla WLAN / Duplicación de pantalla / Proyección inalámbrica / Vista inteligente, etc.]
2. No todos los teléfonos Android admiten esta función. Asegúrese de que sea compatible antes de usarlo.

4. Configuración de Bluetooth

Vaya a la página de inicio - Seleccione el menú [Configuración de Bluetooth] - Abra la función Bluetooth y su dispositivo Bluetooth - Escanee los dispositivos Bluetooth cercanos automáticamente - Elija el dispositivo Bluetooth deseado - se emparejará y conectará automáticamente.




Nota:


4. Abra el [Centro de control] en su dispositivo iOS - Seleccione la función [Screen Mirroring] - Seleccione y conecte el nombre del dispositivo [Pro U6 -iOS-Cast-xxxx] - La pantalla de su dispositivo iOS se mostrará en la

3.2.Miracast (para dispositivos Android)

1. Vaya a la página de inicio - Seleccione el menú [Wi-Fi] - Seleccione el menú [Configuración de Wi-Fi] - Abra la función Wi-Fi - Seleccione su Wi-Fi doméstico - Conecte el proyector Pro U6 a su Wi-Fi doméstico.
2. Regresar a la página de inicio - Seleccione el menú [Miracast] - Presione el botón OK para ingresar al menú [Miracast].

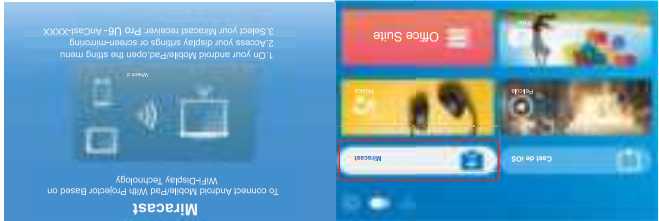

3. Seleccione el menú [Configuración] en su dispositivo Android - Seleccione la función [Duplicación de pantalla] - Seleccione y conecte el nombre del dispositivo [Pro U6 -AnCast-XXXX] - La pantalla de su dispositivo Android se mostrará en la pantalla de proyección después de 3 segundos.

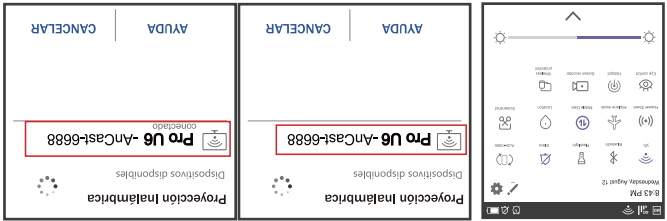


En su dispositivo Android, toque [Configuración] - [WLAN] - Encienda [Wi-Fi], conecte el Wi-Fi de su hogar.

③ Algunos dispositivos móviles pueden no admitir la duplicación de pantalla debido a la compatibilidad.

④ Cualquier pregunta, no dude en ponerse en contacto con YABER a través de Support@yabertech.com.


3.1. iOS de Cast (para Dispositivos iOS)

1. Vaya a la página de inicio - Seleccione el menú [📶] - Seleccione el menú [Configuración WiFi] - Abra la función WiFi - Seleccione su WiFi doméstico de la lista - Conecte el proyector **Pro U6** a su WiFi doméstico.

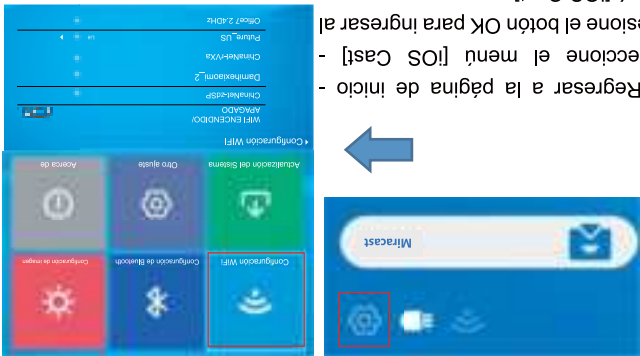



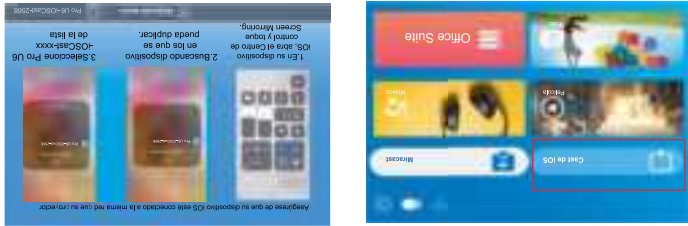

2. Regresar a la página de inicio - Seleccione el menú [iOS Cast] - Presione el botón OK para ingresar al

menú [iOS Cast].



3. Seleccione el menú [Configuración] en su dispositivo iOS - Encienda la función [Wi-Fi] - Conecte su dispositivo iOS a la misma red doméstica con el proyector.


Pulsando el botón  del mando a distancia para acceder a los menús. (Nota: la versión de Office puede actualizarse automáticamente, luego las funciones actualizadas pueden cambiar. Debido a los derechos de autor, algunas funciones no están disponibles temporalmente. Consulte la versión real).

Menú		Content	Función
	No válida, ignórela.	/	
	No válida, ignórela.	/	
	Exportar a PDF	Exporter au format PDF	
	Protéger	/	
	Firma Rápido	/	
	Texto a habla	/	
	Ver web	De la diapositiva actual	
	Modo nocturno	/	
	Ir a la página	Seleccione rápidamente la página deseada	
	Zoom	Ajustar/Ajustar ancho/Tamaño real	
	Vista combinada	/	
	Propiedades	Ver las propiedades del archivo	
	Ayuda	Instrucciones de ayuda	

3.Conexión inalámbrica

Consejos Calientes:

- ① La fluidez de la duplicación de pantalla con conexión inalámbrica se verá afectada por el entorno de red. Se recomienda un ancho de banda de 100Mbit o más cuando se usa la duplicación de pantalla.
- ② Asegúrese de que su dispositivo móvil esté cerca del proyector cuando utilice una conexión inalámbrica. Se recomienda una distancia de 1 metro.

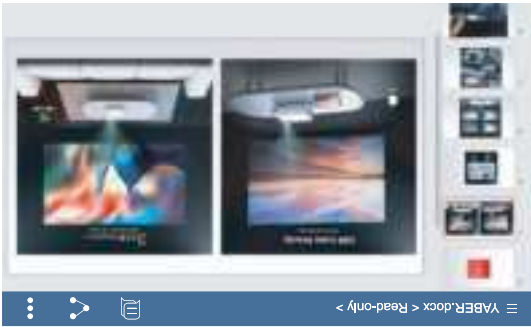

2.3. Interfaz de lectura de Office Suite

Menú	Contenido	Modo	Función
Picture Mode	User/Standard/Vivid/Soft	Brighthness	Modifique los parámetros de la imagen en el rango 0-100
		Contrast	
		Saturation	
		Sharpness	
		120Hz	
Sound Mode	User/Standard/News/Music/Sport	500Hz	Modifique los parámetros de sonido en el rango 0-100
		1.5KHz	
		5KHz	
		10KHz	



2.Modos de entrada de disco USB









2.1.Reproducir película/música/foto/Office Suite en el modo de entrada de disco USB



- 1).Inserte el disco USB;
- 2).Seleccione la opción "Película/Música/Foto/Office Suite";
- 3).Seleccione el archivo deseado (o la carpeta para ingresar a la subcarpeta) en el disco USB, luego presione el botón "OK" para reproducirlo.



2.2.Interface de lectura de vídeo



Menú	Función
	Seleccione el modo de reproducción (reproducción de directorio / ciclo único / bucle de directorio)
	Cambiar al vídeo anterior
	Fast Backward, rebobina el vídeo rápidamente mientras lo reproduce, los la velocidad de rebobinado varía de 2X a 32X
	Reproducir o pausar el vídeo actual
	Avance rápido, empuja el vídeo para avanzar rápidamente mientras lo reproduce. La velocidad de avance varía de 2X a 16X
	Cambiar al siguiente vídeo
	Seleccionar todas las listas de reproducción en la carpeta actual
	TV Setting

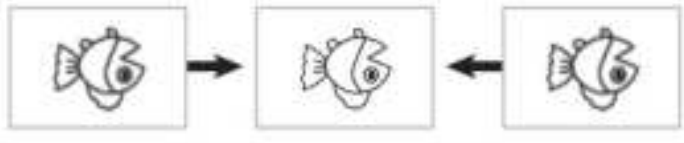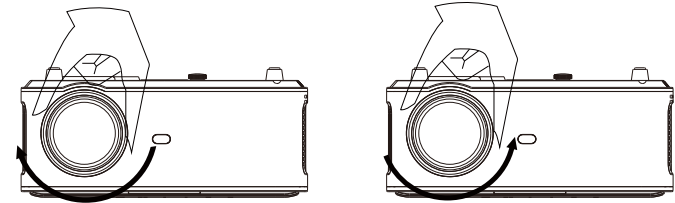

Lentamente gire el anillo de enfoque. Al mismo tiempo, verifique cuidadosamente el punto de enfoque, el mejor punto de enfoque para la lente sería donde la imagen sea más clara.

Nota: Si todavía está borroso, intente ajustar la distancia de proyección.

2. Corrección trapezoidal 4D digital (máximo ajustable $\pm 50^\circ$)


Utilice la corrección trapezoidal 4D digital del proyector para cambiar la imagen a un rectángulo. La corrección trapezoidal se puede ajustar hasta $\pm 50^\circ$ (vertical y horizontal).

CONFIGURACIÓN DEL PROYECTOR

La página de inicio del proyector es la siguiente:


1. Seleccione la fuente de la señal de entrada

Seleccione la fuente de señal de entrada deseada (HDMI1 / HDMI2 / AV) en la página de inicio

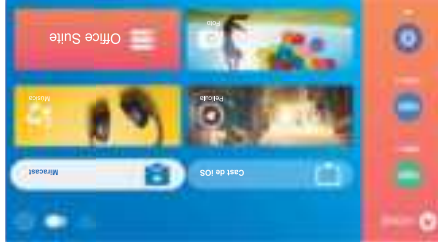

- A. Compre un soporte universal con tornillo M5*11 para instalar el proyector en el techo.
- B. Instale el proyector en el soporte a través de los orificios para tornillos en la parte inferior del proyector.

Encender el proyector


- A. Presione el botón  en el control remoto o proyector, el indicador LED se pondrá azul.

- B. Ajuste el anillo de enfoque en la parte superior del proyector para ajustar el enfoque. Si la imagen no es clara, ajuste la distancia de proyección.

- C. Ajuste la corrección trapezoidal 4d usando el control remoto.

- D. Conecte el dispositivo externo (teléfono inteligente, iPad, Amazon Fire TV, caja de TV, disco flash USB, reproductor de DVD, computadora, etc.) a las interfaces correspondientes.

- del proyector y presione el botón "S" en el control remoto, luego seleccione la fuente de señal de entrada correcta.


- E. Seleccione el botón  en la pantalla de inicio para acceder al submenú "Otros ajustes", luego seleccione la opción "Ajustes de idioma" para configurar su idioma preferido.

Ajuste de imagen

Cuando utiliza el proyector por primera vez, normalmente muestra una imagen borrosa. Esto se debe a que la lente está desenfocada o a una configuración trapezoidal incorrecta.

Siga los pasos a continuación para corregir:

1. Ajuste de enfoque

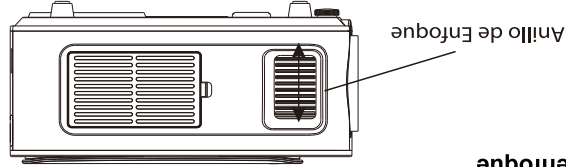

La lente del proyector debe instalarse en los ejes de simetría izquierdo y derecho de la pantalla para evitar la distorsión trapezoidal de las imágenes izquierda y derecha.

2.La distancia entre el proyector y la pantalla



Si desea obtener un tela de proyección gratuita, contáctenos a través de affersales@yabertech.com

Ratio d'aspec defecto: 16:9	
Distancia de proyección (m)	Tamaño de proyección
1.7	50"
2.3	70"
3.3	100"
3.9	120"
5	150"

La distancia de proyección recomendada es 3.3 m, la distancia de proyección más corta es 1.68 m.

El tamaño de la imagen depende de la distancia entre el proyector y la pantalla, puede haber una desviación del 3% entre los datos ennumerados anteriormente. Diferentes configuraciones causan varias distancias.

Screw holes

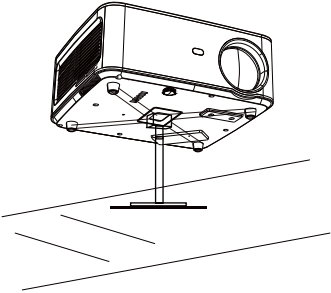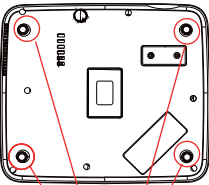

3.Instalar en el techo


Nota:

- 1. Instale 2 baterías AAA en el control remoto antes de usar. No combine baterías nuevas y viejas en el control remoto, ya que esto puede causar un mal funcionamiento debido a una fuente de alimentación insuficiente.
- 2. Cuando use el control remoto, asegúrese de que el transmisor de señal del control remoto apunte al receptor IR.
- 3. Si no utiliza el control remoto durante mucho tiempo, retire las baterías para evitar fugas.

INSTALLATION

1. méthode d'installation

El proyector de video puede suspenderse del techo con un marco colgante especial, o colocarse en el escritorio estable para proyectarse en la pantalla, que se adapta bien a diferentes entornos operativos y diferentes requisitos de uso. Por lo tanto, el proyector se puede instalar con métodos de acuerdo con las siguientes ilustraciones

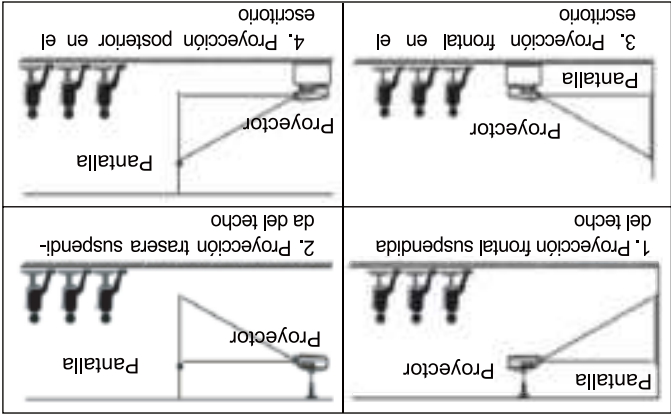

1. Poder

2. Fuente

3. Tecla direccional

4. Menú

5. Ama de casa

6. Volumen +

7. Volumen -

8. Silencio


9. Voltéar imagen

10. Confirmar/Reproducir o pausar el video

11. Regreso


12. Un abrazo

13. El siguiente.


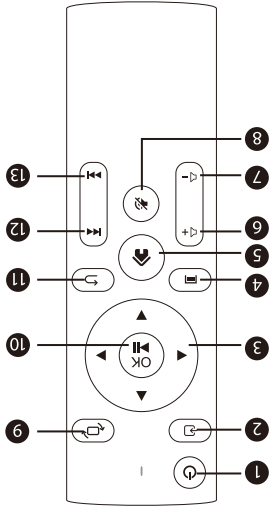


1		Encender/apagar el proyector
2		Seleccione la fuente de entrada (HDMI 1, HDMI 2,AV)
3		Se utilizan para ajustar la configuración del menú del proyector
4		Presione el botón una vez para volver a la interfaz del menú d'aspect de 16:9/4:3
5		Ir a la página de inicio
6		Aumentar el volumen
7		Bajar el volumen
8		Cierra el sonido
9		La imagen se volteea
10		Confirmar/Reproducir o pausar el video
11		Regresar al menú anterior
12		Cambiar al video anterior
13		Cambiar al siguiente video

4/5/6/7	Boutons flèche	Se utilizan para ajustar la configuración del menú del proyector
3	OK	Confirmar
2	Regreso	Regresar al menú anterior
1	Alimentación	Encender/apagar el proyector

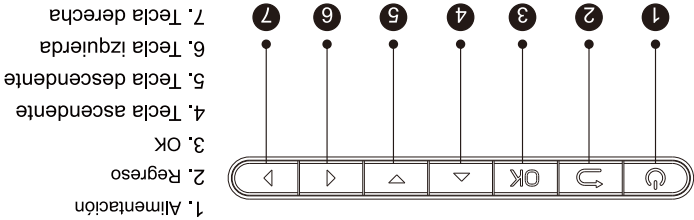

1/18	Tomillo de ajuste de altura	Ajuste la altura de la pantalla de proyección
2/5	Ventana IR	Recibiendo la señal infrarroja
3	Lente del proyector	Lente de vidrio con revestimiento óptico
4	Puerto de alimentación	Conecte el cable de alimentación
6	Enchufe para auriculares	Salida de auriculares de 3,5mm
7/10	Puertos HDMI	Entrada HDMI 1 / entrada HDMI 2
8	Puertos USB	Entrada USB 1 / entrada USB 2
9	Puerto AV	Entrada de audio
11	Altavoz	Altavoces estéreo 5w
12	Ventilaciones	Evite que el proyector se sobrecaliente
13	Anillo de enfoque	Ajuste el anillo de enfoque para obtener la imagen más clara
14	Interruptor de filtro de polvo	Presione el interruptor de la derecha para abrir el filtro de polvo desmontable
15	Filtro de polvo	Limpie el polvo (si la pantalla tiene una mancha negra)
16	Etiqueta inferior	Placa de identificación en la parte inferior del proyector
17	Tampons en caoutchouc	Cousinets de protection / retirer pour installer le support de plafond

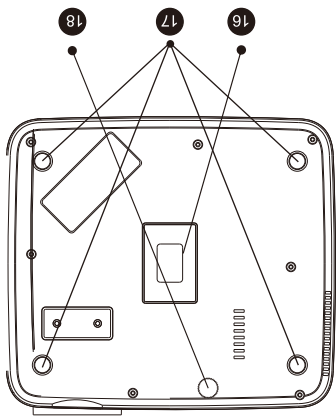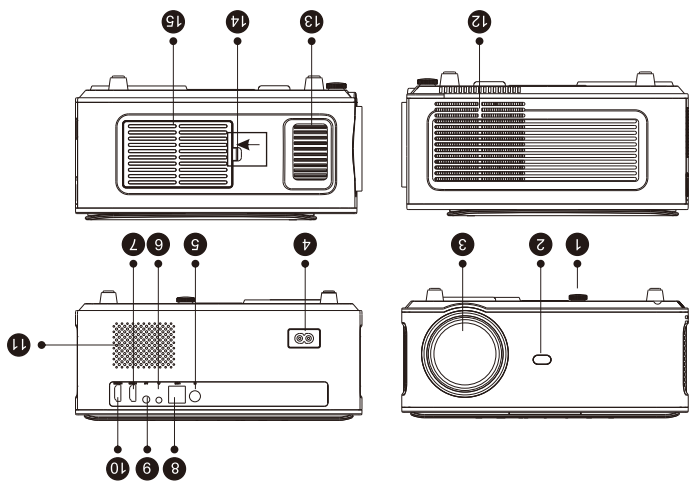

 after-sales@yabertech.com 

Lista de empaque

Proyector Pro U6*1	Control remoto*1	Cable de alimentación*1
Cable HDMI*1	3-en-1 Cable AV	Cubierta de la lente*1
Tela de limpieza*1	Manual de usuario*1	

Especificación del proyector

Modelo: Buffalo Pro U6			
Resolución Nativa	1920*1080P	Corrección trapezoidal	4D Digital
Sistema Imerysy	LCD	Fuente de luz	LED
Gama de colores	16.7M Full	Ratio d'aspect	4:3/16:9
Tamaño de la imagen	2.68-3.3m	Distancia de proyección	1.68m
Tensión de alimentación	AC100-240V	Peso del proyector	2.13kg
Formato de imagen compatible	JPG/JPEG/BMP /PNG	Interfaces	puertos HDMI*2/ puertos USB*2/salida de auriculares de 3.5 mm/salida AV
Método de proyección	Proyección frontal en el escritorio/ Proyección posterior en el escritorio/ Proyección frontal suspendida del techo/ Proyección posterior		
Formato de video compatible	3GP/AVI/FLV/MP4/MPG/VOB/TS/M2TS/DAT/MKV		
Formato de audio compatible	MP3/APE/AAC/FLAC/OGG/WAV/WMMA/MID/DTS/M4A		

Soporte Profesional de Por Vida YABER

Estimado cliente,

¡Muchas gracias por apoyar a YABER!

Lea este manual detenidamente antes de utilizar el proyector. Si tiene algún problema, envíe un correo electrónico con su número de pedido y el problema a after-sales@yabertech.com. Brindaremos una solución rápida en 24 horas.

En realidad, muchos problemas se pueden resolver fácilmente mediante la configuración, como no hay señal, no hay sonido, falla la conexión bluetooth, falla la conexión WiFi, puntos oscuros, animación entrecortada, etc. Prometemos que todos los proyectores han sido 100% cuidadosamente revisados y empaquetados antes del envío.

Si tiene alguna pregunta, póngase en contacto con nosotros para que podamos solucionar el problema. Y danos la oportunidad de mejorar. Le garantizamos que le proporcionaremos una solución satisfactoria.

¡Gracias por su comprensión!

Equipo de servicio YABER

Consejos:

1. Antes de usar este proyector, retire la membrana protectora de las cubiertas superior e inferior.

El proyector no debe instalarse en un escritorio inestable o irregular.

2. Al instalar el proyector, debe elegir el soporte y los tornillos adecuados para evitar que el proyector se caiga accidentalmente debido a la mala calidad del tornillo o la falta de profundidad de rotación.


3. Si el proyector no se usa durante mucho tiempo, desconecte el cable de alimentación de la toma de CA.

4. Durante el funcionamiento normal, el proyector entrará en modo de espera después de presionar el botón de encendido del proyector o del control remoto. Antes de desenchufar el cable de alimentación, asegúrese de que el ventilador de enfriamiento esté apagado. No desenchufe el cable de alimentación de CA primero para apagar el proyector, ya que esto puede causar un mal funcionamiento del proyector.

CONTENIDO

Soporte Profesional de Por Vida YABER	02
Consejos:	02
Lista de empaque	03
Especificación del proyector	03
Resumen del proyector	04
Resumen del Remoto Control	06
INSTALLATION	07
1. méthode d'installation	07
2 La distancia entre el proyector y la pantalla	08
3. Instalar en el techo	08
Encender el proyector	09
Ajuste de imagen	09
1. Ajuste de enfoque	09
2. Corrección trapezoidal 4D digital (máximo ajustable $\pm 50^\circ$)	10
CONFIGURACIÓN DEL PROYECTOR	10
1. Seleccione la fuente de la señal de entrada	10
2. Modo de entrada de disco USB	11
3. Conexión inalámbrica	13
3.1. OS de Cast (para Dispositivos iOS)	14
3.2. Miracast (para dispositivos Android)	15
4. Configuración de Bluetooth	16
5. Configuración de Imagen del Proyector	17
5.1. Modo de Proyección	17
5.2. Keystone Avanzado & Keystone de 4 Puntos	18
5.3. Digital Zoom	20
6. Actualización del Sistema	20
7. Otras Ajuste	21
8. Acerca de	22
Conectarse con Otros Dispositivos	22
1. Conecte el Disco USB	23
2. Conecte los Dispositivos a través de los puertos HDMI	23
3. Conecte al reproductor de DVD	23
4. Conecte la Barra de Sonido / Altavoz	24
APAGADO SEGURO	24
GARANTIE	24
Preguntas Frecuentes	24

Buffalo Pro U6 Projector

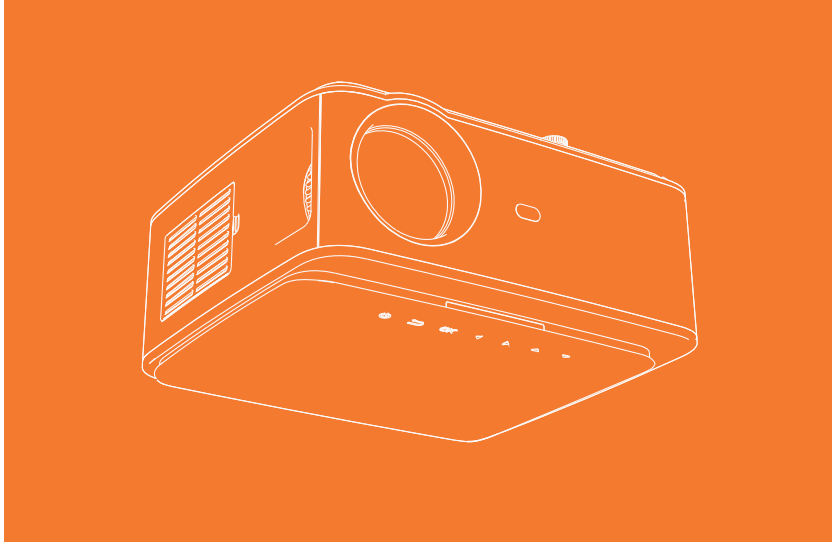

Yabber
Entertainment Projector

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.