*128±1

*80±1

Deciphering Cyberfox...

GET IT ON Google Play

Download on the App Store

Flydigi Foxspeed Low Latency Technology, Two Lower Latency Modes Exclusively Designed for Gaming.

Flydigi Foxspeed Low Latency Algorithm has greatly increased the efficiency of data processing on headphones, which makes sound latency transmitted from mobile phones to headphones decrease down to 0.15s. Scan QR code to download Flydigi Game Center then you get to choose your favorite mode:
Ultralow Latency Mode (Default Mode), Low Latency Mode, Classic Mode

R

L



01

Activation Cyberbox

Long Press Home Button to activate

Cyberfox will enter Pairing Mode automatically after activation, the indicator will flash red and blue lights alternately .

R

Connection Cyberfox

02

Find "FLYDIGI Cyberfox" in the Bluetooth then connect to it.

After the connection is successful, you will hear a voice saying "Connected" and the indicator will change from red and blue lights flashing alternately to blue lights flashing only.

Cyberfox can be automatically reconnected if you're out of connection rage within 15 minutes, but if the connection fails, it will enter Pairing Mode with red and blue lights flashing, you can press Home Button to reconnect.
Cyberfox will automatically power off if there's no connection after 15 minutes.

Cyberfox will enther Pairing Mode after Phone Bluetooth is turned off. It will automatically power off if there's no connection after 15 minutes.

L

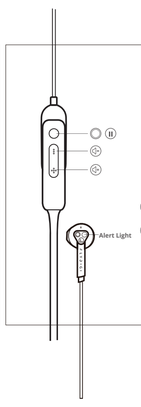

Function Cyberfox

03

Home Button	Long Press for 1 second to Power On Long Press for 3 seconds to Power Off Press once: Answer/Hang up a call. Play/Pause Music Long Press: Reject an incoming call Enter Pairing Mode when power off
Volume -	Press Once: Turn down the volume Long Press: Last Song
Volume +	Press Once: Turn up the volume Long Press: Next Song
Light Control	Long Press Home Button + Volume +: Turn on/off Breath Light
Latency Mode	Long Press Home Button + Volume -: "Dododo", 4 Beeps means it's Ultralow Latency Mode, exclusively designed for gaming "Dododo", 3 Beeps means it's Low Latency Mode "Dodo", 2 Beeps means it's Classic Mode, perfect for Music/Entertainment

※Classic Mode is recommended if you're listening to music in a complex environment like subway, bus and etc., as it is more stable and have higher quality.

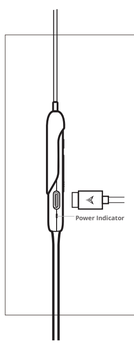

04

Power Cyberfox Up

**Red light means it's charging;
Blue light means it's fully charged.**

Power 0-100%, takes 1.5 hours

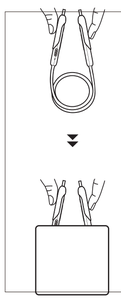

05

Storage Cyberfox

**Turn the neckband into a circle (Picture is shown) then put it into storage bag
Don't worry, memory nickle wire will help mend itself.**

Pair with Flydigi Peripheral Family, Games Have Never Been Easier to Play.

Follow us @
FB: Flydigi
Amazon: Flydigi

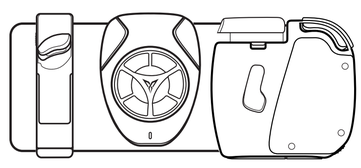

Stinger Trigger Button

8 ammos Shot within 1 second
Feel the crazines of Gatling

Wasp Wing Mobile Phone Cooler

3 Levels of Wind Speed
Keep You Cool All The Way

Wasp 2 One-handed Controller

Popular games PUBG and CODM
Use Multifingers, give precise operation

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Well Done!

You've Mastered The Power of Cyberfox Now!