
MANUAL (ENGLISH)

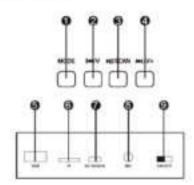

FUNCTIONS

- 1.Modes (Bluetooth®/US8/TF/AUX)
- 2. Short press "PREVIOUS" button to play previous song in USB/TF/AUX. Long press to turn down the volume.
- 3.Play/Pause. Short press it under BT/USB/TF/AUX to play or pause music.
- 4.5hort press "NEXT" button to play next song in USB/TF/AUX. Long press to turn up the volume.
- 5.USB socket
- 6.TF card socket
- 7. Audio input & Charging socket (DC 5V)
- 9.0N/0FF Switch

Connect to Bluetooth®

- 1. The product is on with Bluetooth® mode. Click the "MODE" button, once you hear an indication sound. Bluetooth® mode is an
- 2. Turn on your smartphone's Bluetooth® and search for the device. Then you will find the model's Bluetooth® name on smartphone. Pairing name "NEBULA".
- 3. Connect with "NEBULA". Click the "ak" on your smartphone.
- 4. "Connected" message will appear. Connected successfully. (Select and play music in smartphone when under Bluetooth® model.

Micro SD Function

- 1. Press "MDDE" button on the product to switch to TF. mode or just insert a Micro SD card. TF mode will be started automatically.
- 2 Press "PLAY/PAUSE "button to play/pause music.
- 3.Press "NEXT" button to play the next song.
- 4.Press "PREVIOUS" button to play the previous song.

- 1. Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will be started automatically.
- 2.Press "PLAY/PAUSE" to play/pause music.
- 3 Press "NEXT" button to play the next song.
- 4. Press "PREVIOUS" button to play the previous song

Hands Free Calling:

Short press "PLAY/PAUSE" to answer/reject/hang up the calling: double click "PLAY/PAUSE" button to redial. the last calling.

WARNING

When charging the unit, please turn off the power switch, so as not to damage the battery. Don't use the speaker for too long time constantly in order to keep the battery in a good condition. Please charge and discharge the battery for every 30 days or so on.

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or felevision reception, the user can try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult an experienced radio/TV technician. Changes or modifications not expressly approved by the party responsible for compliance ould void the user's authority to operate the equipment.

This device complies with part 15 of the ECC Bules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

ONE YEAR WARRANTY

Xtreme warrants its products for ONE YEAR against defects in manufacturing under regular consumer use with original receipt of retail purchase.

We believe in our products and want to provide you with a replacement, if needed, but we have to know about the problem while the product is still under warranty. If you discover a defect covered by this warranty, please contact us about receiving a replacement In order to use the products warranty the customer must provide proof of the retailers receipt.

*Any customers outside of the U.S. will be responsible for shipping and handling charges if a replacement is required that is not due to a manufacturing defect. If there is not a manufacturing defect, shipping and handling will be applied.

Xtreme's warranty is limited to our products only. Our warranty does not cover the replacement or repair cost of any third-party accessory, electronic device or personal property.

For instructions about how to obtain warranty service for your product, please contact Customer Service at customerservice@xtremecables.com

Package Contents:

Bluetooth® Speaker Charging Cable Manual

Specifications Battery:1200mAh **Output: 5W Total** Play Time: Up to 5 Hours.

XTREME"



855-999-8041 | www.xtremecables.com

822-999-8041 | www.xtremecables.com



LIGHTSHOW BLUETOOTH® SPEAKER

XTREME

Hecuselian Jusqu'à 5 Heures Sortie: 5W Totale RAMOOST SHOOTINGS

Caractéristiques

Mannel Cáble de Chargement Hauf-parleur Bluetooth®

Contenu du colis:

wice@xtremecables.com contacter le service à la clientole au customerser-Pour obtenit des instructions sur la façon d'obtenir un

d'un appareit électronique ou d'un accessoire tiers, d'un appareit électronique ou d'un bien personnel. uniquement. Notre garantie ne couvre pas le cout de La garantie de Xtreme est Umitée à nos produits

un remplacement est nécessaire et n'est pas du à un défaut de fabrication. S'il n'y a pas de défaut de fabrication, les trais d'expédition et de manufention is uoituatnuem ap ja voitipadxa p siest sap saigesuodsa. Lous se c'hents sinus en dehous des Esats-Units sinant

le client doit fournir la preuve du reçu des détaillants. nu reinplacement. Pour utiliser is garantie des produts, encore sous garantie, 5: vous découvrez un défaut quantica proping a process of the second of fournir un remplacement, si nécessaire, mais nous snow subjudy sub a still broad son ne snoword subjudy

Xtreme garantit ses produits pour une année contre les défauts de fabrication sous l'usage régulier du consom-mateur avec la réception originale de l'achat au défail.

GARANTIE UN AN

l'utilisateur à faire fonctionner le équipement. responsable de la conformité annulerait le droit de woquespare uou exbueseewerk ebbronkes bei je beilge sectroicien radio / TV experimente. Changements ou de celm sur lequel le recepteur est connecte. Consultez un Connecter Tequipement & une prise sur un circuit different Augmenter la séparation entre l'équipement et le récepteur. anyantes: Réorienter ou déplacer l'antenne de réception, coulder les interferences ber nue on plusieurs des mesures de la radio ou de la télévision, l'utilisateur peut essayer de edníbement cause des interférences nuisbles à la réception se buognicous bse geus nue juzigigation beutichigue. Si ces Cependant, A n y a aucune gerante que des interferences ne interferences nuisibles aux communications radio utilisé conformément aux instructions, peut provoquer des radice l'énergie de fréquence et, s'il n'est pas installé et Cet équipement génère des utilisations et peut émetire des alleitnebizén nottallistari enu anab zeldiziun zeonerétratni couch bonu jonusis nue bustaction raisonnable contre les conformement à la partie. 15 des règles FCC. Ces limites sont couyouwe anx purpes qunu abbasey unungudne qe crasse g'

DOT to ab sive.

Veuillez charger et décharger la batterie tous les 30 jours longtemps en permanence afin de la battene en bon étal. don't mebring runned-fuerfield as seg session M. einemed el ragemmobna seq an ab mite nordefnamile b tualquiratri? Cons du chargement de l'appareit, veuillez éteindre

REMARGUE. Cet equipement a été testé et déclare

portion bont recomposer le dernier appel / recorder Cappet, double-cliquez sur le "PLAY/PAUSE" Applyez briévement "PLAY/PAUSE" pour répondre / rejeter saugn sureur sjaddy

chanson precedente, Indication chaleureuse e) augunod «SOOIA384» uojnog aj uns zaknddy ly

3. Appuyez sur le bouton «NEXT» pour lire la chanson

A Applyez sur -PLAY / PAUSE- pour lire / mettre en USB. Le mode USB démarrera automatiquement.

app aun quamayduis zauasui no gcn appui ua jassed I. Appuyez sur le bouton «MODE» du produit pour Fonction USB

cyanson precedente. 4. Appuyez sur le bouton «PREVIOUS» pour lire la

3. Appuyez sur le bouton «NEXT» pour lire la chanson mettre en pause la musique.

2. Appuyez sur le bauton «PLAY / PAUSE» paur line / Micro SD. Le mode TF démaire automatiquement. passer en mode TF ou insérez simplement une carte The puyer sur le bouton *300M sur le produit pour

G2 oralM nottane-

(@dipoteuli abom na anodqriema succès. (Sélectionnez et écoufez de la musique sur le y re message "Connecte" apparaitra. Connecte avec

auoudpiems silov 3 Connectez-vous à «NEBULA». Cliquez sur «ok» sur

B) du modèle sur le smartphone. Nom d'appariement recherchez l'appareil. Ensuite, vous trouverez le nom to anorigineme ariov ob "AfooteulB of savityA S. son d'indication. Le mode Bluetoothe est active.

sur le bouton -MODE», une fois que vous entendez un 1. Le produit est allume en mode Bluetooth^{es}. Cliquez Connectez-vous à Bluetooth®

9, interrupteur ON / OFF

7. entrée audio et prise de charge (DC 5 V)

5. prise USB Prise de carle 6. TF


ment pour augmenter le volume -augnol sayuqqA, XUA / 4T / 82U na atneviuz noznero

A. Appuyez briévement sur le bouton «NEXT» pour lire la aupieum et seusg na artisem up ant ruog XUA / 4T / BZU TB axos avesab Inemevend tayuqqA seun/lys/R.E.

languement pour baisser le volume,

seyuqqA, XUA 1 TT 1 82U ne etnebeceng nozneric si eni 2. Appuyez brièvement sur le bouton «PREVIOUS» pour

> (XUA \ 7T \ BZU \ ®AlgotaulB) eaboM. [**TER FONCTIONS**

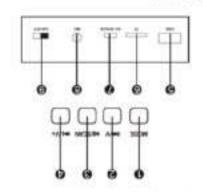

MANUAL (FRANCAIS)