PANTONE 2297C PANTONE Black 3C **OMNIBAR** INTELLIGENT POSITIONING SWIFT TAG USER GUIDE 追踪器用户指南 追跡用ユーザーガイドです AT53A **BATTERY REPLACEMENT**

IMPORTANT SAFETY INSTRUCTIONS

and those from the manufacturers of any equipment you use with the Bluetooth Tracker. Omnibar may update this information without prior notice. For the latest updates and the most recent User Manual, visit www.omnibar.com.

WARNINGS

- Please read all the instructions before using the product: • This product has a built-in 3V Li-Mn button cell battery. Do not disassemble, hit, crush, or throw it into the fire.
- Discontinue use immediately if the battery is severely swollen.
- Do not use it in a high-temperature environment.
 Do not use the battery if it is immersed in water!
 Please keep this product out of the reach of children.
- . If the battery has been accidentally swallowed or placed inside any part of the body, please seek medical attention immediately, or it may cause severe internal burns or other . If the battery compartment is not securely closed, stop using the product and keep it
- If the battery compartment is not securely closed, stop using the product and keep it away from children.
 Do not charge the battery. If the battery is low, please replace it in time. Do not reverse
- the polarity when replacing the battery. To prevent product damage from battery leakage and corrosion, remove the battery if not
- If battery leakage occurs, avoid contact with skin or eyes. In case of contact with skin or eyes, rinse with water and seek medical attention immediately.
 Keep the dead battery out of the reach of children, and dispose of or recycle it properly

TECHNICAL SPECIFICATIONS

according to local laws and regulations


MODEL: AT53A BATTERIES: CR2032 Lithium Metal batteries required. (included) CONNECTIVITY TECHNOLOGIES: Bluetooth 5.3


OPERATING SYSTEM: iOS or iPadOS 14.5 or newer

SOUND SEARCH: 10-20M(indoor) / 20-50M(outdoor) OPERATING TEMPERATURE: -10-45 C MATERIALS: Fireproof PC SIZE: 43.5*43.5*7.95mm WEIGHT: 8.7g FCC ID: 2BM7E-AT53A

PRODUCT BINDING Enable the "Find My" appGo to "Items" > "Add Item 1. Remove the insulating film



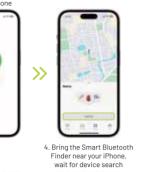

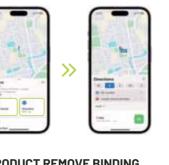


4. Tap "Play Sound" to make your Smart Bluetooth Finder beep

PRODUCT REMOVE BINDING

PRODUCT FIND


unt information that has been bound to avoid false remova 3. Finally, click "Remove" to confirm

3. Click "Directions" and follow the distance shown on the map to find the Smart Bluetooth Finder

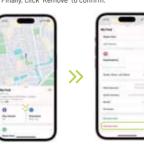









ENABLING "NOTIFY WHEN LEFT BEHIND"

1. Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. 3. Under "Notifications" enable the "Notify When Left Behind" toggle.

ENABLING "NOTIFY WHEN FOUND"

1. Under "Notifications", enable the "Notify When Found" toggle. 2. When your Smart Bluetooth Finder is seen by another Find My network device, you will receive *Note: "N otify when found" can only be activated when your Smart Bluetooth Finder is out ofrange.

ENABLING "LOST MODE"

- 1. Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch 2. Tap on your Smart Bluetooth Finder from the list.

 3. Under "Lost Mode" tap "Enable".

 4. A screen detailing Lost Mode will pop up, tap "Continue".

 5. Enter your phone number or email address and tap "Next".
- 6. You may enter a message that will be shared with the person that finds your item.
- 7. Tap "Activate" to enable "Lost Mode. *Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.

REMOVE THE SMART BLUETOOTH FINDER FROM MY APP

- 1. Open Find My app and select the "Items" tab. 3. Please ensure "Lost Mode" is disabled. 4. Scroll to the bottom of the screen and tap "Remove Item".
- 5. A summary will open, tap "Remove" to confirm.
 6. After successfully removing the Smart Bluetooth Finder from Find My app, open the case and you hear a sound, repeat the operation for four more times: remove the battery, insert it, You
- should hear a sound every time you Insert the battery; A total of five sounds will be heard during the whole process. The fifth tone is different from the first four.

 8. The Smart Bluetooth finder is now reset and ready to be paired to a new Apple ID.

UNWANTED TRACKING

5. Click "Connect" and rename it

IN THE BOX

3M Adhesive X 8

If any Find My network accessory separated from its owner is seen moving with you over time 1. If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is savailable on iOS or iPadOS 14.5 or later. 2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without

SAFETY INSTRUCTIONS

- Avoid moisture, Do not use aerosol, solvent or abrasive agents to clean theproduct. Keep out of reach of children to avoid accidental swallowing. The product has built-in battery, please stop use when it is swollen.

ABOUT APPLE FIND MY

The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPados, Mac, macOs and watchOS are

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part I5 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference boralic communications. However, there is no cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (I) Reorient or relocate the receiving antenna, (2) Increase the separation between the equipment and receiver, (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help. Omnibar is a trademark of Omnibar LLC. All the images and text in this user guide are the copyright of Omnibar. The photos and illustrations in this guide may differ from the actual product.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WEEE INFORMATION



Disposal and recycling informationThis product and battery should not be used as household garbage or thrown into the fire. When you decide to dispose of the product and battery, please handle the battery according to the locael nyironment all laws to avoid explosion





重要的安全说明

在使用本蓝牙跟踪器之前,请仔细阅读所有警告和说明。为避免爆炸、火灾、触电或人身伤害等危 在IXI分型ATMATERATED IN IT I SHOULD THE IT IN IT I SHOULD IN IT IN IT I SHOULD IN IT I SHOULD IN IT IN IT I SHOULD IN IT IN IT IN IT IN IT IN IT IN IT I SHOULD IN IT IN I

- 使用本产品前请仔细阅读所有使用说明:
- 本产品内置3V锂锰纽扣电池。请勿拆卸、撞击、压碎或扔入火中。如果电池严重肿胀,请立即停止使用。
- 请勿在高温环境下使用 请勿将电池浸入水中使用!
- 请将本产品放在儿童接触不到的地方。 如果电池被意外吞下或放置在身体的任何部位,请立即就医,否则可能会导致严重的内部烧
- 伤或其他危险。 如果电池盒没有完全关闭,请停止使用本产品并将其置于儿童接触不到的地方。 • 请勿给电池充电。如果电池电量不足,请及时更换。更换电池时,请勿调换极性。
- 为防止电池漏液和腐蚀损坏产品,请在长时间不使用时取出电池。 如里电池漏液、清游免接触皮肤或眼睛、如不慎接触皮肤或眼睛,请立即用清水冲洗并就医。 • 将废电池放在儿童接触不到的地方,并妥善处理或回收遵守当地法律法规。

技术规格

重量: 8.7g FCC ID: 2BM7E-AT53A

型号: AT53A 电池: 使用CR2032锂金属电池(包含) **连接技术:** 蓝牙 5.3 操作系统: iOS、iPadOS 14.5及以上 声音搜索: 10-20M (室内) / 20-50M (室外) 音量 83.10-20M (皇内/7 20-30M 音量 83.6B (声音输出在10cm) 工作温度: -10—45°C 材料: 防火PC 尺寸: 43.5*43.5*7.95mm

包装内容 蓝牙追踪器 X 4

产品绑定

1. 去掉绝缘膜

5. 点击"连接"并重命名




















1. 打开"查找我的应用程序",选择"物品"标签,或者打开Apple Watch上的"查找物品"应用程序。 2. 从列表中点击你的智能蓝牙追踪器。 3. 点击"方向",按照地图上显示的距离找到智能蓝牙追踪器;








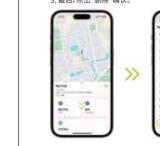







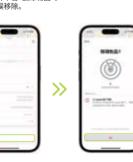

电池更换



1. 逆时针旋转打开



2. 将电池正极性(+)朝上放入

3. 顺时针旋转关闭



提示"待命时通知"

1.打开"查找我的"应用程序并选择"物品"选项卡,或打开Apple Watch上的"查找物品"应用程序。 2.从列表中点击你的智能蓝牙追踪器。 3.在"通知"下切换"待命时通知"。 4.当你离开你的智能蓝牙追踪器,并且它不再在你的设备范围内时,你会收到通知。

警告"发现时通知"

1.在"通知"下,切换"发现时通知"。 2.当您的智能蓝牙追踪器被另一台"查找我的"网络设备看到时,您将收到其位置的通知。 *注意: "发现时通知" 只能在智能蓝牙追踪器器超出范围时激活

振动"丢失模式"

1.打开"查找我的"应用程序并选择"物品"选项卡,或打开Apple Watch上的"查找物品"应用程序。 2.从列表中点击你的智能蓝牙追踪器。 2.外yky中,压加的的智能超对追捧器。 3.在"丢失模式"下点击"自用"。 4.将弹出一个详细说明丢失模式的屏幕,点击"继续"。 5.输入您的电话号码或电子邮件地址,然后点击"下一步" 6.您可以输入一条消息。该消息将与找到您物品的人共享 7.点击"激活"以启用"丢失模式"

*注意:启用"丢失模式"时,会自动启用"发现时通知" *注意:启用"丢失模式"时,您的智能蓝牙追踪器将被锁定,无法与新设备配对

从我的应用中移除智能蓝牙追踪器 1.打开"杏找我的"应用并选择"物品"选项卡。

2.从列表中选择您的智能蓝牙追踪器。 3.请确保"丢失模式"已禁用。 4.滚动到屏幕底部并点击"移除物品"

箱の中

智能牙追跡装置 X 4 保護カバー X 4

不正な追跡

製品のバインディング

3M 粘着紙 X 8

5.将打开一个摘要,点击"移除"以确认 2.4月17十一;消寒,尽血移除以塘以。 6.在成功从"查找我的"应用程序中移除智能蓝牙查找器后,打开外壳并取下电池。 7.插入电池并听到声音。这个声音表示电池已连接。当你听到声音时,重复操作四次:取出电池,插入电池,你应该每次插入电池时都会听到声音;在整个过程中总共会听到五次声音。第五个音调

2 iPhoneで「探す」アプリを 3 「持ち物」> 「持ち物を追加

7.8 P

4. 智能牙追跡装置

与刖面四个个问。 8.智能蓝牙查找器现在已经重置,并准备与新的Apple ID配对。

5.「接続」をクリックして名前を変更します

「探す」ネットワークアクセサリがユーザーから離れ、時間の経過とともにユーザーと一緒に移動していることが判明した場合、次の2つの方法のいずれかで通知されます。
1. iPhone または iPad をお持ちの場合は、「探す」から Appe デバイスに通知が送信されます。この機能は、iPhone または iPad iPhone 14.5 以降で利用できます。飼い主が一定時間離れている

ときに鳴らされる音。 2. iOS デバイスやスマートフォンをお持ちでない場合は、「探す」ネットワーク機能を使用すると、

湿気を避け、製品を清掃する際にはエアゾール、溶剤、研磨剤を使用しないでください。

Apple の「探す」ネットワークを使用すると、iPhone、iPad、Mac の「探す」アプリ、または Apple Watch の「アイテムを探す」アプリを通じて、互換性のある個人用アイテムを簡単かつ安全に見つ

りることができます。Apple の「探す」アクマ使用してこのアイテムを見りられば、戦新パーションの iOS、iPadOS、または macOS を推奨します。Apple Watch の「Find Things」アプリには、watchOS の最新パージョンが必要です。Works with Apple パッジを使用するということは、製品がパッジで識別されるテクノロジーと連携するように設計されており、Apple の Find My Network 製品仕様と要件を満たしていることが製品メーカーによって認定されていることを意味

けることができます。Apple の「探す」アプリを使用してこのアイテムを見つけるには、最新バー

L.ます。Apple は、本デバイスの操作、本製品の使用、または安全性および規制基準への準拠に

Apple Apple Find My, Apple Watch、Find My, Phone、iPad、iPadOS、Mac、macOS、watchOS は、Apple Inc. の商標です。

誤って飲み込まないように、お子様の手の届かない場所に保管してください。製品には電池が内蔵されております。膨れがある場合は使用を中止してください。

知らないうちに他人に追跡されるのを防ぐことができます

製品を過度の温度にさらさないでください。一度水に浸かってしまったら使用を中止してください。

安全に関する注意事項

APPLE探すについて

ついては一切青仟を負いません。

未经授权跟踪

如果发现任何与其使用者分离,"查找我的"网络配件随着时间的推移与您一起移动,您将通过以 如果发现任何与其使用者分离,"查找找的"网络配件随着时间的推移与巡一起移动,巡舟进过从下两种方式之一收到通知: 1.如果您有iPhone或iPad,"查找我的"将向您的Appe设备发送通知。此功能在iOS或iPad 0S14.5或更高版本上可用。,在一段时间内不与其主人在一起时,会发出声音。 2.如果你没有iOS设备或智能手机,"查找我的"网络配此功能是为阻止他人在你不知情的情况下

- 避免潮湿,不要使用气雾剂、溶剂或研磨剂清洁产品。

Apple查找我的网络可通过iPhone、iPad、Mac上"查找我的"应用或Apple Watch上的"查找物品"应用,轻松、安全地查找兼容的个人物品。要使用Apple"查找我的"应用程序来定位此物品:最新版本的iOS、iPadOS或macOS是推荐。Apple Watch上的"查找物品"应用程序需要最新版本的watchOS。使用Works with Apple 徽章意味着产品专为使用徽章中标识的技术而设计,并且已经过产品制造商的认证,符合Apple查找我的网络产品规格和要求。Apple不对本设备的操作或本产品的使用或其对安全和监管标准的遵实体等记者。

FCC符合性声明


本设备符合 FCC 规则第 15 部分的规定。操作须遵守以下两个条件:(1) 本设备不得造成有害干扰,(2) 本设备必须接受任何收到的干扰,包括可能导致意外操作的干扰。

未经合规负责方明确批准的更改或修改可能会使用户无权操作该设备。 注意:本设备已通过测试,符合 FCC 规则第 15 部分对 B 类数字设备的限制。这些限制旨在为住宅安装提供合理的保护,防止有害干扰。本设备会产生、使用并能辐射射频能量,如果不按照说明进行安装和使用,可能会对无线电通信造成有害干扰。但是,不能保证在特定安装中不会并工程,如果不必要的工程。 派统功业门及条件的,引起五分元345型间边风音,76。 已是,不能除加过特定及条件不 会发生干扰。如果本设备确实对无线电或电视接收造成有害干扰。(可通过关闭和打开设备来确 定),则建议用户尝试通过以下一种或多种措施来纠正干扰:(1)重新调整或重新放置接收 天线。(2)增加设备与接收器之间的距离。(3)将设备连接到与接收器所连接电路不同的 电路插座上。(4)咨询经销商或经验丰富的无线电/电视技术人员寻求帮助。

Omnibar 是 Omnibar LLC 的商标。本用户指南中的所有图片和文字均为 Omnibar 的版权所有。本指南中的照片和插图可能与实际产品不同。 该装置已经过评估,可满足一般射频暴露要求。本装置可在便携式暴露条件下使用,不受任何

电子废弃物说明

处置或回收本产品电池不应作为家庭垃圾或扔进火中。当您决定处置本产品 电池时,请根据当地环境法规处理电池,以避免爆炸。



1.反時計回りに回して開く

2. プラス極 (+) を上にして電池を

3.時計回りに回して閉じます

電池: CR2032リチウム金属電池(付属)を使用 電池: CR2032リチウム金属電池(付属)を使用接続技術: BLUETOOTH 5.3 オペレーティングシステム: (OS、iPadOS 14.5いじょう音声検索: 10~20M(屋内) / 20~50M(屋外) 音量: 83DB (10CMでの音出力) 動作温度: -10~45℃ 材質: 耐火PC サイズ: 43.5*4.35*7.95mm 番号: 8.70

重要な安全注意事項

この製品を使用する前に、すべての指示をよくお読みください:

重量: 8.7g FCC ID: 2BM7E-AT53A

1.「探す」アプリを開いて「持ち物」タブを選択するか、Apple Watchで「持ち物探す」アプリを開き

このパワーパンクを使用する前に、すべての警告と指示をよくお読みください。爆発、火災、感電、 人身傷害などのリスクを回避するために、これらのガイドラインと、パワーパンクで使用する機器 の製造元からのガイドラインを厳守してください。のmibar は、この情報を予告なしに更新する 場合かあります。最新の更新および最新の使用説明書については、www.omnibar.com をご覧く

バッテリーがひどく膨張している場合は、直ちに使用を中止してくたさい。
 高温環境では使用しないでください。
 バッテリーを水に浸さないでください。
 この製品はお子様の手の届かないところに保管してください。
 電池を譲って飲み込んだり、身体の一部に入れたりした場合は、重度の火傷やその他の危険が生じる可能性があるため、直ちに医師の診察を受けてください。
 電池ボックスが完全に閉まらない場合は、製品の使用を中止し、お子様の手の届かない場所に保険時でイヤギい。

所に保管してください。 ・ バッテリーを充電しないでください。電池残量が少なくなった場合は、早めに交換してください。 電池を交換するときは、極性を逆にしないでください。 電池の液漏れや腐食による製品の損傷を防ぐため、長期間使用しない場合は電池を取り外

電池が漏れた場合は、皮膚や目に触れないようにしてください。誤って皮膚や目に触れた場

バッテリーがひどく膨張している場合は、直ちに使用を中止してください。

1「通知」の下にある「発生時通知」を切り替えます。 現在の目的に対し、現在の関係に対しているリネットワーク装置によって認識されると、その位置に到達したことが通知されます。

警告「発見時通知」

*注意:「通知時刻通知」は、智能牙追跡装置が一定期間を超えた場合にのみ有効になります。 振動「紛失モード」

*注意:「紛失モード」が有効になっている場合、「見つかったときに通知」も自動的に有効になります。

アプリから智能牙追跡装置が一を削除する

FCC適合宣言です このデバイスは、FCC 規則のパート 15 に準拠しています。操作には、次の 2 つの条件が適用されます。(1) このデバイスは有害な干渉を引き起こしてはなりません。(2) このデバイスは、望ましくない操作を引き起こす可能性のある干渉を含め、受信した干渉をすべて受け入

警告: 準拠責任者によって明示的に承認されていない変更または修正を行うと、ユーザーの機器操作権限が無効になる場合があります。
注: この機器は、FCC 規則のパート 15 に従って、クラス B デジタル デバイスの制限に準拠していることがテストで確認されています。これらの制限は、住宅への設置において有害な干渉に対する適切な保護を提供するように設計されています。この機器は、無線周波数エネルギーを生成、使用、および放射する可能性があり、指示に従って設置および使用しないと、無線通信に有害な干渉を引き起こす可能性があります。ただし、特定の設置で干渉が発生されませる。 たいという保証はありません。この機器がラジオやテレビの受信に有害な干渉を引き起こ しないという状能はありません。この機能がフジイヤアレビの受害に任意な干渉を引き越し している場合(機器の電源のオンパイアによって確認できます)、ユーザーは次の1つ以上 の対策を実行して干渉を修正することをお勧めします。 (1) 受信アンテナの方向を変える が、場所を移動します。(2) 機器と受信機の距離を広げます。 (3) 受信機が接続されて いる回路とは別の回路のコンセントに機器を接続します。 (4) 販売店または経験豊富なラ ジオ/テレビ技術者に相談してください。

Omnibar は Omnibar LLC の商標です。このユーザー ガイドのすべての画像とテキストの著作権は Omnibar が所有します。このガイドの写真やイラストは実際の製品と異なる場合が

この装置は、一般的な無線周波数の露出要件を満たすように評価されています。この装置は 、任意の制限を受けることなく、携帯型の露出条件で使用することができます。 WEEE情報

廃棄およびリサイクルに関する情報: この製品およびバッテリーは、家庭で みとして使用したり、火の中に投げ込んだりしないでください。 製品およ びバッテリーを廃棄する場合は、爆発を防ぐために、地域の環境法に従っ てバッテリーを取り扱ってください。

警告: 分解、粉砕、火や高温への曝露はしないでください。著しい膨張が起こった場合は、直ちに使用を中止してください。水に浸した後は絶対に使用しないでください。



非熱帯気候での安全な使用にのみ適しています

LIST OF TOXIC AND HAZARDOUS SUBSTANCES IN ELECTRONIC PRODUCTS						
Part Name	Poisonous Or Harmful Substance Or Element					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Equipment	X	0	0	0	0	0

This form is prepared in accordance with SU/T 11364 Q: indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit requirements stipulated in GB/T 26572. X: indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements stipulated in GB/T 26572. The product you purchase may not contain all of the above components.

service life of 10 years under normal use condition. Some parts may also have an environmental service life label, and the number in the label shall prevail.

CONDITIONS THAT VOID THIS WARRANTY.

WARRANTY



合農並

1. Unauthorized repair, disassembly, or alteration of any kind. 2. Evidence of abnormal usage or misuse. Damage from dropping, abuse, or negligence.
 Damages caused by failure to follow the operating instructions.
 Tampering with the product's original serial number label and other similar markings.

6. Fake products, including those indicated by a missing product serial number or nonconformity between the product model and serial number. 7. Improper storage, such as long-term exposure to humidity or temperatures outside the parameters specified in the technical specifications of this user's guide.

8. Expiration of the product warranty.

FORCE MA. IFLIRE: Omnibar shall not be liable for any failure or delay in performing any of its

- A. Natural disasters (e.g., earthquakes, floods, hurricanes, wildfires) B. Acts of God
 C. War, invasion, or acts of terrorism
- G. Power outages or electrical failure: H. Supply chain disruptions

the seller to fill in and properly Keep it for later!

Remarks

+1(208) 252-5229

www.omnibar.com

安全说明

放置在几量接触不到的地方,以免意外吞食。
 产品内置电池,如有肿胀,请停止使用。
 不要将产品暴露在过高的温度下。
 产品浸没后,请停止使用。

关于Apple查找我的

可肯龙贝克。 Apple.Apple Find My.Apple Watch、Find My.Phone.iPad.iPadOS.Mac.macOS和 watchOS是苹果公司的商标。

マンロリス・ア、 1. 「探す」アプリを開いて「持ち物」タブを選択するか、Apple Watchで「持ち物探す」アプリを開きます。 2. リストから智能牙追跡装置ーをタップします。 3. 「経路」をクリックし、地図に表示された距離に従って智能牙追跡装置ーを見つけます。

3. 「サウンドを再生」をタップして、智能牙追跡装置一のビーブ音を鳴らします。 5. 「サウンドを停止」をタップして、見つけたらビーブ音を停止します。

·デバイスタブページで、メニューを下にスライドし、「持ち物を削除」をクリックします。

-

製品のバインディングを削除

仅适用于非热带气候下安全使用 中国制造

バッテリー交換

ヒント「待命時通知」

なッ。 2. リストから智能牙追跡装置一をタップします。 2. ソストのつ目はアルロッキューマンノンとより。 3. 「通知」で「待命時通知」トグルが有効になります。 4.智能牙追跡装置一を配置してデバイスの範囲内に消えたときに通知が届きます。

1「探す」アプリを聞いて「持ち物」タブを選択するか、Apple Watchで「探す」アプリを聞きます。

*注意: 1%分失モード」が有効になっている場合、智能牙追跡装置一はロックされ、新しいデバイスとペアリングできなくなります。

1. 「探す」アプリを開き、「持ち物」タブを選択します。
2. リストから智能牙追跡装置が一をタップします。
3. 「紛失モード」が無効になっていることを確認してください。
4. 画面の一番下までスクロールし、「持ち物を削除」をタップします。
5. 概要が開くので、削除」をタップして確認します。
6. 「探す」アプリから智能牙追跡装置がを正常に削除したら、ケースを開いてバッテリーを取り外

します。 7. パッテリーを挿入して音が聞こえます。この音はパッテリーが接続されていることを示します。 音が聞こえたら、パッテリーを取り外し、挿入するという操作をさらに 4 回繰り返します。パッテリ ーを挿入するたびに音が聞こえます。プロセス全体で合計 5 つの音が聞こえます。5 番目の音は

最初の4つの音とは異なります。 8. 智能牙追跡装置が一がリセットされ、新しい Apple ID とペアリングできるようになりました。

obligations under this warranty if such failure or delay is caused by or results from even beyond its reasonable control, including, but not limited to:

D. Civil unrest, riots, or strikes E. Government actions, regulations, or restrictions

Dear user, this warranty card is your future warranty application voucher, please cooperate with

Zip code Contact Number Address of correspondence Seller information

Date of sale

The above information shall be filled in by the buyer