# OPERATION

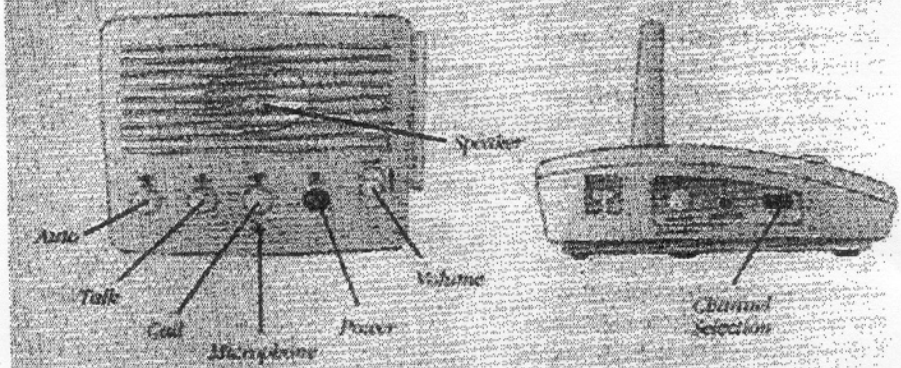


You can use up to eight units with this intercom system. For best performance, units should be in different rooms, or located at least 35 feet away from each other.

### Power

To turn the unit on or off, press and release POWER. The green POWER light is on when the unit is on.

### Channel Selection

Units must be set to the same channel in order to communicate. (For example, if you set one unit to Channel B, you must set other units to Channel B in order for them to communicate.) Slide the switch on the left side of the unit to A, B, or C.

### Volume

Slide the VOLUME switch up to increase listening volume, or down to decrease.

### Call

Press and hold CALL to signal units set to the same channel (the red CALL light goes on). The receiving units sound a signal as long as you hold CALL.

### Talk

Press and hold TALK to talk to other units on the same channel (the red TALK light goes on). Release TALK to listen for a reply (the unit automatically switches to receive mode, and the TALK light goes off).

*NOTE: The person at the receiving unit must press TALK to respond, unless AUTO mode is on at that unit.*

### Auto

Press and release AUTO to set the unit in the automatic voice-activated mode (the red AUTO light goes on). This allows "hands-free" conversations between units set to the same channel.

When you speak, the TALK light on your unit goes on, and other units on the same channel receive your message. After approximately five seconds, another unit can reply (your TALK light goes off).

*NOTE: If AUTO mode is on, it is cancelled when you press CALL.*