

H7133 英法说明书

版本:1.0

尺寸:145×210 (mm)

材质:80G书页纸


工艺:单色印刷

折叠方式:骑马订

页数:32页

GoveeLife

Model: H7133

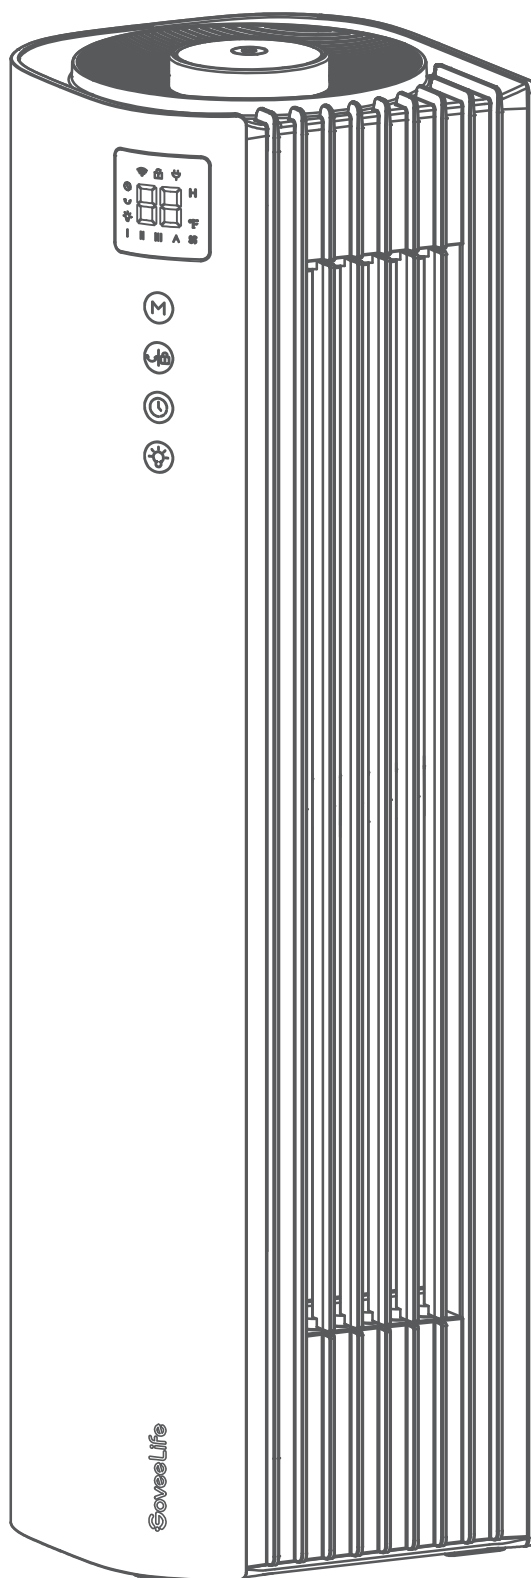

User Manual

Smart Space Heater Pro (Two Positions)

English

01

Français

14

Contents

Important Instructions	02
Included in the Box	03
Introduction	03
Part Names	
Controls	
Indicator Status	
Functions	
Getting Started	08
Govee Home App	10
Downloading Govee Home App	
Pairing with Govee Home App	
Care & Maintenance	11
Cleaning	
Maintenance	
Troubleshooting	11
For Smart Space Heater Pro	
For App & Connectivity	
Appendix	13
After-Sales Service	
Specifications	

GoveeLife Smart Space Heater Pro (Two Positions) User Manual

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injuries to persons, and hyperthermia, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) away from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove the plug from the outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injuries to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Faulty wall outlet connections may cause the wall outlet to overheat. Be sure that the heater plug fits tightly into the outlet before using. When using the heater, check to make sure the heater plug is not overheating. If necessary, have a qualified electrician check or replace the wall outlet.
- This heater can only be used when the ambient temperature is normal. When the heater detects that the ambient temperature is too high, it will automatically shut down. Please inspect for any objects on or adjacent to the heater that may cause high temperatures.

- For US: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet in only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

SAVE THESE INSTRUCTIONS


Included in the Box

Item	Quantity
Space Heater	1
User Manual	1
Quick Start Guide	1


Introduction

GoveeLife Smart Space Heater Pro (Two Positions) can be placed vertically or horizontally. You can lay it flat horizontally to distribute air up and down to warm the whole body. Equipped with PTC heating elements, this smart heater can heat up in 3 seconds after it is powered on, bringing you instant warmth and maximum home comfort during cold weather.

Part Names

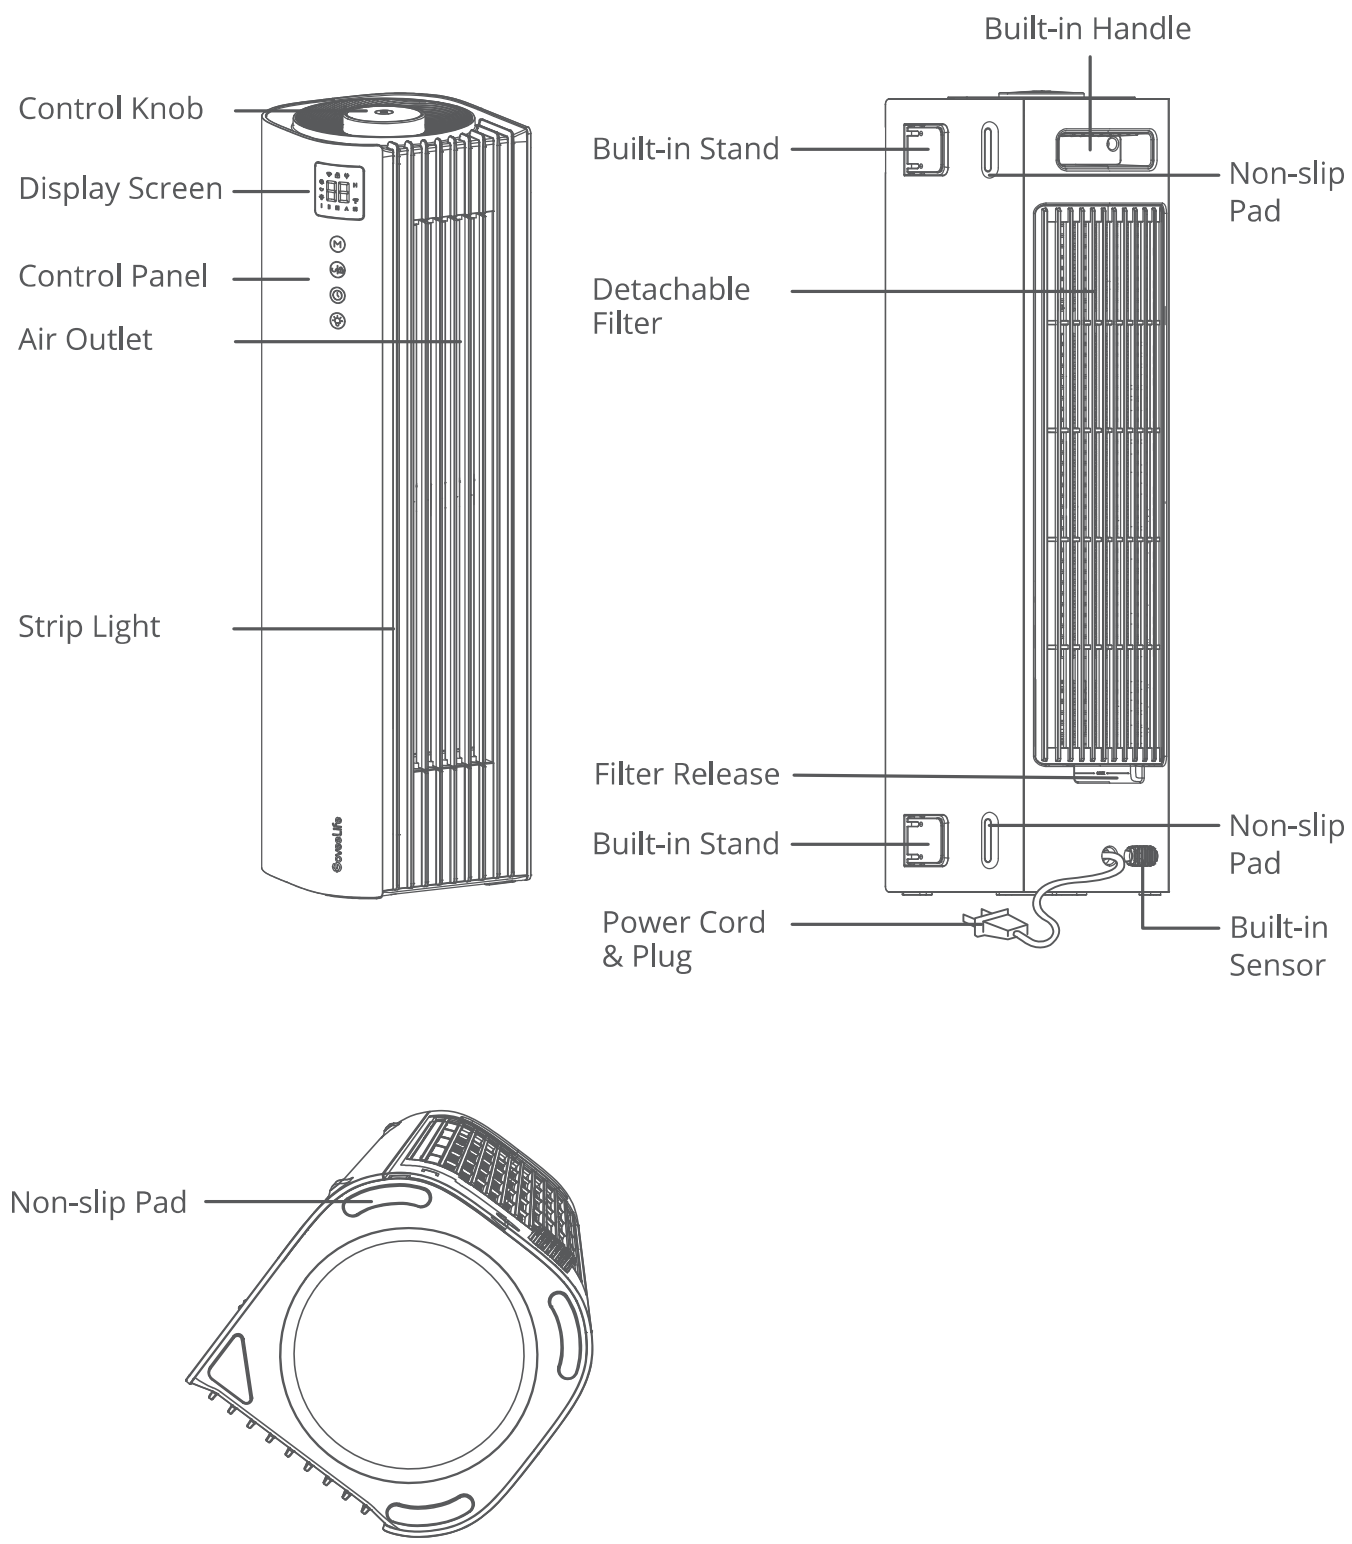

Controls

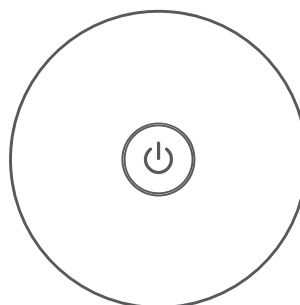

Control Knob

Press the control knob to power on or off.

In Auto Mode, rotate clockwise to increase the target temperature and counterclockwise to decrease the target temperature.

Note:

- The fan will continue working for 15 seconds after powering off to clear any residual heat to increase product lifespan.
- Follow the in-app instructions to press the knob when pairing with the app.
- Rotating the control knob will only work in Auto Mode, Timer Mode, or when adjusting the ambient lighting.



Mode Button

Touch to cycle through Heat Setting I, II, III, Auto Mode, and Fan Mode.



Timer Button

Set a timer: After touching the Timer Button, rotating the knob  clockwise within 5 seconds will increase the time by 1h, while rotating it counterclockwise will decrease the time by 1h. After that, wait for a while or operate other functions to complete the setup. The timer can be set for a duration of 1 to 24 hours.

Check current timer: Touch the button, and the screen will display the remaining time (rounded up to the nearest integer). For more accurate details, check the app.

Turn off the timer: Press and hold the button for 2 seconds to turn off the current timer setting.



Air Deflector and Lock Button

Air Deflector (adjust the airflow direction): Touch to turn on the air deflector. It will swing back and forth. Touch again to turn off.

Lock: Touch and hold for 3 seconds to turn the lock on/off. When the lock is on, other buttons will not respond to any touch, preventing children from accidentally changing any settings.

Note:

- For safety reasons, when using the heater horizontally for the first time, the air deflector will be temporarily unavailable.
-  will flash when any other button is touched to indicate the lock is on.




Ambient Lighting Button

Touch the button to turn on the ambient lighting. Touch the button for 2s to turn off the ambient lighting.

Brightness Adjustment:

After touching the ambient lighting button, rotating the knob  clockwise within 5 seconds will increase the brightness by 5%, while rotating it counterclockwise will decrease the brightness by 5%. After that, wait for a while or operate other functions to complete the setup.

Note: Go to Govee Home App for more brightness settings and lighting scenes.



Recovery Button

Press and hold these two buttons simultaneously for 5 seconds until all indicators flash once to restore the heater to factory settings if it cannot function well. Then the heater will disconnect from Wi-Fi and Bluetooth and automatically reboot.

Note: After restoring the heater to factory settings, go to “My Devices” page on the app to delete this heater first, otherwise it cannot be added to the app again.

Indicator Status

Indicator	Working Status	Light Status
I	Heat Setting Low	Solid White
II	Heat Setting Medium	Solid White
III	Heat Setting High	Solid White
A	Auto Mode	Solid White
🌀	Fan Mode	Solid White
🔌	Powered On	Solid Red
	Any Button Touch After Being Tipped Over	Flashes 3 Times
🔒	Safety Lock On	Solid White
	Safety Lock Triggered	Flashes White
🕒	Timer is Set	Solid White
	Timer is Setting	Flashes White for 5s
☺	Air Deflector is Turned On	Solid White
	Air Deflector is Initializing	Flashes White
💡	Ambient Lighting is On	Solid White
	Ambient Lighting is Setting	Flashes White for 5s
📶	Wi-Fi is Connected	Solid White
	Wi-Fi is Connecting	Quickly Flashes White
88°F	Displaying Ambient Temperature	Solid White
	Target Temperature is Setting	Solid White and Flashes
88°H	Timer is Setting	Solid White and Flashes
E0	Wi-Fi Chip is Malfunctioning	Solid White
E1	Built-in Sensor Failed	Solid White
E2	Air Deflector Initialization Failed	Solid White

Indicator	Working Status	Light Status
All Indicators	Any Button Touch After Overheat Protection is Triggered	Flash 3 Times

Note: According to related safety standards, the power indicator should always light red when the heater is working.

Functions

Memory Function

This heater will memorize the previous settings (heat settings, air deflection, Wi-Fi connection) when it is powered off. The settings will be active again when this heater is turned on.

24-hour Automatic Shutdown

This heater will shut down automatically when it has been used for 24 hours straight in case the user forgets to power it off.

Overheat Protection


When the heater detects that the ambient temperature exceeds a specific temperature, it will automatically power off.

Tip-over and Motion Protection


When the heater is moved or knocked over, it will automatically power off and stop all functions. This protection can be dismissed by placing the heater on a flat and sturdy surface and keeping it upright before using it again.

Getting Started

1. Remove all packaging and ensure the air inlet and outlet are not blocked by foreign objects.
2. Only plug the heater directly into a 120V wall outlet. Do not use an extension cord.

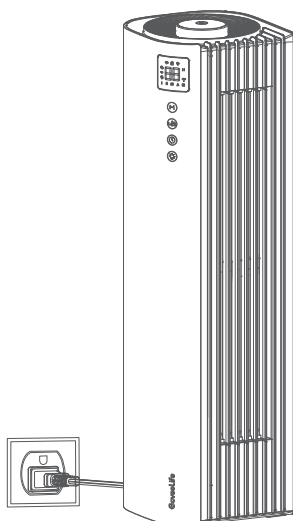


3. Ensure the power plug is firmly inserted into the outlet. An abnormal outlet connection may cause overheating.
 4. Place the heater on a firm, flat, and level surface free from obstructions and at least 3ft (1 meter) away from any wall or combustible materials.
- Note:** Do not cover the heater with any cloth or covering, especially over the air inlet and outlet.

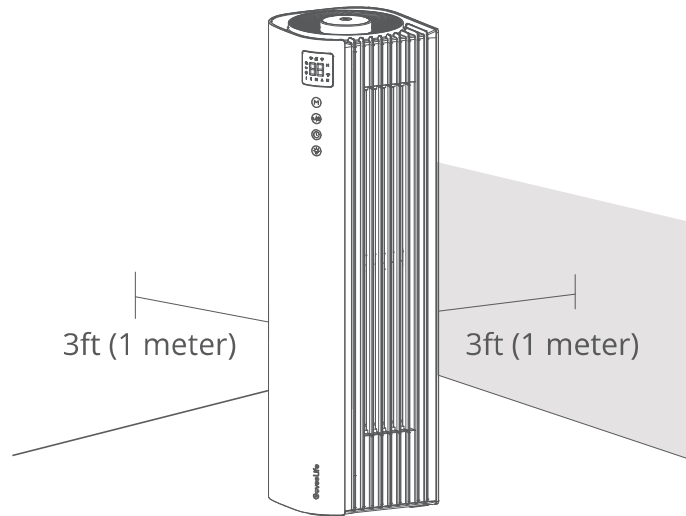


Place Horizontally (Optional)

1. If you want to lay the heater flat horizontally to warm your whole body, pull the two built-in stands out.

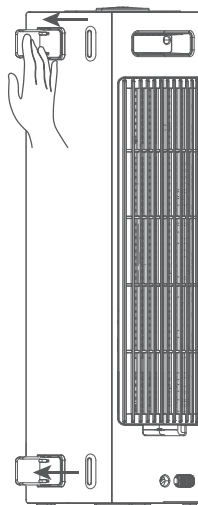

2. Place the heater on a firm, flat, and level surface free from obstructions and at least 3ft (1 meter) away from any wall or combustible materials.

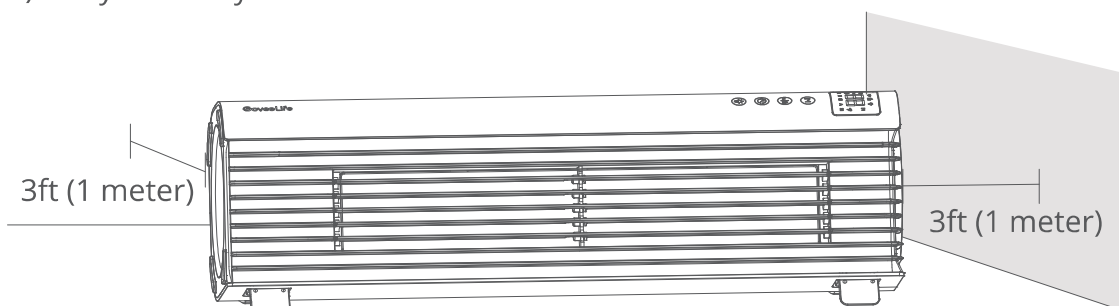

Note: If the built-in stands are not pulled out properly, the Tip-over Protection will be activated and you **will not** be able to turn on the heater.

Govee Home App

You can access more features using Govee Home App.

Downloading Govee Home App

To download Govee Home App, scan the QR code or search for "Govee" in the Apple App Store® (iOS) or Google Play Store (Android).



Note:

- Choose "Allow" to the permissions requested when opening Govee Home App for the first time. These permissions allow the app's features to function normally and are not used to record personal, private information.
- Due to ongoing updates, **Govee Home App** may be slightly different than shown in this manual. In case of any differences, always follow the in-app instructions.

Pairing with Govee Home App

1. Turn on your smartphone's Bluetooth. Connect to your Wi-Fi router's 2.4GHz network. 5GHz is not supported.
2. Android users turn on Location Services; IOS users choose Location ->Always On in the pop-up window while adding devices.

Note:

- For IOS users, if you chose Location->Never, it might result in notifications/alert exceptions. It is recommended to follow Settings ->Govee Home ->Location ->Always On to obtain the best experience.
 - Govee Home WILL NOT collect, use, or share your location in any way.
3. Open Govee Home App, tap the "+" icon in the top right corner and search for "H7133."
 4. Tap the device icon and follow the in-app instructions to complete the Bluetooth and Wi-Fi connection.

Note:

- Method to turn off Bluetooth and Wi-Fi connection: Press and hold the Ambient Lighting Button and Mode Button for 5s to restore the device to factory settings, then go to "My Devices" page on the app to delete this heater first, otherwise it cannot be added to the app again.

Note:

- You can use Govee Home App to connect your heater to Amazon Alexa or Google Assistant. Follow the in-app instructions to connect to each voice assistant.
- Govee Home App is being continually updated and its features do expand.

Care & Maintenance

Cleaning

To achieve the best performance, clean the heater at least once during the operating season or before storing it when it will not be used for a long period of time.

- Turn the heater off and unplug it from power, then use a soft damp cloth to clean its body, air inlet, and outlet.
- Do not submerge the heater in water and never allow water to drip into it.
- Do not risk your safety to detach the heater to clean its blade. Otherwise, it may damage the heater, shorten its service life, or cause serious danger.

Maintenance

Follow the cleaning instructions and allow all parts to dry completely before storing the heater in a cool, dry place.

Troubleshooting

The troubleshooting section below is for solving frequently asked questions. If your problem persists, please contact Customer Support.

For Smart Space Heater Pro

Problem	Possible Causes	Solution
The heater cannot be turned on.	The power cord is not properly plugged into the outlet.	Plug the power cord into a live outlet.
	Unsure how to turn it on.	Press the control knob at the top of the product.
The power plug is hot.	The power plug and the outlet are not securely connected.	Securely reinsert the plug into the outlet. If necessary, have a qualified electrician to check if the power plug prongs are intact.

Problem	Possible Causes	Solution
The heater suddenly shuts down when hot air is coming out.	Failed to supply power to the heater.	Ensure your circuit breaker or fuse is working properly.
	Tip-over Protection has been triggered.	Place the heater on a firm and level surface free from obstructions. Keep it upright and turn it on again.
	Overheat Protection has been triggered.	Unplug from power and wait for 30 minutes for the heater to cool down before plugging back in. The heater will automatically turn on again when the surrounding temperature is below 86°F (30°C).
The air deflector is malfunctioning. The screen displays error code "E2".	The structure of the air deflector is manually altered.	Power on and try again.
	Foreign objects have entered the air deflector system.	Check whether there are any foreign objects in the air deflector. Power on and try again.
The screen displays "E0" or "E1".	Product exceptions	Contact Customer Support.

For App & Connectivity

- Cannot connect to Govee Home App.
 - Make sure your smartphone is powered on and is not connected with other Bluetooth devices.
 - Enable the smartphone's Location Services.
 - Try connecting with another smartphone.
 - Make sure your app is updated to the latest version.
 - Make sure you connect to your Wi-Fi router's 2.4GHz network and that the network is working correctly.
 - Make sure the Wi-Fi password you entered is correct.
 - Shorten the distance between the heater, Wi-Fi router, and the smartphone.
 - Make sure your heater and the Wi-Fi router are located away from appliances that produce electromagnetic radiation (e.g. microwave ovens, refrigerators, etc.)
 - If you are using a VPN, try turning it off and then connecting the heater.
 - Disable portal authentication for your Wi-Fi network. If portal authentication is enabled, this heater will not be able to access your Wi-Fi network, and setup will fail. Portal authentication means that you need to sign in to your Wi-Fi network through a web page before you can use the Internet.

2. Cannot find the device on “Bluetooth Device Nearby” page of the app.
 - The heater may be connected with another smartphone. Disconnect it from the other smartphone first.
3. The heater is offline.
 - Make sure the heater is plugged in and powered on, then refresh “My Devices” page in Govee Home App by swiping down on the screen.
 - Make sure your router is connected to the internet, and your smartphone’s network connection is working.
 - If the Wi-Fi password has been changed, the heater will automatically go offline. Try connecting it to the network again.
 - Delete the offline heater from Govee Home App, then add and reconfigure the heater again in the app.

Appendix

After-Sales Service

 Warranty: 12-Month Limited Warranty

 Support: Lifetime Technical Support

 Email: support@govee.com

 Official Website: www.govee.com

 @Govee  @govee_official  @govee.official

 @Goveeofficial  @Govee.smarthome

Specifications

Model	H7133
Power Voltage	120V~ 60Hz
Rated Power	High: 1500W Medium: 1000W Low: 700W
Deflection Angle	Standing Status: 60 degrees Lying Status: 40 degrees
Net Weight	8.26lbs/3.75kg
Dimensions	165.4*161*567.2mm/6.5*6.3*22.3inches

Contenus

Instructions importantes	15
Contenu de la boîte	16
Introduction Noms de pièces Commandes État du voyant Fonctions	16
Démarrage	21
Application Govee Home Téléchargement de l'Application Govee Home Association à l'Application Govee Home	23
Entretien et maintenance Nettoyage Maintenance	24
Dépannage Pour le radiateur Smart Space Heater Pro Pour l'application et la connectivité	24
Annexe Service après-vente Caractéristiques techniques	26

Radiateur GoveeLife Smart Space Heater Pro (Deux positions) Manuel d'utilisation

ISTRUCTIONS IMPORTANTES

Vous devez toujours respecter certaines mesures de sécurité de base pendant toute utilisation des appareils électriques afin de réduire les risques d'incendie, de choc électrique et de blessures corporelles et d'hyperthermie, notamment les suivantes :

- Lisez toutes les instructions avant d'utiliser ce radiateur.
- Ce radiateur est chaud pendant son utilisation. Pour éviter des brûlures, ne laissez pas les surfaces chaudes entrer en contact avec la peau. Le cas échéant, tenez ce radiateur par les manches pour le déplacer. Maintenez les matériaux combustibles tels que les meubles, les oreillers, la literie, le papier, les vêtements et les rideaux à au moins 3 pieds (0,9 m) de l'avant du radiateur et maintenez-les éloignés des côtés et de l'arrière du radiateur.
- Nous vous recommandons vivement de faire très attention lorsque le radiateur est utilisé par ou près des enfants ou de personnes handicapées, surtout si le radiateur est allumé sans supervision.
- Débranchez le radiateur chaque fois qu'il n'est pas utilisé.
- Ne branchez pas le radiateur avec un cordon ou une prise endommagés, après un dysfonctionnement, ou si l'appareil est tombé ou endommagé d'une quelconque manière. Mettez le radiateur au rebut ou retournez-le à un centre de maintenance autorisé pour examen ou pour réparation.
- Ne l'utilisez pas à l'extérieur.
- Ce radiateur ne doit pas être utilisé dans les salles de bain, les buanderies et tout autre emplacement humide en intérieur. Ne placez jamais le radiateur à un endroit où il pourrait tomber dans une baignoire ou un autre réservoir d'eau.
- N'installez jamais le cordon d'exécution sous les revêtements de sol. Ne recouvrez pas le cordon avec du tapis, des glissières ou d'autres revêtements de ce type. Ne faites pas passer le cordon sous des meubles ou des appareils. Rangez le cordon loin des zones à forte circulation où l'on pourrait trébucher dessus.
- Pour débrancher le radiateur, éteignez les commandes, puis retirez la fiche de la prise.
- N'insérez pas et ne laissez pas de corps étrangers entrer dans une voie de ventilation ou une sortie d'air au risque de causer un choc électrique, un incendie ou d'endommager le radiateur.
- Pour prévenir tout risque d'incendie, ne bloquez pas les voies d'entrée et de sortie de l'air de quelque manière que ce soit. N'utilisez pas ce radiateur sur des surfaces souples, telles que le lit, sur lesquelles les ouvertures pourraient être bloquées.
- Un radiateur comporte des éléments chauds et en forme d'arc ou pouvant causer des étincelles. N'utilisez pas ce radiateur dans des endroits où le gasoil, la peinture, ou tout autre liquide inflammable sont utilisés ou stockés.
- Utilisez ce radiateur uniquement selon les instructions fournies dans ce manuel. Toute autre utilisation non recommandée par le fabricant peut provoquer un incendie, un choc électrique ou des blessures corporelles.

- Branchez toujours les radiateurs directement à une prise murale/douille. Ne les utilisez jamais avec un cordon d'extension ou une rallonge (prise/rallonge multiprise).
- Un branchement défectueux pourrait causer la surchauffe de la prise murale. Assurez-vous que la fiche du radiateur tient fermement dans la prise avant toute utilisation. Vérifiez de temps en temps pendant l'utilisation du radiateur pour s'assurer que la prise ne surchauffe pas. En cas de besoin, demandez à un électricien qualifié de vérifier ou de remplacer la prise murale.
- Ce radiateur ne peut être utilisé que lorsque la température ambiante est normale. Le radiateur s'arrête automatiquement dès qu'il détecte que la température ambiante est trop élevée. Veuillez vérifier qu'il n'y a aucun objet sur ou à proximité du radiateur pouvant causer une élévation de la température.
- Pour les États-Unis : cet appareil est équipé d'une fiche polarisée (une lame est plus large que l'autre). Afin de réduire le risque de choc électrique, cette fiche est conçue pour être insérée dans une prise polarisée dans un seul sens. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si elle n'est toujours pas adaptée, contactez un électricien qualifié. Ne tentez pas de contourner cette fonction de sécurité.
- L'hyperthermie peut entraîner la mort. Les symptômes de l'hyperthermie sont, entre autres, une température corporelle élevée, des maux de tête, des nausées, des vomissements, de la fatigue, des étourdissements, des évanouissements et un pouls rapide. Si vous commencez à ressentir des symptômes de l'hyperthermie, éteignez le radiateur et consultez un médecin.
- Pour éviter des températures ambiantes excessives qui peuvent provoquer une hyperthermie : NE LAISSEZ PAS le produit fonctionner sans surveillance dans un espace confiné autour des nourrissons ou des personnes ayant des capacités physiques, sensorielles ou mentales réduites.

CONSERVER CES INSTRUCTIONS



Contenu de la boîte

Article	Quantité
Appareil de chauffage	1
Manuel d'utilisation	1
Guide de démarrage rapide	1


Introduction

Le radiateur GoveeLife Smart Space Heater Pro (deux positions) peut être placé verticalement ou horizontalement. Vous pouvez le poser à plat horizontalement pour diffuser l'air de haut en bas et réchauffer l'ensemble du corps. Équipé d'éléments chauffants PTC, ce radiateur intelligent peut chauffer en 3 secondes après sa mise sous tension, pour vous apporter une chaleur instantanée et un maximum de confort à la maison par temps froid.

Noms de pièces

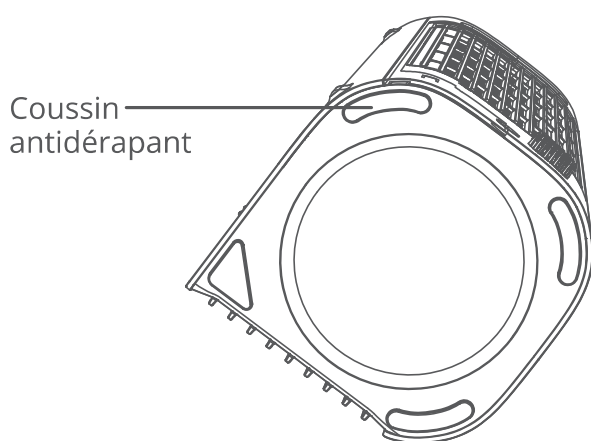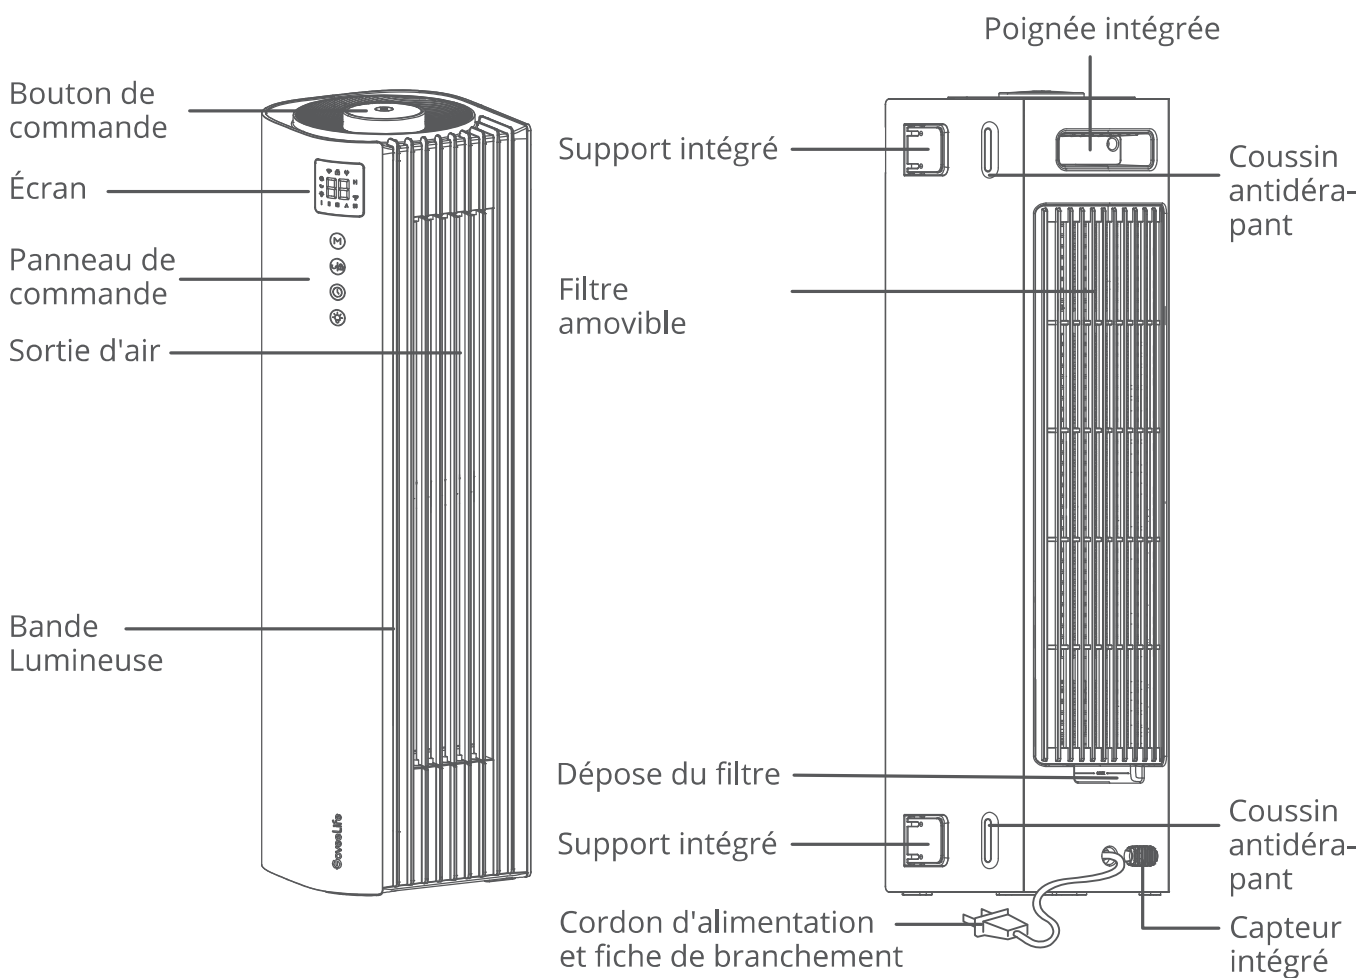

Commandes

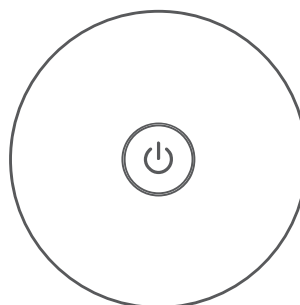

Bouton de commande

Appuyez sur le bouton de commande pour allumer ou éteindre.

En mode automatique, tournez dans le sens horaire pour augmenter la température cible et dans le sens antihoraire pour diminuer la température cible.

Remarque :

- Le ventilateur continue de fonctionner pendant 15 secondes après la mise hors tension pour éliminer toute chaleur résiduelle afin d'augmenter la durée de vie du produit.
- Suivez les instructions de l'application pour appuyer sur le bouton lors de l'appairage avec l'application.
- La rotation du bouton de commande ne fonctionne qu'en mode automatique, en mode minuterie ou lors du réglage de l'éclairage ambiant.



Mode Bouton

Touchez pour faire défiler les réglages de chaleur I, II, III, le mode automatique et le mode ventilateur.



Bouton du minuteur

Définir un minuteur : Après avoir touché le bouton de minuterie, tournez le bouton  dans le sens horaire dans les 5 secondes pour augmenter le temps de 1 h, ou tournez-le dans le sens antihoraire pour diminuer le temps de 1 h. Après cela, patientez un moment ou utilisez d'autres fonctions pour terminer la configuration. La minuterie peut être réglée pour une durée de 1 à 24 heures.

Vérifiez la minuterie actuelle : Touchez le bouton et l'écran affiche le temps restant (arrondi à l'entier supérieur le plus proche). Pour des détails plus précis, consultez l'application.

Éteindre la minuterie : Appuyez sur le bouton et maintenez-le enfoncé pendant 2 secondes pour désactiver le réglage actuel de la minuterie.



Déфлекteur d'air et bouton de verrouillage

Déфлекteur d'air (ajustez la direction du flux d'air) : Touchez pour activer le déflecteur d'air. Il oscille d'avant en arrière. Touchez à nouveau pour le désactiver.

Verrouillage : Maintenez le doigt appuyé pendant 3 secondes pour activer ou désactiver le verrouillage. Lorsque le verrouillage est activé, les autres boutons ne répondent pas lorsque vous les touchez, ce qui empêche les enfants de modifier accidentellement les paramètres.

Remarque :

- Pour des raisons de sécurité, lors de la première utilisation du radiateur à l'horizontale, le déflecteur d'air est temporairement indisponible.
-  clignote lorsque vous touchez un autre bouton pour indiquer que le verrouillage est activé.




Bouton d'éclairage ambiant

Appuyez sur le bouton pour allumer l'éclairage ambiant. Appuyez sur le bouton pendant 2 secondes pour éteindre l'éclairage ambiant.

Réglage de la luminosité :

Après avoir touché le bouton d'éclairage ambiant, tournez le bouton  dans le sens horaire dans les 5 secondes pour augmenter la luminosité de 5 %, et tournez-le dans le sens antihoraire pour réduire la luminosité de 5 %. Après cela, patientez un moment ou utilisez d'autres fonctions pour terminer la configuration.

Remarque : Accédez à l'application Govee Home pour plus de paramètres de luminosité et de scènes d'éclairage.



Bouton de reprise

Appuyez simultanément sur ces deux boutons et maintenez-les enfoncés pendant 5 secondes jusqu'à ce que tous les indicateurs clignotent une fois pour rétablir le radiateur aux réglages d'usine s'il ne fonctionne pas correctement. Ensuite, le radiateur se déconnecte du Wi-Fi et du Bluetooth et redémarre automatiquement.

Remarque : Après avoir restauré le radiateur aux paramètres d'usine, accédez à la page, « Mes appareils » de l'application pour supprimer d'abord ce radiateur, sinon il ne pourra plus être ajouté à l'application.

État du voyant

Voyant	État de fonctionnement	Couleur du voyant
I	Réglage de chaleur bas	Blanc uniforme
II	Réglage de chaleur moyen	Blanc uniforme
III	Réglage de la chaleur élevé	Blanc uniforme
A	Mode Automatique	Blanc uniforme
🌀	Mode Ventilateur	Blanc uniforme
🔌	Mise en marche	Rouge uniforme
🔌	Toute pression sur un bouton après avoir été renversé	Clignotement 3 fois
🔒	Verrouillage de sécurité activé	Blanc uniforme
🔒	Verrouillage de sécurité déclenché	Clignotement de blanc
🕒	La minuterie est réglée	Blanc uniforme
🕒	La minuterie est en cours de réglage	Clignote en blanc pendant 5 secondes
🌀	Le déflecteur d'air est activé	Blanc uniforme
🌀	Le déflecteur d'air est en cours d'initialisation	Clignotement de blanc
💡	L'éclairage ambiant est activé	Blanc uniforme
💡	L'éclairage ambiant est en cours de réglage	Clignote en blanc pendant 5 secondes
📶	Connexion Wi-Fi établie	Blanc uniforme
📶	Connexion Wi-Fi en cours	Clignotement rapide de blanc
88°F	Affichage de la température ambiante	Blanc uniforme
88°F	La température cible est en cours de réglage	Blanc solide et clignote
88°H	La minuterie est en cours de réglage	Blanc solide et clignote
E0	La puce Wi-Fi ne fonctionne pas correctement	Blanc uniforme
E1	Échec du capteur intégré	Blanc uniforme
E2	Échec de l'initialisation du déflecteur d'air	Blanc uniforme

Voyant	État de fonctionnement	Couleur du voyant
Tous les voyants	Toute pression sur un bouton déclenche la protection contre la surchauffe	Clignotent 3 fois

Remarque : Selon les normes en matière de sécurité, le voyant d'alimentation doit toujours s'allumer en rouge lorsque le radiateur fonctionne.

Fonctions

Mémoire

Cet appareil de chauffage mémorise les réglages précédents (réglages de chaleur, déviation d'air, connexion Wi-Fi) lorsqu'il est éteint. Les paramètres seront à nouveau actifs lorsque vous le rallumez.

Extinction automatique après 24 heures

Ce radiateur s'éteindra automatiquement après 24 heures d'utilisation d'affilée au cas où l'utilisateur oublie de le faire.

Protection contre la surchauffe


Lorsque le radiateur détecte que la température ambiante dépasse une température spécifique, il s'éteint automatiquement.

Protection contre le basculement et les mouvements

Si le radiateur est déplacé ou renversé, il s'éteint automatiquement et interrompt toutes ses fonctions. Cette protection peut être écartée en plaçant le radiateur sur une surface plane et solide et en le maintenant en position verticale avant de le réutiliser.


Démarrage

1. Retirez tous les emballages et assurez-vous que l'entrée et la sortie d'air ne sont pas bloquées par des objets étrangers.
2. Branchez le radiateur uniquement sur une prise murale de 120 V. N'utilisez pas de rallonge.

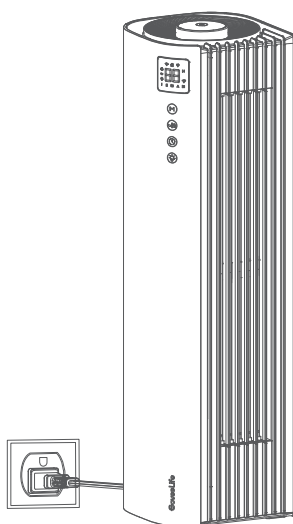


3. Assurez-vous que la fiche d'alimentation est fermement insérée dans la prise. Une connexion défectueuse avec la prise pourrait causer une surchauffe.
4. Placez le radiateur sur une surface solide et plane, loin de tout encombrement et à au moins 3 pieds (1 mètre) des murs et des matériaux combustibles.

Remarque : Ne couvrez pas le radiateur avec un tissu ou une couverture, en particulier sur l'entrée et la sortie d'air.

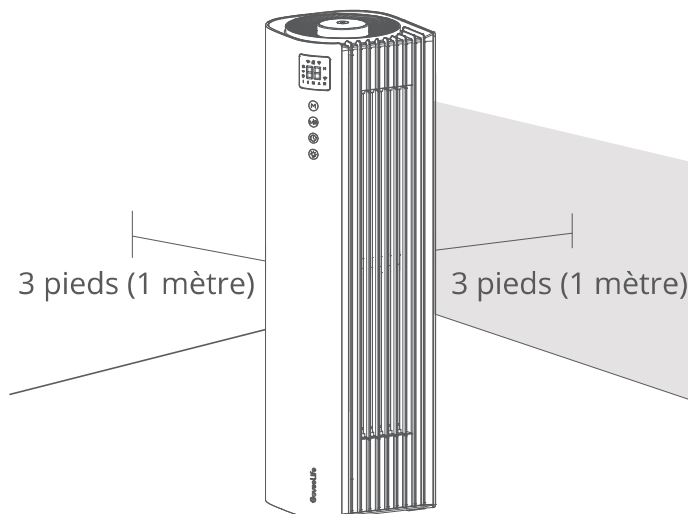

Placez horizontalement (facultatif)

1. Si vous souhaitez poser le radiateur à plat horizontalement pour réchauffer tout votre corps, tirez les deux supports intégrés vers l'extérieur.

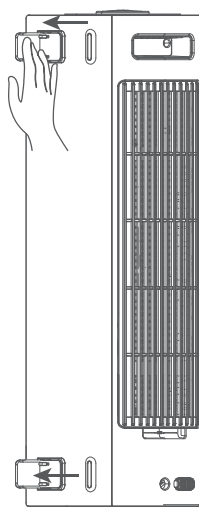

2. Placez le radiateur sur une surface solide et plane, loin de tout encombrement et à au moins 3 pieds (1 mètre) des murs et des matériaux combustibles.

