


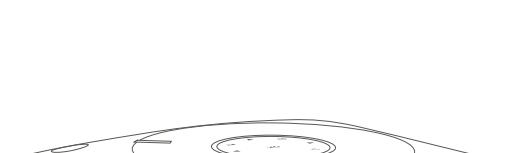

© 2015 VANKYO

VANKYO SUPPORT

North America support@vankyo.com
 United Kingdom support.uk@vankyo.com
 España support.es@vankyo.com





www.vankyo.com



@vankyoforUk



VANKYO

Leisure E30T/Leisure E30TB/Leisure E30WT
USER MANUAL

Please read this manual thoroughly before using and keep it for future reference.

HOME PAGE

Screen Mirroring for iOS devices

WiFi Status

USB Disk Inserted Settings

Screen Mirroring for Android devices

File Explorer of Windows Media Center

Input Source Options

KEYSTONE CORRECTION


Step 2: Select the **HomePage** icon to enter the interface of **Settings**, then select **Projection Images Setting** to enter the interface of **Projection**. Or, press **[F5]** on the remote to directly enter the interface of **Projection**.

Step 2: Select **Slide** in the option of **Keystone Advanced** and the **4-Point Keystone** option will be displayed. You can correct the image shape by four corners.

MULTIMEDIA CONNECTION

USB Disk/Memory Card Connection

Step 1 Turn on the projector and insert your USB disk/memory card into the USB port/memory card slot.



Step 2 Go to the **Homeage** and select the file category you would like to display among **Movie**, **Music**, **Photo** and **Office Suite**. Then, enter the intended USB disk/memory card to check all files stored.

- ***Video Files**
 - Select **Movie** to correspondingly read video files stored.
 - To **Go** to the project menu, **Go** will be remote for certain photo to enter full-screen display.
 - To **Go** to the projector's menu (**OK**) or the remote when playing a video file using the toolbar to terminate video playing.
- ***Audio Files**
 - Select **Music** to correspondingly read audio files stored.
 - To **Go** to the project menu, **Go** will be remote for certain audio file to enter full-screen display; then press **OK** on the remote to start playback.

Audio Format Supported: AAC/AIF/LPCM/DOLBY/DSD/WAV/MP3/WMA/ASF/WMA/MP2

***Photos Files**

- Select **Photo** to correspondingly read photos/files stored.
- To **Go** to the project menu, **Go** will be remote for a certain photo/file to enter full-screen display.

Image Format Supported: JPEG/TIFF/BMP


***Document Files**

- Select **Office Suite** to correspondingly read document files stored.
- To **Go** to the project menu, **Go** will be remote to view contents of certain file.
- To **Go** to the projector's menu (**OK**) or the remote when viewing a document file to the toolbar at the top.

Text Format Supported: DOCX/DOC/VML/XLS/PPT/RTF/HTML/PDF/TXT

HD Connection


Step 1 Turn on the projector and connect your device to the **HD IN/OUT** port of the projector with the provided HD cable.



Step 2 Select **HD IN/OUT** at the bottom side of the **Homeage** as the input source, then the contents of your device will be projected to the screen(s).

AV Connection

Step 1: Turn on the projector and connect your device to the AV Port of the projector with an AV cable.




Step 2: Select AV on the left side of the **Homepage** as the input source, then the contents of your device will be projected to the screen.

SCREEN MIRRORING


For iOS System

1. Select **Setting** on the upper right corner of the **Homepage**, then enter **Settings** interface and select **WiFi**.
2. **Setting**.
3. Turn on the **WiFi** switch of the projector and connect the projector to your router's **WiFi**.




Step 3: Enter **WiFi** settings of your iOS device and connect to the same router's **WiFi**.

Step 4: Go to **Homepage** > **iOS Cast** to enter the following interface:



Step 1: Activate **Screen Mirroring/MultiPlay Mirroring** on your iOS device and search for the projector.

Step 2: Select **Leisure XXXX** from the searching list to connect.

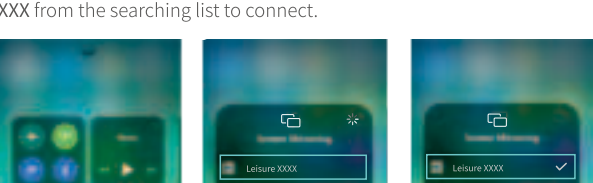

Step 3: The contents on your iOS device will be mirrored to the wall/screen.

Step 4: Select **Screen Mirroring/MultiPlay Mirroring** on your Android device and search for the projector.

Step 5: Select **Leisure XXXX** from the searching list to connect.

Step 6: The contents on your Android device will be mirrored to the wall/screen.



For Android System

It is essential to ensure stable network make sure your Android device supports **Multi-screen/Wireless display**. Items may differ from one Android device to another.

Step 1: Turn On the **WiFi** switch in your Android device.

Note:

- Successful/WiFi connection is not a must, but please make sure the **WiFi** switch in your Android device is **ON**.

Step 2: Go to **Homepage** - **Microsoft** to enter the following interface.

SETTINGS

Select **OK** (upper right corner) of the **Homepage** to enter **Settings** interface.



Wireless

Ethernet

USB

Cloud

Power On Option

1. You select **Direct**, the projector will directly power on when you plug in power cord into an electrical outlet for the first time.

2. You select **Standby**, you need to press **⏻** on the projector when you plug its power cord into an electrical outlet for the first time.

Schedule Shutdown

Set the time duration for the projector to shut automatically. Options include 0h, 10min, 20min, 30min, 45min, 60min and 120min.

WiFi Setting

Connect the projector to your router's WiFi.

Change Projection Mode *from Front-Centering, Rear-Centering, Front-Centering and Rear-Centering.*

Projection Image Setting

1. Enter **Keystone Adjustment** function to correct image distortion.

2. Enter **Image Zoom** and use the **⏻** button to enlarge/shrink the image.

Language Setting

Select a language for the projector.

System Update

1. **Local Update:** Update the firmware version via a USB drive with zip file as named as **FW-30273.BIN**. (Contact our customer service to get the zip file.)

2. **Online Update:** Update the firmware version online when a new version is available.


3. **Restore Factory:** Restore the projector to the factory settings.

Other Setting

About

Check the **System Version** and **MAC Address** of the projector.

PROJECTOR DISTANCE & SIZE

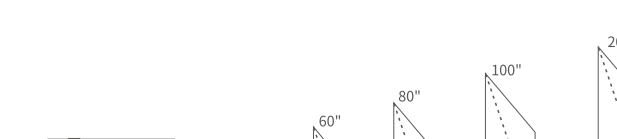

1080P 1080P 1080P

1.5m 2.0m 2.5m

W H W H W H

The recommended projection distance varies with different projection screens. Please adjust the distance between the wall/screen and the projector properly as needed.

* Ambient darkness will improve the clarity of the projected images.

SPECIFICATION			
Display Technology	LCD	Light Source	LED
Resolution	Native 1920 x 1080	Input Signal	576i, 720p, 1080i, 1080p
Installation Type	Front/Rear/Ceiling	Aspect Ratio	4:3/16:9/Auto
Focus	Manual	Electronic Keystone	±30°
Speaker	3W/4ohm	Power Supply	AC 100-240V/50/60Hz
Line Dimension	240 x 220 x 10mm	User Net Weight	1.8kg
Photo Format Supported	JPEG/RAW/BMP	Audio Format Supported	AC3/MPEG1/AC3/DG/OGG/AMR/MP3
Mounting Screws	M4 Metric	Number of Screws	4
Video Format Supported	AVS/MPEG1/MPEG2/MPEG4/H.264/H.265/WMV/AVI/MP4/TS/MTS/TSV		
Ports	HDMI v1.2 / DVI+ / Audio Out 5.1 / 4 x USB / Memory Card Slot x 1		
Test Format Supported	DCC/ODD/LCS/LS/PP/PT/PTX		

FCC Statement	FCC Warning
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any change or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	FCC Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.
Note: The FCC Rules have been revised and brought into conformity with the Part 15 of Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential situation. The equipment you are using, and its use, may not always keep you within the FCC limits, and FCC material and user's manual may not be up to date. This equipment is not intended for use in the United States. We cannot guarantee the interference will not occur or its potential interference. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, we encourage you to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the distance between the equipment and the receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/television repair shop for help. This equipment complies with maximum exposure limits set for your personal environment. This transmitter is not designed for use in a hospital or near any other sensitive medical equipment. This equipment should be installed and operated with minimum distance 20cm between the individual user and body.	Les limites d'exposition des champs électromagnétiques dans la partie 15 du Règlement sur les appareils à radiofréquences de la Commission des Communications du Canada ont été révisées et mises en conformité avec la partie 15 de la classe B des appareils numériques. Ces limites sont conçues pour offrir une protection raisonnable contre les interférences dans une situation résidentielle. L'équipement que vous utilisez, et son utilisation, peut ne pas toujours vous maintenir dans les limites de la Commission des Communications du Canada. Les documents de l'équipement et le manuel de l'utilisateur peuvent ne pas être à jour. Cet équipement n'est pas destiné à être utilisé aux États-Unis. Nous ne pouvons garantir que les interférences ne se produiront pas ou leur potentiel d'interférence. Si cet équipement provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et rallumant l'équipement, nous encourageons l'utilisateur à corriger les interférences en utilisant une ou plusieurs des mesures suivantes : —Orienter ou déplacer l'antenne de réception. —Augmenter la distance entre l'équipement et le récepteur. —Brancher l'équipement sur une prise d'un circuit différent de celui auquel le récepteur est branché. —Consulter le revendeur ou un réparateur expérimenté en radio-télévision pour obtenir de l'aide. Cet équipement respecte les limites d'exposition des champs électromagnétiques établies pour votre environnement personnel. Ce transmetteur n'est pas conçu pour être utilisé dans un hôpital ou à proximité d'équipement médical sensible. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre l'utilisateur et le corps.

[illegible]

Diagrama de la interfaz de usuario de Keynote para dispositivos iOS. Se muestra la pantalla de inicio con el botón 'Pantalla de inicio' y el botón 'Pantalla de inicio para dispositivos móviles'. Se indica la 'Opción de fuente de entrada' y el 'Estado de Wi-Fi'. Se muestra la 'Opción de archivo de entrada personalizada' y la 'Opción de archivo de entrada personalizada'.

CONEXIÓN MULTIMEDIA

Conexión de disco USB / Tarjeta de Memoria

Para: Ejectar el proyector y conectar su disco USB / Tarjeta de Memoria en el puerto USB / ranura para tarjeta de memoria.



Paso 1: Pulsar el botón de Inicio y seleccionar el categoría de archivo que le gustaría mostrar entre **PDFs**, **Música**, **Fotos**, **Office Safe**, **Lung**, **Imagen** o **Disco USB / Tarjeta de memoria** insertada para verificar todos los archivos.


- * **Activar el video**
 - Seleccionar **PDFs** para ver los archivos de documentos almacenados.
 - Seleccionar **Office Safe** para ver los archivos de documentos almacenados.
 - Seleccionar **Música** para ver los archivos de audio almacenados.
 - Seleccionar **Fotos** para ver los archivos de imágenes almacenados.
 - Seleccionar **Office Safe**, **Lung**, **Imagen** o **Disco USB / Tarjeta de memoria** insertada para verificar todos los archivos.
- * **Activar los documentos**
 - Seleccionar **Office Safe** para ver los archivos de documentos almacenados.
 - Seleccionar **Office Safe** para ver los archivos de documentos almacenados.
 - Seleccionar **Office Safe**, **Lung**, **Imagen** o **Disco USB / Tarjeta de memoria** insertada para verificar todos los archivos.

Formato de conexión admitido: AAC/MP3/AC3/OGG/FLAC/MP4/M4V/WMV

- * **Selección de Foto**
 - Seleccionar **Foto** para ver los archivos de fotos almacenados.
 - Seleccionar **Foto** para ver los archivos de fotos almacenados.
 - Seleccionar **Foto** para ver los archivos de fotos almacenados.
- * **Formato de foto admitido:** JPEG/RAW/PSD/TIF
- * **Activar los documentos**
 - Seleccionar **Office Safe** para ver los archivos de documentos almacenados.
 - Seleccionar **Office Safe** para ver los archivos de documentos almacenados.
 - Seleccionar **Office Safe**, **Lung**, **Imagen** o **Disco USB / Tarjeta de memoria** insertada para verificar todos los archivos.
- * **Formato de documento admitido:** PDF/DOC/DOCX/MS/MSPPPT/RTF/TXT

3. Conexión HD

Para: Ejectar el proyector y conectar los dispositivos al puerto HDMI-IN2, del proyector con el cable-HD provided.



Paso 2: Seleccionar **HDMI IN2** en el menú de configuración del **Página de Inicio** como fuente de entrada, luego el contenido de los dispositivos se reproducirán en la pantalla del proyector.

PROYECTOR

Este diagrama muestra la parte posterior del proyector con los puertos de conexión etiquetados: 'HDMI para PC', 'DisplayPort', 'VGA', y 'Audio para PC'.

CONEXIÓN AV

Paso 3: Extiende el proyector y conecta su dispositivo al **puerto AV** del proyector con el cable AV.

Este diagrama muestra un cable AV con tres conectores: rojo (superior), verde (inferior) y negro (superior). Se indica que el cable rojo se conecta a la pata superior, el verde a la inferior, y el negro a la superior.

Paso 4: Selecciona **AV** en el lado izquierdo de la **Platina de Inicio** como fuente de entrada, luego el dispositivo se proyectará en la pantalla (ver:).

DUPLICADO DE PANTALLA

Selección OS

Paso 5: Presiona **OS** en la esquina superior derecha de la **Platina de Inicio**, luego accede a la interfaz **Apoyante** y selecciona **Configuración AV**.

Paso 6: Selecciona la función **Duplicado de pantalla** del proyector y configura el proyector al **AV** de tu interés.

La imagen muestra la interfaz de configuración AV del proyector, con la opción 'Duplicado de pantalla' seleccionada.

Paso 7: Introduce la configuración de **HDMI** de su dispositivo **OS3** y selección al **HDMI** del mismo router.

Paso 8: **Inicio** + **Platina de Inicio** - Coste de **OS** para acceder a la siguiente pantalla.

La imagen muestra la interfaz de configuración AV del proyector, con la opción 'Duplicado de pantalla' seleccionada.

Paso 1: Diríjase hacia arriba la pantalla de su dispositivo iOS y, a continuación, pulse **Proteger pantalla y bloquear el proyector**.

Paso 2: Seleccione **Leitura XXXXX** de los resultados de la búsqueda para conectarlo.



Paso 3: Active la función **Portátiles múltiples** en su dispositivo Android y busque el proyector.

Paso 4: Seleccione **Leitura XXXXX** de los resultados de la búsqueda para conectarse.

Paso 5: La pantalla de su dispositivo Android se proyectará a la pantalla portátil después de una conexión correcta.



Paso 6: La pantalla de su dispositivo iOS se proyectará a la pantalla portátil después de una conexión correcta.

Para el sistema Android

Para activar esta función, su dispositivo Android debe ser compatible con la visualización **Portátiles múltiples**. Los teléfonos pueden diferir entre sí dentro de los dispositivos.

Paso 1: Conecte su función Wi-Fi en su dispositivo Android.

Nota:

La conexión Wi-Fi no es imprescindible, pero asegúrese de que la función Wi-Fi de su dispositivo Android está encendida.

Paso 2: Vaya a **Página de Inicio - Microsoft** para acceder a la siguiente interfaz.

[illegible]

ESPECIFICACIONES			GUÍA PARA RESOLVER PROBLEMAS				
Tecnología de LCD	LED	Fuente de luz	LED	El contenido de HVA, Netflix y servicios similares no puede ser duplicado o erróneo. * Debido a la medición del consumo de luz, Netflix y servicios similares, el contenido HD (1080P) se reproduce en estándar.			
Resolución	Native 1920 x 1080	Ratio de pantalla	576:1024, 1280:1920P				
Tipo de pantalla	Delante/Detrás/Unidad	Ratio de aspecto	4:3/16:9/3:4	¿Qué debo hacer si quiero ver el contenido de HVA, Netflix y servicios similares a través del projector? * Para buscar, presione la tecla de la F1 o la tecla de Home o Channel+ (no incluido), y luego cambie el contenido que desea ver.			
Enfoque	Manual	Keyframe de enfoque	150"				
Alimentación	3W/Adapt.	Forma de alimentación	AC 110-240V, 50/60Hz				
Dimensiones de la unidad	240 x 220 x 90mm	Peso neto de la unidad	1.8kg	3. ¿Proyectos en blanco * Ajuste el nivel de brillo. * El projector y pantalla o la pared están dentro de una habitación oscura.			
Forma de foto adjunta	JPG/ BMP/ PNG	Forma de video adjunto	AVI/ MP4/ FLAC/ OGG/ MP3/ AAC/ WAV/ MKV				
Forma de sonido	Midi/ AAC	Modos de sonido	4	4. ¿Control Remoto no responde * Reajuste de la tecla control remoto directamente al receptor IR. * Reajuste la recepción IR. * Presione el botón de la tecla control remoto.			
Forma de video adjunto	AVI/ MP4/ MKV/ H.264/ H.265/ MKV/ H.265/ MP3/ AAC/ WAV/ MKV						
Puertos	HDMI x 2 / USB x 2 / Audio x 2 / RJ45 x 2 / Función para Tarjetas de Memoria x 1						
Forma de imagen adjunta	DOC/ DOCX/ PPT/ PPTX/ PDF/ TIF/ EPS						