

1) Prohibited (*Do not do these under any circumstances)

Do not use for purposes other than intended.

Do not arbitrarily disassemble, repair, or modify the product.

Keep the product away from alcohol and other volatile substances as they may damage the product.

Keep the product away from sharp edges, pointed objects or rough surfaces as they may scratch the product.

If the product is dropped or subjected to an impact, internal damage may accumulate and lead to unexpected malfunctions or damage even during normal use. Be careful not to subject the product to impact.

The product is not waterproof, so do not use it in the rain or in a humid place such as a bathroom or near a body of water.

Be careful when using the product near sources of heat such as firearms, heating appliances, or campfires,

as it may cause deformation of the product or be a potential cause of explosion and ignition.

2) Instructions (*Must be followed)

Install and use the product in a safe place where there is no risk of falling.

If the product becomes contaminated, turn off the power and remove the batteries before using a dry towel

to wipe the product clean.

If the product becomes abnormally hot, changes color, deforms, or emits any unusual odor during use,

please discontinue use immediately.

When not using the product for an extended period of time, be sure to remove the batteries before storing it.

Battery leakage can cause product malfunctions.

Avoid storing in direct sunlight or in hot and humid places.

This product contains small parts such as a receiver. Be careful not to put them in your mouth or swallow them.

Keep out of reach of infants and pets.

3) Additional Information

The maximum usage time and standby time of the product may vary depending on the usage environment and patterns.

There is a possibility of radio interference during the use of this wireless device.

There may be a slight unusual odor due to the nature of the material, but this will go away after a while.

Microscratches may occur during the production process, which is not a defect.

We do not retain separate spare parts for the product.

We are not liable for damages and accidents caused by intended misuse or user negligence.

In case of a product defect, a compensation will be provided as per consumer dispute resolution regulations

issued by the Korea Fair Trade Commission.

使用年数: 満14歳以上 / 製造年月: 2023.7

製造国: タイヤレスキーボード, ワイヤレスマウス, レシーバー, マウス/パッド, フォトフレーム, 説明書・中国 / フォトカード・光澤印刷

製造社: タイヤレスキーボード, ワイヤレスマウス, レシーバー, マウス/パッド・DONGGUAN UMILIA SMART TECHNOLOGY CO., LTD.

フォトフレーム, フォトカード, 説明書・KEYTH INTERNATIONAL

輸入社/販売: KEYTH INTERNATIONAL / +82 2 3484-0777 / ソウル特別市江南区新山1大路317 かりムアートセンター1ビル地下2階2号

販売元: 株式会社 WYBE JAPAN / 商品に関するお問い合わせ: 030-3336-9425 / 平日 10:00-17:00 ※土日祝日を除く

ご使用前に必ず注意事項および説明書をよく読取しただ上で正しくお使いください。

満14歳未満のお子様、ご高齢の方や製品の使い方の理解や使用が難しい方のご使用は控えてください。

取扱説明書は、使用する方法がいつでも手に取れる場所に保管してください。下記事項を守らない場合、製品の破損および故障の危険性があります。

1) 禁止 (*絶対にしてはいけません。)

本製品を用途以外の目的で使用しないでください。製品をあたりに投げたり、修理および改造しないでください。

アルコールなどの揮発性の物質および化学物質が触れると、製品が破損する恐れがありますのでご注意ください。

ご使用の際には、手の汗したものをやめし、ぬい、滑りなどの原因によりスリップ事故が発生することがありますのでご注意ください。

落下やと製品に衝撃が与えられた場合、製品の内面に損傷が蓄積され、通常の使用でも破損や故障が発生する可能性があります。

製品に損傷を与えないようにご注意ください。

本製品は防水製品ではないため、浴の中や風呂場、水回りなど湿気の多い場所で使用しないでください。

火気、暖房器具またはキャンプファイヤーなど熱の周りで使用する場合、製品の変形、燃焼や発火の危険性がありますのでご注意ください。

2) 推奨 (*必ず守らなければなりません。)

落下の危険性がない安全な場所に保管して使用してください。

製品が汚れた場合は、電池を取り外した後、電源を切った状態で乾いたタオルなどで拭き取ってください。

使用中に製品が異常に熱くなったり、変色、変形、匂いなどが発生した場合、直ちに使用を中止してください。

長期間使用しない場合は、必ず電池を抜いて保管してください。電池の漏洩れは故障の原因となる可能性があります。

直射日光および高温多湿な場所を避けて保管してください。劣化が発生する場所および接触機器の近くに保管しないでください。

この製品には、レシーバーのような小さな部品が含まれています。口の中に入れたり、飲み込んだりしないようにご注意ください。

赤ちゃんやペットなどの手が届かないところに保管してください。

3) その他のご案内事項

製品の最大使用可能および待機時間は使用環境やパターンによって異なる可能性があります。

取扱説明書には記載する場合があります。

本製品は素材の特性上、特有の匂いが発生することがありますが、有害な成分は含まれていないので安心してお使いください。

製造過程で何らかのミスが発生する場合がありますが、これは不良品ではありません。当社は製品の部品を別途保有していません。

お客様の数量または平定により破損した製品および事故については、一切の責任を負いかねますのでご了承ください。

本製品に異常がある場合、公正取引委員会が告示した「消費者紛争解決基準」に基づき補償が受けられます。

MERCH BOX #13 KEYBOARD, MOUSE USER GUIDE

※사용 전 반드시 설명서를 꼼꼼히 읽은 후 사용해 주세요.

※Before use, be sure to read the manual thoroughly before use.

※使用前に必ず取扱説明書をよく読んで、私は後使用してください。



제품구성 Components 製品構成

*본 제품은 건전지를 포함하고 있지 않습니다. / This product does not contain batteries. / 本製品はバッテリーを含まない製品です。



제품사항 Wireless specifications 無線仕様

- RF 주파수 : 2.4GHz
- 시스템 요구사항 : Window 7 이상
- 방전전압 : 1.5V / 키보드=AAA건전지x2개, 마우스=AA건전지x1개
- 작동거리 : 최대 10M
- (설치 환경 및 건전지 용량이 허하여 거리가 다소 축소될 수 있음)
- 절전모드 : 자동 절전 모드 적용
- 대기시간 : 최대 12개월
- RF Frequency : 2.4GHz
- System requirements: Windows 7 or later
- Voltage rating: 1.5V / keyboard: 1 AAA battery, mouse: 1 AA battery
- Operating distance: Up to 10 meters
- (distance may be slightly reduced depending on the installation environment and battery capacity)
- Power-saving mode: Power-saving mode activates automatically
- Waiting time: Up to 12 months

- 使用電圧: 2.4GHz
- システム動作環境: Window 7以上
- 定格電圧: 1.5V /
- キーボード・単3電池x2本, マウス・単3電池x1本
- 作動距離: 最大10M (設置環境および電池の容量によって距離がやや短くなる可能性があります)
- 省電力モード: 自動省電力モード適用
- 待機時間: 最大12か月

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes to modifications not authorized by the party responsible for compliance could void the user's authority to operate this equipment. This device is required to be tested and approved in accordance with any other applicable regulatory requirements.

인증 Certified 認証

상표: 주식회사 키스킨타네셔널 제조년월: 2023년 07월
제조사: DONGGUAN UMLA SMART TECHNOLOGY CO., LTD.
제조국가: 중국(Made in China)
기타명: 키보드: Merch Box #13, KEYBOARD,
마우스: Merch Box #13, MOUSE, 키패드: Merch Box #13, KEYPAD
모델명: 키보드: MerchBox13K, 마우스: MerchBox13M, 키패드: MerchBox13P
인증번호: 키보드: 049401-MerchBox13K, 마우스: 049402-MerchBox13M,
키패드: 049403-MerchBox13P


Wireless keyboard
FCC ID: 342984-RCHB0013K
Wireless mouse
FCC ID: 342984-RCHB0013M

035-230231
025-230232

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

사용방법 How to use 使用方法

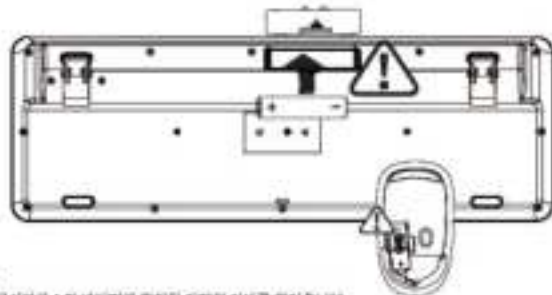

건전지 삽입 방법


- ① 무선키보드 및 무선마우스의 바닥면에 위치한 건전지 커버를 열어줍니다.
- ② 건전지함 내부 전극 방향을 확인한 후 정확하게 맞는 건전지를 무선키보드와 무선마우스에 각각 삽입하고 건전지 커버를 닫아주세요.

How to insert batteries

- ① Open the battery covers located on the bottom of the wireless keyboard and wireless mouse.
- ② After checking the direction of the electrodes inside the battery compartments, insert batteries of the appropriate types into the wireless keyboard and wireless mouse and close the battery covers.

電池の挿入方法

- ① ワイヤレスキーボードおよびワイヤレスマウスの底面にある電池カバーを開けてください。
- ② 電池室内の電流の向きを確認した後、規格に合う電池をワイヤレスキーボードとワイヤレスマウスにそれぞれ挿入し、電池カバーを閉じてください。

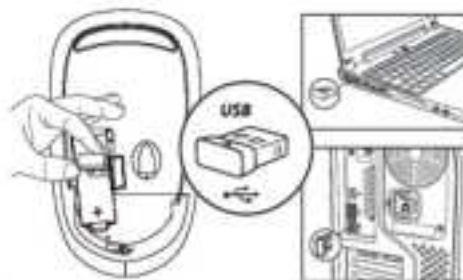

키패드 무선 연결 방법

- ① 무선마우스 바닥면에 위치한 건전지 커버를 열어 키패드를 꺼내주세요.
- ② 노트북 혹은 컴퓨터 본체에 위치한 USB 포트에 키패드를 삽입해 주세요.
- ③ 한 개씩 키패드로 무선키보드와 무선마우스를 동시에 무선 연결할 수 있습니다.
- ④ 무선키보드와 무선마우스를 사용하지 않을 경우 키패드를 건전지 커버 하단에 보관할 수 있습니다.

How to connect the wireless receiver

- ① Open the battery cover located on the bottom of the wireless mouse and take out the receiver.
- ② Insert the receiver into the USB port of your laptop or desktop computer.
- ③ You can wirelessly connect both the wireless keyboard and wireless mouse at the same time with a single receiver.
- ④ When the wireless keyboard and wireless mouse are not in use, the receiver can be stored under the battery cover.

레シーバーの無線接続方法

- ① ワイヤレスマウスの底面にある電池カバーを開け、レシーバーを取り出してください。
- ② ノートパソコンまたはパソコンの本体にあるUSBポートにレシーバーを挿入してください。
- ③ 一つのレシーバーでワイヤレスキーボードとワイヤレスマウスを同時に無線接続することができます。
- ④ ワイヤレスキーボードとワイヤレスマウスを使用しない場合、レシーバーを電池カバーの下部に保管することができます。

취급 시 주의사항 Precautions when handling 取扱注意事項

- 사용연월: 만 14세 이상 / 제조년월: 2023년 7월
- 제조국: 무선키보드, 무선마우스, 키패드, 마우스패드, 포토프레임, 설명서 - 중국 / 포토카드 - 대한민국
- 제조사: 무선키보드, 무선마우스, 키패드, 마우스패드 - DONGGUAN UMLA SMART TECHNOLOGY CO., LTD.
- 포토프레임, 포토카드, 설명서 - 주식회사 키스킨타네셔널(KEYTH INTERNATIONAL)
- 공급처 / 상점명: 주식회사 키스킨타네셔널(KEYTH INTERNATIONAL) / 02-3448-0777 / 서울시 강남구 도산대로 117 호림아파트 1빌딩 지하 2층 1호
- 판매처: 주식회사 하이브 / 02-3444-0103 / 서울특별시 용산구 한강대로 42

사용 전 반드시 주의사항 및 설명서를 충분히 숙지하신 후 반드시 사용하십시오.
만 14세 이하의 어린이, 노약자 또는 제품 사용법을 숙지하지 않거나 사용상 불안전 수 있는 분은 사용하지 않도록 유력하십시오.
사용설명서는 사용하는 사람이 언제나 볼 수 있는 곳에 보관하십시오.
아래의 사항을 준수하지 않을 시, 제품 파손 및 부상 등의 위험이 있습니다.

1) 급지(*절대로 해서는 안 됩니다.)

물도 가까이 사용하지 마십시오.
제품을 열쇠로 분해하거나 수리 및 개조하지 마십시오.
알루미늄과 같은 휘발성 물질 및 화학 물질이 있을 경우 제품이 훼손될 수 있으니 주의하십시오.
사용 시 분해하거나 날카로운 것, 거친 표면과 마찰로 스크래치가 발생할 수 있으니 주의하십시오.
세탁이 떨어지거나 충격에 받았던 제품 내부에 손상이 속박되어 통상적인 사용에도 예상치 못한 고장 및 파손의 원인이 될 수 있습니다.
제품에 습곡의 가해지자 정도를 주저하여 주십시오.
본 제품은 필수 세제가 마디로 보충이나 복원, 물가 등과 같이 습기가 많은 곳에서 사용하지 하십시오.
화기, 난방 기구 또는 컴퓨터에 열을 가할 때 주변에서 사용 시 제품이 변형되거나, 폭발 및 심하게 열원이 될 수 있으므로 주의하십시오.

2) 지시(*반드시 지켜야 합니다.)

낙하 위험이 있는 안전한 장소에 설치하여 사용하십시오.
오전 물질이 분출할 경우 건전지를 분리하여 전원을 끈 상태에서 마른 수건으로 닦아주십시오.
사용 중 제품이 비정상적으로 뜨거워지거나 변색, 변형, 냄새 등이 발생하는 경우 즉시 사용을 중단하십시오.
장기간 사용하지 않을 때는 반드시 건전지를 제거한 후 보관하십시오. 건전지 누출은 제품 고장원 원인이 될 수 있습니다.
직사광선이나 고온다습한 장소는 피해서 보관하십시오.
떨어뜨릴 때는 장소 또는 방법 기가 근처에 보관하지 마십시오.
본 제품은 키패드와 같이 작은 부품을 포함하고 있습니다. 잃어버려 달거나 잃어버려도 주저하십시오.
방수 및 내충돌성을 손러 달지 않게 주의하십시오.

3) 기타 안내 사항

제품의 최대 사용시간 및 대기시간은 사용 환경과 제반에 따라 달라질 수 있습니다.
최대 무선설리는 사용 후 전지 충전 가능성이 있습니다.
본 제품은 소량의 독립성 약간의 이차 발생할 수 있으나 시간이 지나면 자연스럽게 사라집니다.
생선 과정에서 미세한 스크래치가 발생할 수 있으나 이는 불량에 해당합니다.
당사는 제품에 대한 부품을 별도로 보유하고 있지 않습니다.
소버지와 고화 또는 부주적으로 판매 해운한 제품 및 사고에 대해서는 보상의 책임을 지지 않습니다.
본 제품에 이상이 있을 경우 공급거래업체로 고사/ 소비자 분쟁 해결 기준에 의해 보상해 드립니다.

Age: 14 years or above / Manufacturing Date: July 23
Country of Origin: Wireless Keyboard, Wireless Mouse, Receiver, Mousepad, Photo frame, User Manual- China
Photo card - Republic of Korea
Manufacturer: Wireless Keyboard, Wireless Mouse, Receiver, Mousepad - DONGGUAN UMLA SMART TECHNOLOGY CO., LTD.
Photo frame, Photo Card, User Manual - KEYTH INTERNATIONAL
Distributor's Name& Address: HYBE Co., Ltd. / +82 2 3444-0103 / 42, Hangang-daero, Yongsan-gu, Seoul, 04389 Korea
US Contact Information : HYBE American Inc. / 2110 Colorado Ave. Suite 200 Santa Monica CA 90404 / 310-859-8060

Please read the precautions and the user manual carefully before using the product to use it properly.
Please note that children under the age of 14, the elderly, or those who may have difficulty understanding or using the product should refrain from using it.
Keep the user manual in an accessible place.
Failure to comply with the instructions below may result in damage to the product or injury.