


展开尺寸：宽600mm*高110mm
折叠尺寸：宽75mm*高110mm
马钉装订，70克双胶纸
双面单色印刷

*红色字体不印刷

Winees

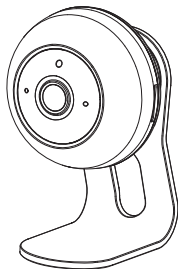

Winees Cam mini User Guide

Winees Cam mini Handbuch

Winees ミニカメラ ユーザーマニュアル

Model: WP01002

CAUTIONS

To avoid personal injury and/or possible product damage, the following cautions must be followed:

1. Please use solely the provided adapter instead of others in case of any damage to the product.
2. Keep out of reach of children. This product contains small magnets and other small parts, which can cause choking or injury if ingested.
3. To prevent early failure, the camera should only be installed in operating environments ranging between -10°C~40°C (14°F~ 104°F).
4. Do not install
 - in wet locations
 - outside the premises (outdoors)
 - close to heat source
 - near the metal objects and mirrors that cause radio signal attenuation or shading.
5. Do not disassemble or reinstall the camera, otherwise it may cause security risks.
6. Unplug the power cord before cleaning. Do not clean it with any liquids, spray cleaner or wet cloth.
7. The slot and opening are used for ventilation, not allowed to be blocked or covered.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Package Contents



Wireless cam
mini*1



AC adapter with
USB cable*1



Screw*1,
wall anchor*1



Reset pin *1



Wall-mounted
plate *1

LED on/off description

Status	Description
Solid Red	Power on/System booting/ Factory resetting
Flashing Red	Wireless connection , Cloud connecting fail
Solid Green	Wireless connected
Flashing Green	System ready for WiFi setup/ Firmware update
Red and Green flashing alternately	Unable to connect to the cloud

Trouble shooting

If the default adding camera operation fails

- Make sure your wireless router has the Internet access, and the Wi-Fi signal at the location where you install the camera is good.
- Make sure the camera is plugged in and the status LED is on or flashing
- Reset the camera if the LED is NOT flashing green. Then follow the App to add it.
- Make sure the camera is not added to other user's account. If it is, the owner of the camera has to unbind it first.
- When this step is done, the camera should be added to your account.

If the Micro SD card is not detected by the camera

- Make sure the card is good and format it again in the FAT-32 format.

How to do the forced reset?

- If you cannot reset the camera from the setting page, please hold the reset button in the pin hole with the reset pin for 5 seconds and release. The camera will play a voice prompt "Restoring factory settings".

The time of the camera video stamp is not right

- Please set the right time zone in the settings.

Requirements and Tech Specs

Wi-Fi Network Requirements

in order to connect your camera to your Wi-Fi network, it will need to meet the following requirements. :

- Supports IEEE 802.11b/g/n
- Your Wi-Fi network broadcasts at 2.4GHz. 5GHz band is not supported
- Your network upload speed is suggested to be greater than 1 Mbps to have fluent video streaming.

Power (Only for CE)

100~ 240VAC 50/60Hz power supply for the AC adapter

DC 5V/1A Micro USB input for the camera

Maximum power consumption: 5W

Frequency range: 2412-2472MHz

Maximum RF transmit power: 802.11b 16±2dBm, 802.11g 54M

14±2dBm, 802.11n HT20 12±2dBm, 802.11n HT40 12±2dBm

Maximum radio-frequency power: 17.5 dBm

Camera

1080P full HD @15 frames per second

Maximum resolution: 1920*1080

1/2.9" color CMOS sensor

110° (diagonal) wide angle lens

H.264 Video Compression

Infra-red night vision: 5m(16ft)

Motion detection

Audio

Built-in Microphone and speaker

Two-way talk

Storage

Micro SD card storage up to 64 GB (Micro SD card is not included)

Operating Environment

Temperature: -10°C ~ 40°C(14°F ~ 122°F)

Humidity: ≤95% non-condensing

Quick Start Guide

Step 1

Get the “Linkind” app from App Store or Google Play.




Step 2

Create an account and sign in.

Step 3

Press '+' button to add the Winees Cam mini.

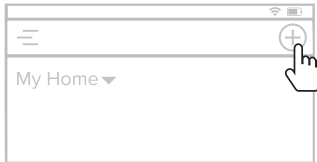

Step 4

Follow the instructions on App.

For more information about usage guidelines and FAQs, please visit <https://www.linkind.com>

DE

Hinweise


Beachten Sie die folgenden Vorsichtsmaßnahmen, um Verletzungen oder mögliche Produktschäden zu vermeiden.

1. Bitte verwenden Sie nur den mitgelieferten Adapter.
2. Von Kindern fernhalten. Darf nicht in die Hände von Kindern gelangen.
Dieses Produkt enthält kleine Magnete und andere Kleinteile, die beim Verschlucken Ersticken oder Verletzungen verursachen können.
3. Um einen vorzeitigen Produktausfall zu vermeiden, sollte die Kamera nur in installiert werden Betriebsumgebungen zwischen -10 ° C und 40 ° C.
4. Nicht installieren
 - an feuchten Orten
 - Im Freien
 - in der Nähe der Wärmequelle
 - in der Nähe von Metallgegenständen und Spiegeln, die eine Dämpfung oder Abschattung des Funksignals verursachen
5. Zerlegen und installieren Sie das Produkt nicht, da dies zu Sicherheitsrisiken führen kann.
6. Ziehen Sie vor dem Reinigen den Netzstecker. Reinigen Sie es nicht mit Flüssigkeiten, Sprühreinigern oder feuchten Tüchern.
7. Der Schlitz und die Öffnung dienen der Belüftung und dürfen nicht blockiert oder abgedeckt werden.

Package Contents



Winees cam
mini*1



Netzteil mit USB
Kabel *1



Schraube *1
Maueranker *1



Rücksetzstift *1



Wandplatte*1

LED on/off Beschreibung

Status	Beschreibung
Bleib Rot	Einschalten / Systemstart / Werkseinstellung
Rot blinkend	Kabellose Verbindung, Cloud-Verbindung fehlgeschlagen
Bleib Grün	Kabellos verbunden
Grün blinkend	System bereit für WiFi-Setup / Firmware aktualisieren
Rot und Grün blinkt abwechselnd	Keine Verbindung zur Cloud hergestellt werden

Allgemeine Fehlersuche

Wenn Sie standardmäßig keine Kamera hinzufügen können

- Vergewissern Sie sich, dass Ihr WLAN-Router über den Internetzugang verfügt und dass das WLAN-Signal ist einwandfrei.
- Vergewissern Sie sich, dass Netzteil ist eingesteckt und die Status-LED leuchtet oder blinkt
- Setzen Sie die Kamera zurück, wenn die LED NICHT grün blinkt. Folgen Sie dann der App, um Kamera hinzuzufügen.
- Vergewissern Sie sich, dass die Kamera nicht zum Konto eines anderen Benutzers hinzugefügt wurde. Sonst muss der Besitzer der Kamera diese zuerst lösen.
- Wenn dieser Schritt gemacht, sollte die Kamera Ihrem Konto hinzugefügt werden.

Wenn die Micro SD-Karte von der Kamera nicht erkannt wird

- Vergewissern Sie sich, dass die Karte in Ordnung ist, und formatieren Sie sie erneut im FAT-32-Format.

Wie kann man den erzwungenen Reset?

- Wenn Sie die Kamera nicht von der Einstellungsseite aus zurücksetzen können, drücken Sie den Rücksetzloch mit dem Rücksetzstift 5 Sekunden lang in der Stiftöffnung und lassen Sie ihn los. Die Kamera gibt eine Sprachansage " Restoring factory settings " aus.

Die Zeit des Kameravideostempels ist falsch

- Bitte stellen Sie in den Einstellungen die richtige Zeitzone ein.

Spezifikationen

Wi-Fi-Netzwerkanforderungen

Um Ihre Kamera mit Ihrem Wi-Fi-Netzwerk zu verbinden, muss sie den folgenden Anforderungen entsprechen:

- Unterstützt IEEE 802.11b / g / n
- Ihr Wi-Fi-Netzwerk sendet mit 2,4 GHz. Das 5-GHz-Band wird nicht unterstützt
- Es wird empfohlen, dass Ihre Netzwerk-Upload-Geschwindigkeit über 1 Mbit/s.

Leistung (Nur für CE)

AC Adapter 100-240VAC 50/60Hz

Kamera Eingangsspannung DC 5V-1A Micro USB

Maximaler Energieverbrauch 5W

Frequenzbereich: 2412-2472MHz

Maximale HF-Sendeleistung: 802.11b 16 ± 2 dBm, 802.11g 54M 14 ± 2 dBm, 802.11n HT20 12 ± 2 dBm, 802.11n HT40 12 ± 2 dBm

Maximale Radiofrequenzleistung: 17.5 dBm

Kamera

1080 FHP @15 Bilder pro Sekunde

Maximale Auflösung 1920*1080

1 / 2,9 "Farb-CMOS-Sensor

105 ° (Diagonale) Weitwinkelobjektiv

H.264-Videokomprimierung

Infrarot Nachtsicht: 5m

Bewegungserkennung

Audi

Eingebautes Mikrofon und Lautsprecher

2-Seiten-Gespräch

Speicher

Micro SD-Kartenspeicher bis zu 64 GB (Micro SD-Karte ist nicht im Lieferumfang enthalten)

Betriebsumgebung

Temperatur: -10 ° C ~ 40 ° C

Luftfeuchtigkeit: ≤ 95% nicht kondensierend

Kurzanleitung

Schritt 1.

Laden Sie die App „linkind“ herunter




Schritt2.

Erstellen Sie ein Konto und melden Sie sich an.

Schritt3.

Tippen Sie auf "+", um die Kamera hinzuzufügen

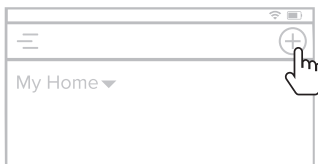

Schritt4.

Folgen Sie den Anweisungen auf App.

Weitere Informationen finden Sie <https://www.linkind.com>


JP

ご注意

人身傷害および製品損害を防ぐために、以下の安全注意事項を遵守してください。

1. 付属していた電源アダプターを使用してください。製品損害を防ぐために、ほかのアダプターを使用しないでください。
2. 子供の手の届かないところに置いてください。この製品は小さい磁石と他の小さい部品を含んで、窒息と傷の原因となる可能性があります。
3. 初期の故障を防ぐために、カメラは-10°C~40°C(14°F~104°F)の作業環境にしか装置できません。
4. 以下の場所に装置しないでください
 - 湿っぽいところ
 - 屋外
 - 熱源に近くところ
 - 金属と鏡に近くところ、無線信号が減衰の原因となります。
5. カメラを取り外しないでください。危険を招く恐れがあります。
6. きれいにする前に電源コードを抜いてください。液体、スプレークリーナー、湿布で掃除しないでください。
7. 開口部は通風口なので、塞ぎや覆いのは禁止されています。

パッケージ内容

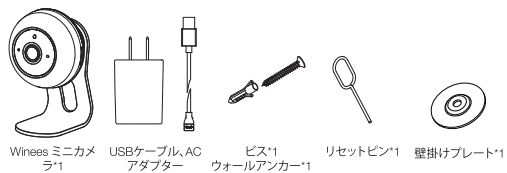

LEDオン／オフの説明

状態	説明
赤	電源オン/システム起動/工場出荷時に戻す
赤点滅	無線接続、クラウドに接続できない
緑	無線接続
緑点滅	WiFi設置/ファームウェア更新が準備できた
赤と緑が交互に点滅	クラウドに接続できない

故障診断

カメラのデフォルトの追加に失敗した場合

- 無線ルータがインターネット・アクセスを持っていることを確認した上、カメラをインストールする場所のWiFi信号は良いことを確保してください。
- カメラが接続されていることを確認した上、状態指示灯が点灯または点滅していることを確認してください。
- LEDが緑に点滅していない場合は、カメラをリセットしてください。アプリケーションに従って追加します。
- カメラが他のユーザーのアカウントに追加されていないことを確認してください。追加されたら、まず解かなければなりません。
- この手順が完了したら、カメラがアカウントに追加されます。

カメラがマイクロSDカードを検出していない場合

- カードが正しいことを確認して、FAT-32フォーマットで再びフォーマットしてください。

強制的なリセットする方法

- 設定ページからカメラをリセットできない場合は、リセットピンでリセットボタンを5秒押してから離してください。カメラは音声で「出荷時設定に復元」とのメッセージを提示します。

カメラの時間が違います

- 設定で適切なタイムゾーンを設定してください。

要求と技術仕様

Wi-Fiネットワーク要求

カメラをWi-Fiネットワークに接続するためには、以下の要求を満たす必要があります。

- IEEE 802.11 b/g/n対応
- Wi-Fiネットワークは2.4GHzの周波数で放送します。5GHz/バンドはサポートされていません。
- スムーズなビデオストリームを得るために、ネットワークのアップロード速度が1Mbps以上であることを推奨します。

パワー

100~240 VAC 50/60 Hz電源でアダプターに給電

カメラの入力(ミニUSB):DC 5 V/1 A

最大消費電力:5W

周波数範囲:2.4-2.4835GHz

最大無線周波数送信/パワー:802.11b 16±2dBm, 802.11g 54M 14±2dBm, 802.11n HT20 12±2dBm, 802.11n HT40 12±2dBm

カメラ

1080 pフルHD @毎秒15フレーム

最大解像度:1920 * 1080

1 / 2.9 "カラーCMOSセンサー

110度(対角)広角レンズ

H. 264ビデオ圧縮

赤外線ナイトビジョン

動き検出

オーディオ

内蔵マイクとスピーカー

双方向会話

ストレージ

最大64GBのマイクロSDカードストレージ(マイクロSDカードは含まれていません)

動作環境

温度:-10°C~40°C(14°F~122°F)

湿度:≤95%結露しない

クイックマニュアル

ステップ1

AppStoreまたはGooglePlayから「Linkind」アプリを入手してください。



ステップ2

アカウントを作成して登録します。

ステップ3

「+」ボタンを押して、Winees ミニカメラを追加します。



ステップ4

アプリの説明に従って操作してください。

使用マニュアルとFAQの詳細については、次のWebサイトをご覧ください。
<https://www.linkind.com>



Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Means for applicable power supplies see user instructions
Adapter model(s): DSA-5PF07-05 FEU 050100, DSA-5PF07-05 FUK 050100, Made By: Dee Van Enterprise Co., Ltd.

Declaration of Conformity

Hereby, Linkind, declares that the radio equipment product name (WS200010018) is in compliance with Directive 2014/53/EU. The full text of the EU Declarations of Conformity are available at the following internet address: www.linkind.com

Linkzone Technology Co., Limited
Room 510, 5/F, Wayson Commercial Building, 28 Connaught Road West,
Sheung Wan, Hong Kong
Phone: 1-855-334-9800(24x7)
www.iwinees.com
support@iwinees.com

MADE IN CHINA