
# ARMY'S ROOM **USER GUIDE**


※사용 전 반드시 설명서를 꼼꼼히 읽은 후 사용해 주세요. \*Before use, be sure to read the manual thoroughly before use. ※使用前に必ず取扱説明書をよく読んで、私は後使用してください。

## 바깥면

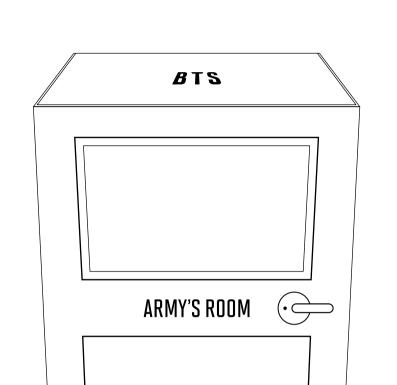



© 2021 BIGHIT MUSIC/HYBE. All Rights Reserved.

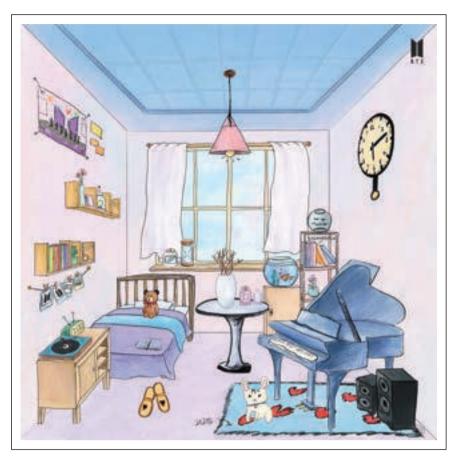

\*'아미의방' 입체 구현을 위해 제작 과정에서 아티스트 그림의 일부를 재구성하였습니다. \* Some features of the artist pictures have been changed to create a three dimensional "ARMY'S ROOM." \*「ARMY'S ROOM」を立体的に具現化するために、製作過程においてアーティストの絵の一部を再構成しました。

## 국문

## 영문



\*'아미의 방' 입체 구현을 위해 제작 과정에서 아티스트 그림의 일부를 재구성하였습니다.

•전원: 1.5V AA 건전지 3개 •입력: 4.5V, 800mA

•출력: 3W •BGM 플레이어 버전: 5.1

•BGM 플레이어 사용 거리: 8m

•플레이어연결 및 호환성은 소스 장치의 소프트웨어 버전에 따라 차이가 있을 수 있으며 모든 플레이어 기기와 100% 호환되지 않을 수 있습니다. •사용연령: 만 14세 이상



모양을 낸 후, 동봉된 양면 테이프로

창문에 커튼봉을 붙여 고정해줍니다.




깔아줍니다. 이때, 보드 앞쪽에 보이는

나무 면에 동봉된 스티커를 붙여주세요.









**Product package** 

How to use How to assemble

How to switch on/off and use

the BGM player

① Insert the curtain rod into the

curtains and tie them into your

desired shape with the ribbons


Use the double-sided tapes to adhere


the curtains firmly to the window.


Precautions for Handling your Product











## 취급 시 주의사항

사용 전 반드시 주의사항 및 설명서를 충분히 숙지하신 후에 바르게 사용하십시오. 사용설명서를 다 읽으신 후 사용하는 사람이 언제나 볼 수 있는 곳에 보관하십시오. 아래의 사항을 준수하지 않을 경우 제품 파손 및 부상 등의 위험이 있습니다. 만 14세 미만의 어린이, 노약자 또는 제품 사용법을 숙지하기 어렵거나 사용상 불편함을

1)금지 사항 (절대로 하면 안 되는 금지의 내용입니다) 장해진 규격 이외의 건전지를 사용할 시 고장의 원인이 되오니 주의하십시오. 절대로 용도 이외에는 사용하지 마십시오. 절대로 제품을 단락, 임의 분해, 변경, 개조하지 마십시오. 알코올과 같은 휘발성 물질 및 화학 물질이 닿을 경우 제품이 훼손될 수 있으니 주의하십시오. 사용 시 뾰족하거나 날카로운 것, 거친 표면과의 마찰에 의해 스크래치가 발생할 수 있으니 주의하십시오. 급격하고 강한 충격은 제품 손상 및 파손의 원인이 되오니 유의하여 주십시오. 제품이 낙하 또는 충격을 받으면 제품 내부에 손상이 축적되어 통상적인 사용에도 예상치 못한 고장 및 파손이 발생할 수 있습니다. 제품에 충격이 가해지지 않도록 주의하여 주십시오. 본 제품은 방수 제품이 아니므로 욕실, 물가 등과 같이 습기가 많은 장소나 특히 빗속에서 사용하지 마십시오. 화기, 난방 기구 등의 고온 주변에서 사용하지 마십시오.

### 2)이용 필수 규칙 (반드시 지켜야 하는 지시의 내용입니다)

건전지 삽입 시 전극 방향과 건전지 규격을 반드시 확인해 주십시오. 건전지 교체 시 사용하던 건전지가 혼용될 경우 잔류랑이 달라 오작동 가능성이 커지므로 건전지를 교체할 때에는 모든 건전지를 새 건전지로 함께 교체해 주십시오. 낙하 위험이 없는 안전한 장소에 설치하여 사용하십시오. 직사광선에 장시간 노출 시 제품이 번색할 수 있으니 주의하십시오. 오염 물질이 묻었을 경우 반드시 전원을 끈 상태에서 마른 수건으로 닦아주십시오. 사용 중 제품이 비정상적으로 뜨거워지거나 번색, 번형, 냄새 등이 발생하는 경우 즉시 사용을 중단하십시오. 직사광선이나 고온다습한 장소는 피해서 보관하십시오. 사용 후에는 반드시 전원을 끄고 보관하십시오. 차량처럼 밀폐된 공간, 열이 발생하는 장소 또는 발열 기기 근처에서의 보관은 피해주십시오. 제품의 안전과 수명 유지를 위해 반드시 건전지를 분리한 후 보관하십시오. 건전지 누액은 고장의 원인이 됩니다. 영유아와 반려동물의 손이 닿지 않는 곳에 보관하십시오. 부품을 삼키거나 상해를 입을 수 있습니다.

해당 무선설비는 전파 혼신 가능성이 있으므로 인명 안전과 관련된 서비스는 할 수 없습니다. 본 제품은 건전지 전용 제품으로 배터리팩을 내장하고 있지 않기 때문에 충전이 불가능합니다. 플레이어 연결과 호환성은 연결 기기의 소프트웨어 버전에 따라 상이할 수 있습니다. 플레이어 인식 가능 거리는 약 8m이며, 기기 간에 장애률이 없어야 하고 무선 사용 거리는 주변 환경이나 장애물에 따라 달라질 수 있습니다. 플레이어 신호 강도가 약한 경우 연결이 끊어져 재연결이 필요할 수 있습니다. 제품의 최대 사용 시간은 사용 환경 및 사용 방법에 따라 달라질 수 있습니다. 본 제품은 소재의 특성상 약간의 이상한 냄새가 발생할 수 있으나 시간이 지나면 자연스럽게 사라집니다. 생산 과정에서 미세한 스크래치가 발생할 수 있으며, 이는 불량이 아님을 알려드립니다. 소비자의 고의 또는 부주의로 인해 훼손된 제품 및 사고에 대해서는 보상의 책임을 지지 않습니다.


**Product specifications** \* The product does not include batteries to create a three dimensional "ARMY'S ROOM."


Power supply: 3 AA batteries 1.5V · BGM player version: 5.1

· BGM player maximum use distance 8m · Player connectivity and compatibility can differ depending on the software version of the source device and may not be fully compatible with all player devices. Recommended age: 14 years or older

adhere the sticker on the woode

side of the board, that faces up











Chry

① Take out the drawer from the bottom of the ARMY's ROOM, and open the paper box.

② Open the battery cover inside the paper box and insert the battery, and open the paper box.

③ Turn the BGM player on and off by using the power switch off by using the power switch on the back of ARMY's ROOM.

③ Turn on player on power switch off by using the power switch on the back of ARMY's ROOM. \* The BGM player will be ready to to set up a connection.

Make sure to thoroughly read the handling precautions and user manual before use. Keep your user manual in a location that is easily accessible to everyone after reading. Not keeping to the following precautions may lead to damage to the product or injuries. This product is not suitable for children aged 14 or younger, and people with difficulties in correctly using the product.


1) Prohibition (The following acts are prohibited and should not be attempted.) The use of batteries of incorrect specifications may cause malfunctions. This product should only be used for the prescribed purpose. Do not short circuit, arbitrarily disassemble, change or modify the product. Contact with chemicals or volatile materials such as alcohol may damage the product. The product arbitrarily disassemble, change or modify the product. Contact with chemicals or volatile materials such as alcohol may damage the product. The product may easily be scratched by sharp or pointy objects or friction against rough surfaces. Avoid strong or sudden impact as the product may be damaged. Dropping or impacting the product may lead to internal damage that may, if accumulated, lead to sudden malfunction or failure during the course of normal use. Be careful not to impact the product. This product is not waterproof and must not be placed in places with high levels of humidity such as a bathroom, or be exposed to wet environments or rain. Do not subject the product to high temperatures or place near flames or heating devices.

2) Instructions (The following must be observed.) When inserting the battery, check the battery terminal and specifications. When replacing batteries, mixing old and new batteries may cause a malfunction due to different residual capacities. Ensure that only new batteries are used. Install and use the product in a location without danger of dropping. Extended exposure to direct sunlight can cause discoloration of the product. If the product has been contaminated, wipe with a dry cloth with the power switched off. If the product gets overheated during use or if you sense discoloration, deformation, or foul odors, stop using it immediately. Store it out of direct sunlight, humidity and heat. When not in use, keep the product switched off at all times. Do not store in an enclosed space such as inside a vehicle or near a source of heat To ensure product safety and longevity, remove the batteries before storing it. Battery leakage can cause a malfunction. Keep out of reach of children, infants and pets as small parts may be swallowed and cause serious injury.

The wireless device is subject to radio signal interferences, and should not be used for services related to health and safety. This product is not rechargeable as it does not include a battery pack, and only runs on disposable batteries. Player connectivity and compatibility can differ depending on the software version of the device. The player can be detected at a maximum of 8 meters. There should be no objects between the devices, and the wireless connection distance can be affected by the surroundings or objects. If the player signal is weak, the device may be disconnected, and may have to reconnect. The maximum playtime of the product can vary depending on the usage environment or method of use. Due to the nature of the materials used in this product, you may sense odors that will dissipate after time. Please understand that minor scratches may occur as part of the production process and are not considered defects. The company shall not be held liable for damages or accidents caused by intentional abuse or user negligence. Any changes or modifications (including the antenna) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. To comply with FCC RF exposure compliance requirements, a separation distance of at least 20cm must be maintained between the antenna of this device and all persons. This device must not be co-located or operation in conjunction with any other antenna or transmitter.

## 일문





・BGMプレーヤーのバージョン:5.1 ·BGMプレーヤーの使用距離: 8m ・プレーヤーの接続および互換性はソース装置のソフトウェア バージョンによって異なることがあり、すべてのプレーヤー 端末と完全な互換性を持つものではありません。

\*本製品に電池は付属していません。

·電源:1.5V単三電池3本

「ARMY'S ROOM」を立体的に具現化するために、


製作過程においてアーティストの絵の一部を再構成しました。


## 使用方法

BGMプレーヤーの

電源 on/off


および使い方

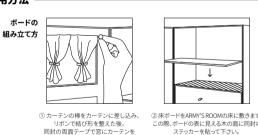





絵の通りに貼り付けます。 差し込み式ボードのライトを差し込んでください







## 取り扱い上の注意事項

ご使用前に、必ず注意事項および説明書を十分に熟知した上で、正しくお使いください。取扱説明書を読み終えた後は、使用する方がいつでも手に取れる場所に保管して ください。下記の事項を遵守しない場合、製品の破損および負傷などが発生する恐れがあります。満14歳未満の子供、高齢者または製品の使い方を熟知するのが 難しかったり使用時に不便を感じ得る方は、お使いにならないようご注意ください。

### 1)禁止(固く禁じられている禁止事項です。) 定められた規格外の電池をお使いになる場合、故障の原因となりますのでご注意ください。決して用途以外に使用しないでください。決して製品の短絡、任意分解、変更、改造をしてはいけません。

アルコールのような揮発性物質および化学物質に触れる場合、製品が破損する恐れがありますので、ご注意ください。ご使用の際、先の尖ったものや鋭いもの、荒い表面との 摩擦により傷がつく恐れがありますので、ご注意ください。急激で強い衝撃は製品の損傷および破損の原因となりますので、ご注意ください。製品が落下または衝撃を受けると 製品の内部に損傷が蓄積され、通常通り使用した場合でも予期せぬ故障および破損が発生する恐れがあります。製品に衝撃を与えないようご注意ぐださい。本製品は防水製品ではないため、 お風呂場、水際など湿気の多い場所、特に雨に当たる場所でのご使用はおやめください。火気、暖房器具など高温を発するものの近くでは使用しないでください。

## 2)必須 (必ず守っていただくべき指示内容です。)

電池を入れる際には電池の向きと種類を必ずご確認ください。電池を交換する際に、古い電池と新しい電池を混ぜて使用すると、残量の違いによる誤作動発生の可能性が高くなるため、 交換時にはすべて新しい電池に取り替えてください。落下の恐れのない安全な場所に設置してお使いください。直射日光に長時間さらされる場合、製品が変色する恐れがありますので、 ご注意ください、汚れが付いた場合、必ず電源を切った状態で乾いた布を使って抗いてください。使用中に製品から異常な発熱や変色、変形、臭いなどが発生した場合、直ちに使用を 中止してください。直射日光や高温多湿な場所はさけて保管してください。使用後には必ず電源を切ってから保管してください。車内のような密閉した空間、熱の発生する場所または 熱を発する機器の近くでは保管しないでください。製品の安全と寿命維持のため、必ず電池を取り外した状態で保管してください。電池の液漏れは故障の原因となります。乳幼児やベットの 手が届かない場所に保管してください。部品を飲み込んだり傷害を負う恐れがあります。

ンタール は という は できません。本製品は、電池専用の製品でありバッテリーバックが搭載されていないため、 充電はできません。本製品は、電池専用の製品でありバッテリーバックが搭載されていないため、 充電はできません。プレーヤーの接続と互換性は接続端末のソフトウェアバージョンによって異なることがあります。プレーヤーの認識が可能な距離は約8mで、端末の間を遮る障害物があってはならず、 無線での使用距離は周辺環境や障害物によって異なることがあります。プレーヤーの信号が弱い場合、接続の途切れにより再接続を要する場合があります。製品の最大使用時間は 使用環境および使用方法によって異なることがあります。本製品は素材の特性上、多少のにおいが発生する場合がありますが時間がたては自然と消えていきます。生産の過程において細かい傷が 発生する可能性があり、これは不良ではありません。消費者の故意または不注意による製品の破損および事故については補償の責任を負いません。

### **FCC Compliance Statement**

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the **FCC Rules**. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Postal address

E-mail: https://www.hibe.com

Office: +82-2-3448-0777

#317, Dosan-daero, Gangnam-qu, Seoul, Republic of Korea