FOXXD
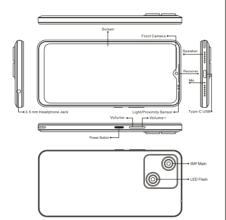
Smart Phone

A65M

Thank you for choosing
FOXXD smart phone. Please follow
the instructions when start using this product.

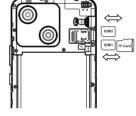
PRODUCT HEX-VISION IMAGE

Screen
Front Camera
Speaker
Receiver
Mic
3.5 mm Headphone Jack
Light/Proximity Sensor
Type-C USB
Volume -
Volume +
Power Button

5MP Main
LED Flash

POWER BUTTON: Long press to turn on/off the device. When the device is on, short press to switch on/off the screen.

VOLUME BUTTON: Short press to adjust the volume or mute ringtones.

1

CARD INSERT MANUAL

Insert Nano-SIM Card
Turn off the phone. Remove the battery cover. Insert 1 or 2 nano-SIM cards into the SIM slots. Make sure the notched edges match the indication at the SIM slots. You can also install a micro-SD card. Please insert the micro-SD card with the gold contact facing down in the micro-SD tray.Put the battery cover back and power on the phone.

SIM2
SIM1
TF Card

Caution:
Please use standard nano-SIM card only. Non-standard SIM or hand-cut SIM card may damage the SIM tray or phone and causes SIM rejection situation.Always turn off the phone before installing or replacing SIM card or micro-SD card. The micro-SD card does not come with the phone.
Please purchase it separately.

DUAL-SIM MANAGEMENT

Turn on the phone. Click "Settings">"SIM card". Make one of the SIM cards the main one which will carry the mobile data.Choose the preferred network types of 4G/3G/2G in "Settings">"Network and Internet">"Mobile Network">"Preferred Network type".

2

NETWORK CONNECTION

Connect to WLAN
Click "Settings">"Network and Internet">"WiFi". When WLAN is on, a list of available WiFi connections will appear. Click the one you want to connect, enter the password if the network is encrypted, then click "Connect".

Bluetooth function
Click "Settings">"Connected Device">"Bluetooth". Turn on Bluetooth function. Select "Refresh", the phone will search for Bluetooth devices available for pairing.

Choose one from the device list which you want to pair with. Click "Pair" in the dialog box to pair the device with the phone.

Slid down twice the status bar to open the shortcut switches for Bluetooth and other functions.

WiFi hot-spot
Click "Settings">"Network & Internet">"Hostpot & tethering">" WiFi Hotspot" to turn on the portable WiFi Hotspot function. Enter your network name and password, then click"Save". The WiFi hotspot is now ready for sharing the network.

Please make sure to turn on the mobile data before going to the network sharing function. When the network sharing function is on, your mobile traffic will be shared by other devices.

3

CAMERA

Turn on "Camera", the camera will automatically focus on the objects. Touch the screen, the camera will shift the focus to the chosen object. Then click "Capture" button to take a photo. Video, camera modes and more camera applications can be found in the camera menu.

DUAL SIM DUAL SATANDBY

Dual SIM dual standby means that you can insert two SIM cards and have them both standby for incoming calls. Once a phone call is activated, the other SIM card is not available for both incoming and outgoing calls.

For more information, please visit Android's official site:
https://www.android.com/

SECURITY INFORMATION

Security information (including BS, ES, battery security information) of third-party software installation and function may vary in different regions or by different hardware specifications. FOXXD holds disclaimer for the performance problem or incompatibility caused by third-party applications, registry editing, OS software modifying. Customizing the OS may cause the device or some applications fail to work properly.

Please prevent the device or the battery in extreme cold/hot condition. The extreme temperature will lead to deformation of the phone and reduce the charging capacity and battery life.

Please only use the custom designed and approved battery and recharger by FOXXD. Incompatible battery and recharger may cause damage to the phone. Please abide by local regulation when disposing of the used batteries and phones.

Please do not place the battery or the phone onto or inside heating devices such as microwave, oven or radiator. The battery may explode if it gets too hot.

Please do not crush or pierce the battery. Prevent the battery from getting high pressure from outside, it may cause internal short and overheating

4

SPECIFICATIONS

BASIC INFORMATION

Model	A65M
Operating System	Android™ 13 Go
CPU	MTK6739WW Quad-Core
	4x ARM Coretx-A7 Mpcore up to 1.5GHz
GPU	PowerVR Ge8100
RAM	2GB
ROM	32GB
Battery	3800mAh

Display

Screen Size	6.56"water drop Incell HD+ IPS
Resolution	720x1600 Pixels
Touch	Capacitive multi-touch

Cameras

Rear Camera	5MP Camera
Front Camera	2MP Camera

Connection(I/O)

Band	LTE-FDD: B2/4/5/12/13/17/41/66/71
	LTE-TDD: B41F(HPUE)
	WCDMA: B2/4/5
	GSM: B2/3/5/8
SIM/TF card	2 Nano SIM Card Or 1 Nano SIM and 1 TF Card
WIFI	IEEE802.11b/g/n/ac
Bluetooth	Bluetooth 4.2
GNSS	GPS, Beidou, Glonass,Galileo
FM	Yes
Earphone Port	3.5mm
USB Port	Type-C

Other Features

Video File Format	3GP/etc.
Audio File Format	WAV/MP3/AAC/AMR,etc.
Card Extend	Support TF card up to 1TB
Language	Support Multi-language
Sensor	G-Sensor, P-Sensor, L-Sensor, Compass,

In the box

1x Phone
1x Screen Protector (pre-applied)
1x Phone Case
1x Type-C Cable
1x Power Adapter
1x Quick Start Guide

Android is a trademark of Google LLC.

5