

Important Product Information

Wacom Intuos Pro,

(PTH-460)

Precautions

PRECAUTIONS

WARNING

Do not dismantle or modify the device. Failure to observe this may result in heat generation, the outbreak of fire, electric shocks or other damage, including human injury. Dismantling the device will void the warranty.

Avoid damaging the USB cable. Do not place heavy objects on the cable, repeatedly bend it sharply, or apply heavy stress to the cable connector. Damage to or laceration of the USB cable, or water or other liquids coming into contact with it, may result in malfunction, electric shock or the outbreak of fire.

Do not expose the device to water or other liquids. Failure to observe this may result in malfunction or electric shock. In the event of liquid being spilled on the device, stop using it, switch off the power supply and contact your distributor or Wacom Customer Support Center.

Do not insert metallic objects or foreign objects into the device opening or connector terminal. Failure to observe this may result in malfunction, electric shock or fire damage.

Store the device in a location well out of the reach of children. Failure to observe this may result in children accidentally swallowing components or parts detached from the device.

Switch off the power supply before cleaning the device.

Do not use alcohol and other organic solvents, or neutral detergents, as they may cause color change or other damage.

Such damage is not covered by the manufacturer's warranty.

Do not use or store the device in the following environments:

- Environments subject to severe temperature fluctuations.
- Environments subject to temperature and humidity ranges that exceed specified usage conditions (such as outdoors or inside vehicles.)
- Environments subject to dusty conditions.
- Near to open flames."

To avoid possible damage or malfunction, do not apply excessive force to the movable part of this device including the accessories. This may shorten the product life or cause the device to malfunction.

The device contains metallic components. Cease use and immediately contact your doctor in the event of metal allergy symptoms arising during usage.

USAGE NOTE

Do not place or use the device on shaky, inclined, vibrating or other unstable surfaces or worktops.

Other Precautions:

- Do not place metallic objects on top of the device and do not use it on top of metallic tables, etc. Keep the device away from magnets and magnetic fields.

Failure to observe this may result in interference, malfunction or damage.

Do not drop the device or use it to strike hard objects.

Failure to observe this may result in damage.

- Wacom cannot be held responsible for any laceration, damage or loss of data caused by the use of the device.

- To ensure the best performance of your device and to prevent damage, please use only the pens and nibs specified for use with your Wacom device.

Avoid damaging your device. Replace your pen nib when it becomes worn or sharp.

Do not use a distorted or bent pen nib with the pen; a pen in this condition may cause the pen to operate improperly and scratch your tablet. Therefore, avoid pressing too hard when using the pen and bending or distorting the nib.

Do not push hard on the pen tip, or buttons. This may shorten the pen tip life or cause the pen to malfunction.

Do not store the pen so that the pen tip, buttons, are continually depressed.

Move the product periodically to another place on your work surface to avoid permanently discoloring or altering the appearance of the surface.

Do not store the pen so that the pen tip is continually depressed.

Please recycle batteries in accordance with the manufacturer recommendation, following all local laws and regulations.

Usage note for Bluetooth device Devices mounted with Bluetooth devices may interfere with equipment used in aircrafts and other such forms of transport.

Users are therefore obligated to switch off all radio communication devices when traveling in airplanes.

There is a chance that the device may interfere with or cause damage to other electronic equipment. There are also cases in which the effects of other radio communication devices may cause the device to malfunction. Make sure the device is switched off in locations where their use is banned to prevent interference with other electronic equipment. Wacom cannot be held responsible for damages.

Disposal of the built-in lithium-ion battery Please contact Wacom Customer Care about the disposal of the built-in lithium-ion battery.

USAGE NOTE FOR WACOM FINETIP PEN

Please remove the seal on the tip of the pen prior to use.

Do not use for purposes other than writing or drawing.

Do not point the tip of the pen upwards, as ink may leak.

Do not shake hard or apply hard pressure, as ink leakage may occur.

Always put on the cap after use.

Ink may stain on clothes so use caution.

Wacom Intuos Pro (PTH-460)

Multi-finger touch	Integrated
ExpressKeys	6 customizable capacitive/ mechanical keys
Touch Ring	Integrated
Physical size (W x D x H)	269 x 170 x 8.45 mm
Weight	450 g
Active area (W x D)	160 x 100 mm

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

wacom®
Intuos Pro

PTH-460 Pen tablet

-269*170*8.45mm

-Support bluetooth & USB type C

-Support Windows 7 and later

& Mac OS X10.12 and later




1X




1X




1X



1X



1X

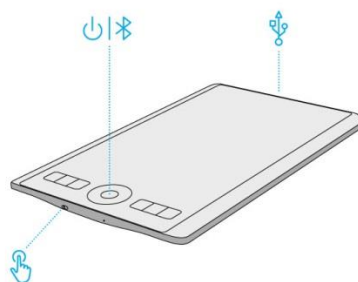

1



Connect USB type C



2



wacom.com/start





3



Can be connected by bluetooth

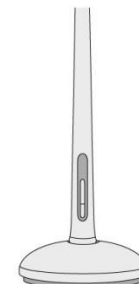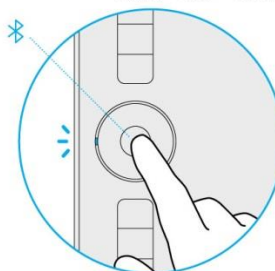


Pen can be put on Pen stand

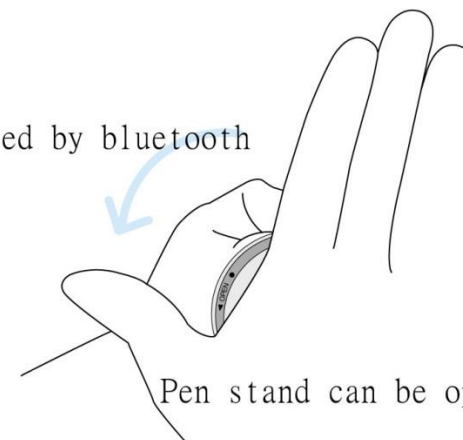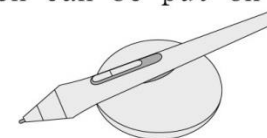

Pen stand can be opened


Power on, blue light means bluetooth connection

1

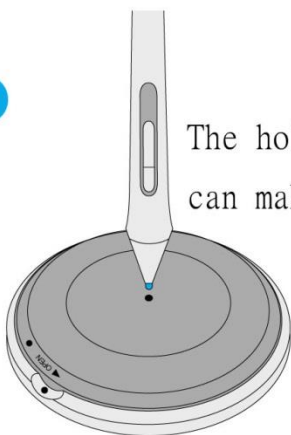


The hole under pen stand
can make tip loosen from pen.

2

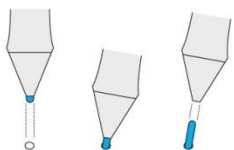

Tip can be pulled out.

3

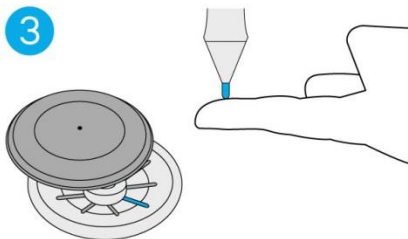

Open pen stand. The tip can be changed.

5



wacom.com/manuals

6



Download the driver at wacom.com/start.
Then register your product to access all
Wacom services.

Laden Sie den Treiber unter wacom.com/
start herunter.

Registrieren Sie danach Ihr Produkt, um
Zugang zu allen Services von Wacom zu
erhalten.

Download het stuurprogramma op wacom.
com/start.

Registreer je product vervolgens om
toegang te krijgen tot alle diensten van
Wacom.

Ladda ner drivrutinen på wacom.com/
start.

Registrera sedan produkten för att komma
åt alla tjänster från Wacom.

Download drivern på wacom.com/start.
Registrer herefter dit produkt for at få
adgang til alle Wacom's tjenester.

Téléchargez le pilote sur wacom.com/start.
Inscrivez ensuite votre produit pour ac-
céder à tous les services Wacom.

Scarichi il driver su wacom.com/start.
Quindi registrati il prodotto per accedere a
tutti i servizi Wacom.

Descargue el controlador en
wacom.com/start. A continuación, registre
su producto para acceder a todos los
servicios de Wacom.

wacom.com/start から Wacom Center を選び、
タブレットドライバをダウンロードしてください。
製品登録を行っていただくことでサービスが受
けられます。

wacom.com/start 에서 드라이버를 다운로드하
십시오.
그런 다음 제품을 등록하시면 Wacom 서비스 전체
에 액세스하실 수 있습니다.

Download the driver at wacom.com/start.
Then register your product to access all
Wacom services.

在 wacom.com/start 下載驅動程式。
然後註冊產品以獲取全部
Wacom 服務。

Boixe o driver em wacom.com/start.

Depois registre seu produto, para acessar
todos os serviços Wacom.

Скачайте драйвер на wacom.com/start.

Затем зарегистрируйте свой продукт для
получения доступа ко всем сервисам
Wacom.

Pobierz sterownik ze strony internetowej
wacom.com/start.

Następnie zarejestruj swój produkt, aby
uzyskać dostęp do wszystkich usług
Wacom.

Stáhněte si ovladač na wacom.com/start.

Pak zaregistrujte svůj výrobek, abyste
získali přístup ke všem službám Wacom.

Искачайте драйвера от wacom.com/start.

След това регистрирайте своя продукт, за
да получите достъп до всички услуги на
Wacom.

Lataa ajuri alas osoitteesta wacom.com/
start.

Rekisteröi sitten tuotteesi päästäksesi
käsitä kaikkiin Wacom-palveluihin.
wacom.com/start adresinden sürücüyü
indir.

Daha sonra, tüm Wacom servislere
erişmek için ürününüzü kaydedin.

在 wacom.com/start 下載驅
動程序。
然後註冊產品以獲取全部
Wacom 服務。

©2019 Wacom Co., Ltd. All rights reserved.
Wacom, Intuos and their respective logos
are trademarks and/or registered trademarks
of Wacom Co., Ltd.

©2019 Wacom Co., Ltd. Tous droits réservés.
Wacom, Intuos et leurs logos correspon-
dants sont des marques commerciales et/
ou déposées de Wacom Co., Ltd.

Printed in China | PRN-B197(A)

7



wacom®
Intuos Pro

Wacom

Intuos Pro

PTH-460



EN:

Important Product Information – Limited Version

Warranty statement

For the warranty information of Wacom Intuos Pro, go to Instant Product Information document of Wacom Desktop Center.

Precaution

For the full version of Precaution, go to Important Product Information document of Wacom Desktop Center.

Warning

Do not disassemble or modify the device. Failure to observe this may result in heat generation, the outbreak of fire, electric shocks or other damage, including human injury. Dismantling the device will void the warranty.

Do not insert metallic objects or foreign objects into the device opening or connector terminal. Failure to observe this may result in malfunction, electric shock or fire damage.

Store the device in a location well out of the reach of children. Failure to observe this may result in children accidentally swallowing components or parts detached from the device.

- Do not use or store the device in the following environments:
 - Environments subject to severe temperature fluctuations.
 - Environments subject to temperature and humidity ranges that exceed specified usage conditions (such as outdoors or inside vehicles).
 - Environments subject to dusty conditions.
 - Near to open flames.
- The device contains metallic components. Cease use and immediately contact your doctor in the event of metal allergy/symptoms arising during usage.

Usage note

Do not place or use the device on shaky, inclined, vibrating or other unstable surfaces or worktops. Do not place metallic objects on top of the device and do not use it on top of metallic tables, etc. Keep the device away from magnets and magnetic fields. Failure to observe this may result in interference, malfunction or damage.

Wacom cannot be held responsible for damage or loss of data caused by the use of the device.

To ensure the best performance of your device and to prevent damage, please use only the pens and nibs specified for use with your Wacom device.

Move the product periodically to another place on your work surface to avoid permanently discoloring or altering the appearance of the surface.

Do not store the pen so that the pen tip is continually depressed.

Please recycle batteries in accordance with the manufacturer recommendation, following all local laws and regulations. Or, please contact Wacom Customer Care for the disposal of the built-in lithium-ion battery. Usage note for Bluetooth device: Devices mounted with Bluetooth devices may interfere with equipment used in aircrafts and other such equipment. Users are therefore obligated to switch off all radio communication devices when traveling in airplanes. There is a chance that the device may interfere with other equipment due to the use of the device and to prevent damage, please use only the pens and nibs specified for use with your Wacom device. Move the product periodically to another place on your work surface to avoid permanently discoloring or altering the appearance of the surface.

Product Specifications

For the general specification of tablet and pen, and the specification of Wacom Pro Pen 2, go to Important Product Information document of Wacom Desktop Center.

Wacom Intuos Pro (PTH-460)

Multi-Finger touch	Integrated
ExpressKeys	6 customizable capacitive/mechanical keys
Touch Ring	Integrated
Physical size (W x D x H)	269 x 170 x 8.45 mm
Weight	450 g (1.6 oz)
Active area (W x D)	160 x 100 mm (6.3 x 3.9 in)

REGULATORY STATEMENT

Federal Communications Commission (FCC) notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Caution: Any changes or modifications not expressly approved by the party's responsibility for compliance could void the user's authority to operate this equipment.

INDUSTRY CANADA

CAN ICES-3 (B)/NMB-3(B)

Canada (IC) notice

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt (RSSIS). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement: The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this document. The further RF exposure reduction can be achieved if the product can be kept for as far as possible from the user/body or at the device to lower output power if such function is available.

EU CONFORMITY INFORMATION

Hereby, Wacom declares that this product is in compliance with RE Directive and RoHS Directive.

The full text of the EU Declaration of conformity is available at the following internet address: www.wacom.com/certificates

Frequency Band: 2.4 GHz (2400 – 2483.5 MHz) Maximum Radio-Frequency Power Transmitted: less than 20 dBm

RoM regulation

Complies with IMDA Standards DB102850

ENVIRONMENTAL COMPLIANCE

For customers in the USA and Canada recycling Lithium-ion Batteries

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbr.org/>

Caution: Do not handle damaged or leaking Li-Ion battery.

Waste Electrical and Electronic Equipment (WEEE) Directive

In the European Union, this label icon indicates that this product should not be disposed of with the household waste. Wacom products are subject to this directive and therefore you should always collect them separately and bring them to the appropriate electronic waste collection point in your community or region to enable recovery and recycling. Please refer to your community information on how to recycle electronic waste responsibly in your region.

EU BATTERY DISPOSAL INFORMATION

This symbol mark is for EU countries only.

This symbol mark is according to the directive 2006/66/EC Article 20 Information for end-users and Annex II. Your product is designed and manufactured with high quality materials and components which can be recycled and/or reused.

This symbol means that the batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

In the European Union there are separate collection systems for used batteries and accumulators. Please dispose of batteries and accumulators correctly at your local community waste collection/recycling centre.

Disposal of the built-in lithium-ion battery

Please contact Wacom Customer Care about the disposal of the built-in lithium-ion battery.



E-Waste

Wacom products are in conformity with the requirements of the reduction of hazardous substances of the E-waste Rule 2016.

The content of hazardous substances with the exemption of the applications listed in SCHEDULE III of the E-waste Rules.

- Not over 0.1% by weight in homogenous materials for Lead, Mercury, Hexavalent Chromium, Polybrominated biphenyls, Polybrominated diphenyl ethers.
- Not over 0.01% by weight in homogenous materials for Cadmium
- For the proper recycling and disposal of this product at the end of life, please visit our website. Toll free number and e-mail address are also available on this website. <http://www.wacom.com/en-in/e-waste> OR <https://store.wacom.com/en-e-waste>

Do's:

- Always look for information on the catalogue with our product for end-of-life equipment handling.
- Ensure that only Authorized Recyclers/Dismantler handle and handle your electronic products.
- Always call Nearest Wacom collection Point to Dispose products that have reached end-of-life.
- Always drop your used electronic products, batteries or any accessories when they reach the end of their life at your nearest Wacom collection Point.
- Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always ensure any glass surface is protected against breakage.

Dont's:

- Do not dismantle your electronic Products on your own.
- Do not throw electronics in bins having "Do not dispose" sign.
- Do not give e-waste to informal and unauthorized sectors like Local Scrap Dealer/Rag Pickers.
- Do not dispose your product in garbage bins along with municipal waste that ultimately reaches landfills.

How to dispose a product

Carry your old end of life product to the nearest collection Point listed on below website: <http://www.wacom.com/en-in/e-waste> or drop-locations OR <https://store.wacom.com/en-e-waste-location>

DE:

Wichtige Produktinformationen – Kurzversion

Garantieerklärung

Die Garantieinformationen zu Wacom Intuos Pro finden Sie im Dokument „Wichtige Produktinformationen“ im Wacom Desktop Center.

Vorsichtsmaßnahmen

Die vollständigen Vorsichtsmaßnahmen finden Sie im Dokument „Wichtige Produktinformationen“ im Wacom Desktop Center.

Warnung

Zerlegen oder verändern Sie das Gerät nicht. Nichtbeachtung kann zu Hitzeentwicklung, dem Ausbruch von Feuer, Stromschlägen oder anderen Schäden führen, einschließlich der Verletzung von Personen. Beim Zerlegen des Gerätes erlischt die Garantie.

Stecken Sie keine metallischen Gegenstände oder Fremdkörper in die Öffnungen des Gerätes oder in die Anschlussbuchse. Nichtbeachtung kann zu Fehlfunktion, Stromschlag oder Brandschäden führen.

Bewahren Sie das Gerät außerhalb der Reichweite von Kindern auf. Nichtbeachtung kann dazu führen, dass Kinder Brand- oder Elektroverletzungen erleiden.

- Umgebungen mit extremen Temperaturschwankungen
- Umgebungen mit Temperatur- und Feuchtigkeitsschwankungen, die die angegebenen Einsatzbereiche überschreiten (z. B. in Außenbereichen oder in Fahrzeugen).
- In staubigen Umgebungen.
- In der Nähe von offenem Feuer.

Das Gerät enthält metallische Komponenten. Verwenden Sie das Gerät nicht weiter und wenden Sie sich sofort an Ihren Arzt, wenn bei der Benutzung Symptome einer Metallallergie auftreten.

Verwendungshinweis

Verwenden Sie das Produkt nicht auf wackeligen, geneigten, vibrierenden oder anderen instabilen Oberflächen oder Arbeitsflächen. Legen Sie keine metallischen Gegenstände auf das Gerät und verwenden Sie es nicht auf metallischen Flächen. Halten Sie das Gerät von Magneten und magnetischen Feldern fern. Nichtbeachtung kann zu Störungen, Fehlfunktionen und Beschädigungen führen.

Das Gerät darf nicht für Schäden oder Verlust von Daten, die durch die Verwendung des Geräts entstehen. Verwenden Sie nur die für Ihr Wacom Gerät spezifischen Stifte. Es ist nicht garantiert, dass eine optimale Leistung Ihres Produkts zu gewährleisten und Schäden zu vermeiden.

Ändern Sie regelmäßig den Aufstellungsort des Produkts auf Ihre Arbeitsfläche. Verändern Sie die Einstellungen von Farbe oder Aussehen der Arbeitsfläche zu vermeiden. Ändern Sie außerdem darauf, dass die Stiftezeit im Menü Aufwachen im Stifthalter nicht dauerhaft gesteuert wird.

Bitte führen Sie Batterien entsprechend den Empfehlungen des Herstellers und unter Einhaltung aller lokalen Gesetze und Vorschriften beim Recycling zu. Alternativ wenden Sie sich bezüglich der Entsorgung des integrierten Lithium-Ionen-Akkus an den Support von Wacom.

Verwendungshinweis für Bluetooth-Geräte: Geräte, die über Bluetooth verfügen, können Gerätschäden in Flugzeugen und anderen Verkehrsmitteln verursachen.

Benutzer sind daher verpflichtet, alle Funkkommunikationsgeräte auf Reisen in Flugzeugen auszuschalten.

Es besteht die Gefahr, dass das Gerät andere elektronische Geräte beeinträchtigt oder beschädigt. Es gibt auch Fälle, in denen die Effekte anderer Funkgeräte auf elektronische Geräte führen können. Stellen Sie sicher, dass das Gerät an Standorten, wo seine Verwendung verboten ist, ausgeschaltet ist, um Störungen von und durch andere elektronische Geräte zu verhindern. Wacom haftet nicht für Schäden.

Technische Daten

Allegemeine Informationen zu Tablet und Stift und die technischen Daten zum Wacom Pro Pen 2 finden Sie im Dokument „Wichtige Produktinformationen“ im Wacom Desktop Center.

Wacom Intuos Pro (PTH-460)

Touch-Eingabe mit mehreren Fingern	Integriert
ExpressKeys	6 frei programmierbare Tasten/ mechanische Tasten
Touch Ring	Integriert
Größe (B x T x H)	269 x 170 x 8,45 mm
Gewicht	450 g
Rechte Fläche (B x T)	160 x 100 mm

RECHTLICHE HINWEISE

EU-KONFORMITÄTSM INFORMATION

Wacom erklärt hiermit, dass dieses Produkt den Anforderungen der RE-Richtlinie und der RoHS-Richtlinie entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter folgender Adresse verfügbar: www.wacom.com/certificates

Frequenzband: 2.4 GHz (2400 – 2483,5 MHz) Maximale Sendeleistung: weniger als 20 dBm

EINHALTUNG VON UMWELTSTANDARDS

EU-Richtlinie über Elektro- und Elektronik-Altgeräte (WEEE)

In der Europäischen Union zeigt dieses Symbol an, dass dieses Produkt nicht mit dem Hausmüll entsorgt werden soll. Für Wacom-Produkte gilt diese Richtlinie. Daher sollten diese Produkte stets getrennt von anderen Materialien und mit den entsprechenden elektronischen Abfallsammeln in ihrer Region oder Gemeinde zwecks Weiterverarbeitung und Recycling gebracht werden. Bitte wenden Sie sich zum Thema Recycling elektronischer Abfälle in Ihrer Region an Ihre Gemeinde.

INFORMATIONEN DER EU ZUR ENTSORGUNG VON BATTERIEN

Hinweis: Dieses Symbol gilt nur für EU-Staats.

Dieses Symbol wird gemäß der Richtlinie 2006/66/EG Artikel 20, Informationen für Endverbraucher, Anhang II, verwendet. Dieses Produkt wurde unter Verwendung hochwertiger Materialien und Bestandteile entwickelt und hergestellt, die recycelt und/oder wieder verwendet werden können. Dieses Symbol besagt, dass Batterien und Akkus nach ihrem Lebenszyklus nicht im Hausmüll entsorgt werden dürfen.

In der Europäischen Union gilt es unterschiedliche Sammelsysteme für gebrauchte Batterien und Akkus. Bitte entsorgen Sie Batterien und Akkus vorschriftsmäßig bei Ihrer kommunalen Sammel- und Recyclingstelle.

Bitte unterstützen Sie uns bei der Erhaltung unserer Umwelt!

Entsorgung der eingebauten Lithium-Ionen-Batterie

Bitte kontaktieren Sie den Wacom Support bezüglich der Entsorgung der eingebauten Lithium-Ionen-Batterie.

NL:

Belangrijke productinformatie – beknopte versie

Garantieverklaring

Ga voor de garantie-informatie van Wacom Intuos Pro naar het document "Belangrijke productinformatie" in het Wacom Desktop Center.

Voorzorgsmaatregel

Ga voor alle voorzorgsmaatregelen naar het document "Belangrijke productinformatie" in het Wacom Desktop Center.

Waarschuwing

Demonteer het apparaat niet en breng ook geen wijzigingen aan. Als u dit toch doet, kan dit tot gewolg hebben dat het apparaat heet wordt, er brand, elektrische schokken of andere vormen van schade ontstaan, waaronder lichamelijk letsel. Demontage van het apparaat maakt de garantie ongeldig.

Plaats geen metalen of vreemde voorwerpen in de openingen van het apparaat of aansluitpunten. Als u dit toch doet, kan dat tot storingen, elektrische schokken of brandschade leiden.

Bewaar het apparaat ver buiten het bereik van kinderen. Als kinderen bij het apparaat kunnen, kan dit tot gevolg hebben dat zij losgeroekte onderdelen inslikken.

Ontwik of bewaar het apparaat niet in de volgende omgevingen:

- Omgevingen met sterke temperatuurswisselingen.
- Omgevingen die onderhevig zijn aan temperatuur- en luchtvochtigheidsdalingen die buiten de opgegeven gebruiksvaarvoorwaarden vallen (zoals buiten of in voertuigen).
- Omgevingen met veel stof.
- In de buurt van open vuur.

Het apparaat bevat metalen onderdelen. Als u symptomen van metaallergie opmerkt tijdens het gebruik, dient u het apparaat niet te gebruiken en direct contact op te nemen met uw arts.

Gebruiksaanwijzing

Plaats het apparaat niet op oppervlakken of werkbladen die schudden, trillen of op een andere manier instabiel zijn.

Plaats geen metalen voorwerpen boven op het apparaat en gebruik het apparaat bijvoorbeeld niet op metalen tafels. Houd het apparaat uit de buurt van magneten en andere sterke velden. Als u dit toch doet, kan dat leiden tot storingen, defecten of schade.

Wacom kan niet aansprakelijk worden gesteld voor schade aan of verlies van gegevens als gevolg van het gebruik van het apparaat.

Voor de beste prestaties van uw apparaat en ter vermindering van beschadiging van de afdekplaat, pennen en penpunten te gebruiken die voor gebruik met uw apparaat van Wacom zijn bedoeld.

Verplaats het product van tijd tot tijd naar een ander gedeelte van uw werkoppervlak om permanente verkleuring van het werkblad te voorkomen.

Bewaar de pen niet zodanig dat er continue druk wordt uitgeoefend op de penpunt.

Recycle batterijen overeenkomstig de aanbevelingen van de fabrikant en neem hierbij de plaatselijke wetten en regelgeving in acht. Of neem contact op met Wacom Customer Care voor het afvoeren van de ingebouwde lithium-ionbatterij.

Gebruiksaanwijzing voor Bluetooth-apparaat: Apparaat die met Bluetooth-apparaat zijn gekoppeld kunnen storingen veroorzaken aan apparatuur die wordt gebruikt in vliegtuigen en soortgelijke transportvormen.

Gebruikers zijn daarom verplicht om alle apparatuur die beschikt over radiocommunicatie tijdens vluchten uit te schakelen.

Het apparaat veroorzaakt mogelijk storing bij schade aan andere elektronische apparatuur. In sommige gevallen kan de correcte werking van het apparaat ook worden verstoord door andere apparatuur die beschikt over radiofrequentie.

Zorg ervoor dat het apparaat is uitgeschakeld op locaties waar het gebruik ervan verboden is, om te voorkomen dat het apparaat storingen veroorzaakt.

Gebruikers van elektronische apparatuur die niet aansprakelijk worden gesteld voor schade. Het apparaat veroorzaakt mogelijk storing bij schade aan andere elektronische apparatuur. In sommige gevallen kan de correcte werking van het apparaat ook worden verstoord door andere apparatuur die beschikt over radiofrequentie. Zorg ervoor dat het apparaat is uitgeschakeld op locaties waar het gebruik ervan verboden is, om te voorkomen dat het apparaat storingen veroorzaakt.

Productspecificaties

Ga voor de algemene specificaties van tablet en pen en de specificaties van de Wacom Pro Pen 2 naar het document "Belangrijke productinformatie" in het Wacom Desktop Center.

Wacom Intuos Pro (PTH-460)

Aanraking met meerdere vingers	Geïntegreerd
ExpressKeys	6 instelbare capacatieve/mechanische knoppen
Touch Ring	Geïntegreerd
Afmetingen (B x D x H)	269 x 170 x 8,45 mm
Gewicht	450 g
Actief gebied (B x D)	160 x 100 mm

WETTELIJKE VERKLARING

EU-KONFORMITEITSINFORMATIE

Herebij verklaart Wacom dat dit product voldoet aan de RE-Richtlijn (richtlijn voor radioapparatuur) en de RoHS-Richtlijn (richtlijn betreffende beperking van het gebruik van bepaalde gevaarlijke stoffen in elektrische en elektronische apparaten).

De volledige tekst van de EU-conformiteitsverklaring is beschikbaar via het volgende internetadres: www.wacom.com/certificates

Frequentieband: 2.4 GHz (2400 – 2483,5 MHz) Maximale zendkracht radiofrequentie: minder dan 20 dBm

MILIEURICHTLIJN

Richtlijn Afval van Elektrische en Elektronische Apparatuur (AEEA)

In de Europese Unie geeft dit label aan dat dit product niet met het huishoudelijk afval mag worden weggegoed. Wacom-producten vallen onder de bepalingen van deze richtlijn.

In de landen apart naar het desbetreffende verzeppelpunt voor opslag en recycling van elektronisch afval bij u in de buurt te worden aangeboden. Raadpleeg de informatie voor uw buurt over hoe u elektronisch afval in uw regio op een verantwoorde manier recycleert.

BATTERIJ VERWIJDERINGS INFORMATIE UE

Opmerking: Dit symbool is alleen van toepassing op de batterijen van het apparaat.

Dit symbool voldoet aan de voorwaarden van richtlijn 2006/64/EG Artikel 20 Informatie voor de eindgebruikers in Bijlage II. Je product is ontworpen en geproduceerd met gebruik van materialen en onderdelen die gerecycled zijn of opnieuw gebruikt kunnen worden. Dit symbool is alleen bedoeld om de aandacht te vestigen van hun levensduur afzonderlijk van huishoudelijk afval moeten worden verwijderd.

In de Europese Unie zijn afzonderlijke recyclingstelsystemen voor gebruikte batterijen en accu's beschikbaar. Verwijder batterijen en accu's op de afvalzamelings bij u in de buurt te worden aangeboden. Raadpleeg de informatie voor uw buurt over hoe u elektronisch afval in uw regio op een verantwoorde manier recycleert.

Help ons het milieu waarvoor we leven te beschermen!

Verwijdering van de geïnstalleerde lithium-ionbatterij

Neem contact op met de klantenservice van Wacom voor informatie over het verwijderen van de geïnstalleerde lithium-ionbatterij.

SV:

Viktig produktinformasjon – begränsad version

Garanti

Läs dokumentet med viktig produktinformation i Wacom Desktop Center.

Informationer om produktens tekniska specifikationer finns i dokumentet "Viktig produktinformation" på Wacom Intuos Pro.

Försiktighetsåtgärder

Läs dokumentet med viktig produktinformation i Wacom Desktop Center. Det innehåller försiktighetsåtgärderna i sin helhet.

Varning

Montera inte isär eller modifiera enheten. Underlåtenhet att iaktta detta kan leda till en värmebildning, utbrott av brand, elektriska stötar eller andra skador, inklusive personskador.

Demontering av enheten upphäver garantin. För inte in metallföremål eller föremål som kan leda till enhetens öppning eller anslutningskontakt.

Underlåtenhet att iaktta detta kan resultera i en funktion, elektriska stötar eller brandskador.

Produkten ska förvaras utom räckhåll för barn. Barn kan annars råka svälja lösa produktdelar.

Undvik att använda eller förvara enheten i följande miljöer:

- Miljöer som utsätts för kraftiga temperatursvängningar.
- Miljöer där temperatur- och luftfuktighetsintervallerna överstiger specificerade användningsförhållanden (t.ex. utomhus eller inne i fordon).
- Miljöer med dammiga förhållanden.

Enheten innehåller metalldelar. Ståta använda produkten och kontakta omedelbart läkare om symptom på metallallergi uppstår under användning.

Användarönsket

Placera inte enheten på ytor som skakar, lutar, vibrerar eller utsätts för andra oönskade yttor eller arbetsbänkar.

Lägg inte metallföremål ovanpå enheten och använd den inte ovanpå metallbord etc. Håll enheten borta från magneteter och magnetiska fält.

Underlåtenhet att iaktta detta kan leda till störningar, felfunktion eller skada.

Wacom kan inte hållas ansvarigt för skador eller förlust av data till följd av användning av enheten.

För att garantera bästa möjliga prestanda hos produkten och förhindra skador bör du bara använda de pennor och spetsar som specificerats för användning med Wacom-produkten.

Flytta produkten då och då till en annan plats på arbetsytan för att undvika permanenta misfärgningar eller utseendeförändringar på ytan.

Förvara inte pennan så att pennspetsen

