


THIS ARTWORK IS SOLELY TO BE USED FOR THE SUPPLY OF GOODS TO THE COTTON ON GROUP AND MUST NOT BE USED FOR ANY OTHER PURPOSE

*ARTWORK IS SHOWN AT ACTUAL SIZE PLEASE USE ACTUAL ARTWORK AS SHOWN BELOW

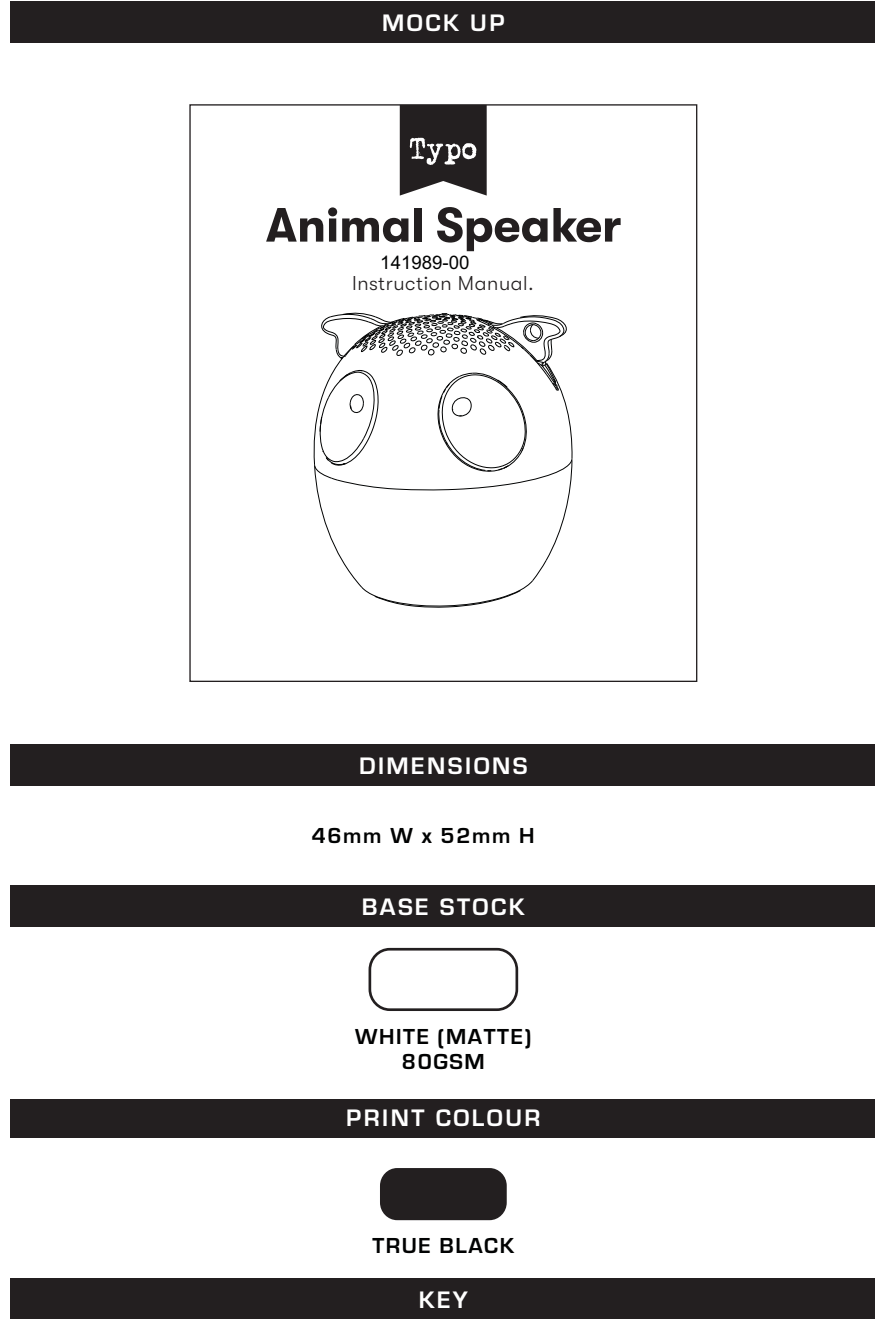

Typo Animal Speaker 141989-00 Instruction Manual.  A. Speaker B. Hole for strap C. LED indicator D. Power Button E. Micro USB port	Diagram  A. Speaker B. Hole for strap C. LED indicator D. Power Button E. Micro USB port	• Turn device ON and OFF by pressing the Power Button for 3 seconds (See "D" on diagram). • If speaker makes a beeping sound this means the speaker needs to be charged. Pairing Speaker With Device • Turn ON by pressing the Power Button (See "D" on diagram) for 3 seconds • A blue LED light (See "C" on diagram) will light up then flash quickly indicating it is now in pairing mode. • In your device's Bluetooth menu, locate and select "ANIMAL SPEAKER". • As soon as you hear pairing is complete. Pairing 2 Speakers • If you have 2 Animal Speakers, you can pair both of them to one device at the same time.	• Make sure no Animal Speakers are currently connected to your device. • Press the Power Button on 2 Animal Speakers at the same time (See "D" on diagram). • In your device's Bluetooth menu, locate and select "ANIMAL SPEAKER". • You will now be connected to both speakers. Extra Features • You can use your Animal Speaker as a remote to take photos from your device and also answer phone calls from your device. • To use the remote features for taking photos, turn Animal Speaker ON by pressing the Power Button (See "D" on diagram) for 3 seconds. • A blue LED light (See "C" on diagram) will light up then flash quickly indicating it is now in "photo mode".	Charging Speaker • Insert the Micro USB end of charging cable into speaker port located on back of speaker (See "E" on diagram). • Insert USB end of charging cable into a USB computer port. • Once fully charged, the LED indicator light will turn off (See "C" on diagram). Safety Information • Do not expose speaker to direct sunlight, heat or open flame. • Do not use speaker on airplane. • Do not attempt to modify or disassemble speaker. Product Specifications • Power Rating: 1 x 2w • Transmitting Frequency: 220K-2204K	• Thin: <1mm • Weight: 40g • Speaker Dimensions: 42 x 52 x 33mm • Battery: 3.7V/300mAh • Bluetooth Version: V4.0 ver • Product Size: 12.2 x 4 x 13mm • Product Weight: 40g FCC Statement This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver.	• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Product Disposal Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and batteries, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. By disposing of batteries and electrical waste correctly, you will help to conserve natural resources and improve standards of environmental protection.	
Typo ลำโพงรูปสัตว์ สัตว์น่ารัก  A. ลำโพง B. ช่องสำหรับสาย C. ไฟ LED D. ปุ่มเปิด/ปิด E. พอร์ต USB ไมโคร	Diagram  A. ลำโพง B. ช่องสำหรับสาย C. ไฟ LED D. ปุ่มเปิด/ปิด E. พอร์ต USB ไมโคร	• เปิดเครื่องโดยกดปุ่มเปิด/ปิดเป็นเวลา 3 วินาที (ดูแผนผัง "D") • หากลำโพงมีเสียงบี๊ปปี้บ๊อปแสดงว่าลำโพงจำเป็นต้องชาร์จ การเชื่อมต่อลำโพงกับอุปกรณ์ • เปิดเครื่องโดยกดปุ่มเปิด/ปิดเป็นเวลา 3 วินาที (ดูแผนผัง "D") • ในเมนู Bluetooth ของอุปกรณ์ของคุณ, ค้นหาและเลือก "ANIMAL SPEAKER". • เมื่อเชื่อมต่อเสร็จสิ้น, ลำโพงจะกะพริบไฟสีน้ำเงินแสดงว่าเชื่อมต่อเรียบร้อยแล้ว การเชื่อมต่อ 2 ลำโพง • หากคุณมีลำโพง Animal Speaker 2 ตัว, คุณสามารถเชื่อมต่อทั้งสองตัวเข้ากับอุปกรณ์ของคุณได้	• ตรวจสอบให้แน่ใจว่าไม่มีลำโพง Animal Speaker ใด ๆ เชื่อมต่ออยู่กับอุปกรณ์ของคุณ • กดปุ่มเปิด/ปิดของลำโพงทั้งสองตัวในเวลาเดียวกัน (ดูแผนผัง "D") • ในเมนู Bluetooth ของอุปกรณ์ของคุณ, ค้นหาและเลือก "ANIMAL SPEAKERS". • เมื่อเชื่อมต่อเสร็จสิ้น, ลำโพงจะกะพริบไฟสีน้ำเงินแสดงว่าเชื่อมต่อเรียบร้อยแล้ว คุณสมบัติพิเศษ • คุณสามารถใช้ลำโพง Animal Speaker เป็นรีโมตเพื่อถ่ายภาพจากอุปกรณ์ของคุณและรับสายโทรศัพท์จากอุปกรณ์ของคุณ • เพื่อใช้คุณสมบัติรีโมตเพื่อถ่ายภาพ, เปิดเครื่องโดยกดปุ่มเปิด/ปิดเป็นเวลา 3 วินาที (ดูแผนผัง "D") • ไฟ LED สีน้ำเงิน (ดูแผนผัง "C") จะกะพริบไฟสีน้ำเงินแสดงว่าอยู่ในโหมดถ่ายภาพ	การชาร์จลำโพง • เสียบสาย Micro USB ของสายชาร์จเข้ากับพอร์ตด้านหลังของลำโพง (ดูแผนผัง "E") • เสียบสาย USB ของสายชาร์จเข้ากับพอร์ต USB ของคอมพิวเตอร์ • เมื่อชาร์จเต็ม, ไฟ LED จะดับ (ดูแผนผัง "C") ข้อมูลความปลอดภัย • อย่าสัมผัสลำโพงโดยตรงกับแสงแดด, ความร้อน, ไฟเปิด, หรือเปลวไฟ • อย่าใช้ลำโพงบนเครื่องบิน • อย่าพยายามดัดแปลงหรือแยกชิ้นส่วนลำโพง ข้อกำหนดผลิตภัณฑ์ • กำลัง: 1 x 2w • ความถี่ส่ง: 220K-2204K	• Thin: <1mm • Weight: 40g • Speaker Dimensions: 42 x 52 x 33mm • Battery: 3.7V/300mAh • Bluetooth Version: V4.0 ver • Product Size: 12.2 x 4 x 13mm • Product Weight: 40g FCC Statement This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver.	• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Product Disposal Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and batteries, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. By disposing of batteries and electrical waste correctly, you will help to conserve natural resources and improve standards of environmental protection.	
Typo Animal Speaker سماعة سماعة  A. السماعة B. ثقب الحزام C. مؤشر LED D. زر التشغيل/إيقاف E. منفذ USB الميكرو	Diagram  A. السماعة B. ثقب الحزام C. مؤشر LED D. زر التشغيل/إيقاف E. منفذ USB الميكرو	• قم بتشغيل الجهاز (ON) بضغطك لبصاصة (OFF) بضغطك على زر التشغيل لمدة 3 ثوانٍ (انظر إلى "D" في المخطط) • إذا سمع الجهاز صوتًا يشبه صفير، فهذا يعني أنه يحتاج إلى شحن. الترتيب مع جهازك الإلكتروني (Bluetooth) • قم بتشغيل الجهاز (ON) بضغطك على زر التشغيل لمدة 3 ثوانٍ (انظر إلى "D" في المخطط) • في قائمة Bluetooth في جهازك الإلكتروني، ابحث عن "ANIMAL SPEAKER". • عندما يتم الاتصال، سيقوم مؤشر LED (انظر إلى "C" في المخطط) بالوميض باللون الأزرق، مما يشير إلى أنه في وضع التزاوج. • في قائمة Bluetooth في جهازك الإلكتروني، ابحث عن "ANIMAL SPEAKER". • عندما يتم الاتصال، سيقوم مؤشر LED (انظر إلى "C" في المخطط) بالوميض باللون الأزرق، مما يشير إلى أنه في وضع التزاوج.	• تأكد من عدم توصيل أي سماعة Animal Speaker حاليًا بجهازك الإلكتروني. • اضغط على زر التشغيل/إيقاف على 2 سماعة Animal Speaker في نفس الوقت (انظر إلى "D" في المخطط). • في قائمة Bluetooth في جهازك الإلكتروني، ابحث عن "ANIMAL SPEAKERS". • عندما يتم الاتصال، سيقوم مؤشر LED (انظر إلى "C" في المخطط) بالوميض باللون الأزرق، مما يشير إلى أنه في وضع التزاوج. ميزات إضافية • يمكن استخدام Animal Speaker كإشعاع عن بعد لالتقاط الصور من جهازك الإلكتروني. • لتحقيق هذه الغاية، اضغط على زر التشغيل/إيقاف لمدة 3 ثوانٍ (انظر إلى "D" في المخطط). • عندما يتم الاتصال، سيقوم مؤشر LED (انظر إلى "C" في المخطط) بالوميض باللون الأزرق، مما يشير إلى أنه في وضع التزاوج.	شحن السماعة • أدخل طرف Micro USB من كابل الشحن في منفذ السماعة (انظر إلى "E" في المخطط) • أدخل طرف USB من كابل الشحن في منفذ USB على الكمبيوتر • عندما يتم الشحن، سيقوم مؤشر LED (انظر إلى "C" في المخطط) بالوميض باللون الأزرق معلومات إضافية • لا تعرض السماعة للحرارة المباشرة أو الضوء المباشر أو النار • لا تستخدم السماعة في مكان قريب من النار • لا تستخدم السماعة في مكان قريب من النار مواصفات المنتج • القدرة: 1 x 2 واط • نطاق التردد: 220 ك - 2204 ك هرتز	• السماعة: 42 x 52 x 33 ملم • البطارية: 3.7 فولت / 300 مللي أمبير • نسخة Bluetooth: 4.0 • حجم المنتج: 12.2 x 4 x 13 ملم • وزن المنتج: 40 جرام إقرار FCC هذا الجهاز يتوافق مع الجزء 15 من لوائح لجنة الاتصالات الفيدرالية (FCC). التشغيل خاضع للشروط التالية: 1) هذا الجهاز قد لا يتسبب في تداخل ضار. 2) هذا الجهاز يجب أن يتقبل أي تداخل، بما في ذلك التداخل الذي قد يتسبب في تشغيل غير مقصود. ملاحظة: هذا الجهاز قد لا يتوافق مع متطلبات FCC إذا تم استخدامه في بيئة غير مناسبة.	• قم بتوصيل الجهاز في منفذ على دائرة كهربائية مختلفة عن تلك التي يتصل بها الجهاز الإلكتروني. • استشر بائع الجهاز أو بائع التجزئة للحصول على مزيد من المعلومات. • تغييرات أو تعديلات غير مصرح بها قد تؤدي إلى إلغاء ضمان المنتج. • تغييرات أو تعديلات غير مصرح بها قد تؤدي إلى إلغاء ضمان المنتج.	
Typo 动物造型扬声器 动物声音  A. 扬声器 B. 挂绳孔 C. LED 指示灯 D. 电源按钮 E. 微型 USB 接口	Diagram  A. 扬声器 B. 挂绳孔 C. LED 指示灯 D. 电源按钮 E. 微型 USB 接口	• 按下电源按钮三秒钟，打开或关闭设备 (参见图 "D") • 如果扬声器发出蜂鸣声，表明需要充电。 将扬声器与设备进行配对 • 按下电源按钮 (参见图 "D") 三秒钟，将设备置于配对模式。 • 在您的设备的蓝牙菜单中，找到并选择 "ANIMAL SPEAKERS"。 • 配对成功后，扬声器上的 LED 灯 (参见图 "C") 将快速闪烁蓝色，表示已进入配对模式。 将两个扬声器进行配对 • 如果您有两个动物造型扬声器，您可以同时将它们与一台设备进行配对。	• 确保动物造型扬声器设备已正确连接到设备。 • 同时按下两个 "ANIMAL SPEAKERS" 的电源按钮 (参见图 "D")，将设备置于配对模式。 • 在您的设备的蓝牙菜单中，找到并选择 "ANIMAL SPEAKERS"。 • 配对成功后，扬声器上的 LED 灯 (参见图 "C") 将快速闪烁蓝色，表示已进入配对模式。 额外功能 • 您可以使用动物造型扬声器作为遥控器，从设备拍摄照片，并从设备接听电话。 • 要使用此功能，请按下电源按钮 (参见图 "D") 三秒钟，将设备置于配对模式。 • 配对成功后，扬声器上的 LED 灯 (参见图 "C") 将快速闪烁蓝色，表示已进入配对模式。	为扬声器充电 • 将充电器的 Micro USB 端插入扬声器背面的充电接口 (参见图 "E")。 • 将充电器的 USB 端插入电脑的 USB 接口。 • 充满电后，LED 灯将停止闪烁 (参见图 "C")。 安全提示 • 请勿将扬声器直接暴露在阳光下、热源或明火。 • 请勿将扬声器放在易燃物附近。 • 请勿尝试拆卸或修改扬声器。 产品规格 • 额定功率: 1 x 2 W • 传输频率: 20 kHz - 20 kHz	• 总厚度: <1mm • 重量: 40g • 扬声器尺寸: 42 x 52 x 33 mm • 电池: 3.7V/300mAh • 蓝牙版本: V4.0 ver • 产品尺寸: 12.2 x 4 x 13 mm • 产品重量: 40 g FCC 声明 本设备符合 FCC 第 15 部分的要求。操作受以下两个条件的限制: 1) 本设备不得造成有害干扰。 2) 本设备必须接受任何接收到的干扰，包括可能导致操作不当的干扰。 注: 本设备可能无法在某些情况下符合 FCC 第 15 部分的要求。	• 将设备连接到接收设备时，请确保设备已正确连接到设备。 • 同时按下两个 "ANIMAL SPEAKERS" 的电源按钮 (参见图 "D")，将设备置于配对模式。 • 在您的设备的蓝牙菜单中，找到并选择 "ANIMAL SPEAKERS"。 • 配对成功后，扬声器上的 LED 灯 (参见图 "C") 将快速闪烁蓝色，表示已进入配对模式。 额外功能 如果您有两个动物造型扬声器，您可以同时将它们与一台设备进行配对。	请按照当地法规妥善处理电子废物。 请按照当地法规妥善处理电子废物。