


LANDO BLUETOOTH SPEAKER

PACKAGE CONTENTS

1. LANDO Bluetooth Speaker
2. User's Manual
3. USB cable
4. Audio cable

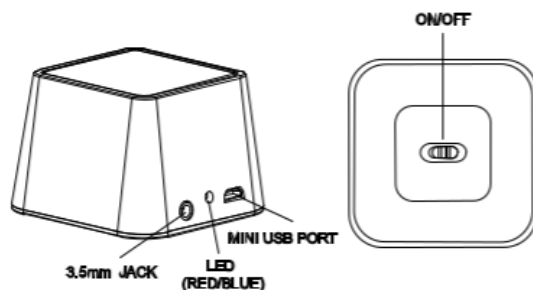

CHARGING THE SPEAKER:

Before using the speaker for the first time, charge it for at least 12 hours.

1. Plug the USB cable into the port on the speaker, plug the other end into the USB port on the computer.
2. Red LED will turn on to indicate that the unit is charging.
3. Red LED will turn off when fully charged.

PAIRING THE DEVICE

1. Place the speaker near the Bluetooth-enabled device.
2. Slide the ON/OFF button to ON. The blue LED will flash 3 times slowly then flash quickly. The speaker is now in pairing mode.
3. Follow the instructions of your device to search for the speaker.
4. The speaker is called "LANDO "; enter the PIN "0000" if needed.
5. The blue LED will flash slowly when pairing is complete.

BASIC INSTRUCTIONS

To turn the speaker on, slide the ON/OFF button to ON. The Speaker will emit a beep and a blue LED will flash slowly.

The blue LED will stay on when playing music.

The speaker will emit a beep every 20 seconds when the battery is low.

To turn the speaker off, slide the ON/OFF button to OFF.

LED INDICATOR

Charging: Red LED on

Fully Charged: Red LED off

Pairing Mode: Blue LED will flash quickly

Connected: Blue LED will flash slowly

Playing: Blue LED will remain on

TECHNICAL SPECIFICATIONS:

Bluetooth standard: 2.1+EDR

Bluetooth agreement: A2 DP

Working distance: 30ft.

Frequency range: 220Hz - 20KHz

S/N Ratio: >80dB

Distortion Factor: <1.0%

Playing time: 2 hours

Charge time: 2 hours , 3 hours first time.

SAFETY AND GENERAL INFORMATION:

Do not expose the device to water or attempt to disassemble the device. If the device is exposed to water or disassembled, the user may be risking an electric short.

Handle this product with care, without proper care the device may not function properly.

Do not use this product in an aircraft or in a hospital.

Do not expose the device to direct sunlight.

Device may become warm while charging.

FCC: NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by party responsible for compliance could void the user's authority to operate this equipment.


Art.No.: 7199-33

Made in China

LANDO ENCEINTE BLUETOOTH

CONTENU DE L'EMBALLAGE

1. LANDO Enceinte Bluetooth
2. Mode d'emploi
3. Câble USB
4. Câble audio

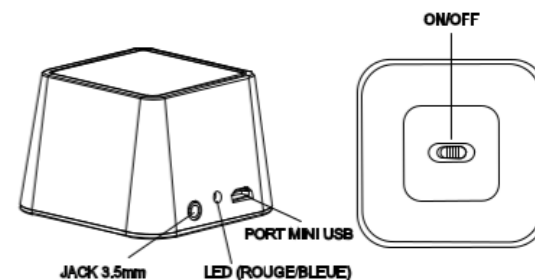

CHARGEMENT DE L'ENCEINTE :

Avant d'utiliser l'enceinte pour la première fois, chargez-la pendant au moins 12 heures.

1. Branchez le câble USB dans le port de l'enceinte, branchez l'autre extrémité dans le port USB de l'ordinateur.
2. La LED rouge s'allume pour indiquer que l'appareil est en charge.
3. La LED rouge s'éteint lorsque l'appareil est complètement chargé.

APPAIRAGE DE L'APPAREIL

1. Posez l'enceinte près de l'appareil Bluetooth.
2. Faites basculer l'interrupteur marche/arrêt sur « ON ». La LED rouge clignote 3 fois lentement et clignote ensuite rapidement. L'enceinte est à présent en mode d'appairage.
3. Suivez les instructions de votre appareil afin d'isoler votre enceinte.
4. L'enceinte est appelée « LANDO », entrez le code d'accès « 0000 » si nécessaire.
5. La LED bleue clignote lentement lorsque l'appairage a réussi.

INSTRUCTIONS DE BASE

Pur allumer l'enceinte, faites basculer l'interrupteur marche/arrêt sur « ON ». L'enceinte émet un signal sonore et la LED bleue clignote lentement.

La LED bleue reste allumée lorsque vous écoutez de la musique.

L'enceinte émet un signal sonore toutes les 20 secondes lorsque le niveau de la batterie est faible.

Pour éteindre l'enceinte, faites basculer l'interrupteur marche/arrêt sur « OFF ».

Témoin LED

Chargement : LED rouge allumée

Entièrement chargée : LED rouge éteinte

Mode d'appairage : la LED rouge clignote rapidement

Connexion : la LED rouge clignote lentement

Mode lecture : LED bleue reste allumée

SPÉCIFICATIONS TECHNIQUES

FCC: rme Bluetooth : 2.1 +EDR

Convention Bluetooth : A2 DP

Distance de fonctionnement : 9 m

Bande de fréquence : 220 Hz - 20 KHz

Rapport S/B : > 80 dB

Facteur de distorsion : <1,0%

Durée de lecture : 2 heures

Temps de charge : 2 heures , 3 heures avant la toute première utilisation.

INFORMATIONS GÉNÉRALES ET RECOMMANDATIONS DE SÉCURITÉ

Évitez d'exposer l'appareil à l'eau et ne tentez pas de le démonter. Si l'appareil est exposé à l'eau ou s'il est démonté, l'utilisateur peut provoquer un court-circuit électrique.

Manipulez cet appareil avec précaution afin d'éviter un mauvais fonctionnement.

Cet appareil ne doit pas être utilisé dans un avion ou un hôpital.

N'exposez pas directement l'appareil aux rayons du soleil.

L'appareil peut devenir chaud en cours de chargement.

Art.No.: 7199-33

Made in China