中

英

MONSTER®

Monster Airmars XKO13
真无线蓝牙耳机
使用说明书

产品参数
- 蓝牙版本 ------------------ V5.4
- 传输距离 ------------------ ≥10m
- 喇叭直径 ------------------ Φ13mm
- 喇叭阻抗 ------------------ 16Ω±15%
- 灵敏度 -------------------- 117±3dB
- 频响范围 ------------------ 50Hz-20KHz
- 电池容量（充电盒）-------- 400mAh 3.7V
- 电池容量（耳机）---------- 45mAh 3.7V
- 充电时间（充电盒）-------- ≈2小时
- 播放时长（耳机）---------- ≈5小时
- 配合充电盒播放时长 ------- ≈25小时

包装清单
| 耳机 *2 | 充电盒 *1 |
| 使用说明书 *1 | Type-C充电线 *1 |

产品示意图说明

Type-C

产品操作说明
1. 开机
2. 关机
3. 配对
4. 音乐播放模式
5. 电话免提
6. 游戏模式/音乐模式切换：已连设备
7. 恢复出厂设置

模式	描述	语音提示
开机	耳机冰蓝灯闪烁3次	"Power on"
关机	耳机红蓝灯闪烁1秒钟熄灭	"Power off"
配对	耳机红蓝灯交替闪烁	"Pairing"
连接	耳机指示灯熄灭	"Connected"
断开	主耳冰蓝灯闪烁3次	"Disconnected"
电量低	耳机红灯闪烁	"Battery low"
充电盒指示灯		
充电中	充电盒蓝灯闪烁	—
满电	充电盒红灯闪烁	—

MONSTER®

Monster Airmars XKO13
True wireless Bluetooth headphone
instruction manual

Product parameters
- Bluetooth version ------------- V5.4
- Transmission distance --------- ≥10m
- Driver diameter --------------- Φ13mm
- Driver impedance -------------- 16Ω±15%
- sensitivity ------------------- 117±3dB
- Frequency response ------------ 50Hz-20KHz
- Battery capacity(Charging case) - 400mAh 3.7V
- Battery capacity(Headphone) ---- 45mAh 3.7V
- Charging time(Charging case) --- ≈2 hours
- Music playtime(Headphone) ------ ≈5 hours
- Music playtime(Headphone) ------ ≈25 hours

Product Schematic Description
| Headphone*2 | Charging case*1 |
| Instructions Manual*1 | Type-C Charging cable*1 |

Indicator

Multi-function
buttons(MFB)

Charging contact

Charging case

Type-C

Charge the charging case
Connect the charging case to the 5V power adapter with Type-C charging cable.

Rated input: 5Vₘₐ≈45mA(Headphone)   Rated input: 5Vₘₐ≈400mA(Charging case)

TIPS: When the cover of the charging box is closed, the indicator light of the charging box flashes ice-blue, please charge the charging box.

Indicator guide
Mode	Describe	Sound prompt
Power On	Ice blue light of the headset blinks three times	"Power on"
Power Off	Red indicator light on the headphones remains on for 1 second and goes off	"Power off"
Pairing	Ice blue and red light of the headset flash alternately	"Pairing"
Connected	Headphones LED indicator is off.	"Connected"
Disconnected	Ice blue and red light flashes alternately in the main ear, and the secondary ear is extinguished	"Disconnected"
Low Battery	Red indicator on the headset blinks	"Battery low"
Headphones placed in charging case	Ice blue indicator light of the charging case is bright	—
Charging case low power	Blue indicator of the charging case blinks	—
Charging case charged	Red indicator of the charging case blinks	—
Charging case fully charged	Red light of the charging case is bright	—

Product operating instructions
1. Power on
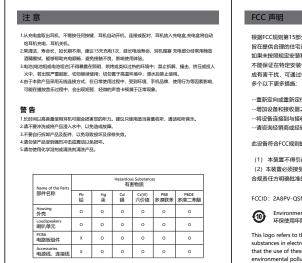   Method 1: Open the top cover of the charging case, and the headset will turn on automatically.
   Method 2: Long press the MFB button of the left/right headset for about 3 seconds to power on the headset.
2. Power off
   Method 1: Put the earphone back in the charging case, close the cover of the charging case, and the earphone will automatically shut down;
   Method 2: The device automatically shuts down after 3 minutes of disconnection from the Bluetooth device.
3. Pairing
   Step one: Open the top cover of the charging case, and the headset will turn on automatically;
   Step two: Open the Bluetooth list of smart devices, search for "Monster Airmars XKO13" to pair, and the connection is successful. After that, you will hear the "Connected" tone
   * Headphones are lost by reconnecting to the device within 3 minutes when connection is lost.

NOTE:
* Fully charge the headphones and power off before an intended not-in-use period.
* Unplug the charging cable after charging.

Operation

Normal

Voice Assistant: Press and hold left MFB for 2.5
Volume +: Click right MFB
Volume -: Click left MFB

Music playback
Pause/Play: Double click Left/Right MFB
Last song: Three hits left MFB
Next song: Three hits right MFB

Phone
Answer: Double click the left/right MFB
Hang up: Double click the left/right MFB
Reject: Long press left/right MFB for 2.5

Game mode/Music mode switch: Connected device
Game mode: Press and hold right earphone MFB for 2 secondsenter Game mode
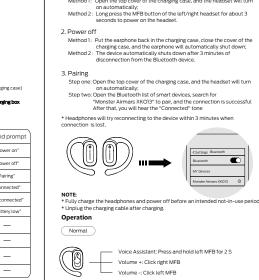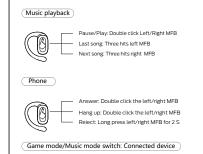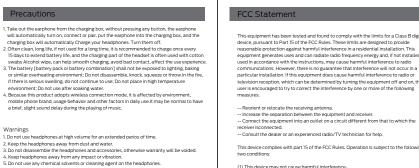Music mode: Press and hold right earphone MFB for 2 secondsenter Music mode

Restore factory settings
When you turn on the headphone, make sure it does not connect to any Bluetooth device, and click the MF button 5 times to clear the pairing record, then turn off the headphone.

Precautions

Warnings

FCC Statement

Warranty Service

文件名称	魔声XKO13说明书		材料	全书60g书纸+单黑印刷+骑马钉	单位	mm	厂商物料编号	变更履历	修改		日期	
文件尺寸	60X90mm（单P尺寸）		工艺	1C印刷 风琴折	公差	±0.5mm	XXXXXXXXX	02:修改指示灯低电说明	审核		日期	
设计日期	2023/12/21	文件版本 2023V03			比例	1:1			批准		日期	