


SOUNDPEATS Halo使用指南 七国

单黒印刷

材質：封面封底100克书纸 内页80克书纸 尺寸：90 x 84 mm

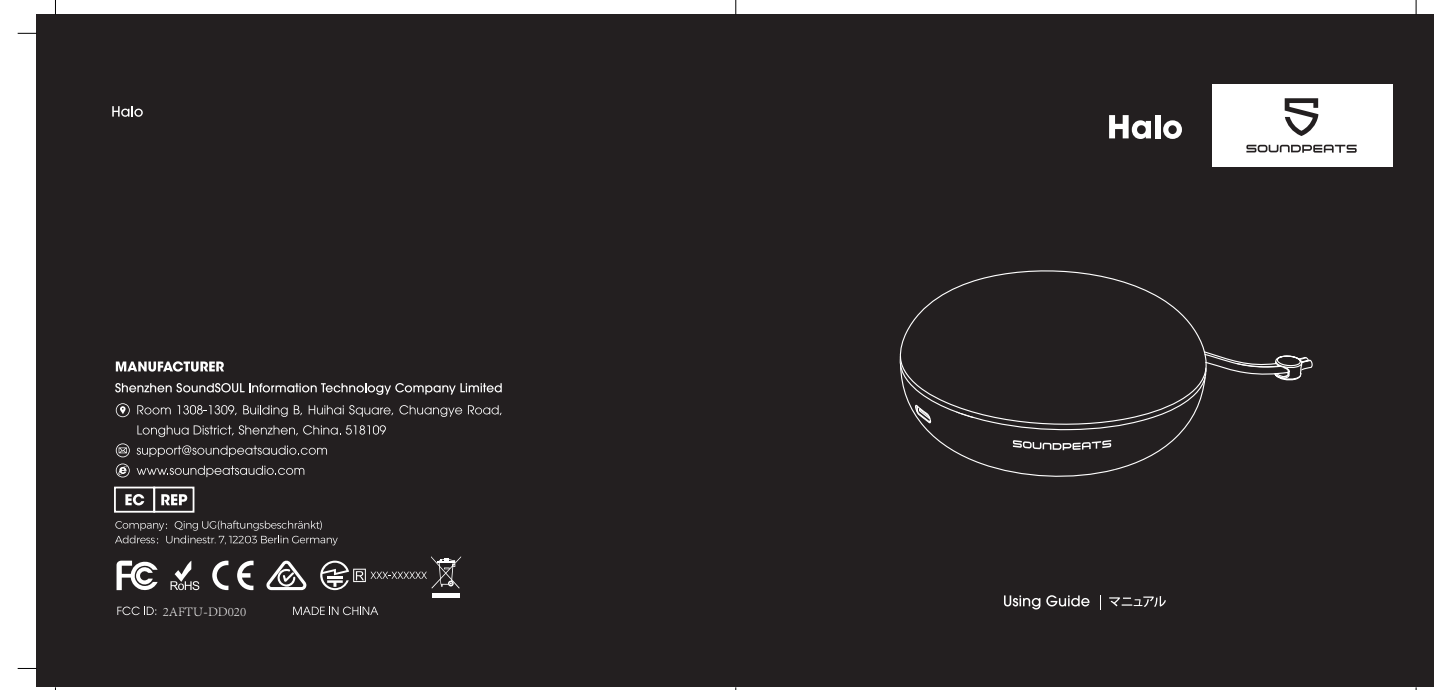

Contents	
English	1 - 8
日本語	9 - 16

FCC STATEMENT :  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.  
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.  
FCC Radiation Exposure Statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**Product Diagram**

①

**Pairing**

②

**Reset**

1. Please plug the Type-C charging cable into the speaker, and make sure they are in charging status.  
2. Under the power-on status, long press the Bluetooth button for 10s until the indicator flashes in green twice, reset complete.

③

**Enter/Exit TWS Mode**

**1. Enter**  
Under the power-on state, long press the Bluetooth button for 3s, the speaker enters TWS mode. The indicator flashes blue quickly, and then it enters pairing mode and lasts for 3 minutes.

**Note:**  
Under the power-on state, the speaker pairs to the phone if it is the master unit. In TWS mode, only the master speaker can hold the call.

④

**2. Exit TWS Mode**  
Long press the Bluetooth button for 3s again to exit the TWS mode. If only works on the speaker being operated, then the speaker will return to pairing mode after exiting TWS mode.

**Note:**  
After exiting TWS mode, only the main speaker can connect with the phone.

⑤

**Button Control**

Power On	Long press the MFB for 1.5s
Power Off	Long press the MFB for 3s
Play/Pause	Press the MFB once
Volume Down	Press the "-" once
Volume Up	Press the "+" once
Previous track	Long press "-" for 1.5s
Next track	Long press "+" for 1.5s
Answer/Hang Up Phone Call	Press the MFB once
Switch Between Two Active Calls	Long press the MFB for 2s
Disconnect Bluetooth and Enter Pairing Mode Manually	Press the "Bluetooth" button in the power-on status
Activate/Close Voice Assistant	Press the "Voice assistant" button once
Activate/Close Ambient Light	Long press "voice assistant button" for 3s while the speaker is on

⑥

**Charge**

1. Use a Type-C adapter to charge the speaker (current less than 1A). The LED flashes slowly in red while charging and goes off when fully charged.  
2. Please charge the speaker at least once per 3 months when not in use for a long time.

⑦

**Q&A**

**Q1: How to enter TWS mode?**  
The TWS mode requires 2 speakers to be used simultaneously. We recommend you to buy 2 speakers to have better music experience.

**Q2: How long can the speaker play with a single charge?**  
The speakers can work continuously for 13 hours with a single charge. If you don't use the speaker for a long time, please turn it off or deactivate your phone Bluetooth, the speaker will power off automatically after 5 minutes.

⑧

**製品図解**

①

**ペアリング方法**

②

**リセットについて**

1. 付属のType-C充電ケーブルに接続し、充電された状態にしてください。  
2. 本製品は電源オンの状態で、Bluetoothボタンを約10秒間長押ししてください。LEDインジケータは緑で2回点滅すると、リセットは完了です。

③

**TWSモード起動/停止**

**1. TWSモード起動**  
1. TWSモードを使用するには、2台のSOUNDPEATS Haloが必要です。  
2. 電源オンの状態で、2台のスピーカーのBluetoothボタンを3秒間長押しすると、TWSペアリング状態になります。音がすばやく点滅してから、青と緑で交互に点滅し、3分間通常のペアリングモードになります。

**注意事項:**  
電源オン状態で、両にペアリングされたスピーカーが接続になります。TWSモードでは、通話中、接続のみが通話の保持になります。

④

**2. TWSモード停止**  
TWSモードでBluetoothボタンを3秒間長押しすると、TWSモードを終了します。操作したスピーカーのみがTWSモードを終了し、ペアリングモードに戻ります。

**注意事項:**  
電源オン状態で、TWSモードを終了すると、接続のスピーカーだけスマホとペアリング中の状態になります。

⑤

**操作**

電源オン	マルチファンクションボタンを1.5秒間長押しする
電源オフ	マルチファンクションボタンを3秒間長押しする
再生一時停止	マルチファンクションボタンを1回押す
音量を下げる	音量ボタンを回押す
音量を上げる	音量ボタンを1回押す
前トラック	音量ボタンを1.5秒間長押しする
次トラック	音量ボタンを1.5秒間長押しする
電話を受ける/切る	マルチファンクションボタンを1回押す
通話切替	通話中、マルチファンクションボタンを2秒間長押しする
ペアリングモードへ変更	電源オンの状態でBluetoothボタンを1回押す
従来の音声認識アシスタント機能	通話中、マルチファンクションボタンを1回押す
SV(Google)を起動/停止	電源オンの状態で音声認識アシスタントスイッチを3秒間長押しする
リングライトを点灯/消灯	

⑥

**充電**

1. 付属されている充電ケーブルをACアダプター（別売）に接続し、充電を開始します。（5V/1Aを超える電流を取り込まないようにご注意ください）：充電中は充電インジケータが赤で点滅します。充電が完了すると、インジケータが消灯します。  
2. 長期のわかって使用しない場合は、バッテリーの機能維持のために、3か月に1回のフル充電してください。

⑦

**よくあるご質問**

**Q1. スピーカーのTWSモードを利用するにはどうすればよいですか。**  
TWSモードでは2つのスピーカーを同時に使用する必要があります。2台同時に使用すると、より聴感感のあるステレオサウンドを楽しめます。

**Q2. 1回の充電でどれくらい持ちますか。**  
1回の充電で13時間連続再生できます。スピーカーを長時間使用しない場合は、スピーカーの電源をオフにして、またはスマホのBluetoothをオフにしてください。スピーカーは3分後に自動的にオフになります。

⑧