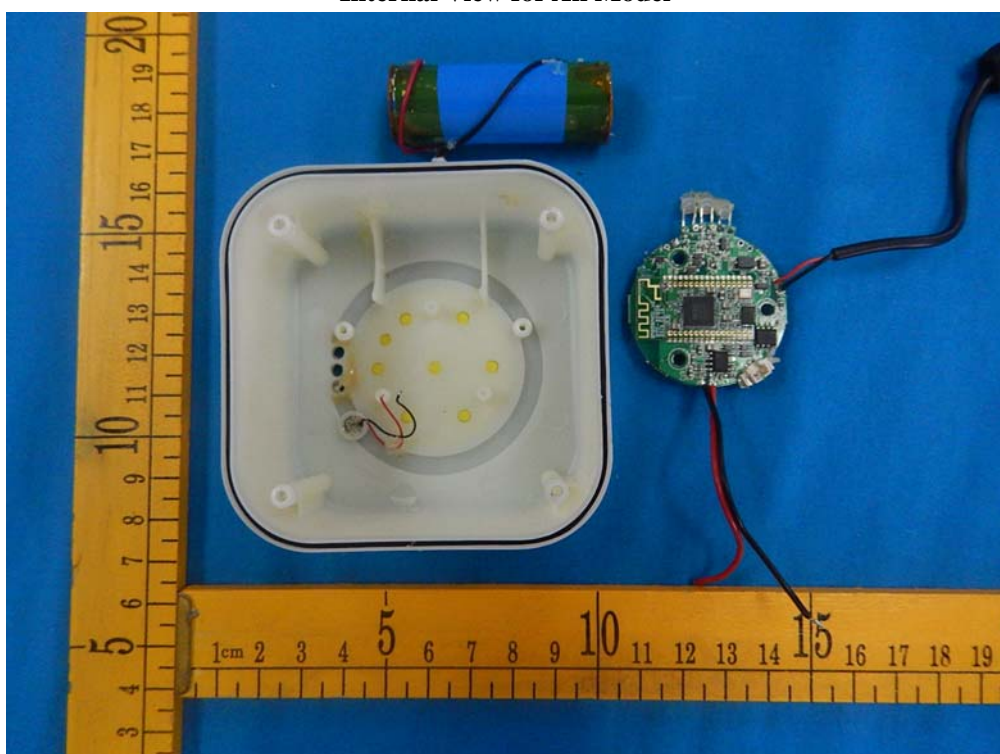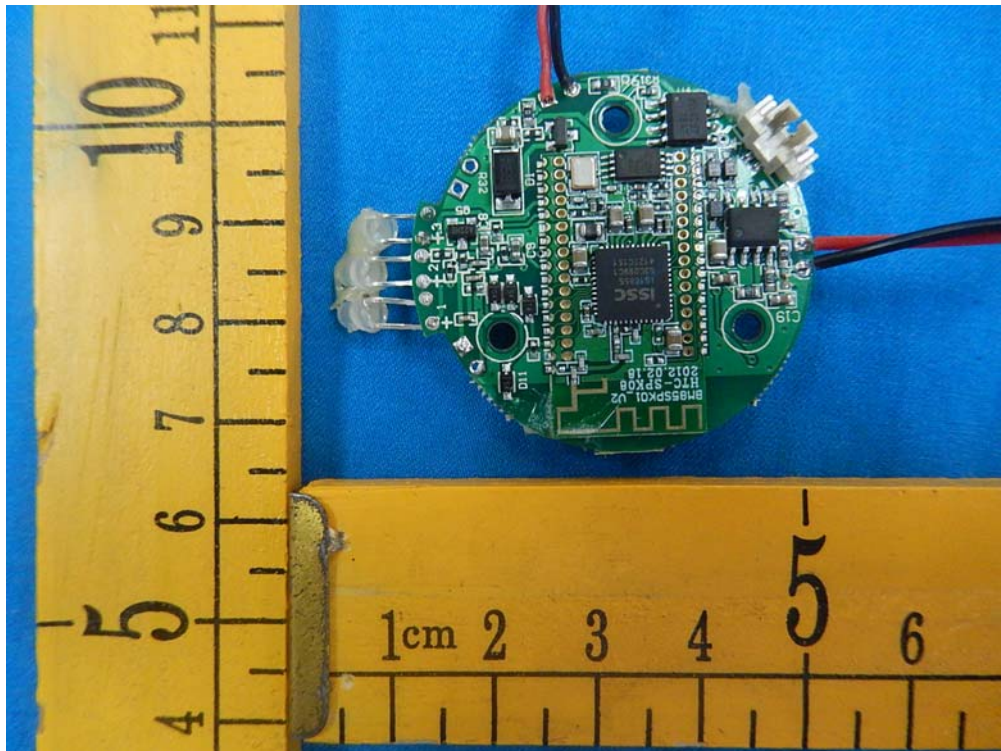**Internal View for All Model**

Internal View for All Model

Main Board View for All Model

Main Board View for All Model

BT ANT