SOUNARC

P3

PORTABLE OUTDOOR
SPEAKER

SOUNARC P3 Portable Outdoor Speaker

Thank you for purchasing the SOUNARC P3 Portable Outdoor Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@sounarc.com

Package Contents

1 x SOUNARC P3 Portable Outdoor Speaker
1 x Type-C Charging Cable
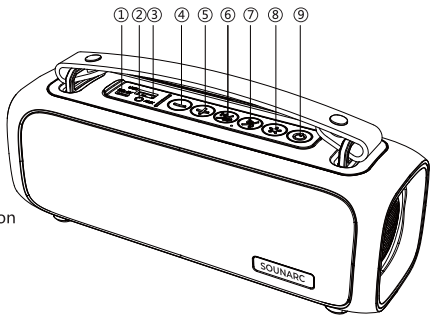1 x User Manual
1 x Aux-in Cable
1 x Warranty Card

Features

● Dynamic 2.0 Channel System
● Pair 2 speakers for superior stereo sound with Stereo Pairing Function
● Optimized voice assistant control
● Hands-free Mic for easy picking up the call
● Three different modes of RGB Lighting
● Bluetooth 5.1 enables to instant stream music from any Bluetooth-enabled device
● USB support
● FM radio
● Line-in function, suitable for PC, MID, TV and other audio devices
● Built-in lithium rechargeable battery 1500mAh

Specifications

Model	P3
Device Name	Wireless speaker
Wireless Version	V5.1
Driver Units	2 inch*2
Modulation Type:	GFSK, π/4-DQPSK, 8DPSK
Battery Capacity	3.7V/1500mAh
Play time(Varied by light display, volume levels & audio contents)	7 Hours
Charging Time	3 Hours
Frequency Range	80Hz-20KHz
Wireless Transmission Distance	10m
Dimension	255*87*110mm

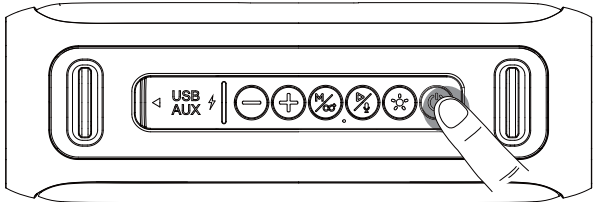## Product Overview

① Type-C Charging Port
② AUX Port
③ USB Port
④ Previous Track/Volume -
⑤ Next Track /Volume +
⑥ Mode/Stereo Pairing Button
⑦ Play/Pause & Voice Assistant Button
⑧ RGB Light
⑨ Power Button

Power On/Off

Long-press the "Power" button to turn on/turn off the speaker

Bluetooth

● Press the 'Power' button to turn it on and it will enter pairing mode.
● Turn on 'Bluetooth' on the device, search & click 'SOUNARC P3' to connect.
● Play the music from your device.
● Long-press the 'Previous Track' or 'Next Track' button to switch songs.
● Short-press the 'Previous Track' or 'Next Track' button to turn up/ turn down the volume.
● Short-press the 'Play/Pause' button to play/pause the music.
● Long-press the 'RGB Light' button to disconnect from Bluetooth.
● Press the 'Play/Pause' button for 5s to reset.

Notes: Default volume is at 50% status of max volume.

Stereo Pairing

● Turn on two speakers and make sure they haven't paired with any devices.
● Long-press the 'Stereo Pairing' button of either speaker to enter stereo pairing mode.
● Search & click 'SOUNARC P3' to connect with device.
● Long-press the 'Stereo Pairing' button of either speaker to exit stereo pairing mode.

Play from U-disk

● Press the 'Power' button to turn on the speaker.
● Plug U-disk into the slot, it will auto-play the stored music.
● Long-press the 'Previous Track' or 'Next Track' button to switch songs, short-press to adjust the volume.
● Short-press the 'Play/Pause' button to play or pause.
Notes: If you plug a USB disk into the speaker, it will switch to play from the U-disk.

FM Radio

● The attached charging cable could be used as an antenna under the FM Radio mode. Please plug it into the charging port before using it.
● Press the 'Power' button to turn on the speaker, short press the 'MODE' button to enter radio mode.
● Short-press the 'Play/Pause' button to mute the speaker. Long-press the 'Play/Pause' button to auto-search the FM Channel and auto-store it.
● Long-press the 'Previous Track' or 'Next Track' button to switch the stored FM channel, short-press to adjust the volume.

AUX-IN

● Simply connect the speaker to your non-Bluetooth device via the 3.5 mm audio cable.
● After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.
● All functions can be controlled by the external device while connecting with an external device.

RGB Light

If turned on, the RGB light will on. You could freely switch among 3 lighting modes & turn it off.
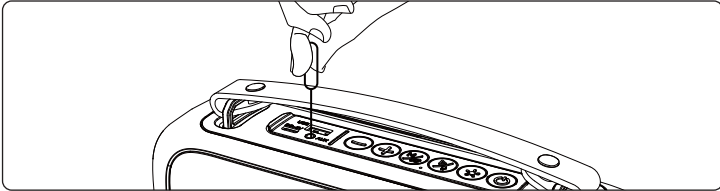
Activating Voice Assistant:
Long-press the 'Voice Assistant' button to activate voice assistant.

Hands-free Call

● Short-press the 'Play/Pause' button to answer the call or long-press the 'Play/Pause' button to reject the call.
● During the call, you could long-press the 'Play/Pause' button to switch to talking on the phone.
● Short-press the 'Play/Pause' button to end the call.

Reset
If could not turn off or respond, you can short-press the RESET button in Aux Port with a card pin(Not Included).

More Remarks

● Default volume is at 50% of max volume.
● Play time may vary by volume level and music style.

How to Charge

● The charger is not included, please charge this speaker via a certified 5V/1~3A charger or via a PC.
● Charge time should be 3 hours. Once the speaker is fully charged, the charging indicator will be off.
● The unit does not have power bank function, it is forbidden to charge other devices via this unit or to connect other devices via the USB port.
● To protect the battery, please do not use the speaker while charging.

Warning

SHENZHEN GEEKBUY E-COMMERCE CO., LTD.

Warehouse 101H, No. 49 Wuhe Avenue, Wuhe Community, Bantian Street, Longgang District, Shenzhen

EC REP	CET PRODUCT SERVICE LTD. Osterholzallee 144, 71636 Ludwigsburg Germany E-mail: info@cetproduct.com Tel: +49714164322336	UK REP	CET Product Service Ltd. Beacon House Stokenchurch Business Park, Ibstone Rd, Stokenchurch,High Wycombe HP14 3FE UK E-mail: info@cetproduct.com Tel: +447419325266

CE RoHS

Model: P3
Made in China