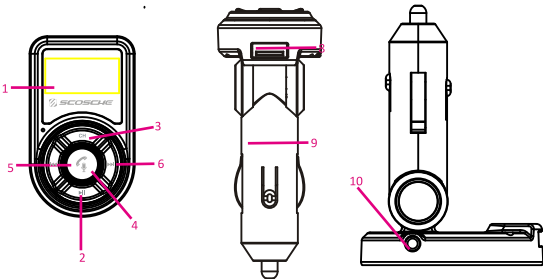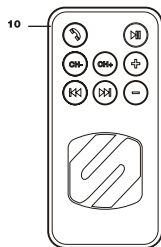# User Manual
BTFM3
Bluetooth FM Transmitter

1. LED SCREEN
   ÉCRAN DEL
   PANTALLA LED

*2. PLAY/PAUSE
   LECTURE/PAUSE
   REPRODUCCIÓN/PAUSA

*3. CHANNEL BUTTON
   BOUTON CANAL
   BOTÓN SELECTOR DE CANAL

*4. MULTIFUCTION BUTTON
   BOUTON MULTIFONCTION
   BOTÓN MULTIFUNCIÓN

*5. BACK/VOLUME -
   RECULER/VOLUME –
   RETROCEDER/VOLUMEN -

*6. FORWARD/VOLUME +
   AVANCER/VOLUME +
   AVANZAR/VOLUMEN +

7. 3.5MM AUX IN/OUT
   ENTRÉE/SORTIE AUX 3,5 MM
   ENTRADA/SALIDA AUXILIAR DE 3,5 MM

8. 2.4A USB CHARGING PORT
   PORT DE CHARGE USB 2,4 A
   PUERTO DE CARGA USB DE 2,4 A

9. 12V PLUG
   PRISE 12 V
   ENCHUFE DE 12 V

10. REMOTE
   TÉLÉCOMMANDE
   CONTROL REMOTO

FEATURES
- *Bluetooth* hands free calling and music streaming
- USB charging port for charging mobile phones and other devices.
- Auxiliary Input for use with other devices
- Wireless remote control
- Includes audio cable

SPECIFICATIONS:
A2DP *Bluetooth* calling and audio streaming

FM transmitter frequency range: 88.1-107.9MHZ

Input power: 12VDC

USB output: 5V at up to 2.4 amps

POWER UP AND BLUETOOTH PAIRING
Follow these steps to power up and pair your **BT**FREQ to your mobile phone.
1. Plug the **BT**FREQ into your cars 12V power socket.
2. Wait for the *Bluetooth* indicator to flash.
3. Access the *Bluetooth* menu on your mobile device, and enable the *Bluetooth* function. From the list of available accessories find and select "Scosche BTFM3".
4. Your phone will confirm once it is connected, and the *Bluetooth* indicator will stop flashing.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

CONNECTING TO YOUR CAR'S STEREO
There are two options for connecting the **BT**FREQ to your car stereo.

FM RADIO (option 1)
The **BT**FREQ has a small FM radio transmitter that can broadcast to your car's stereo.
1. Find a weak station on your FM radio that has no active broadcast signal.
2. Use the CH, then the Forward and Back buttons to tune the **BT**FREQ to match the frequency of your FM radio.
3. If you experience interference you may have entered an area where there is an active broadcast signal on the station you are tuned to. Repeat the above steps to find a different clear station.

AUX OUT (option 2)
If your car stereo includes an AUX port you can use the **BT**FREQ's AUX out feature.
1. Connect the included audio cable from the AUX IN/OUT port on the **BT**FREQ to the AUX port in your stereo.
2. Set your car stereo source to AUX. Consult your vehicle owners manual if you are not sure how.

USING THE BTFREQ
Once you have paired the **BT**FREQ to your phone (see Power up and pairing section) and have connected the **BT**FREQ to your stereo (see Connecting to your cars stereo) you can begin using your **BT**FREQ.

STREAMING MUSIC
1. Stream music by using the music player on your phone.
2. You can use the controls on the **BT**FREQ to play, pause and change tracks.

MAKING AND RECEIVING PHONE CALLS
Making a call
1. Use your mobile phone to make a call as you normally would. Phone call audio will automatically stream through the **BT**FREQ.
2. When you are finished talking, press the Multi-function button to hang up.
3. To call the last number dialed you can press the Multifunction button.

Receiving a call
1. Press the Multifunction button once to receive a call.
2. Press the Multifunction button once to end the call.

Voice Assistant activation
Press and hold the Multifunction button for 3 seconds to activate your smart phone's voice assistant.

USB CHARGER
Your **BT**FREQ includes a 2.4A USB charger to charge your phone while driving. Simply connect using a cable suitable for your device (not included).

WIRELESS REMOTE
The wireless remote can be used for many of the same functions as the controls on the **BT**FREQ

OPTIONAL AUX IN CONNECTION FOR NON-BLUETOOTH DEVICES
Mobile devices without Bluetooth can be connected to the **BT**FREQ through the AUX IN/OUT port using the included audio cable.

VOLUME LEVEL MATCHING
Press and hold the Forward or Back buttons during MP3 playback to adjust the **BT**FREQ volume to match other sources like your CD player, or FM radio.