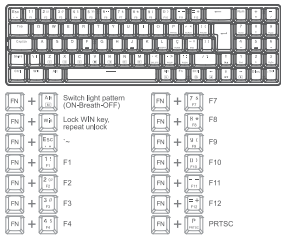
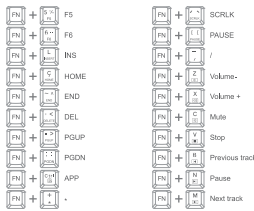
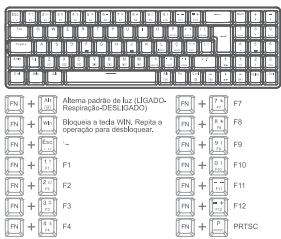
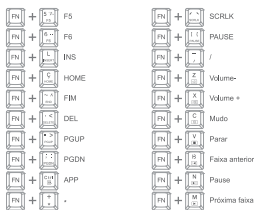
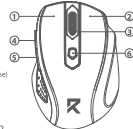
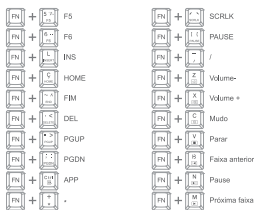


  Operating Instructions	US UK Dear user Thank you for choosing the REDRAGON products. In order to protect your right and get better service, please pay attention to the following warranty rules: 1. Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pads) and spare parts replacement are not included in the warranty.	OS Support Windows / Mac OS. 2.4G wireless mechanical keyboard instruction 	 2.4G Wireless Connecting and reconnecting Slide the power button to ON. Plug the USB receiver into any available USB port on your computer within 20 seconds, press and hold ESC+K, LED M lights up and twinkle, the connecting completed. If the connector stop, please press and hold ESC+K, LED M lights up and twinkle, the connecting completed.
How to recharge the keyboard The LED indicator (M) will turn to red and flash slowly when keyboard is out of power. Find the USB-A to USB type-C cable in the packaging, plug the keyboard and connect it with charging devices 5V-2A or 5V-1A, strong recommended to use computer USB port for charging for prevent damage of keyboard. Keyboard sleep mode and power safe function In 2.4GHz to save power, keyboard will Go-to sleep mode after 10 minutes out of working, all LEDs and backlight turn OFF. please click any key to wake up the keyboard. 2.4G wireless mouse instruction 2.4G Wireless Connecting and reconnecting Put on the AA battery plug the USB receiver into any available USB port on your computer within 20 seconds, press any button to completed connecting. If the connecting stop, please replug the USB receiver, press any button of mouse to reconnecting. Mouse button 1. Left mouse button 2. Right mouse button 3. Scroll wheel button (Middle mouse button) 4. Side button 1 (Defaulted to Forward) 5. Side button 2 (Defaulted to Backward) 6. DPI button 	DPI Setting There are 5 levels of DPI: 800-1200-1600-2000-2400. Switch by DPI+ and DPI-. 1. 800DPI: DPI indicator flash 1 time 2. 1200DPI: DPI indicator flash 2 times 3. 1600DPI: DPI indicator flash 3 times 4. 2000DPI: DPI indicator flash 4 times 5. 2400DPI: DPI indicator flash 5 times Rolling rate setting 2 levels of rolling rate: 125Hz (Defaulted), 250Hz. Switch by Press and Hold middle button + Right button for 5 seconds. 1. 125Hz (Defaulted): DPI indicator flash 3 times slowly. 2. 250Hz: DPI indicator flash 5 times quickly. Mouse sleep mode and power safe function In 2.4GHz to save power, mouse will be sleep mode after 8 minutes out of working, please click any key to wake up the keyboard. FAQ 1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer. 2. If you spill liquid on the keyboard, please unplug the keyboard's USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a warm and ventilated place. Make sure the keyboard is dried naturally before the next use.	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to swelling, deformation, leakage, or the smell of abnormal material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. 	FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's (Innovation, Science and Economic Development Canada's) (ISED) license-exempt radio frequency (RF) conditions. (2) This device must accept any interference, including interference that may cause undesired operation of the device. Cet appareil contient des émetteur(s) / récepteur(s) exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences; (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.	BR Prezado usuário Obrigado por escolher os produtos REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento, leia com atenção as regras da garantia, abaixo: 1. Dentro do período da garantia, os serviços são garantidos nos casos de falha devido a problemas no circuito eletrônico. Danos causados por desmontagem, por impactos violentos, imersão em água, fiação em corrente ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como o pé) e a substituição de peças avulsas não estão incluídas na garantia.	Sistemas operacionais compatíveis Windows/Mac OS. Instruções para teclado mecânico sem fio 2.4G 	 Conecta e desconecta Wireless 2.4G Deslize o botão de energia para ON (ligado), conecte o receptor USB a qualquer porta USB disponível em seu computador dentro de 20 segundos, pressione e segure ESC+K, o LED M acenderá e piscará. A conexão está concluída. Se a conexão for interrompida, pressione e segure ESC+K, o LED M acenderá e piscará. A conexão está concluída.
Como recarregar o teclado O LED indicador (M) ficará vermelho e piscará lentamente quando a bateria do teclado estiver descarregada. Pegue o cabo USB-A para USB tipo-C no embalagem, conecte no teclado e conecte-o aos dispositivos de carregamento 5V-2A ou 5V-1A. Recomendamos fortemente o uso da porta USB do computador para carregar para evitar danos ao teclado. Modo inativo do teclado e função de economia de energia Para poupar energia no modo de 2.4 GHz, o teclado entrará em modo de suspensão após 10 minutos sem uso. Todos os LEDs e a retroiluminação se apagarão. Ative qualquer tecla para reativar o teclado. Instruções para o Mouse Wireless 2.4G Conecta e desconecta Wireless 2.4G Coloque a pilha AA, conecte o receptor USB a qualquer porta USB disponível no computador dentro de 20 segundos, pressione qualquer botão do mouse para completar a conexão. Se a conexão for interrompida, reconecte o receptor USB e pressione qualquer botão do mouse para reconectar. Botão do mouse 1. Botão esquerdo do mouse 2. Botão direito do mouse 3. Botão da roleta (botão do meio do mouse) 4. Botão lateral 1 (botão padrão: avançar) 5. Botão lateral 2 (botão padrão: voltar) 6. Botão DPI 	Configurações de DPI Há cinco níveis de DPI: 800, 1200, 1600, 2000 e 2400. Alternados com DPI+ e DPI-. 1. 800 DPI: o indicador de DPI pisca uma vez 2. 1200 DPI: o indicador de DPI pisca duas vezes 3. 1600 DPI: o indicador de DPI pisca três vezes 4. 2000 DPI: o indicador de DPI pisca quatro vezes 5. 2400 DPI: o indicador de DPI pisca cinco vezes Ajuste da velocidade de leitura 2 níveis de velocidade de leitura: 125 Hz (padrão), 250 Hz. Para alternar, pressione e segure o botão do meio e o botão direito por 5 segundos. 1. 125 Hz (padrão): o indicador de DPI piscará lentamente cinco vezes. 2. 250 Hz: o indicador de DPI piscará rapidamente cinco vezes. Modo inativo do teclado e função de economia de energia Para poupar energia no modo de 2.4 GHz, o mouse entrará em modo de suspensão após 8 minutos sem uso. Ative qualquer tecla para reativar o teclado. FAQ 1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador. 2. Se você derramar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxugue o excesso de líquido e coloque o teclado em um local quente e ventilado. É importante que o teclado seja naturalmente seco antes de usá-lo.	Configurações de DPI Há cinco níveis de DPI: 800, 1200, 1600, 2000 e 2400. Alternados com DPI+ e DPI-. 1. 800 DPI: o indicador de DPI pisca uma vez 2. 1200 DPI: o indicador de DPI pisca duas vezes 3. 1600 DPI: o indicador de DPI pisca três vezes 4. 2000 DPI: o indicador de DPI pisca quatro vezes 5. 2400 DPI: o indicador de DPI pisca cinco vezes Ajuste da velocidade de leitura 2 níveis de velocidade de leitura: 125 Hz (padrão), 250 Hz. Para alternar, pressione e segure o botão do meio e o botão direito por 5 segundos. 1. 125 Hz (padrão): o indicador de DPI piscará lentamente cinco vezes. 2. 250 Hz: o indicador de DPI piscará rapidamente cinco vezes. Modo inativo do teclado e função de economia de energia Para poupar energia no modo de 2.4 GHz, o mouse entrará em modo de suspensão após 8 minutos sem uso. Ative qualquer tecla para reativar o teclado. FAQ 1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador. 2. Se você derramar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxugue o excesso de líquido e coloque o teclado em um local quente e ventilado. É importante que o teclado seja naturalmente seco antes de usá-lo.	 Conecta e desconecta Wireless 2.4G Deslize o botão de energia para ON (ligado), conecte o receptor USB a qualquer porta USB disponível em seu computador dentro de 20 segundos, pressione e segure ESC+K, o LED M acenderá e piscará. A conexão está concluída. Se a conexão for interrompida, pressione e segure ESC+K, o LED M acenderá e piscará. A conexão está concluída.

型号	BS-8772巴西		备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷			
名称	说明书					
日期	2025-2-13 (修改)					
页码	1 OF 1					
绘图	冯丽廷	审核	文件编号			
	冯丽廷	审核	香敏琪	核准	版本	A.1